

# 2ND-GENERATION PROSLIC<sup>®</sup> GUI USER'S GUIDE

## 1. Introduction

The 2nd-Generation ProSLIC<sup>®</sup> Graphical User Interface (GUI) software uses the USB port or the parallel port of a PC to communicate with the ProSLIC. Either the USB-capable Voice motherboard (VMB) or an older parallel port ProSLIC motherboard may be used with the software. The Voice motherboard accesses the ProSLIC's SPI and PCM ports, while the ProSLIC motherboard only accesses the SPI port. This document applies to Rev 0.98 of the software. The program runs on Windows 98/NT/2000/XP. Invoking the 2nd-Generation ProSLIC GUI causes the Voice motherboard to be initialized (if it is connected) and the ProSLIC to be taken out of reset.

### 2. Installation

To install the 2nd-Generation ProSLIC GUI, run setup.exe. If a previous installation of the software is detected, running setup.exe uninstalls the old version, and it is necessary to run setup.exe again. When setup installation is complete, installation instructions for the USB driver for the Voice motherboard are displayed. At this point, connect the USB cable from the PC to the Voice motherboard. If prompted to install a driver, direct Windows to use the directory specified in the instructions displayed at the end of the installation in: C:\Program Files\Silicon Laboratories\VMB Driver\

If you are not prompted to install the USB driver, it is recommended that you uninstall the old driver and install the driver provided with the software.

#### 2.1. Reinstall USB Driver

To uninstall the USB driver, go to Start->Control Panel, and double-click on "System". Go to the "Hardware" tab as shown in Figure 1.

System Properties			? ×
System Restore	Automatic Upda	ates	Remote
Device Manager The Device I on your comp properties of a	uter Name Manager lists all the hard uter. Use the Device Ma any device.	ware devices ir anager to chan Device Mana	Advanced Installed ge the
Driver Signing compatible w how Window Driver	lets you make sure that th Windows. Windows s connects to Windows Signing	t installed driver Update lets you Update for drive <u>W</u> indows Update	rs are set up ers. ate
Hardware Profiles Hardware pro different hard	files provide a way for yo ware configurations.	ou to set up and Hardware <u>P</u> rof	d store illes
	ОК	Cancel	Apply

Figure 1. System Properties Screen

Then, click on "Device Manager". Expand USB controllers, and you should see "USBXpress Device" as shown in Figure 2.



Figure 2. Device Manager Screen



Right-click on this device, and choose "Update Driver...". Decline connecting to Windows Update by choosing "No, Not this time" when prompted as shown in Figure 3.



Figure 3. Hardware Update Wizard

Click "Next". Then, choose "Install from a list or specific location (Advanced)" as shown Figure 4.



Figure 4. Installing Software for USBXpress Device



# AN265

Click "Next". Now, choose "Search for the best driver in these locations", and use the "Browse" button to specify C:\Program Files\Silicon Laboratories\VMB Drivers as shown in Figure 5.

Hardware Update Wizard
Please choose your search and installation options.
Search for the best driver in these locations.
Use the check boxes below to limit or expand the default search, which includes local paths and removable media. The best driver found will be installed.
Search removable media (floppy, CD-ROM)
✓ Include this location in the search:
C:\Program Files\Silicon Laboratories\VMB Drivers
O Don't search. I will choose the driver to install.
Choose this option to select the device driver from a list. Windows does not guarantee that the driver you choose will be the best match for your hardware.
< <u>B</u> ack <u>N</u> ext > Cancel

Figure 5. Search and Installation Options

Click "Next", and the drivers will be updated as needed.



## 3. Launching The Software

The 2nd-Generation ProSLIC GUI may be used with either the older ProSLIC motherboard or the Voice motherboard; however, by default, the USB interface for the Voice motherboard is selected.

#### 3.1. Voice Motherboard (USB)

First, make sure that the USB cable is connected and that power is applied to the Voice motherboard. Click on the shortcut in the start menu at Program Files  $\rightarrow$  Silicon Laboratories  $\rightarrow$  2nd Generation ProSLIC GUI. Select Si324x or Si3226 and click "OK". If you receive a message like the one in Figure 6, make sure that the Voice motherboard driver is installed, the USB cable is connected, and that no other running software is accessing the Voice motherboard.

VMB	×
Error. No USB device f	ound!
OK	

Figure 6. USB Error

Sometimes, it may be necessary to unplug the USB cable and reconnect it to the Voice motherboard to reset the USB device. The Voice motherboard defaults to SPI/PCM communication; however, GCI communication can also be used. To use GCI, first connect SDITHRU on the ProSLIC to ground, and then select "Connect Motherboard" and "Connect USB (GCI)".

#### 3.2. ProSLIC Motherboard (Parallel Port)

Click on the shortcut in the start menu at Program Files  $\rightarrow$  Silicon Laboratories  $\rightarrow$  2nd Generation ProSLIC GUI. Ignore any error message pertaining to the USB interface. To enable the parallel port interface, go to the menu bar at the top, and select "Connect Motherboard"; then, select "Connect LPT". Make certain that power is applied to the board. If the parallel port address differs from the default (0x378), select the "Options" menu item; then, select "Parallel Port Config" to change the port address being used.



# 4. ProSLIC Communication

On the top left of the screen, there are several important controls, shown in Figure 7. The "Channel" control selects the channel with which the software is currently communicating. The value can range from 0 to 31 for a total of 32 channels. The "Broadcast" control enables the broadcast bit in the SPI control byte during register writes, allowing the user to write to all channels simultaneously. The "RESET" button pulls the ProSLIC's reset pin low when it is pressed. This button may also be activated using the Escape key.

RESET	
Initialize	All Channels
Linefeed:	Si3206A 🗸

w.DataSheet+0.com

Figure 7. Screen Top Left

The "Initialize" button determines how many channels are present, reads the device ID of the current channel, reads the detected PCLK rate, and displays this information on the top right of the screen. Pushing this button also loads the contents of the initialization file to the ProSLIC. The file is located in the installation directory and contains the recommended initialization sequence. This file may be edited to change the behavior of the "Initialize" button. The format of this file and other files used by the software are described later in this document. If the "All Channels" control is checked, all channels are initialized according to the contents of the initialization file; otherwise, only the channel currently selected is affected by the "Initialize" button. Select the appropriate BOM option using the "Linefeed" selector before pressing "Initialize".

On the bottom left of the screen, there are controls to read and write single registers or RAM locations (see Figure 8). Select whether you would like to access a register or a RAM location and enter the address to access. If writing to the ProSLIC, enter data to write in the box next to the "Write" button, and then click either "Write" or "Read" to execute. Data read back is displayed in the box next to the "Read" button.

Add	Iress
Register 💎 30	
A ⊂ C	Write
x 55	Read
User Mode	

Figure 8. Single Reads/Writes

Also shown in Figure 8 is the User Mode control, which is activated by clicking on the green area. If User Mode is successfully entered by the ProSLIC, the control turns bright green to confirm.



## 5. Registers/RAM

When you launch the software, the "Registers/RAM" tab, which displays a table of all the registers in the ProSLIC, appears on the right side of the screen (see Figure 9). Hold the mouse over the register locations to see the address of each register, or, alternatively, select "Display Addresses" below the register table to change from displaying the register names to displaying the register addresses in the table. The "Read All" button executes a one-shot read of all the registers in the table, whereas the "Continuous Read" button causes the table to be continuously updated until Continuous Read is turned off. Typing a new value in one of the boxes in the register table causes a register write to take place.

ww.DataSheet4U.com

Registers						Linefeed S	tatus:	Open	$\nabla$	RAM	Search String		Next
ID	55	IRO3	55	PINGTAU	55	TOUDTUS				Addr	Value	Name	
RESET	55	IRO4	55	PINGTILO	55	TONDING	55	AUTO	00			POWER ESTIMATIO	
MSTREN	55	IROENI	55	RINGTILO	55	TONDET	00	JMPEN	55	16	15555555	P_OFFLD_LPF	
METRETAT	55	IRQENT	55	RINGTH	00	TONEN	55	JMP0LO	55	14	15555555	P_HVIC_LPF	
DAMETAT	55	IRGEN2	00	LOOPBACK	55	GCI_CI	55	JMP0HI	55	402	15555555	P_HVIC	
RANSTAT	55	IRGENS	00	DIGCON	55	GLOBSTAT1	55	JMP1LO	55	759	15555555	COEF_P_HVIC	
RAM_ADDR_HI	00	IRQEN4	55	RA	55	GLOBSTAT2	55	JMP1HI	55	756	15555555	P_TH_HVIC	
RAM_DATA_BO	55	CALRO	55	ZCAL_EN	55	USERSTAT	55	JMP2LO	55	440	15555555	P_OFFLOAD	
RAM_DATA_B1	55	CALR1	55	PMCON	55	GPIO	55	JMP2HI	55	760	15555555	COEF_P_OFFLD	
RAM_DATA_B2	55	CALR2	55	OMODE	55	GPIO_CFG1	55	JMP3LO	55	897	15555555	P_TH_OFFLOAD	
RAM_DATA_B3	55	CALR3	55	OCON	55	GPIO_CFG2	55	JMP3HI	55			TX AUDIO DEC 1	
RAM_ADDR_LO	55	LINEFEED	55	O1TALO	55	GPIO CEG3	55	IMP4LO	55	880	15555555	AC_ADC_GAIN	
PCMMODE	55	POLREV	55	O1TAHI	55	DIAG1	55	IMDALI	55	788	15555555	ACADC_OFFSET	
PCMTXLO	55	SPEEDUP DIS	55	01711.0	55	DIAG2	55	IMPELO	55			TX AUDIO IIR	
РСМТХНІ	55	SPEEDUR	55	01718	55	CM CLAMP	55	JMPSLU	55	518	15555555	TXACIIR_B0_1	
PCMRXLO	55	I CRRTR	55	03741.0		CIVI_CEAMP		JMPSHI	55	519	15555555	TXACIIR_B1_1	
PCMRXHI	55	OFFLOAD	55	OZTALU	55		00	JMP6LO	55	520	15555555	TXACIIR_A1_1	
ICHINO	55	DATOFILMAD	55	02TAHI 02TU 0	55		55	JMP6HI	55	521	15555555	TXACIIR_B0_2	
1000		BATSELWAP	55	021120	00		55	JMP7LO	55	522	15555555	TXACIIR_B1_2	
IRQU	00	BATSEL	55	O2TIHI	55		55	JMP7HI	55	523	15555555	TXACIIR_B2_2	
IRQ1	00	RINGCON	55	FSKDAT	55		55	PDN	55	524	15555555	TXACIIR_A1_2	
IRQ2	55	RINGTALO	55	FSKDEPTH	55		55	PDN_STAT	55	525	15555555	TXACIIR_A2_2	
										526	15555555	TXACIIR_B0_3	
	Contin	uous Read				Global I	Register	(All channels)		527	15555555	TXACIIR_B1_3	
Read All			isplay n	ames 🗸						528	15555555	TXACIIR_B2_3	
Per USP Register (Channels 0/1 and Channels 2/3) 529 15565555 TXACIIR_A1_3													
										530	15555555	TXACIIR_A2_3	T
										<			Þ
							G	io to:			Continu	ious Read	
							Γ	Тор	$\nabla$	Read	All	Sort By Function	n 🗸

#### Figure 9. Registers/RAM

The RAM table on the right side of Figure 9 behaves similarly with its own "Read All" and "Continuous Read" buttons; however, in this case, only the visible values in the RAM table are updated when Continuous Read is turned on. The address and name of each RAM location are always displayed. The RAM locations may be sorted numerically or sorted by function. When the RAM values are sorted by function, the "Go To" control helps navigate to RAM locations relating to a particular function without scrolling through the table. Certain RAM locations can be converted to their decimal equivalent by first clicking on the value and then hovering the mouse over the RAM table. Typing a new value into the "Value" column of the RAM table causes a RAM write to take place. Use the "Search String" box to search for a RAM location, and navigate through the matches using the "Next" button.

While Continuous Read is active on the register table, the Interrupts Accumulator is updated. The values read from the IRQ registers are ORed together until the "Clear" button, shown in Figure 10, is pressed.

Interrupt	ls Accumulator	
IRQO	xO	
IRQ1	xO	
IRQ2	xO	
IRQ3	×O	Clear





# 6. Gauges

The Gauges tab is shown in Figure 11. These controls are used to view the monitor ADC (MADC) value in decimal units. To activate the gauges, turn on the "Continuous Update" control and select whether you want to scale the power to full scale or to the value of the power threshold registers using the "Power Scaling" control.



Figure 11. Gauges



# 7. Graph

The graph tab is shown in Figure 12. These controls can be used to plot the value of registers or RAM locations over time. The Y axis is a linear decimal scale, and autoscaling can be turned on or off by right-clicking on the Y axis. The X axis can be adjusted by entering different values in the "# samples shown" field. This alters the number of samples displayed on the plot. Enter the locations you wish to read in the "Graph Read Info" box at the top left. RAM locations can be multiplied by a scaling factor before they are plotted by entering a value other than 1 in the LSB field. The graph plots data as long as the "Continuous Update" button is active; however, the "Triggered Stop" controls can be used to stop the data acquisition when a specified rising or falling edge occurs. Choose which edge to trigger on using the "Trigger" control and specify the threshold using the "Trigger Value" box. The "Hold Samples" box specifies how many samples before the event are saved. Click "Enable" to enable the trigger, and turn on "Continuous Update", if it is not already active. To aid in the detailed examination of plots, two cursors are available. The cursor controls are on the top left of the graph.

The mean, standard deviation, variance, or RMS value can be calculated for the first address to be read. Select the calculation to perform using the "Parameter to calculate:" selector; the result is displayed beneath the selector. The units displayed on the Y axis can be adjusted using the "Y Scale Format" and "Y Scale Precision" controls. The time between samples on the graph can also be manipulated using the "Time Between Samples" control. The maximum sample rate possible is achieved using a zero millisecond time between samples and is limited by the number of devices on the USB bus and the CPU load of the PC running the software.



Figure 12. Graph



# 8. Audio (Voice Motherboard Only)

The audio tab is shown in Figure 13. The functionality of this tab is only valid with the Voice motherboard (USB interface). The Voice motherboard is capable of transmitting and collecting PCM samples. Before any audio transfers are attempted, the PCM clocks and format must be set up.

In GCI mode, this panel shows the status of the C/I bits and allows the user to change the downstream C/I bits. The C/I bit indicator updates when the "Run Acquisition" control is turned on.

	DSP PCM	тх	Graph Measurements			
taSheet	TXSLOT 4 RXSLOT 4 0	Tone 1 Frequency (Hz)Tone 1 Amplitude 1016.00 (1000) Tone 2 Frequency (Hz)Tone 2 Amplitude	# Avg for FFT	DC Level 0.09 Codec max	RMS Level 0.31 Codec pk-pk	THD 0.00 Transhybrid Loss (dB)
	Format 8 bit linear	DAC Waveform	-10422	16016	26438	-1.04
	A-law	) Sine Update	Volts			Plot 0
	Update DSP Update SLIC	PCLK Freq 2.048MHz 🤝	1- 0.8- 0.6- 0.4-			
	,		0.2 - 0 - -0.2 -			
	Note. If you are they are connec audio aquisition the voice mothe request for PCM	using external clocks make sure ted properly before starting . Otherwise the connection to rboard may be lost as the data will timeout.	-0.4 - -0.6 - -0.8 - -1 - 0.00 20.0	0 40.00 60	00 80.00 t(ms)	100.00 127.87
			Graph Controls Amplitude Units Codes Volts T En	Display Type Time Freq Measurement able Disable	Buffer size	Run Aquisition
						Configure DSP PCM before aquiring data

Figure 13. Audio



## 9. PCM Configuration (Voice Motherboard)

Unlike previous ProSLIC motherboards, the configuration of the PCM bus for the Voice motherboard is accomplished via software. The ProSLIC GUI allows you to configure the PCM clock rate, PCLK source, and FSYNC source. In addition, the DSP on the Voice motherboard allows PCM data to be passed between the PC and the ProSLIC. The PCM timeslots used by the DSP are also configurable.

While the ProSLIC's PCM timeslots can be configured to use any bit count for PCM transfers, the Voice motherboard's DSP can only be configured on 8- or 16-bit boundaries. For example, if you select a TXSLOT of 1 in 8-bit mode, you would need to set the ProSLIC PCMRX registers to 8 (1x8bits) to receive the data. Almost all features relating to the PCM capability of the Voice motherboard are located on the Audio tab. Table 1 shows the main configuration parameters for the Voice motherboard PCM.

Select the PCM format in the "DSP PCM" control on the Audio tab and press "Update DSP" to configure the Voice motherboard's DSP to receive samples of this type. Pressing "Update SLIC" updates the current ProSLIC channel with the same PCM settings except that the ProSLIC transmit timeslot is equal to the Voice motherboard's receive timeslot and vice versa. The Voice motherboard now sends/receives audio to/from the current channel.

The DSP on the Voice motherboard has a 1024 word buffer for sending PCM data to the ProSLIC. This buffer loops continuously and can be loaded using the controls in the "TX" box on the Audio tab. DC, square, sine, and ramp waveforms are available. Press "Update" to load the buffer.

The units for the amplitude are specified as either codes or volts in the "Graph Controls" box below the audio plot. "Codes" refers to the raw values coming from the PCM, which could be 8- or 16-bit, while "Volts" displays a scaled value less than one. When the "Run Acquisition" button is active, data is pulled from a FIFO in the Voice motherboard's DSP and plotted on the screen. Data can be plotted in the time domain or the frequency domain, and the data buffer size for the GUI can be adjusted with the "Buffer Size" control. The "Measurement" control enables or disables the update of values calculated in the "Graph Measurements" display.

**Note:** In GCI mode, PCLK and FSYNC are generated by the Voice motherboard, and subframes 0 and 1 are used. The data displayed in the audio graph will come from whichever channel is selected by the "Channel" control.

### **10. File Input And Output**

Figure 14 shows the file input/output controls. The file format described here is the same as the format used for the initialization file loaded by the "Initialize" button.

Script Load or Register Save:				
Recent Files:				
	<b></b>			
File Name:	All Chan			
8				
Band Read	OK			

Figure 14. File IO

First, select a file name by either entering it manually into the "File Name" box or by clicking on the yellow folder button. To output the current register and RAM contents of the current channel, click on the "Read" button so that it now says "Write" and then press "OK". If an existing file is chosen, a prompt asks if the program can overwrite the file. Navigate to the file you selected in the first step; it will look similar to Figure 15.



Parameter	Options	Location
PCM Clock Frequency	All supported by ProSLIC	Audio Tab $\rightarrow$ <i>PCLK Freq</i>
External PCLK/FSYNC	Enable/Disable	Menu: Options $\rightarrow$ External PCM Source
External FSYNC	Enable/Disable	Menu: Options $\rightarrow$ External FSYNC only
DSP Timeslots	8- or 16-bit boundaries	Audio Tab $\rightarrow$ <i>DSP PCM</i> $\rightarrow$ <i>TXSLOT/RXSLOT</i>

Table 1. Voice Motherboard PCM Main Co	onfiguration Parameters
--	-------------------------

w.DataSheet4U.com

🝺 test.txt - Notepad		
<u>File E</u> dit F <u>o</u> rmat <u>V</u> iew <u>H</u> elp		
<pre>#11/1/2005 5:14 PM # Si3240 Output File #Available input file cor # wAIT 100 (wait specifie # CHANNEL 0 (change to d' # RESTORE (restore origin # USER (enable User mode) # LOCKUSER (disable user # PATCH <filename> (load: Register 0 = 8 Register 1 = 0 Register 3 = 5D Register 3 = 5D Register 6 = 0 Register 7 = 0 Register 9 = 0 Register 9 = 0 Register 11 = 5 Register 12 = 0 Register 13 = 0 Register 13 = 0 Register 14 = 0 Register 15 = 0 Register 15 = 0 Register 15 = 0 Register 16 = 0 </filename></pre>	nmands are: ed time(ms) 100ms in this example ifferent channel. channel 0 in this case) nal channel number) ) mode) s patch from specified location) #ID #RESET #MSTREN #MSTREN #RAM_ADDR_HI #RAM_ADDR_HI #RAM_DATA_B1 #RAM_DATA_B2 #RAM_DATA_B3 #RAM_DATA_B3 #RAM_ADDR_LO #PCMTXLO #PCMTXLO #PCMTXHI #PCMRXLO #PCMRXHI #IRQ	

#### Figure 15. Example File

When inputing a file, click on the "Write" button to change it back to "Read" and click "OK". To apply the file to all channels, the "All Chan" box should be checked. If "All Chan" is enabled, the file is read through once for each channel. Do not enable broadcast when loading a file. All recently loaded files are selectable using the "Recent Files" control.



# 11. File Format

In the files used to input or output register and RAM values, there are several things to remember.

- Lines beginning with the # character are ignored.
- Register/RAM addresses are in decimal format while register/RAM values are in hexadecimal format. For example:

```
#will write register 11 to 0x15
Register 11 = 15
RAM 600 = 12345678 #will write RAM 600 to 0x12345678
```

Delays can be inserted with the WAIT command. For example:

WAIT 100 #will wait 100 ms before proceeding

The current channel can be changed using the channel command, but this command should not be used when the All Chan box is checked since it causes the file to be loaded once for every channel and may lead to confusing results.

CHANNEL 2 #switch to channel 2

The RESTORE command can be used to go back to whatever channel was selected before any changes to the current channel were made by CHANNEL commands in the file. For example: RESTORE

#restore original channel number

User mode can be enabled and disabled using the USER and LOCKUSER commands. For example:

USER #enable user mode LOCKUSER #disable user mode

The patch RAM can be loaded using the PATCH command. For example:

- PATCH C:\PATCHFILE.DSP PROM #Load Patch
- Commands from another file can be executed by using the INCLUDE command. For example: INCLUDE C:\INPUT2.TXT
- Calibration can be performed using the CAL command. This will cause the CAL bit to be set, and the software will not proceed until the CAL bit clears (or the timeout period expires).



# 12. RAM Access Type

In the "Options" menu, there is an item called "16 bit RAM Accesses". When this is enabled, the lower 13 bits of each 29-bit RAM location are cleared, and RAM accesses are performed using the 16-bit SPI accesses. This option is not valid for GCI.

### 13. Tools Menu

The tools menu contains many useful tools for calculating register and RAM values. Clicking on an item in this menu brings up a popup with the requested tool, which can subsequently be closed by pressing the Escape key or pushing the "Close" button.

#### 13.1. Tone Generator

The Tone Generator tool is used to calculate coefficients for the tone generators inside the ProSLIC. Select the desired amplitude, frequency, and cadence, and then press "Load Values" to load the configuration into the ProSLIC. The calculated register values are displayed.

#### 13.2. PCM Config

The PCM Config tool can be used to configure the PCM registers of many channels at once. Press "Load" to update the ProSLIC.

#### 13.3. DC Feed

The DC Feed tool is used to calculate the parameters for the ProSLIC dc feed. It shows a plot of the expected dc feed curve. Warnings appear if the values entered are unachievable; however, if desired, these warnings can be disabled by checking "Turn off out of range warnings". To load the calculated outputs to the ProSLIC, click "Load Values".

#### 13.4. Load Patch RAM

The patch RAM load tool can be used to download patch code to the ProSLIC. Select a dsp\_prom file by clicking on the yellow folder icon next to the "Patch Code File" box, and then press "Load Patch" to load the patch RAM. The entry points table should be filled in automatically when you select a valid patch code file. It is best to load a patch using an input file during initialization.

#### 13.5. Pulse Metering (Si324x)

The pulse metering tool is used to program the pulse metering registers but also contains a timer for ramping up and down the pulse metering tone. Configure the pulse metering parameters and then click "Load Values" to program the ProSLIC. To use the timer function, enter values for "Time On" and "Time Off" and then enable the timer by turning on the "Run Metering" button. The ramp bit is toggled automatically at the programmed rate.

#### 13.6. Toggle Register State

The toggle register state tool behaves similarly to the pulse metering timer function but is more flexible. Select which address to toggle and enter values for the on state and off state. Finally, enter the values for "Time On" and "Time Off" so that the chosen address toggles between the two values when the "Run" button is turned on.

#### 13.7. Battery Switching (Si324x)

The battery switching tool aids in programming the registers related to battery switching. Configure the battery voltage and GPIO setup, and then click the "Load" button to configure the ProSLIC.

#### 13.8. Ringing

The ringing tool calculates ringing register values as well as ring trip parameters. Enter the ringing cadence, frequency, amplitude, and offset. Then, enter the ring trip parameters, and click "Load" to write these values to the ProSLIC.



### 13.9. FSK

The FSK tool calculates the FSK generation coefficients for caller ID. Enter the frequencies for mark and space as well as the amplitude and baud rate. Clicking "Load" will cause the settings to be written to the ProSLIC.

#### 13.10. MADC

The MADC tool displays the monitor ADC values in hexadecimal as well as decimal similar to the "Gauges" tab. The advantage of the MADC tool is that more of the MADC registers are displayed. Optionally, the values can be averaged by changing "number of samples to average".

### 14. Coefficient Generator

The Coefficient Generator (on the menu bar) can be used to generate the impedance coefficients. The user may input the desired impedance values using a text file. The output is also provided in a text file. The user may also enter input values on the screen by choosing the "Use Screen Input with the Input Method" control. The values specified in the RRC boxes on the screen are then used along with the values listed in Table 2 to calculate the coefficients. The format of the RRC inputs for both the screen input and the file input mode is selected using the RRC format control.

Input	Value	
cline	10 nF	
cac	100 nF	
tx_gain	0 dB	
rx_gain	0 dB	
tx_spec	See example input file	
rx_spec	See example input file	

Table 2. Values Used with Screen Input

#### 14.1. Coefficient Generator Input File

Once you have installed the ProSLIC GUI, several example input files for the Coefficient Generator are provided. They are located in the install directory in the folder "File Examples". The input file templates are also accessible through a shortcut in the start menu. Choose Start  $\rightarrow$  Programs  $\rightarrow$  Silicon Laboratories, and click "Input\_Template". To use the provided Microsoft<sup>®</sup> Excel file, first make any changes to the input values, and save the file as a .txt file. The resulting text file may be used as an input to the Coefficient Generator.

The input files created by the user must be of the same format as the provided example input file. There are three ways to input the 2-Wire and Balance Impedance:

- RRC Model
- S Domain
- Spectrum (magnitude and phase)

The program chooses whichever comes first in the input file. All of these options are demonstrated in the example input file. To select an input file, click on the yellow folder icon to the right of the input file text box. The Windows<sup>®</sup> file open dialog appears. Alternatively, the full path of the file may be typed into the text box. Selection of the output file is performed in a similar manner. To view the input or output file selected, push the "View/Edit File" button next to the appropriate text box. The status indicator at the top left of the screen shows "Ready" until "Calculate Coefficients" is clicked. It shows "Working..." while the program is running the calculations.

When the calculations are complete, it shows "Ready" again, and the resulting output files are displayed in Windows<sup>®</sup> Notepad. The results are also displayed in the output graphs to the right of the screen. The scale of these graphs can be changed by selecting the text on the axes and changing the minimum and maximum values. Click on the tabs at the top to view the various graphs. To reload these graphs from a previously-created output file, select the file in the output file text box, and click "Reload Output Graphs from Output File". The input graph on the bottom left shows the values of the desired TX and RX magnitude spectrums.



### 14.2. Coefficient Generator Input File Format

Any lines beginning with the "#" character are treated as comments and are ignored. The lines beginning with "\$" are flags for the program. For example, the 2-wire impedance in the RRC format is as follows:

\$z\_rrc start flag
#2-wire impedance (RRC model) comment
600.000000 values
0.000000
0.000000
\$ end flag
Table 0 description in the base in the bas

Table 3 describes the various input values.

w.DataSheet4U.com

Table	3.	Input	Va	lues
-------	----	-------	----	------

Input File Flag	Order of Values in File	Range	Description
b_rrc	R (Ω) R (Ω) C (nF)	3 values	Balance impedance (RRC model)
z_rrc	R (Ω) R (Ω) C (nF)	3 values	2-wire impedance (RRC model)
b_spec	Frequency (Hz) Magnitude (dB) Phase (rad)	Any number of points from 0 to 4 kHz	Balance impedance (spectral)
z_spec	Frequency (Hz) Magnitude (dB) Phase (rad)	Any number of points from 0 to 4 kHz	2-wire impedance (spectral)
b_s	The first value, b_s(1), is the coefficient associated with the s <sup>9</sup> term in the numerator polynomial, b_s(10) is the constant term. b_s(11–20) are likewise for the denominator	20 values	Balanced impedance (s-domain – 10th-order numerator and 10th- order denominator
z_s	The first value, z_s(1), is the coeffi- cient associated with the s <sup>9</sup> term in the numerator polynomial, z_s(10) is the constant term. z_s(11–20) are likewise for the denominator	20 values	2-wire impedance (s-domain – 10th-order numerator and 10th- order denominator
tx_spec	Frequency (Hz) Magnitude (dB)	(0.2–3.4 kHz) 321 points spaced 10 Hz	Desired TX magnitude spectrum
rx_spec	Frequency (Hz) Magnitude (dB)	(0.2–3.4 kHz) 321 points spaced 10 Hz	Desired RX magnitude spectrum
tx_gain	Magnitude (dB)	1 value	Desired TX gain
rx_gain	Magnitude (dB)	1 value	Desired RX gain
cline	C (nF)	1 value	External line capacitor value



#### Table 3. Input Values (Continued)

Input File Flag	Order of Values in File	Range	Description
cac	C (nF)	1 value	External ac coupling capacitor value
rprot	R (Ω)		External protection resistor value

#### 14.3. Coefficient Generator Output File

The generated output file contains the resulting return losses, TX spectrum, RX spectrum, and coefficients. The corresponding inputs are at the end of the file. The program also generates a file that is compatible with the file input capability of the ProSLIC GUI (see Figure 14). The coefficients are listed first in hexadecimal format. Next in the file is the 2-wire return loss (labeled "rl") specified by 321 points from 200 to 3400 Hz. The 4-wire return loss ("bal") is listed next in the same format. Then, the resulting RX and TX spectrums are listed. The points are specified as frequency (Hz), magnitude (dB), and phase (rad).

#### 14.4. Example Coefficient Generator Input File

```
#Example input file for Si324x Coefficient Generator
#Application picks input format that comes first in file
#out of
# 1: b rrc and z_rrc
# 2: b spec and z spec
# 3: b s and z s
#This example uses the RRC model format of input
$b rrc
#balance impedance (RRC model)
600.000000
0.00000
0.00000
$
$z rrc
#2-wire impedance (RRC model)
600.000000
0.00000
0.00000
$
$cline
#nF
10.00
$
#external line capacitor value
$cac
#nF
100.0
Ś
```



# AN265

```
#external AC coupling capacitor value
$rprot
0.00000
Ś
#external protection resistor value
$tx spec
#Freq Mag
#desired TX magnitude spectrum (0.2-3.4kHz) 321 points spaced 10Hz
#end points are specified here (the rest are interpolated)
200 0.000000
3400 0.000000
$
$rx_spec
#Freq Mag
#desired RX magnitude spectrum (0.2-3.4kHz) 321 points spaced 10Hz
#end points are specified here (the rest are interpolated)
200 0.000000
3400 0.000000
$
$tx gain
#tx gain
0.0
$
$rx gain
#rx gain
0.0
Ś
```

### 14.5. DSL Splitter Applications

Contact Silicon Labs for coefficients to use in DSL applications.



# NOTES:

vww.DataSheet4U.com



# **CONTACT INFORMATION**

Silicon Laboratories Inc. 400 West Cesar Chavez Austin, TX 78701 Tel: 1+(512) 416-8500 Fax: 1+(512) 416-9669 Toll Free: 1+(877) 444-3032

Email: ProSLICinfo@silabs.com Internet: www.silabs.com

ww.DataSheet4U.com

The information in this document is believed to be accurate in all respects at the time of publication but is subject to change without notice. Silicon Laboratories assumes no responsibility for errors and omissions, and disclaims responsibility for any consequences resulting from the use of information included herein. Additionally, Silicon Laboratories assumes no responsibility for the functioning of undescribed features or parameters. Silicon Laboratories reserves the right to make changes without further notice. Silicon Laboratories makes no warranty, representation or guarantee regarding the suitability of its products for any particular purpose, nor does Silicon Laboratories assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. Silicon Laboratories products are not designed, intended, or authorized for use in applications intended to support or sustain life, or for any other application in which the failure of the Silicon Laboratories product could create a situation where personal injury or death may occur. Should Buyer purchase or use Silicon Laboratories products for any such unintended or unauthorized application, Buyer shall indemnify and hold Silicon Laboratories harmless against all claims and damages.

Silicon Laboratories, Silicon Labs, and ProSLIC are trademarks of Silicon Laboratories Inc.

Other products or brandnames mentioned herein are trademarks or registered trademarks of their respective holders.

