

HCD-DZ370/DZ560/DZ570/ DZ660/DZ777

SERVICE MANUAL



Ver. 1.1 2008.05



Photo : HCD-DZ777

AEP Model

UK Model

HCD-DZ560/DZ660

E Model

HCD-DZ370/DZ570/DZ777

Australian Model

HCD-DZ570/DZ777

PX Model

HCD-DZ570

- HCD-DZ370/DZ560/DZ570/DZ660/DZ777 are the amplifier, DVD/CD and tuner section in DAV-DZ370/DZ560/DZ570/DZ660/DZ777.

This system incorporates with Dolby* Digital and Dolby Pro Logic (II) adaptive matrix surround decoder and the DTS** Digital Surround System.

* Manufactured under license from Dolby Laboratories.

“Dolby”, “Pro Logic”, and the double-D symbol are trademarks of Dolby Laboratories.

** Manufactured under license from DTS, Inc.

“DTS” and “DTS Digital Surround” are registered trademarks of DTS, Inc.

Model Name Using Similar Mechanism	HCD-DZ260/DZ270/HDZ278
Mechanism Type	CDM85-DVBU102
Optical Pick-up Name	KHM-313CAA

SPECIFICATIONS

Amplifier Section (DZ370)

Stereo mode (rated) 108 W + 108 W (at 3 ohms, 1 kHz, 1% THD)
Surround mode (reference) RMS output power
FL/FR/C/SL/SR*: 143 watts (per channel at 3 ohms, 1 kHz, 10% THD)
Subwoofer*: 285 watts (at 1.5 ohms, 80 Hz, 10% THD)

Amplifier Section (DZ570)

Stereo mode (rated) 108 W + 108 W (at 3 ohms, 1 kHz, 1% THD)
Surround mode (reference) RMS output power
FL/FR/C/SL/SR*: 142 watts (per channel at 3 ohms, 1 kHz, 10% THD)
Subwoofer*: 140 watts (at 3 ohms, 80 Hz, 10% THD)

Amplifier Section (DZ560/DZ660)

Stereo mode (rated) 108 W + 108 W (at 3 ohms, 1 kHz, 1% THD)
Surround mode (reference) RMS output power
FL/FR/C/SL/SR*: 142 watts (per channel at 3 ohms, 1 kHz, 10% THD)
Subwoofer*: 140 watts (at 3 ohms, 80 Hz, 10% THD)

Amplifier Section (DZ777)

Stereo mode (rated) 108 W + 108 W (at 3 ohms, 1 kHz, 1% THD)
Surround mode (reference) RMS output power
FL/FR/C/SL/SR*: 143 watts (per channel at 3 ohms, 1 kHz, 10% THD)
Subwoofer*: 285 watts (at 1.5 ohms, 80 Hz, 10% THD)

* Depending on the decoding mode settings and the source, there may be no sound output.

Inputs (Analog) (DZ370/DZ570)

TV/VIDEO (AUDIO IN) Sensitivity: 450/250 mV

AUDIO IN Sensitivity: 250/125 mV

Inputs (Analog) (DZ560)

TV (AUDIO IN) Sensitivity: 450/250 mV

AUDIO IN Sensitivity: 250/125 mV

Inputs (Analog) (DZ660)

TV (AUDIO IN) Sensitivity: 450/250 mV

LINE (AUDIO IN) Sensitivity: 450/250 mV

AUDIO IN Sensitivity: 250/125 mV

Inputs (Analog) (DZ777)

TV (AUDIO IN) Sensitivity: 450/250 mV

SAT/CABLE (AUDIO IN) Sensitivity: 450/250 mV

AUDIO IN Sensitivity: 250/125 mV

Inputs (Digital) (DZ370/DZ570)

TV/VIDEO (COAXIAL IN/OPTICAL IN)

Impedance: 75 ohms/-

Inputs (Digital) (DZ560/DZ660/DZ777)

TV (COAXIAL IN/OPTICAL IN)

Impedance: 75 ohms/-

Outputs (Analog)

Phones

Accepts low- and high-impedance headphones.

Super Audio CD/DVD System

Laser

Semiconductor laser
(Super Audio CD/DVD: λ = 650 nm)
(CD: λ = 790 nm)
Emission duration: continuous

Signal format system

Mexican and Latin American models:

NTSC

Other models:

NTSC/PAL

USB Section

Supported bit rate

MP3 (MPEG 1 Audio Layer-3):

32 kbps - 320 kbps

WMA:

48 kbps - 192 kbps

AAC:

48 kbps - 320 kbps

– Continued on next page –

DVD RECEIVER

9-889-024-02

2008E04-1

© 2008.05

Sony Corporation

Audio Business Group

Published by Sony Techno Create Corporation

SONY®

HCD-DZ370/DZ560/DZ570/DZ660/DZ777

Ver. 1.1

Sampling frequencies
MP3 (MPEG 1 Audio Layer-3):
32/44.1/48 kHz
WMA: 44.1 kHz
AAC: 44.1 kHz
⚡ (USB) port:
Maximum current: 500 mA

Tuner Section

System PLL quartz-locked digital synthesizer

FM tuner section
Tuning range
North American models: 87.5 MHz - 108.0 MHz (100 kHz step)
Other models: 87.5 MHz - 108.0 MHz (50 kHz step)

Antenna (aerial) FM wire antenna (aerial)
Antenna (aerial) terminals 75 ohms, unbalanced
Intermediate frequency 10.7 MHz

AM tuner section
Tuning range
North American, Mexican, and Latin American models:
530 kHz - 1,710 kHz (with the interval set at 10 kHz)
531 kHz - 1,710 kHz (with the interval set at 9 kHz)
European, Russian, and Middle Eastern models:
531 kHz - 1,602 kHz (with the interval set at 9 kHz)
Australian and New Zealand models:
531 kHz - 1,710 kHz (with the interval set at 9 kHz)
530 kHz - 1,710 kHz (with the interval set at 10 kHz)
Other models: 531 kHz - 1,602 kHz (with the interval set at 9 kHz)
530 kHz - 1,610 kHz (with the interval set at 10 kHz)

Antenna (aerial) AM loop antenna (aerial)
Intermediate frequency 450 kHz

Video Section (DZ370/DZ570/DZ777)

Outputs VIDEO: 1 Vp-p 75 ohms
COMPONENT:
Y: 1 Vp-p 75 ohms
PB/CB, Pr/Cr: 0.7 Vp-p 75 ohms
HDMI OUT: Type A (19 pin)

Video Section (DZ560/DZ660)

Outputs VIDEO: 1 Vp-p 75 ohms
R/G/B: 0.7 Vp-p 75 ohms
HDMI OUT: Type A (19 pin)

General

Power requirements
Mexican models: 120 V AC, 60 Hz
Taiwan models: 120 V AC, 50/60 Hz
Latin American models: 110 V - 240 V AC, 50/60 Hz
Other models: 220 V - 240 V AC, 50/60 Hz

Power consumption
On: 170 W
Standby: 0.3 W (at the Power Saving mode)

Output voltage (DIGITAL MEDIA PORT)
DC 5 V

Output current (DIGITAL MEDIA PORT)
700 mA


imensions (approx.) 430 mm × 66 mm × 385 mm (w/h/d) incl. projecting parts

Mass (approx.) 4.2 kg

Design and specifications are subject to change without notice.

MODEL IDENTIFICATION

– Back Panel –

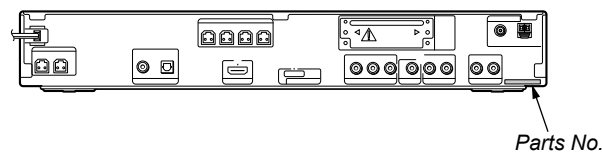

Model	Part No.
DZ370: E12 model	3-273-759-9□
DZ560: UK model	3-273-761-0□
DZ660: AEP, UK model	3-273-761-1□
DZ777: E3 model	3-273-761-3□
DZ777: AUS model	3-273-761-4□
DZ777: KR model	3-273-761-6□
DZ777: E15 model	3-273-761-9□
DZ570: E12 model	3-273-762-0□
DZ570: E3 model	3-273-762-1□
DZ570: MX model	3-273-762-2□
DZ570: AUS model	3-273-762-3□
DZ570: KR model	3-273-762-6□
DZ570: E32 model	3-273-762-7□
DZ570: TW model	3-273-762-8□
DZ570: E15 model	3-273-762-9□
DZ570: PX model	3-875-160-1□

- Abbreviation
AUS : Australian model
E3 : 240 V AC Area in E model
E12 : 220-240 V AC area in E model
E15 : Iran model
E32 : 110 – 240V AC area in E model
KR : Korean model
MX : Mexican model
TW : Taiwan model

Special Component Notice

The components identified by mark △ contain confidential information.
Strictly follow the instructions whenever the components are repaired and/or replaced.

SAFETY-RELATED COMPONET WARNING!

COMPONENTS IDENTIFIED BY MARK △ OR DOTTED LINE WITH MARK △ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

Laser component in this product is capable of emitting radiation exceeding the limit for Class 1.



This appliance is classified as a CLASS 1 LASER product. This marking is located on the rear or bottom exterior.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Notes on chip component replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

Flexible Circuit Board Repairing

- Keep the temperature of soldering iron around 270 °C during repairing.
- Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
- Be careful not to apply force on the conductor when soldering or unsoldering.

UNLEADED SOLDER

Boards requiring use of unleaded solder are printed with the lead-free mark (LF) indicating the solder contains no lead.

(Caution: Some printed circuit boards may not come printed with the lead free mark due to their particular size)



: LEAD FREE MARK

Unleaded solder has the following characteristics.

- Unleaded solder melts at a temperature about 40 °C higher than ordinary solder.
Ordinary soldering irons can be used but the iron tip has to be applied to the solder joint for a slightly longer time.
Soldering irons using a temperature regulator should be set to about 350 °C.
Caution: The printed pattern (copper foil) may peel away if the heated tip is applied for too long, so be careful!
- Strong viscosity
Unleaded solder is more viscous (sticky, less prone to flow) than ordinary solder so use caution not to let solder bridges occur such as on IC pins, etc.
- Usable with ordinary solder
It is best to use only unleaded solder but unleaded solder may also be added to ordinary solder.

About This Operating Instructions

- The instructions in this Operating Instructions describe the controls on the remote. You can also use the controls on the unit if they have the same or similar names as those on the remote.
- The Control Menu items may vary depending on the area.
- “DVD” may be used as a general term for a DVD VIDEO, DVD+RW/DVD+R, and DVD-RW/DVD-R.
- Measurements are expressed in feet (ft) for North American models.
- The default setting is underlined>.

About the S-AIR function

The system is compatible with the S-AIR function, which allows transmission of sound between S-AIR products wirelessly.

The following S-AIR products can be used with the system:

- Surround amplifier: You can enjoy surround speaker sound wirelessly.
- S-AIR receiver: You can enjoy system sound in another room.

These S-AIR products can be purchased as an option (the S-AIR product lineup differs depending on the area).

Notes or instructions for the surround amplifier or S-AIR receiver in this operating instructions refer only to when the surround amplifier or S-AIR receiver is used.

For details on the S-AIR function, see “Using an S-AIR Product”.

Playable Discs

Type	Disc logo	Characteristics	Icon
DVD VIDEO	     	• DVD VIDEO • DVD-R/DVD-RW in DVD VIDEO format or video mode • DVD+R/DVD+RW in DVD VIDEO format	
VR (Video Recording) mode	 	• DVD-R/DVD-RW in VR (Video Recording) mode (except for DVD-R DL)	
Super Audio CD	 SUPER AUDIO CD	• Super Audio CD	
VIDEO CD		• VIDEO CD (Ver. 1.1 and 2.0 discs) • Super VCD • CD-R/CD-RW/CD-ROM in video CD format or Super VCD format	
CD		• Audio CD • CD-R/CD-RW in audio CD format	
DATA CD	—	• CD-R/CD-RW/CD-ROM in DATA CD format, containing MP3 files¹⁾, JPEG image files²⁾, and DivX video files³⁾⁴⁾, and conforming to ISO 9660⁵⁾ Level 1/ Level 2, or Joliet (extended format)	
DATA DVD	—	• DVD-ROM/DVD-R/DVD-RW/ DVD+R/DVD+RW in DATA DVD format, containing MP3 files¹⁾, JPEG image files²⁾, and DivX video files³⁾⁴⁾, and conforming to UDF (Universal Disk Format)	

¹⁾MP3 (MPEG1 Audio Layer 3) is a standard format defined by ISO/MPEG which compresses audio data. MP3 files must be in MPEG1 Audio Layer 3 format.

²⁾JPEG image files must conform to the DCF image file format. (DCF “Design rule for Camera File system”: Image standards for digital cameras regulated by Japan Electronics and Information Technology Industries Association (JEITA).)

³⁾DivX[®] is a video file compression technology, developed by DivX, Inc.

⁴⁾DivX, DivX Certified, and associated logos are trademarks of DivX, Inc. and are used under license.

⁵⁾A logical format of files and folders on CD-ROMs, defined by ISO (International Organization for Standardization).

“DVD-RW,” “DVD+RW,” “DVD+R,” “DVD VIDEO,” and the “CD” logos are trademarks.

Example of discs that the system cannot play

The system cannot play the following discs:

- CD-ROM/CD-R/CD-RW other than those recorded in the formats listed on page 5
- CD-ROM recorded in PHOTO CD format
- Data part of CD-Extra
- CD Graphics disc
- DVD Audio
- DATA DVD that does not contain MP3 files, JPEG image files, or DivX video files
- DVD-RAM

Also, the system cannot play the following discs:

- A DVD VIDEO with a different region code
- A disc that has a non-standard shape (e.g., card, heart)
- A disc with paper or stickers on it
- A disc that has the adhesive of cellophane tape or a sticker still left on it

Note about CD-R/CD-RW/DVD-R/DVD-RW/DVD+R/DVD+RW

In some cases, CD-R/CD-RW/DVD-R/DVD-RW/DVD+R/DVD+RW cannot be played on this system due to the recording quality or physical condition of the disc, or the characteristics of the recording device and authoring software.

The disc will not play if it has not been correctly finalized. For more information, refer to the operating instructions for the recording device.

Note that some playback functions may not work with some DVD+RWs/DVD+Rs, even if they have been correctly finalized. In this case, view the disc by normal playback. Also some DATA CDs/DATA DVDs created in Packet Write format cannot be played.

Music discs encoded with copyright protection technologies

This product is designed to play back discs that conform to the Compact Disc (CD) standard.

Recently, various music discs encoded with copyright protection technologies are marketed by some record companies. Please be aware that among those discs, there are some that do not conform to the CD standard and may not be playable by this product.

Note on DualDiscs

A DualDisc is a two sided disc product which mates DVD recorded material on one side with digital audio material on the other side. However, since the audio material side does not conform to the Compact Disc (CD) standard, playback on this product is not guaranteed.

About Multi Session CD

- This system can play a Multi Session CD when an MP3 file is contained in the first session. Any subsequent MP3 files recorded in later sessions can also be played back.
- This system can play a Multi Session CD when a JPEG image file is contained in the first session. Any subsequent JPEG image files recorded in later sessions can also be played back.
- If MP3 files and JPEG image files in music CD format or video CD format are recorded in the first session, only the first session will be played back.

Region code

Your system has a region code printed on the rear of the unit and will only play a DVD labeled with the same region code.

A DVD VIDEO labeled  will also play on this system.

If you try to play any other DVD VIDEO, the message [Playback prohibited by area limitations.] will appear on the TV screen. Depending on the DVD VIDEO, no region code indication may be given even though playing the DVD VIDEO is prohibited by area restrictions.

Note about playback operations of a DVD or VIDEO CD

Some playback operations on a DVD or VIDEO CD may be intentionally set by software producers. Since this system will play a DVD or VIDEO CD according to the disc contents the software producers designed, some playback features may not be available. Be sure to read the operating instructions supplied with the DVD or VIDEO CD.

Copyrights

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

This system incorporates with Dolby* Digital and Dolby Pro Logic (II) adaptive matrix surround decoder and the DTS** Digital Surround System.

* Manufactured under license from Dolby Laboratories.

“Dolby”, “Pro Logic”, and the double-D symbol are trademarks of Dolby Laboratories.

** Manufactured under license from DTS, Inc.

“DTS” and “DTS Digital Surround” are registered trademarks of DTS, Inc.

This system incorporates High-Definition Multimedia Interface (HDMI™) technology.

HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

“BRAVIA” and **BRAVIA** are trademarks of Sony Corporation.

“S-AIR” and its logo are trademarks of Sony Corporation.

7^{GB}

Self-diagnosis Function

(When letters/numbers appear in the display)

When the self-diagnosis function is activated to prevent the system from malfunctioning, a 5-character service number (e.g., C 13 50) with a combination of a letter and 4 digits appears on the TV screen or front panel display. In this case, check the following table.



First 3 characters of the service number	Cause and/or corrective action
C 13	The disc is dirty. ➡Clean the disc with a soft cloth.
C 31	The disc is not inserted correctly. ➡Restart the system, then re-insert the disc correctly.
E XX (XX is a number)	To prevent a malfunction, the system has performed the self-diagnosis function. ➡Contact your nearest Sony dealer or local authorized Sony service facility and give the 5-character service number. Example: E 61 10

When displaying the version number on the TV screen

When you turn on the system, the version number [VER.X.XX] (X is a number) may appear on the TV screen. Although this is not a malfunction and for Sony service use only, normal system operation will not be possible. Turn off the system, and then turn on the system again to operate.



TABLE OF CONTENTS

1. SERVICING NOTES	9	6-10. Schematic Diagram –MAIN Board (3/9)–.....	47
2. GENERAL	11	6-11. Schematic Diagram –MAIN Board (4/9), MS-203 Board–.....	48
3. DISASSEMBLY		6-12. Schematic Diagram –MAIN Board (5/9)–.....	49
3-1. Case	24	6-13. Schematic Diagram –MAIN Board (6/9)–.....	50
3-2. POWER Board.....	24	6-14. Schematic Diagram –MAIN Board (7/9)–.....	51
3-3. Front Panel Section	25	6-15. Schematic Diagram –MAIN Board (8/9)–.....	52
3-4. Back Panel Section	25	6-16. Schematic Diagram –MAIN Board (9/9)–.....	53
3-5. DVD Mechanism Deck.....	26	6-17. Printed Wiring Board –IO-SCART Board (DZ560/DZ660)–	54
3-6. MAIN Board.....	26	6-18. Schematic Diagram –IO-SCART Board (DZ560/DZ660)–	55
3-7. IO-SCART Board (DZ560/DZ660), IO-COMPONENT Board (DZ370/DZ570/DZ777)	27	6-19. Printed Wiring Board –IO-COMPONENT Board (DZ370/DZ570/DZ777)–.....	56
3-8. Tray	27	6-20. Schematic Diagram –IO-COMPONENT Board (DZ370/DZ570/DZ777)–.....	57
3-9. Belt.....	28	6-21. Printed Wiring Boards –JACK, P-SW Board–	58
3-10. MS-203 Board.....	28	6-22. Schematic Diagram –JACK, P-SW Board–.....	59
3-11. Base Unit.....	29	6-23. Printed Wiring Boards –FL, MS-203, SPEAKER Board–	60
3-12. Optical Pick-up	29	6-24. Schematic Diagram –FL, SPEAKER Board–.....	61
4. TEST MODE	30	6-25. Printed Wiring Board –S-AIR-CON Board–	62
5. ELECTRICAL ADJUSTMENTS	35	6-26. Schematic Diagram –S-AIR-CON Board–.....	63
6. DIAGRAMS		6-27. Printed Wiring Board –POWER Board–	64
6-1. Block Diagram –RF Section–.....	38	6-28. Schematic Diagram –POWER Board–	65
6-2. Block Diagram –VIDEO Section–	39	7. EXPLODED VIEWS	
6-3. Block Diagram –AUDIO Section–	40	7-1. Overall Section	78
6-4. Block Diagram –AMP Section–	41	7-2. Front Panel Section.....	79
6-5. Block Diagram –POWER Section–	42	7-3. Chassis Section	80
6-6. Printed Wiring Board –MAIN Board (Side A)–	43	7-4. DVD Mechanism Deck Section (CDM85-DVBU102) ..	81
6-7. Printed Wiring Board –MAIN Board (Side B)–	44	8. ELECTRICAL PARTS LIST	82
6-8. Schematic Diagram –MAIN Board (1/9)–.....	45		
6-9. Schematic Diagram –MAIN Board (2/9)–.....	46		

HCD-DZ370/DZ560/DZ570/DZ660/DZ777

SECTION 1

SERVICING NOTES

NOTES ON HANDLING THE OPTICAL PICK-UP BLOCK OR BASE UNIT

The laser diode in the optical pick-up block may suffer electrostatic break-down because of the potential difference generated by the charged electrostatic load, etc. on clothing and the human body. During repair, pay attention to electrostatic break-down and also use the procedure in the printed matter which is included in the repair parts.

The flexible board is easily damaged and should be handled with care.

NOTES ON LASER DIODE EMISSION CHECK

The laser beam on this model is concentrated so as to be focused on the disc reflective surface by the objective lens in the optical pickup block. Therefore, when checking the laser diode emission, observe from more than 30 cm away from the objective lens.

LASER DIODE AND FOCUS SEARCH

1. Open the case and turn POWER on with no disc inserted.
2. Confirm that the following operation is performed while observing the objecting lens from the clearance of DVD mechanism deck.
 - 1) Confirm that laser beam is spread.
 - 2) Up and down motion of the objective lens. (2 times)

DISC TRAY LOCK

The disc tray lock function for the antitheft of an demonstration disc in the store is equipped.

Setting Procedure :

1. Press the [I/⏻] button to turn the set on.
2. Press the [FUNCTION] button to set DVD function.
3. Insert a disc.
4. Press the [■] button and the [≡] button simultaneously for five seconds.
5. The message "LOCKED" is displayed and the tray is locked.

Releasing Procedure :

1. Press the [■] button and the [≡] button simultaneously for five seconds again.
2. The message "UNLOCKED" is displayed and the tray is unlocked.

Note: When "LOCKED" is displayed, the tray lock is not released by turning power on/off with the [I/⏻] button.

On cleaning discs, disc/lens cleaners

- Do not use cleaning discs or disc/lens cleaners (including wet or spray types). These may cause the apparatus to malfunction.

IMPORTANT NOTICE

Caution: This system is capable of holding a still video image or on-screen display image on your television screen indefinitely. If you leave the still video image or on-screen display image displayed on your TV for an extended period of time you risk permanent damage to your television screen. Projection televisions are especially susceptible to this.

Attention when transported


Use this mode when returning the set to the customer after repair.

Procedure:


1. Press the [I/⏻] button to turn the set on.
2. Press the [FUNCTION] button to set the function "DVD".
3. Remove all discs, and then press two buttons [▷] and [I/⏻] simultaneously.
4. After a message "MECHA LOCK" is displayed on the fluorescent indicator tube, pull out the AC plug.
5. To exit from this mode, press the [I/⏻] button to turn the set on.

How to open the disc table when power switch turns off

Insert a tapering driver into the aperture of the unit bottom, and slide it in the direction of the arrow.

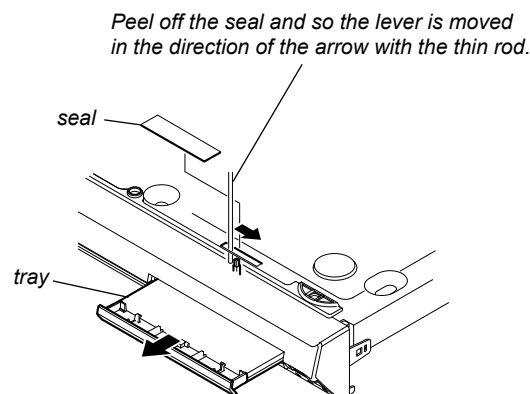

Precaution when installing a new OP unit/ Precaution before unsoldering the static electricity prevention solder bridge

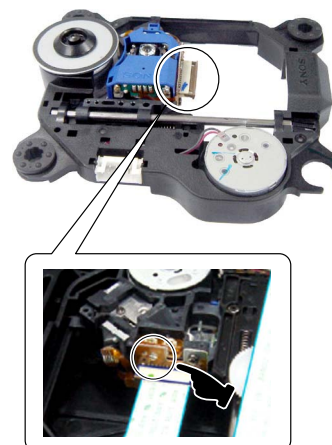


When installing a new OP unit, be sure to connect the flexible printed circuit board first of all before removing the static electricity prevention solder bridge by unsoldering.

Remove the static electricity prevention solder bridge by unsoldering after the flexible printed circuit board has already been connected.

(Do not remove nor unsolder the solder bridge as long as the OP unit is kept standalone.)

Radiation Sheet


When peeling off the heat radiation sheet, try always to put it on be former position.

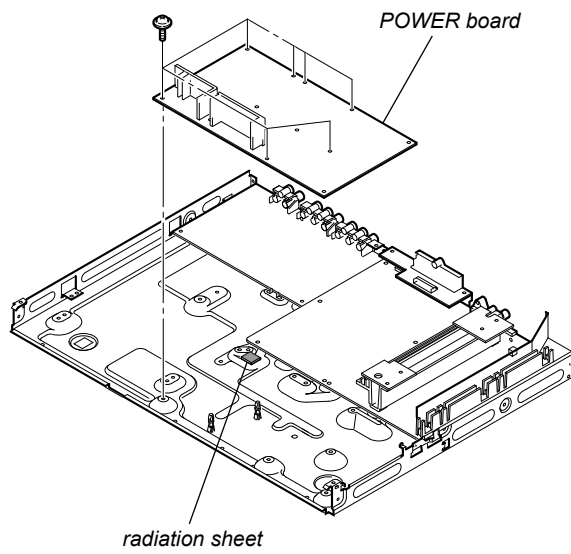

Index to Parts and Control (DZ370/DZ570)


For more information, refer to the pages indicated in parentheses.

Front panel

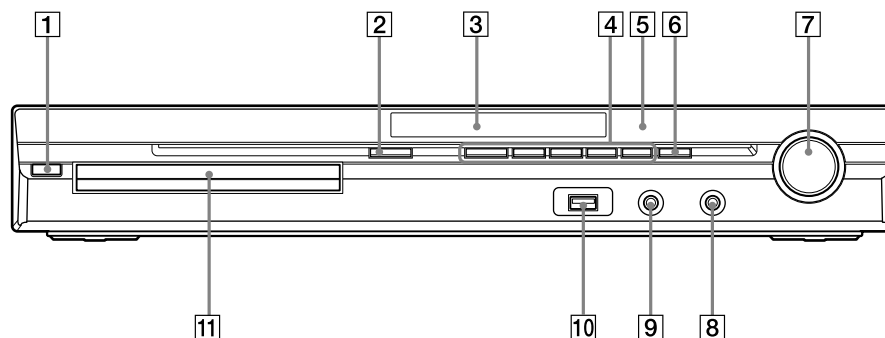

- | | |
|-------------------------------|--|
| 1 I/⏻ (on/standby) (31, 94) | 7 VOLUME control (39) |
| 2 ≡ (open/close) (39) | 8 PHONES jack (39) |
| 3 Front panel display (114) | 9 AUDIO IN/A.CAL MIC jack (27, 31, 88) |
| 4 Play operation buttons (39) | 10 ⇄ (USB) port (71) |
| 5 □ (remote sensor) (10) | 11 Disc tray (39) |
| 6 FUNCTION (34) | |

Rear panel

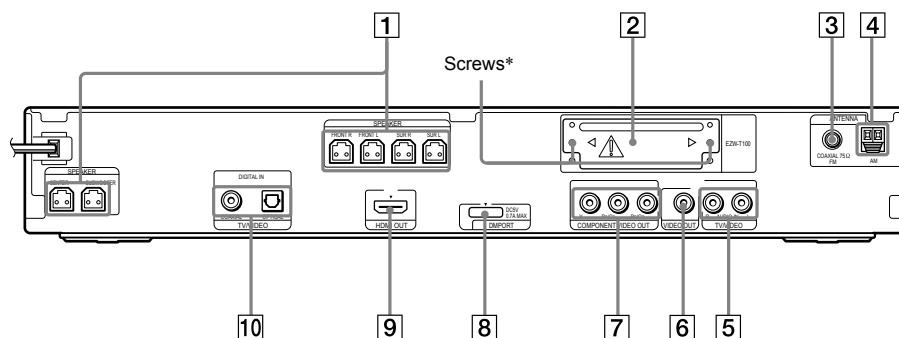


- | | |
|--|---|
| 1 SPEAKER jacks (24) | 7 COMPONENT VIDEO OUT jacks (25) |
| 2 EZW-T100 slot (27) | 8 DMPORT (DIGITAL MEDIA PORT) jack (27, 80) |
| 3 COAXIAL 75Ω FM jack (29) | 9 HDMI OUT jack (25) |
| 4 AM terminal (29) | 10 TV/VIDEO (DIGITAL IN COAXIAL/OPTICAL) jacks (25) |
| 5 TV/VIDEO (AUDIO IN R/L) jacks (25, 27) | |
| 6 VIDEO OUT jack (25) | |

* ⚠ CAUTION

Please do not remove the screws before installing the EZW-T100.

Front panel display

About the indications in the front panel display

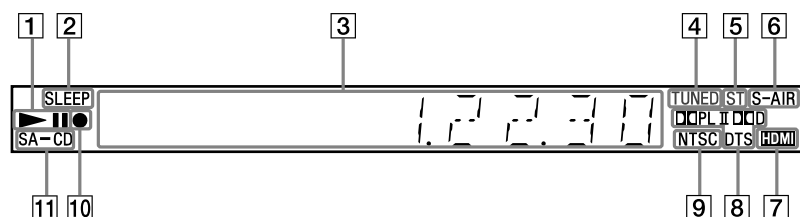


- | | |
|--|---|
| <ol style="list-style-type: none"> 1 Playing status 2 Flashes when the sleep timer is set. (90) 3 Displays system's status such as chapter, title, or track number, time information, radio frequency, playing status, decoding mode, etc. 4 Lights up when a station is received. (Radio only) (65) 5 Stereo/Monaural effect (Radio only) (66) 6 Lights up when the S-AIR transmitter (not supplied) is inserted in the unit and the system transmits the sound. (81) | <ol style="list-style-type: none"> 7 Lights up when the HDMI OUT jack is correctly connected to HDCP (High-bandwidth Digital Content Protection) compliant device with HDMI or DVI (Digital Visual Interface) input. (25) 8 Current surround format (Except for JPEG image file) 9 Lights up when the color system is set to NTSC. (Asian, Australian, and Middle Eastern models only) 10 Lights up during USB recording/ copying. (77) 11 Lights up when Super Audio CD/CD is loaded. (42) |
|--|---|

Remote control

ALPHABETICAL ORDER		BUTTON DESCRIPTIONS
A – O	P – Z	
ANGLE 3 (40)	PICTURE NAVI 15 (49, 73)	Number buttons 14 (43, 65, 89)
AUDIO 16 (41)	PRESET +/- 27 (66)	I/⏻ (on/standby) 1 (30, 31, 39)
CLEAR 32 (44, 56, 66)	PROG +/- 27 (89)	TV I/⏻ (on/standby) 19 (89)
D.TUNING 22 (66)	S-AIR MODE 4	⏮/⏪/⏩/⏭ 12 (30, 31, 42, 44, 65, 87)
DISC SKIP ¹⁾ 33	SLEEP 17 (90)	⏮/•/•/⏭ REPLAY/ADVANCE 9 (39)
DISPLAY 21 (67, 76, 91)	SOUND MODE 5 (38)	⏮/⏭ 27 (39)
DVD MENU 25 (47)	SUBTITLE 22 (41)	⏮/⏭ 10 (39)
DVD TOP MENU 13 (47)	SYSTEM MENU 24 (30, 35, 90, 91)	STEP ⏮/⏭ 9 (39)
DYNAMIC BASS 6 (90)	THEATRE 18 (68)	SLOW ⏮/⏭ 10 (39)
ENTER ²⁾ 24 (30, 31, 42, 44, 65, 87)	TOOLS 26 (89)	▷ (play) 30 (39)
FUNCTION +/- 2 (34, 39)	TUNING +/- 10 (65)	■ (stop) 28 (39)
MENU 25 (89)	TV 29 (89)	⏸ (pause) 11 (39)
MUTING 7 (39)	TV INPUT 20 (89)	⏻ DISPLAY ³⁾ 26 (31, 42, 44, 87)
NIGHT 23 (90)	TV VOL +/- 34 (89)	⏮ RETURN 31 (43, 89)
ONE-TOUCH PLAY 35 (69)	VOLUME +/- 8 (39)	-/-- 32 (89)

Additional Information

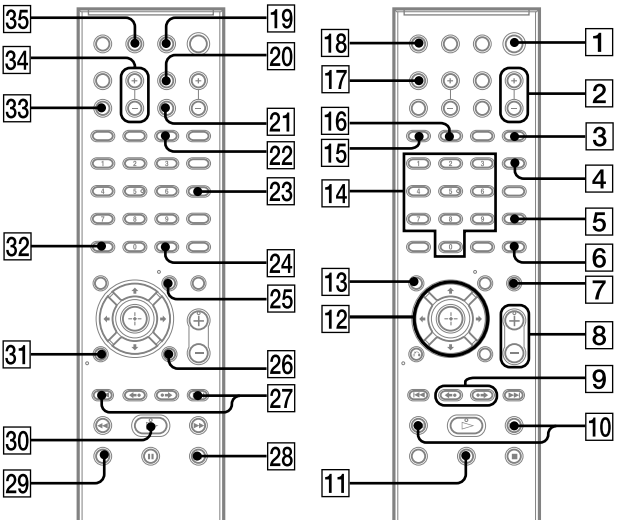

¹⁾This button is not available for this model.


²⁾The ENTER button has the same function as the ⊕ button. When you operate the TV, the ENTER button is used for selecting a channel, and the ⊕ button is used for selecting menu items (page 89).

³⁾This button is available for the “DVD,” “USB,” or “DMPORT” function. Depending on the DIGITAL MEDIA PORT adapter, this button may not work.

Index to Parts and Control (DZ560)


For more information, refer to the pages indicated in parentheses.

Front panel

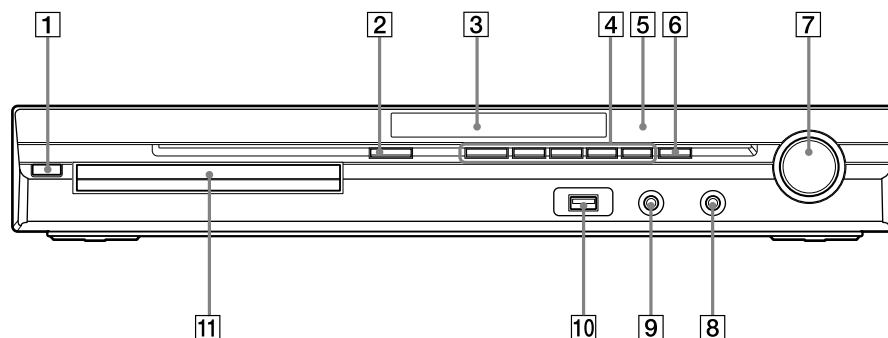

- | | |
|-------------------------------|--|
| 1 I/⏻ (on/standby) (25, 88) | 7 VOLUME control (33) |
| 2 ≡ (open/close) (33) | 8 PHONES jack (33) |
| 3 Front panel display (108) | 9 AUDIO IN/A.CAL MIC jack (21, 25, 82) |
| 4 Play operation buttons (33) | 10 ⇄ (USB) port (65) |
| 5 □ (remote sensor) (9) | 11 Disc tray (33) |
| 6 FUNCTION (28) | |

Rear panel

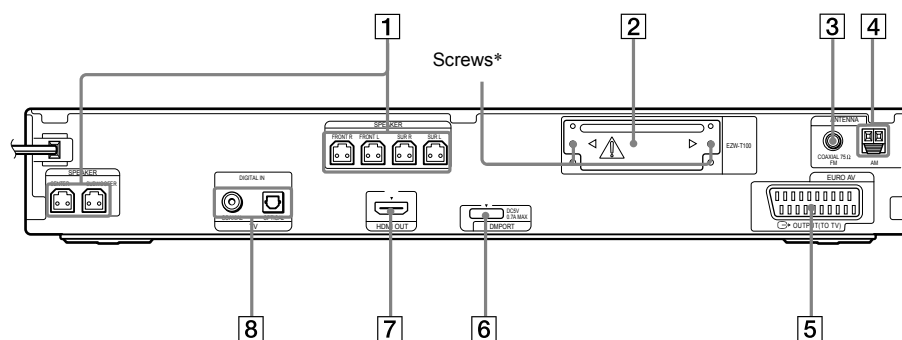

- | | |
|--------------------------------------|--|
| 1 SPEAKER jacks (19) | 6 DMPORT (DIGITAL MEDIA PORT) jack (21, 74) |
| 2 EZW-T100 slot (21) | 7 HDMI OUT jack (20) |
| 3 COAXIAL 75Ω FM jack (23) | 8 TV (DIGITAL IN COAXIAL/OPTICAL) jacks (20) |
| 4 AM terminal (23) | |
| 5 EURO AV ⇄ OUTPUT (TO TV) jack (20) | |


* ⚠ CAUTION

Please do not remove the screws before installing the EZW-T100.

Additional Information

Front panel display


About the indications in the front panel display

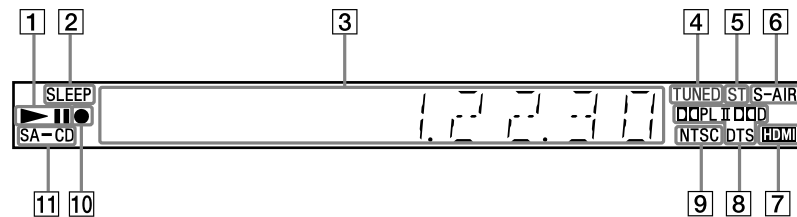

- | | |
|---|---|
| <p>1 Playing status</p> <p>2 Flashes when the sleep timer is set. (84)</p> <p>3 Displays system's status such as chapter, title, or track number, time information, radio frequency, playing status, decoding mode, etc.</p> <p>4 Lights up when a station is received. (Radio only) (58)</p> <p>5 Stereo/Monaural effect (Radio only) (59)</p> <p>6 Lights up when the S-AIR transmitter (not supplied) is inserted in the unit and the system transmits the sound. (75)</p> | <p>7 Lights up when the HDMI OUT jack is correctly connected to HDCP (High-bandwidth Digital Content Protection) compliant device with HDMI or DVI (Digital Visual Interface) input. (20)</p> <p>8 Current surround format (Except for JPEG image file)</p> <p>9 Lights up when an NTSC disc is loaded.</p> <p>10 Lights up during USB recording/copying. (71)</p> <p>11 Lights up when Super Audio CD/CD is loaded. (36)</p> |
|---|---|

Remote control

ALPHABETICAL ORDER		BUTTON DESCRIPTIONS
A - O	P - Z	
ANGLE 3 (34)	PICTURE NAVI 15 (43, 67)	Number buttons 14 (37, 58, 83)
AUDIO 16 (35)	PRESET +/- 27 (59)	I/⏻ (on/standby) 1 (24, 25, 33)
CLEAR 32 (38, 50, 59)	PROG +/- 27 (83)	TV I/⏻ (on/standby) 19 (83)
D.TUNING 22 (59)	S-AIR MODE 4	⏮/⏪/⏩/⏭ 12 (24, 25, 36, 38, 58, 81)
DISC SKIP ¹⁾ 33	SLEEP 17 (84)	⏮•••⏭ REPLAY/ADVANCE 9 (33)
DISPLAY 21 (60, 70, 85)	SOUND MODE 5 (32)	⏮/⏭ 27 (33)
DVD MENU 25 (41)	SUBTITLE 22 (35)	⏮/⏭ 10 (33)
DVD TOP MENU 13 (41)	SYSTEM MENU 24 (24, 29, 84, 85)	STEP ⏮/⏭ 9 (33)
DYNAMIC BASS 6 (84)	THEATRE 18 (62)	SLOW ⏮/⏭ 10 (33)
ENTER ²⁾ 24 (24, 25, 36, 38, 58, 81)	TOOLS 26 (83)	▷ (play) 30 (33)
FUNCTION +/- 2 (28, 33)	TUNING +/- 10 (58)	■ (stop) 28 (33)
MENU 25 (83)	TV 29 (83)	⏸ (pause) 11 (33)
MUTING 7 (33)	TV INPUT 20 (83)	⏻ DISPLAY ³⁾ 26 (25, 36, 38, 81)
NIGHT 23 (84)	TV VOL +/- 34 (83)	⏮ RETURN 31 (37, 83)
ONE-TOUCH PLAY 35 (63)	VOLUME +/- 8 (33)	-/-- 32 (83)

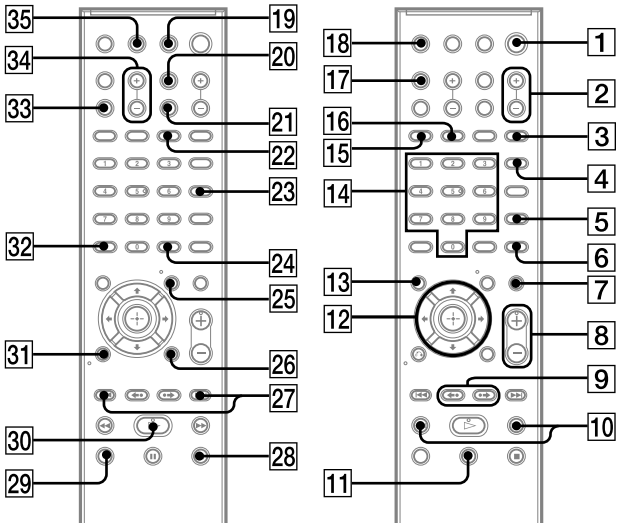

¹⁾This button is not available for this model.

²⁾The ENTER button has the same function as the ⊕ button. When you operate the TV, the ENTER button is used for selecting a channel, and the ⊕ button is used for selecting menu items (page 83).


³⁾This button is available for the “DVD,” “USB,” or “DMPORT” function. Depending on the DIGITAL MEDIA PORT adapter, this button may not work.

Additional Information

Index to Parts and Control (DZ660)

For more information, refer to the pages indicated in parentheses.


Front panel

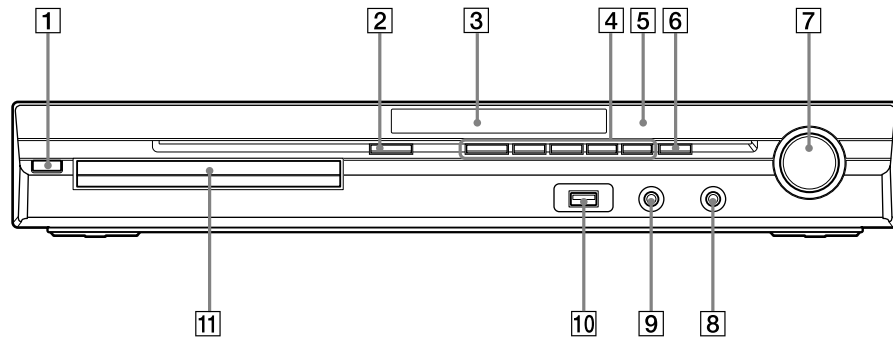

- | | |
|-------------------------------|--|
| 1 I/⏻ (on/standby) (25, 89) | 7 VOLUME control (33) |
| 2 ≡ (open/close) (33) | 8 PHONES jack (33) |
| 3 Front panel display (109) | 9 AUDIO IN/A.CAL MIC jack (21, 25, 82) |
| 4 Play operation buttons (33) | 10 ⇄ (USB) port (65) |
| 5 [R] (remote sensor) (9) | 11 Disc tray (33) |
| 6 FUNCTION (28) | |

Additional Information

Rear panel

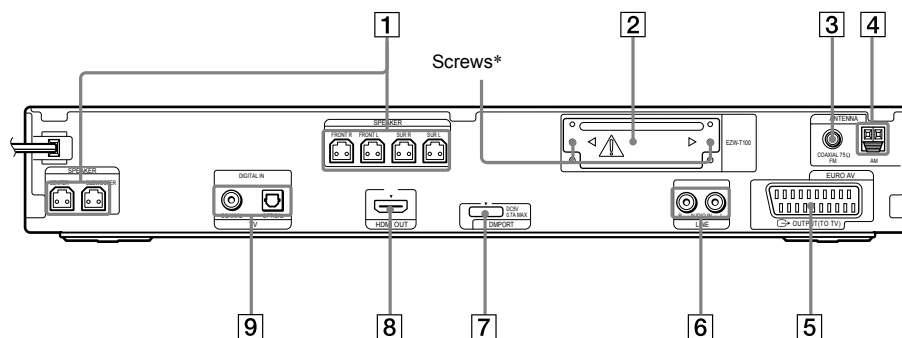


- | | |
|--------------------------------------|--|
| 1 SPEAKER jacks (19) | 6 LINE (AUDIO IN R/L) jacks (21) |
| 2 EZW-T100 slot (21) | 7 DMPORT (DIGITAL MEDIA PORT) jack (21, 74) |
| 3 COAXIAL 75Ω FM jack (23) | 8 HDMI OUT jack (20) |
| 4 AM terminal (23) | 9 TV (DIGITAL IN COAXIAL/OPTICAL) jacks (20) |
| 5 EURO AV ⇄ OUTPUT (TO TV) jack (20) | |

*** ⚠ CAUTION**

Please do not remove the screws before installing the EZW-T100.

Front panel display

About the indications in the front panel display

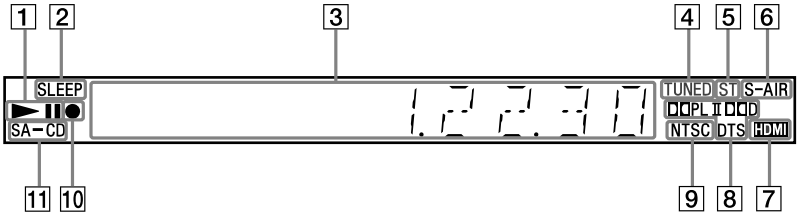


- 1 Playing status
- 2 Flashes when the sleep timer is set. (85)
- 3 Displays system's status such as chapter, title, or track number, time information, radio frequency, playing status, decoding mode, etc.
- 4 Lights up when a station is received. (Radio only) (58)
- 5 Stereo/Monaural effect (Radio only) (59)
- 6 Lights up when the S-AIR transmitter (not supplied) is inserted in the unit and the system transmits the sound. (75)
- 7 Lights up when the HDMI OUT jack is correctly connected to HDCP (High-bandwidth Digital Content Protection) compliant device with HDMI or DVI (Digital Visual Interface) input. (20)
- 8 Current surround format (Except for JPEG image file)
- 9 Lights up when an NTSC disc is loaded.
- 10 Lights up during USB recording/ copying. (71)
- 11 Lights up when Super Audio CD/CD is loaded. (36)

Additional Information

Remote control

ALPHABETICAL ORDER		BUTTON DESCRIPTIONS
A – M	N – Z	
ANALOG 33 (83)	NIGHT 20 (85)	Number buttons 3 (37, 58, 83)
ANGLE 5 (34)	ONE-TOUCH PLAY 35 (63)	Colored buttons 31 (83)
AUDIO 30 (32, 35)	PICTURE NAVI 15 (43, 67)	I/⏻ (on/standby) 1 (24, 25, 33)
CLEAR 32 (38, 50, 59)	PRESET +/- 8 (59)	TV I/⏻ (on/standby) 19 (83)
D.TUNING 22 (59)	PROG +/- 10 (83)	⏮/⏪/⏩/⏭ 14 (24, 25, 36, 38, 58, 81)
DIGITAL 21 (83)	S-AIR MODE 17 (75)	⏮/⏩/⏭ REPLAY/ADVANCE 23 (33)
DIMMER 33 (86)	SLEEP 34 (85)	⏮/⏩ 8 (33)
DISPLAY 16 (60, 70, 86)	SOUND MODE +/- 10 (32)	⏮/⏩ 27 (33)
DVD MENU 6 (41)	SUBTITLE 22 (35)	⏮/⏩ 27 (33)
DVD TOP MENU 29 (41)	SYSTEM MENU 7 (24, 29, 85, 86, 75)	▷ (play) 9 (33)
DYNAMIC BASS 21 (85)	THEATRE 18 (62)	■ (stop) 24 (33)
ENTER* 4 (24, 25, 36, 38, 58, 81)	TOOLS 7 (83)	⏸ (pause) 26 (33)
FUNCTION +/- 2 (28, 33)	TUNING +/- 27 (58)	☐ DISPLAY** 28 (25, 36, 38, 81)
MENU 28 (83)	TV 12 (83)	↶ RETURN 13 (37, 83)
MUTING 25 (33)	TV VOL +/- 11 (83)	-/-- 4 (83)
	VOLUME +/- 11 (33)	⏮/? 16 (83)
		≡ 32 (83)
		≡ 29 (83)
		↶/↷ 6 (83)
		⏮/⏩ 10 (83)

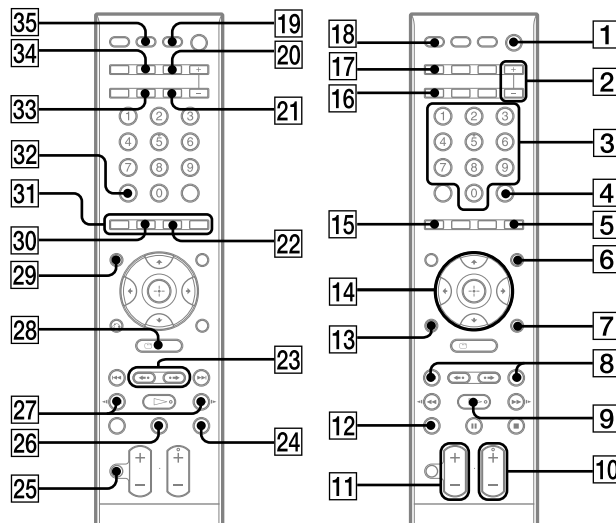


* The ENTER button has the same function as the **+** button. When you operate the TV, the ENTER button is used for selecting a channel, and the **+** button is used for selecting menu items (page 83).

** This button is available for the "DVD," "USB," or "DMPORT" function. Depending on the DIGITAL MEDIA PORT adapter, this button may not work.

Index to Parts and Control (DZ777)

For more information, refer to the pages indicated in parentheses.


Front panel

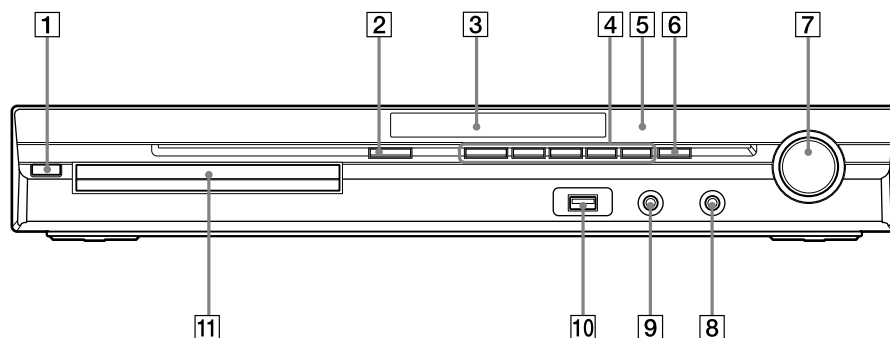

- | | |
|-------------------------------|--|
| 1 I/⏻ (on/standby) (29, 93) | 7 VOLUME control (37) |
| 2 ≡ (open/close) (37) | 8 PHONES jack (37) |
| 3 Front panel display (113) | 9 AUDIO IN/A.CAL MIC jack (25, 29, 86) |
| 4 Play operation buttons (37) | 10 ⇄ (USB) port (69) |
| 5 □ (remote sensor) (9) | 11 Disc tray (37) |
| 6 FUNCTION (32) | |

Additional Information

Rear panel

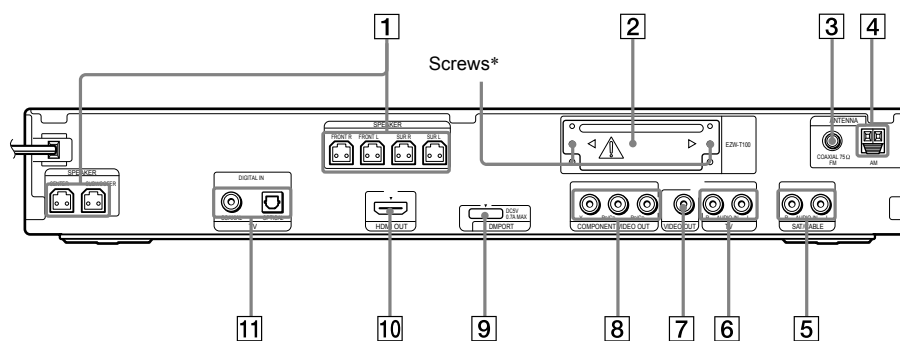


- | | |
|---------------------------------------|---|
| 1 SPEAKER jacks (22) | 7 VIDEO OUT jack (23) |
| 2 EZW-T100 slot (25) | 8 COMPONENT VIDEO OUT jacks (23) |
| 3 COAXIAL 75Ω FM jack (27) | 9 DMPORT (DIGITAL MEDIA PORT) jack (25, 78) |
| 4 AM terminal (27) | 10 HDMI OUT jack (23) |
| 5 SAT/CABLE (AUDIO IN R/L) jacks (25) | 11 TV (DIGITAL IN COAXIAL/OPTICAL) jacks (23) |
| 6 TV (AUDIO IN R/L) jacks (23) | |

*** ⚠ CAUTION**

Please do not remove the screws before installing the EZW-T100.

Front panel display

About the indications in the front panel display

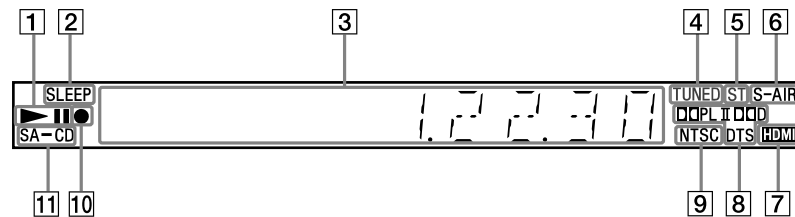


- | | |
|---|---|
| <p>1 Playing status</p> <p>2 Flashes when the sleep timer is set. (89)</p> <p>3 Displays system's status such as chapter, title, or track number, time information, radio frequency, playing status, decoding mode, etc.</p> <p>4 Lights up when a station is received. (Radio only) (63)</p> <p>5 Stereo/Monaural effect (Radio only) (64)</p> <p>6 Lights up when the S-AIR transmitter (not supplied) is inserted in the unit and the system transmits the sound. (79)</p> | <p>7 Lights up when the HDMI OUT jack is correctly connected to HDCP (High-bandwidth Digital Content Protection) compliant device with HDMI or DVI (Digital Visual Interface) input. (23)</p> <p>8 Current surround format (Except for JPEG image file)</p> <p>9 Lights up when the color system is set to NTSC. (Asian, Australian, and Middle Eastern models only)</p> <p>10 Lights up during USB recording/ copying. (75)</p> <p>11 Lights up when Super Audio CD/CD is loaded. (40)</p> |
|---|---|

Additional Information

Remote control

ALPHABETICAL ORDER		BUTTON DESCRIPTIONS
A – M	N – Z	
ANALOG 33 (87)	NIGHT 20 (89)	Number buttons 3 (41, 63, 87)
ANGLE 5 (38)	ONE-TOUCH PLAY 35 (67)	Colored buttons 31 (87)
AUDIO 30 (36, 39)	PICTURE NAVI 15 (47, 71)	I/⏻ (on/standby) 1 (28, 29, 37)
CLEAR 32 (42, 54, 64)	PRESET +/- 8 (64)	TV I/⏻ (on/standby) 19 (87)
D.TUNING 22 (64)	PROG +/- 10 (87)	⏮/⏪/⏩/⏭/⏯ 14 (28, 29, 40, 42, 63, 85)
DIGITAL 21 (87)	S-AIR MODE 17 (79)	⏮/⏪/⏩/⏭/⏯ REPLAY/ADVANCE 23 (37)
DIMMER 33 (90)	SLEEP 34 (89)	⏮/⏪/⏩/⏭/⏯ 8 (37)
DISPLAY 16 (65, 74, 90)	SOUND MODE +/- 10 (36)	⏮/⏪/⏩/⏭/⏯ 27 (37)
DVD MENU 6 (45)	SUBTITLE 22 (39)	⏮/⏪/⏩/⏭/⏯ 27 (37)
DVD TOP MENU 29 (45)	SYSTEM MENU 7 (28, 33, 89, 90, 79)	▷ (play) 9 (37)
DYNAMIC BASS 21 (89)	THEATRE 18 (66)	■ (stop) 24 (37)
ENTER* 4 (28, 29, 40, 42, 63, 85)	TOOLS 7 (87)	⏮ (pause) 26 (37)
FUNCTION +/- 2 (32, 37)	TUNING +/- 27 (63)	⏮ DISPLAY** 28 (29, 40, 42, 85)
MENU 28 (87)	TV 12 (87)	⏮ RETURN 13 (41, 87)
MUTING 25 (37)	TV VOL +/- 11 (87)	-/-- 4 (87)
	VOLUME +/- 11 (37)	⏮/⏪/⏩/⏭/⏯ 16 (87)
		⏮/⏪/⏩/⏭/⏯ 32 (87)
		⏮/⏪/⏩/⏭/⏯ 29 (87)
		⏮/⏪/⏩/⏭/⏯ 6 (87)
		⏮/⏪/⏩/⏭/⏯ 10 (87)

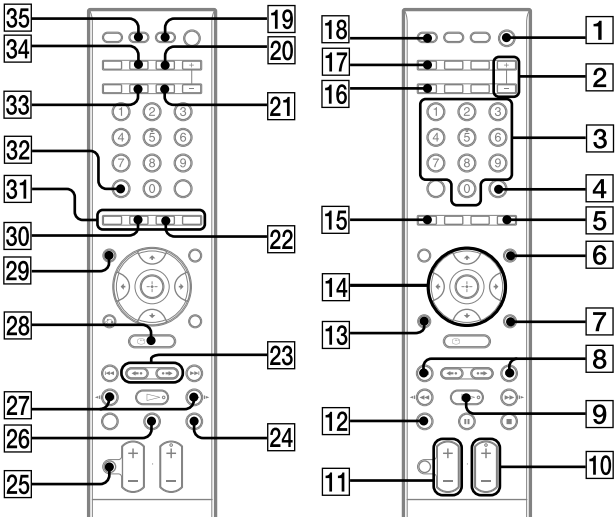


* The ENTER button has the same function as the ⊕ button. When you operate the TV, the ENTER button is used for selecting a channel, and the ⊕ button is used for selecting menu items (page 87).

** This button is available for the “DVD,” “USB,” or “DMPORT” function. Depending on the DIGITAL MEDIA PORT adapter, this button may not work.

HCD-DZ370/DZ560/DZ570/DZ660/DZ777


SECTION 3 DISASSEMBLY

- This set can be disassembled in the order shown below.

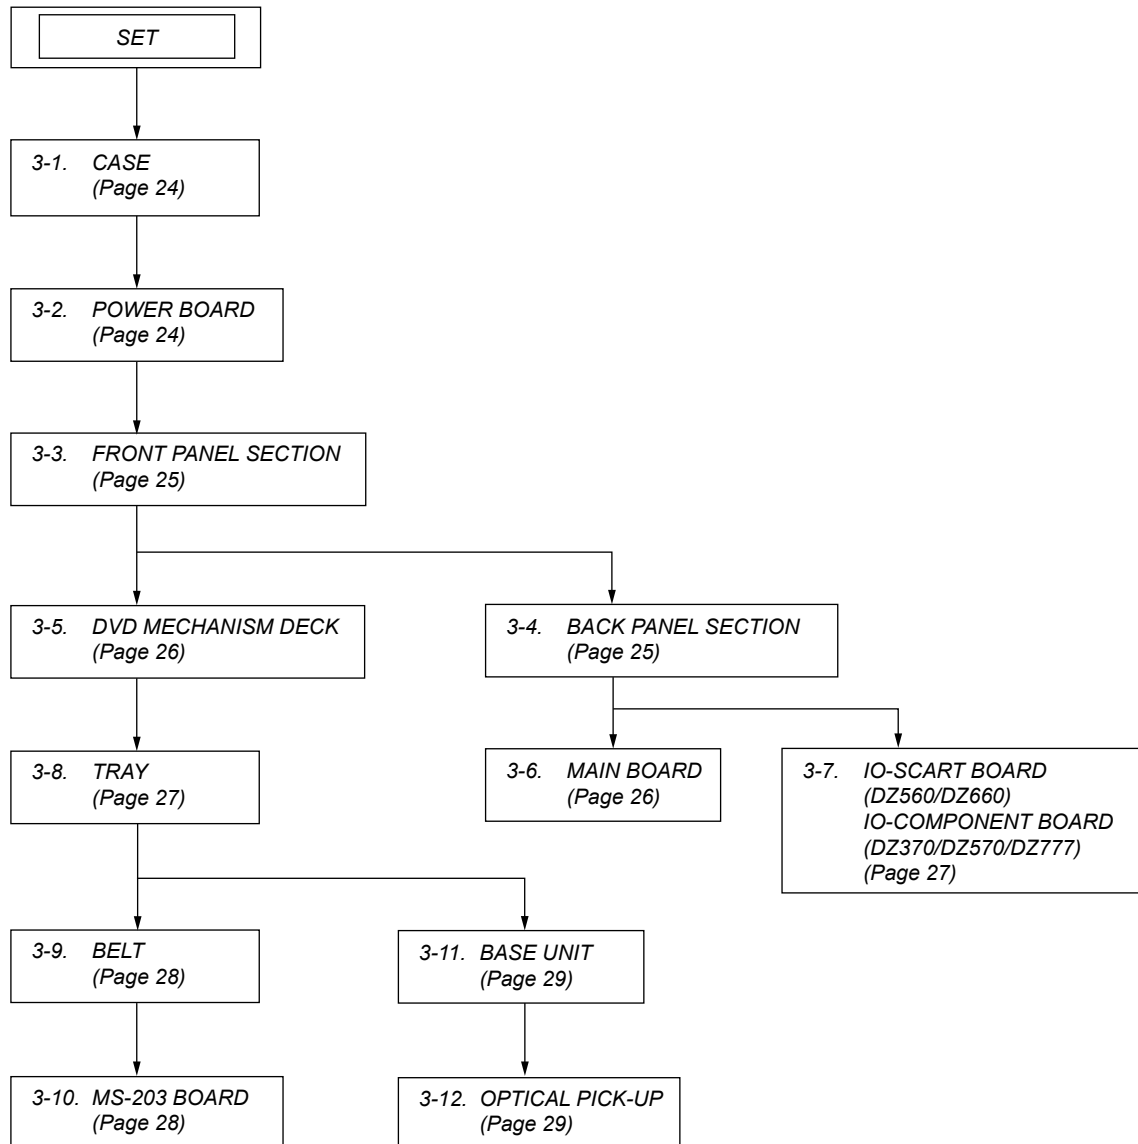


Note: Follow the disassembly procedure in the numerical order shown below.


3-1. CASE

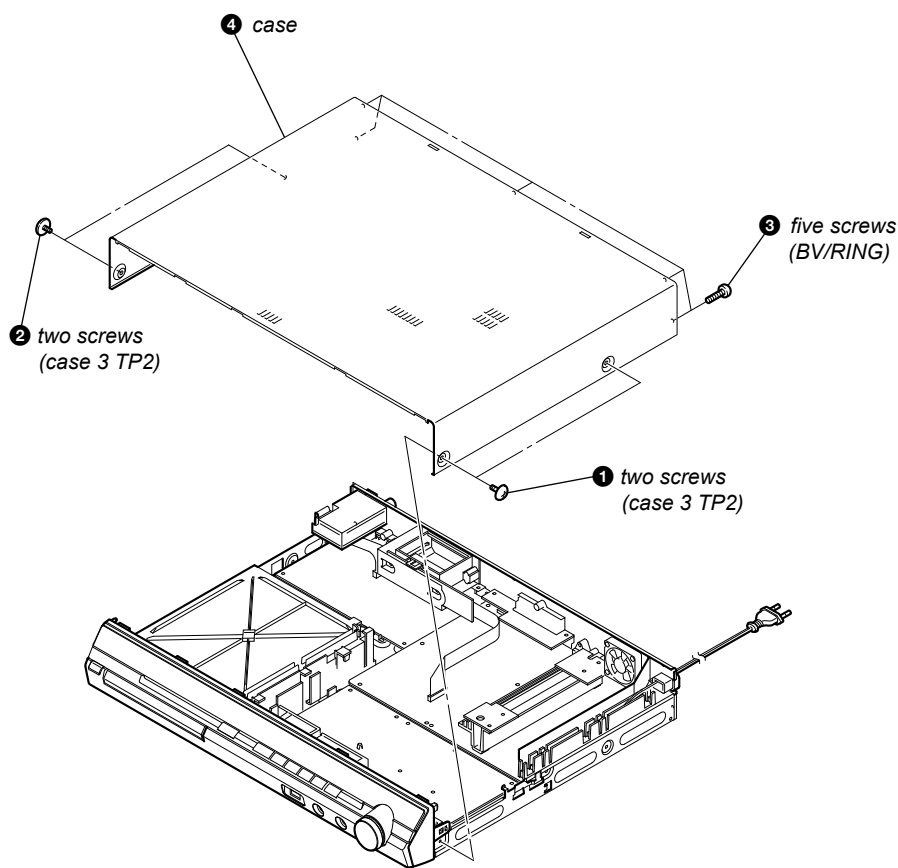


3-2. POWER BOARD

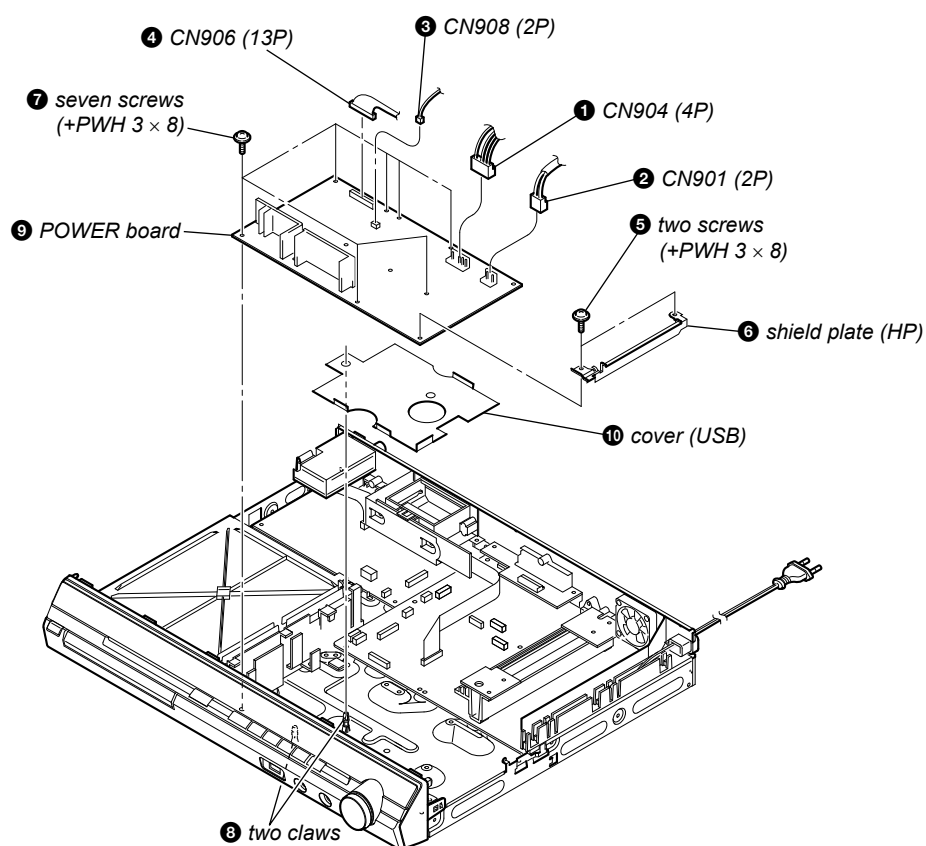


3-3. FRONT PANEL SECTION

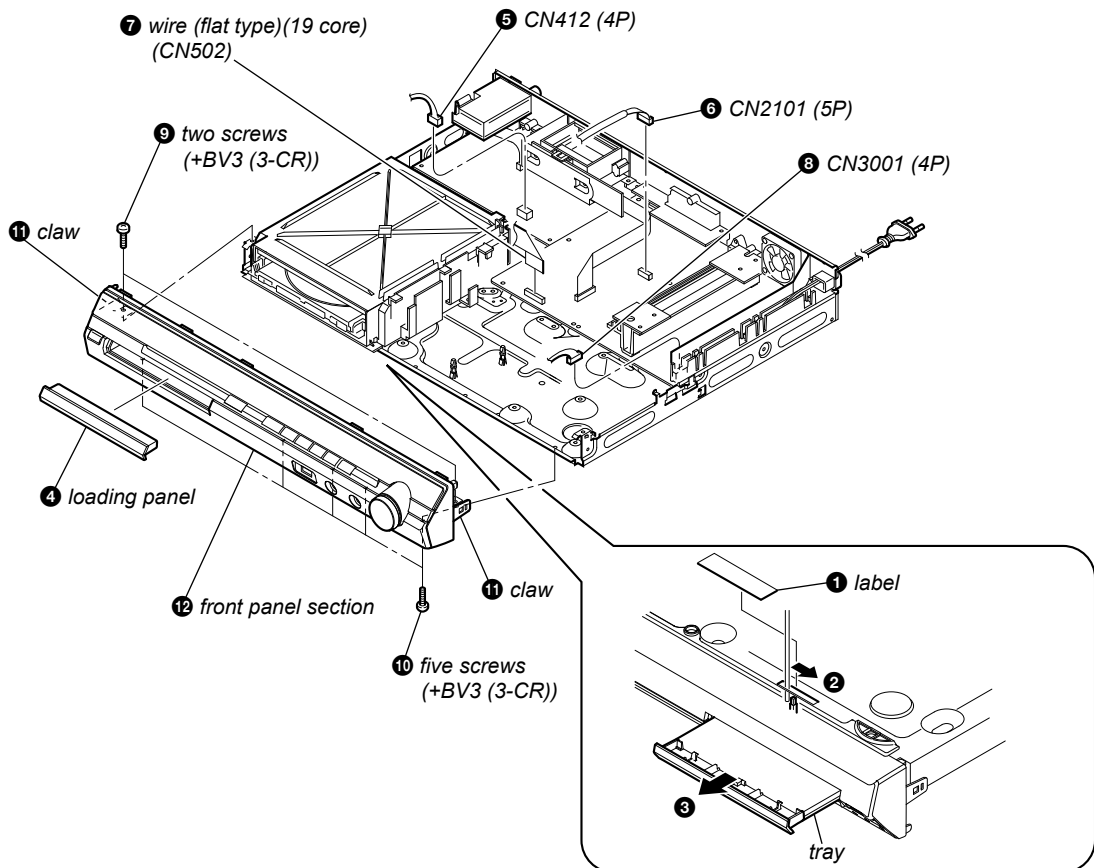


3-4. BACK PANEL SECTION

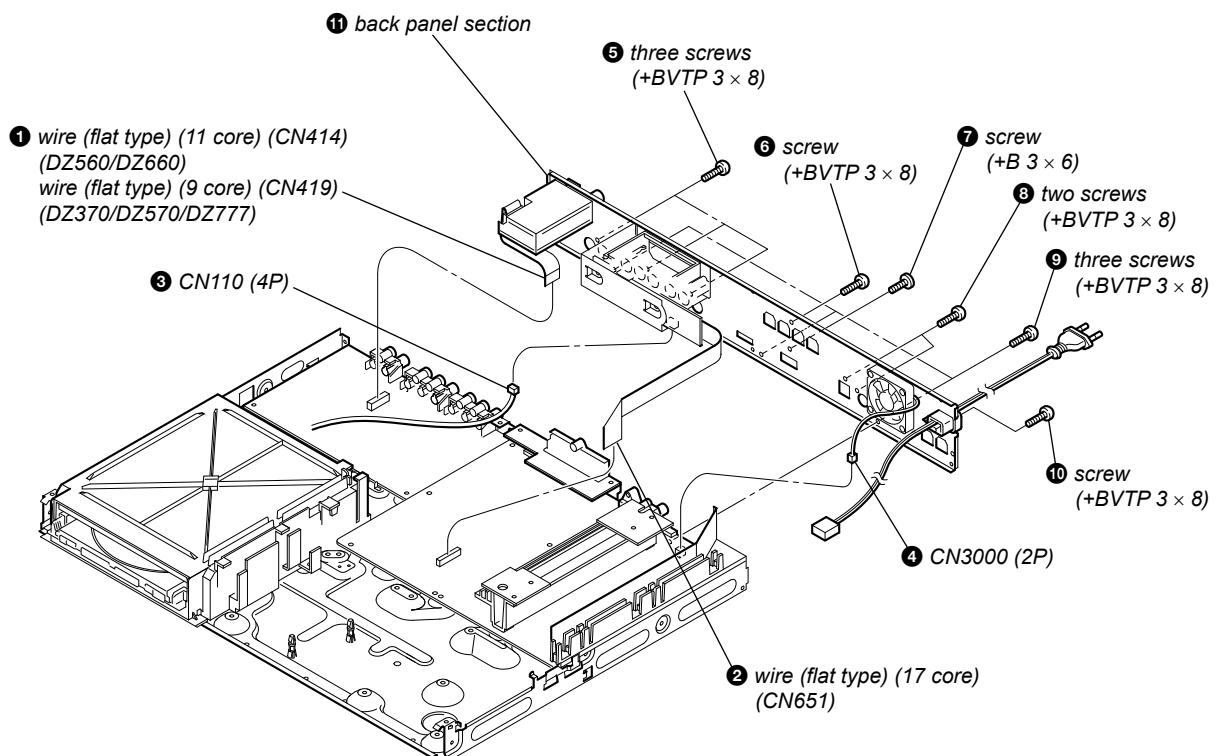


3-5. DVD MECHANISM DECK

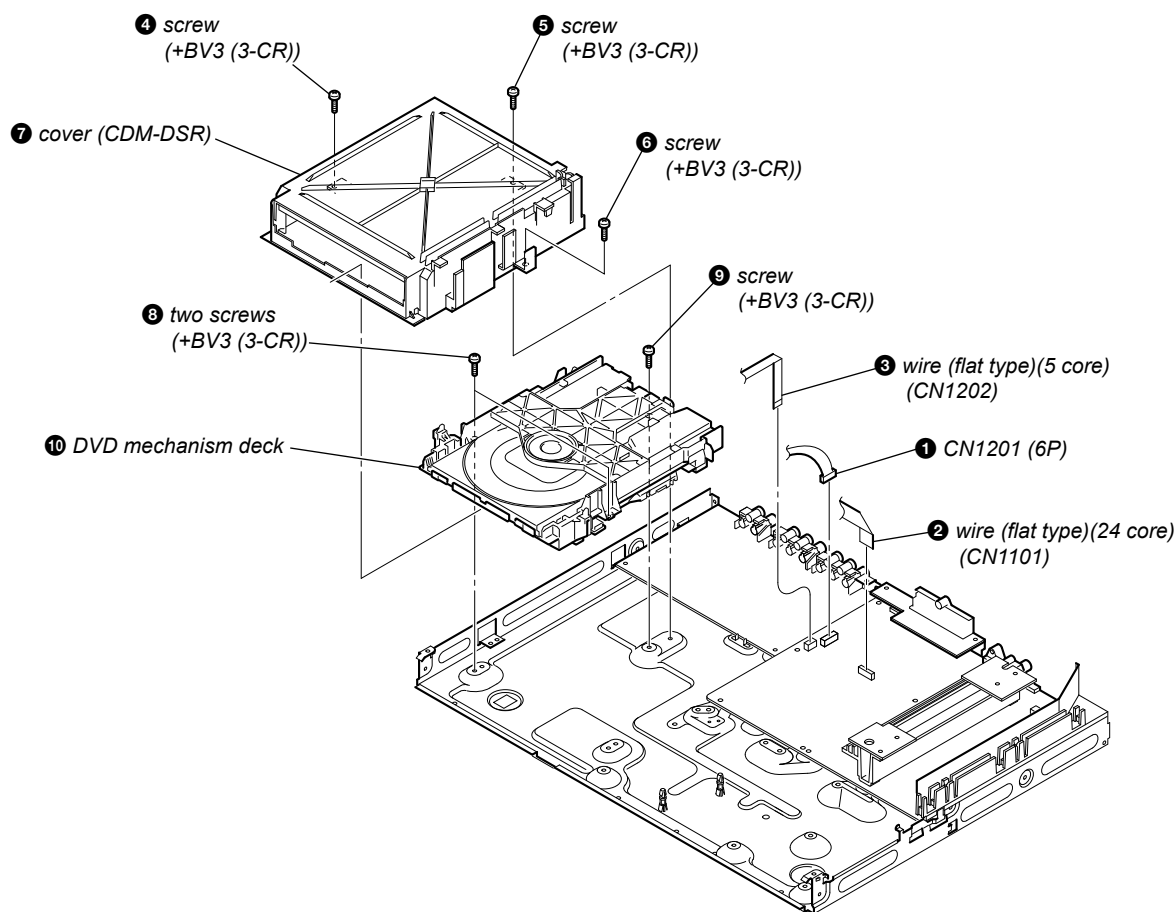


3-6. MAIN BOARD

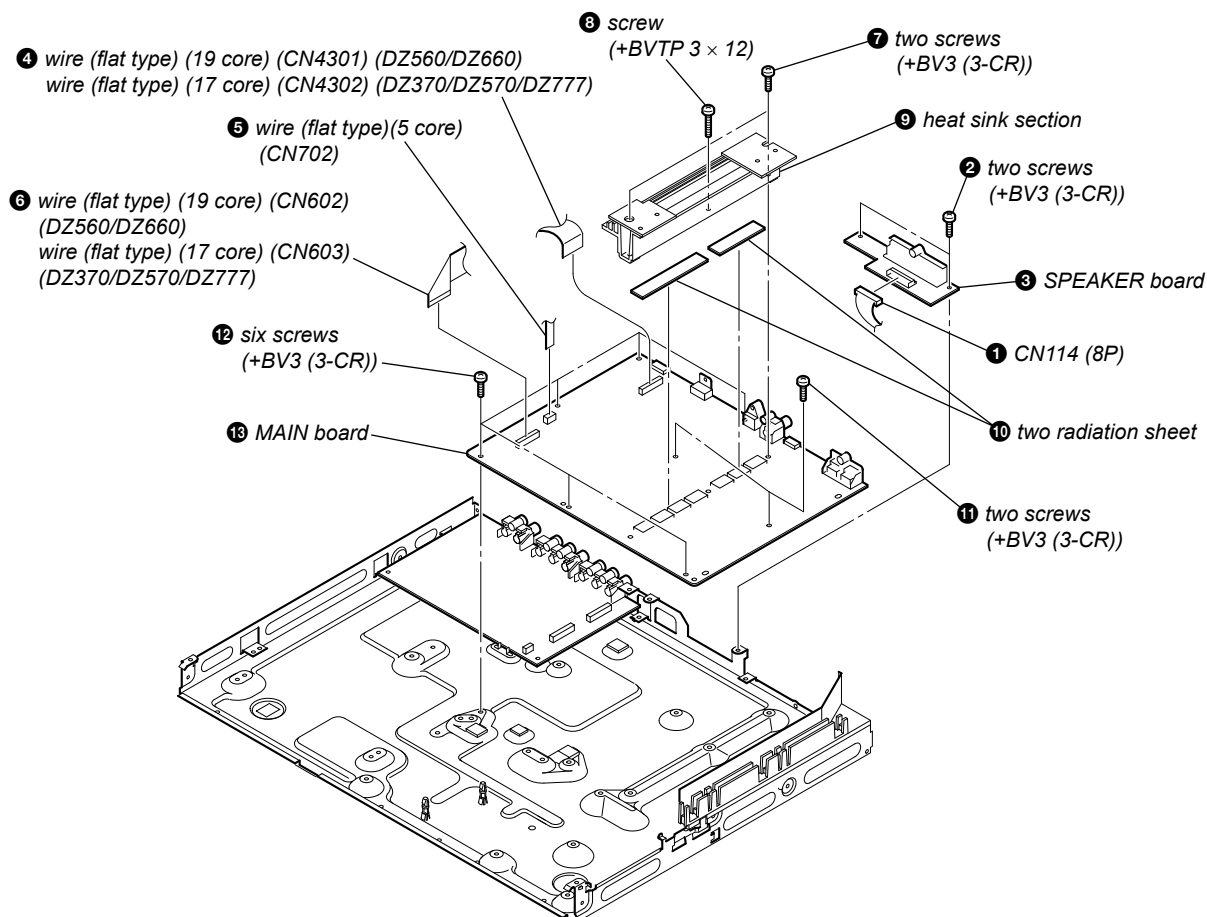


3-7. IO-SCART BOARD (DZ560/DZ660), IO-COMPONENT BOARD (DZ370/DZ570/DZ777)

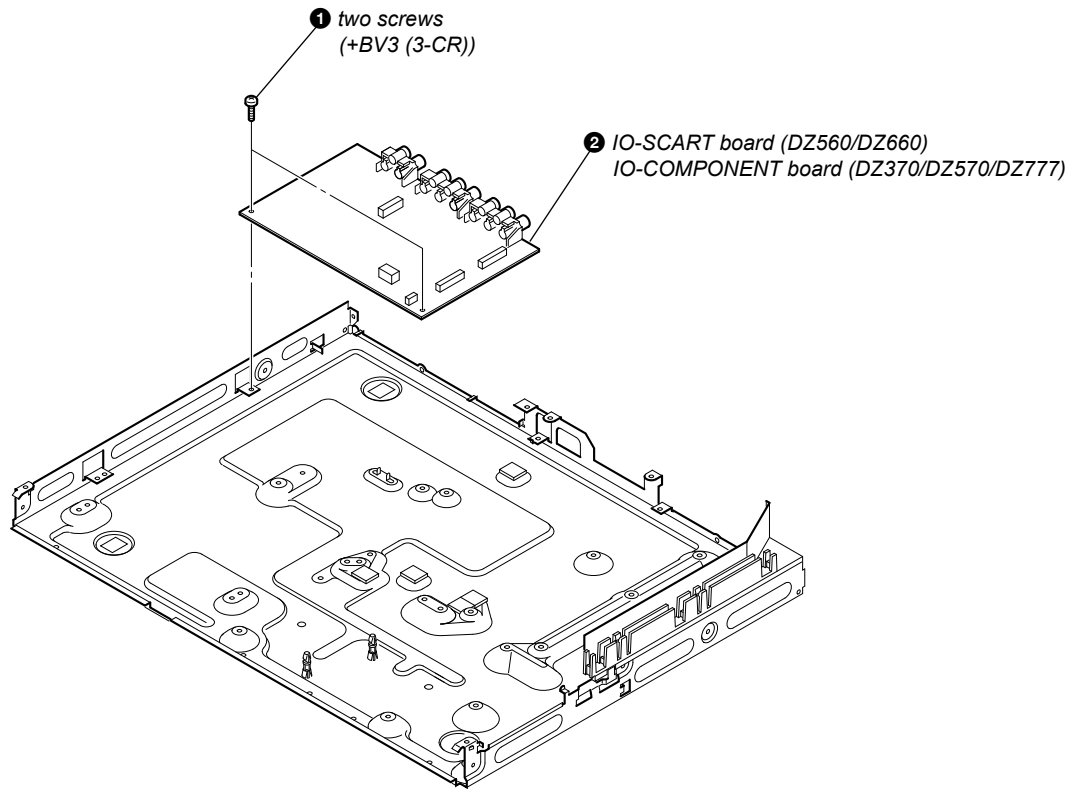


3-8. TRAY


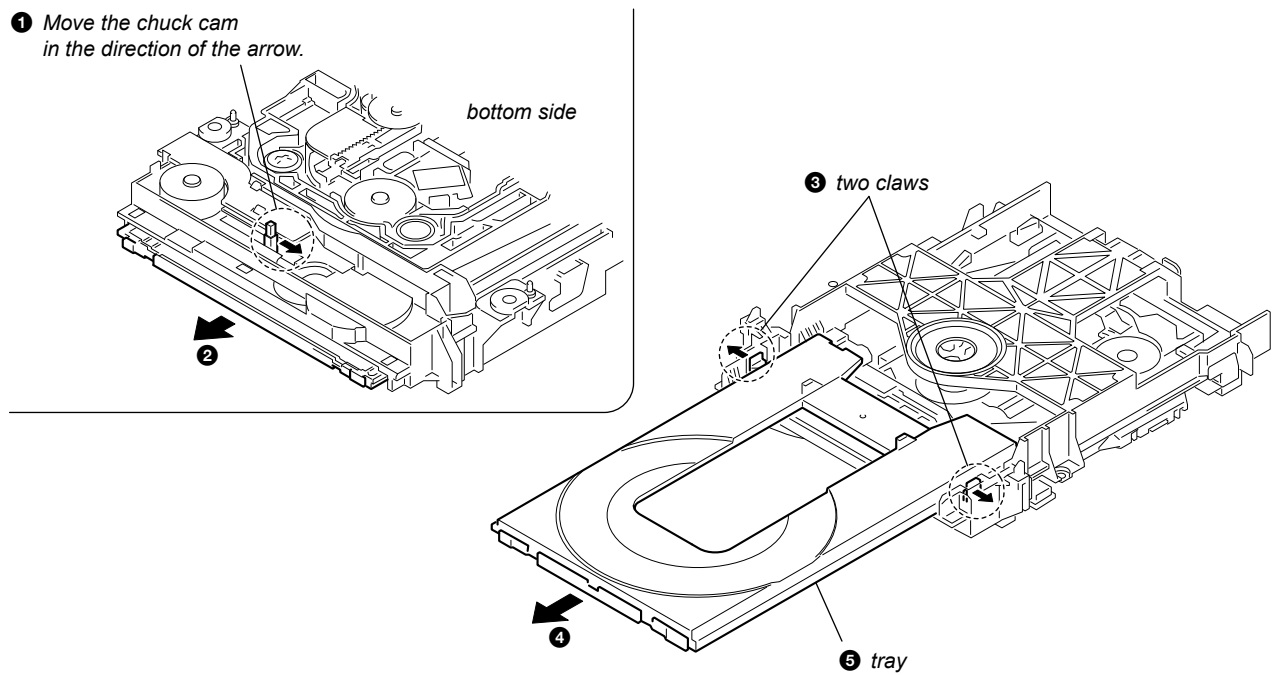


3-9. BELT

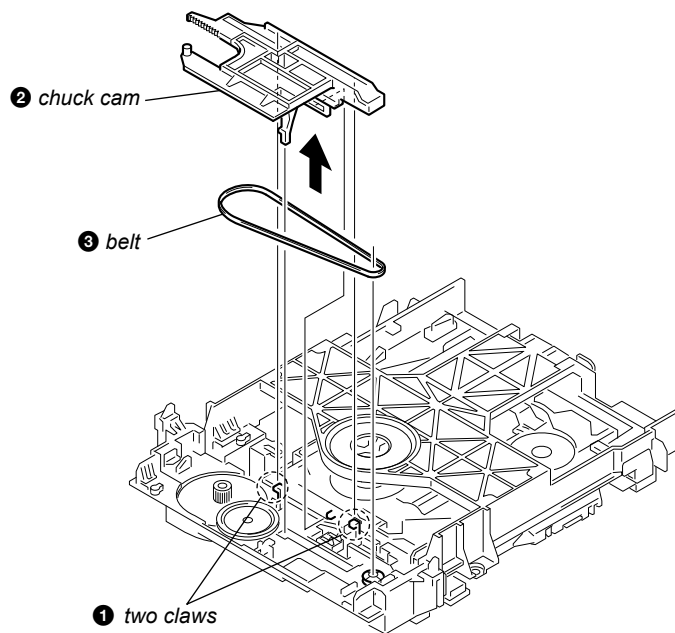

3-10. MS-203 BOARD

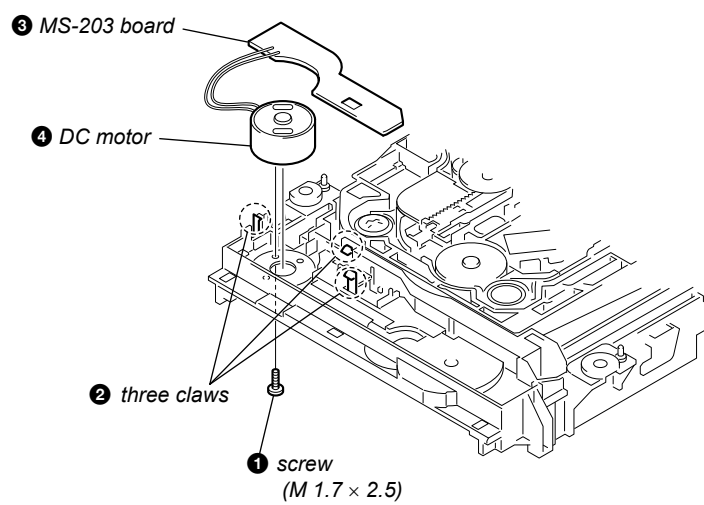

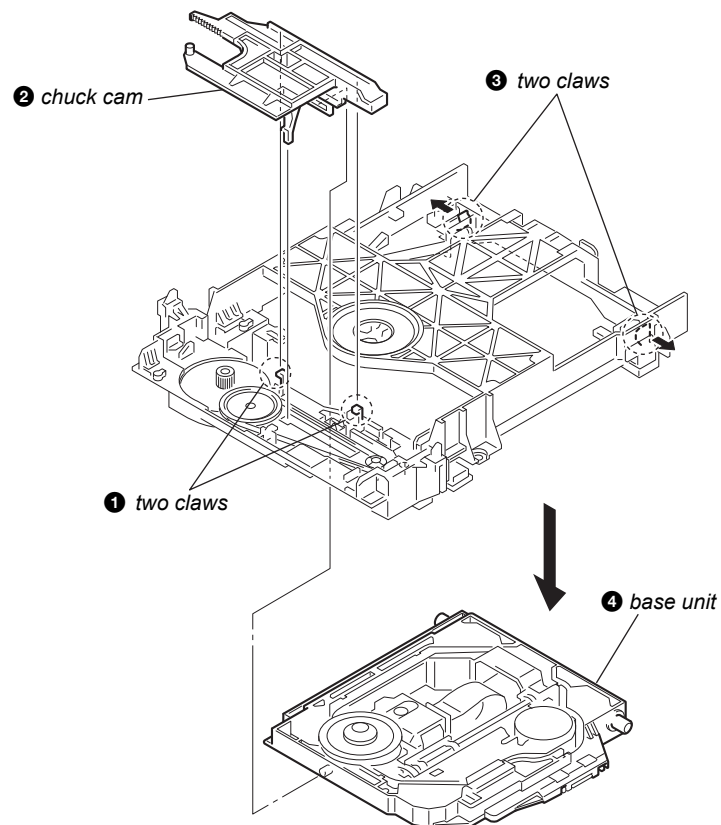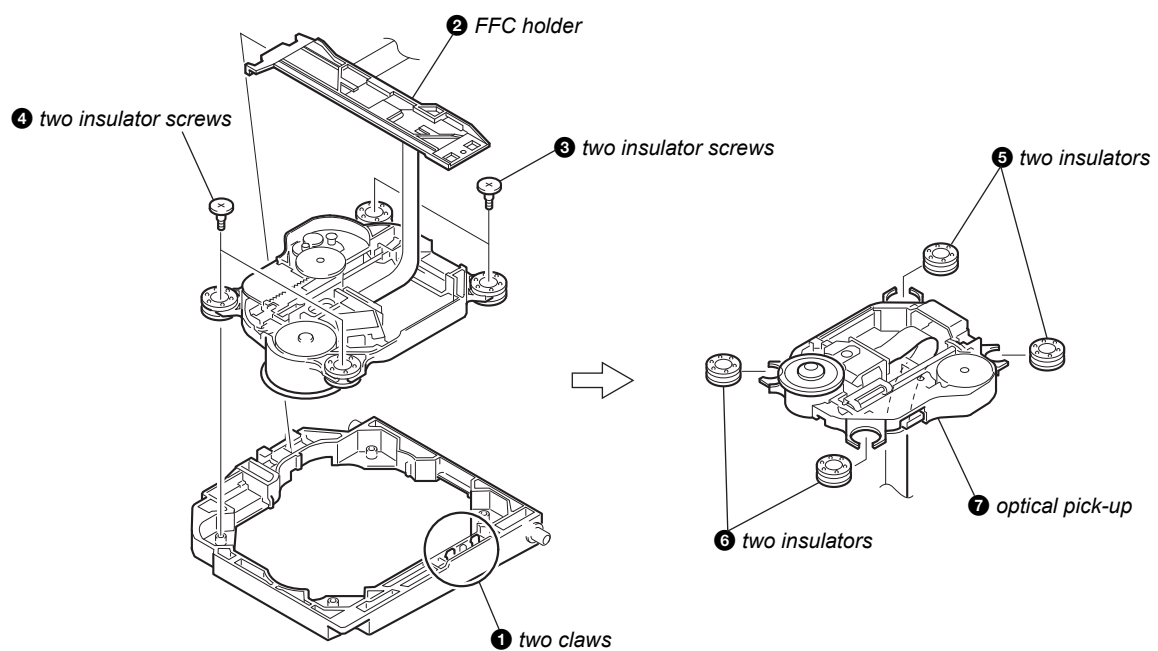3-11. BASE UNIT**3-12. OPTICAL PICK-UP**

SECTION 4

TEST MODE

Note: Incorrect operations may be performed if the test mode is not entered properly.
In this case, press the [I/⏻] button to turn the power off, and retry to enter the test mode.

1. Cold Reset

- The cold reset clears all data including preset data stored in the RAM to initial conditions. Execute this mode when returning the set to the customers.

Procedure:

- Press the [I/⏻] button to turn the power on.
- Press three buttons [■], [△] and [I/⏻] simultaneously.
- When this button is operated, display as “COLD RESET” for a while and all of the settings are reset.

2. Panel Test Mode

- This mode is used to check the software version, FL and KEY.

2-1. Display Test Mode

Procedure:

- Press the [I/⏻] button to turn the power on.
- Press three buttons [■], [◀] and [△] simultaneously.
- When the display test mode is activated, all segments are turned on.
- To exit from this mode, press three buttons [■], [◀] and [△] simultaneously.

2-2. Version Test Mode

Procedure:

- When the display test mode is activated, press the [◀] button and the message “DSR3” (DZ370), “DSR4E” (DZ560), “DSR4” (DZ570), “DSR7E” (DZ660), “DSR7” (DZ777) are displayed, the version test mode is activated.
- Whenever the [◀] button is pressed, the display changes in the following order.

```

→ “DSR7” (Model name) → “EA3*1” (Destination) →
→ MC Version → SYS Version → UI Version →
→ DVD Version → ST Version → TA Version →
→ DSP Version → TM Version → MM Version →
→ CLA Version → CEC Version → SAIR Version →
  
```

*1: EA3 changes depending on destination.

- Press the [▶▶] button and the date of the software production is displayed.
- Press the [▶▶] button again and the version is displayed.
- To exit from this mode, press three buttons [■], [◀] and [△] simultaneously.

2-3. Key Test Mode

Procedure:

- When the display test mode is activated, press the [▷] button, to select the key test mode.
- To enter the KEY test mode, the fluorescent indicator displays “K0 V0”. Each time an another button is pressed, “KEY” value increases. However, once a button is pressed, it is no longer taken into account. When all keys are pressed correctly, “K8 V0” is displayed.
- When the [VOLUME] control is turned in the direction of (+), “V0” is changed to “V1”, then ... “V9”.
When the [VOLUME] control is turned in the direction of (–), “V0” is changed to “V9”, then ... “V1”.
- To exit from this mode, press three buttons [■], [◀] and [△] simultaneously.

3. Disc Tray Lock

The disc tray lock function for the antitheft of an demonstration disc in the store is equipped.

Setting Procedure :

- Press the [I/⏻] button to turn the set on.
- Press the [FUNCTION] button to set DVD function.
- Insert a disc.
- Press the [■] button and the [△] button simultaneously for five seconds.
- The message “LOCKED” is displayed and the tray is locked.

Releasing Procedure :

- Press the [■] button and the [△] button simultaneously for five seconds again.
- The message “UNLOCKED” is displayed and the tray is unlocked.

Note: When “LOCKED” is displayed, the tray lock is not released by turning power on/off with the [I/⏻] button.

4. DVD Ship Mode

Use this mode when returning the set to the customer after repair.

Procedure:

- Press the [I/⏻] button to turn the set on.
- Press the [FUNCTION] button to set the function “DVD”.
- Remove all discs, and then press two buttons [▷] and [I/⏻] simultaneously.
- After a message “MECHA LOCK” ⇔ “PULL PLUG” is displayed on the fluorescent indicator tube, pull out the AC plug.
- To exit from this mode, press the [I/⏻] button to turn the set on.

5. AM Step Change (Except AEP, UK, E models)

- A step of AM channels can be changed over between 9 kHz and 10 kHz.

Procedure:

- Press the [I/⏻] button to turn the set ON.
- Select the function “TUNER”, and press [FUNCTION] button to select the BAND “AM”.
- Press the [I/⏻] button to turn the set OFF.
- Press two buttons [▶▶] and [I/⏻] simultaneously, and the display of fluorescent indicator tube changes to “AM 9k STEP” or “AM 10k STEP”, and thus the channel step is changed over.

6. Product Out

This mode moves the optical pick-up to the position durable to vibration and clears all data including preset data stored in the RAM to initial conditions. Use this mode when returning the set to the customer after repair.

Procedure:

- Press the [I/⏻] button to turn the power on.
- Press the [FUNCTION] button to set the function “DVD”.
- Remove all discs, and then press three buttons [▶▶], [△] and [I/⏻] simultaneously.
- After the “STANDBY” blinking display finishes, the message “MECHA LOCK” ⇔ “PULL PLUG” is displayed on the fluorescent indicator tube disconnect the AC power plug, then the ship mode is set.

DVD SECTION**7-1. GENERAL DESCRIPTION**

The IOP measurement allows you to make diagnosis and adjustment simply by using the remote commander and monitor TV. The instructions, diagnosis results, etc. are given on the on-screen display (OSD).

Be sure to execute the IOP measurement when a BU (Base Unit) is replaced.


7-2. HOW TO ENTER TEST MODE

While pressing the [■] and [≡] buttons simultaneously, turn [VOLUME] control in the direction of (+) with the DVD player in power on.

The Test Mode starts, displayed "SERVICE IN" on this model display then the menu shown below will be displayed on the TV screen.

* The display of the "Model Name" of the "Remocon Diagnosis Menu" change with the model and the destination. Refer to below on the model name.

DZ370 : DSR3
DZ560 : DSR4E
DZ570 : DSR4
DZ660 : DSR7E
DZ777 : DSR7

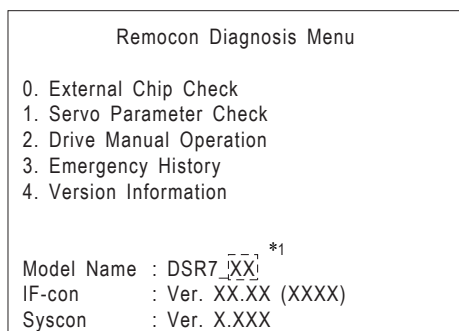


*1: Changes depending on destination

The menu above is the Remocon Diagnosis Menu screen which consists of five main functions. At the bottom of the menu screen, the model name and IF-con version. To exit from the Test Mode, press the power button on the remote commander.

7-3. EXECUTING IOP MEASUREMENT


In order to execute IOP measurement, the following standard procedures must be followed.

- (1) In power on, while pressing the [■] and [≡] buttons simultaneously, turn the [VOLUME] control in the direction of (+).

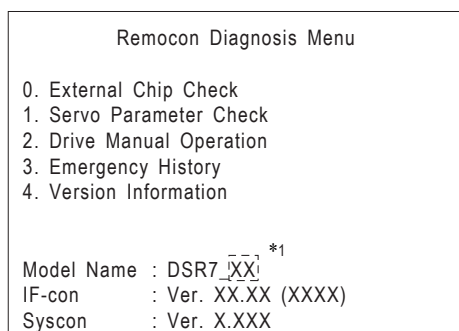


*1: Changes depending on destination

- (2) Select "2. Drive Manual Operation" by pressing the [2] button on the remote commander. The screen will appear as shown.

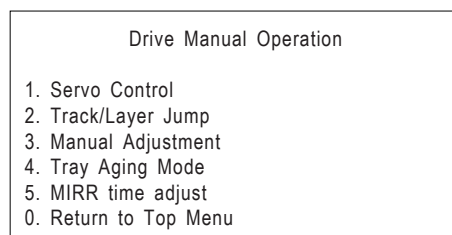


- (3) Select "3. Manual Adjustment" by pressing the [3] button on the remote commander. The screen will appear as shown.

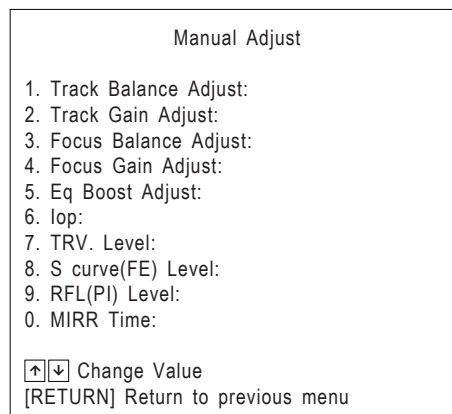

- (4) Select "6. IOP" by pressing the [6] button on the remote commander.

- (5) Wait until a hexadecimal number appear.

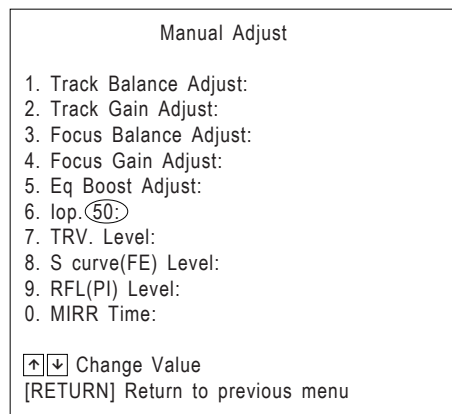

- (6) Convert each data from hexadecimal to decimal using conversion table.

- (7) Please find the label on the rear of the BU (Base Unit). The default IOP value is written in the label.

- (8) Subtract between these two values.

- (9) If the remainder is smaller than 93 (decimal), then it is OK. However if the value is higher than 93, then the BU is defective and need to be change.

- (10) Press the [RETURN] button on the remote commander to return back to previous menu.

- (11) Press the [0] button on the remote commander to return to Top Menu.

7-4. EMERGENCY HISTORY

To check the emergency history, please follow the following procedure.

- (1) From the Top Menu of Remocon Diagnosis Menu, select “3. Emergency History Check” by pressing the [3] button on the remote commander. The following screen appears on the on-screen display.

Emg. History Check											
Laser Hours				CD DVD		999h 999h		59min 59min			
01.	01	05	04	04		00	92	46	00		
	00	00	00	00		00	00	23	45		
02.	02	02	01	01		00	A9	4B	00		
	00	00	00	00		00	00	23	45		
[Next] Next Page [Prev] Prev Page											
[0] Return to Top Menu											

- (2) You can check the total time when the laser is turned on during playback of DVD and CD from the above menu. The maximum time, which can be displayed are 999h 59min.
- (3) You can check the error code of latest 10 emergency history from the above menu. To view the previous or next page of emergency history, press [◀◀] or [▶▶] button on the remote commander. The error code consists of the following three blocks. The first block indicates the error code. The second block indicates the parameter and the third block indicates the time of error code as shown below.

• Error Code

Emg. History Check											
Laser Hours				CD DVD		999h 999h		59min 59min			
01.	*1	*2		01	05	04	04		00	92	46
				00	00	00	00		00	00	23
											45
02.				02	02	01	01		00	A9	4B
				00	00	00	00		00	00	23
											45
[Next] Next Page [Prev] Prev Page											
[0] Return to Top Menu											

*1 : Error Code

*2 : Parameter of error code

*3 : Time of error code

The meaning of error code is as below:

- 01: Communication error (No reply from syscon)
- 02: Syscon hung up
- 03: Power OFF request when syscon hung up
- 19: Thermal shutdown
- 24: MoveSledHome error
- 25: Mechanical move error (5 Changer)
- 26: Mechanical move stack error
- 30: DC motor adjustment error
- 31: DPD offset adjustment error
- 32: TE balance adjustment error
- 33: TE sensor adjustment error
- 34: TE loop gain adjustment error
- 35: FE loop gain adjustment error
- 36: Bad jitter after adjustment
- 40: Focus NG
- 42: Focus layer jump NG
- 52: Open kick spindle error
- 51: Spindle stop error

60: Focus on error

61: Seek fail error

62: Read Q data/ID error

70: Lead in data read fail

71: TOC read time out (CD)

80: Can't buffering

81: Unknown media type

7-4-1. Clear the Laser Hour

Press [☺ DISPLAY] button and then press [CLEAR] button on the remote commander. The data for both CD and DVD data are reset.

Emg. History Check											
Laser Hours				CD DVD		0h 0h		0min 0min			
01.	01	05	04	04		00	92	46	00		
	00	00	00	00		00	00	23	45		
02.	02	02	01	01		00	A9	4B	00		
	00	00	00	00		00	00	23	45		
[Next] Next Page [Prev] Prev Page											
[0] Return to Top Menu											

7-4-2. Clear the Emergency History

Press [DVD TOP MENU] button and then press [CLEAR] button on the remote commander. The error code for all emergency history would be reset.

Emg. History Check											
Laser Hours				CD DVD		999h 999h		59min 59min			
01.	00	00	00	00		00	00	00	00		
	00	00	00	00		00	00	00	00		
02.	00	00	00	00		00	00	00	00		
	00	00	00	00		00	00	00	00		
[Next] Next Page [Prev] Prev Page											
[0] Return to Top Menu											

7-4-3. Clear the Initialize Setup Data

Press [DVD MENU] button and then press [CLEAR] button on the remote commander.

Emg. History Check			
Laser Hours	CD	999h	59min
	DVD	999h	59min
initialize setup data...			
[Next] Next Page [Prev] Prev Page			
[O] Return to Top Menu			


7-4-4. Return to the Top Menu of Remocon Diagnosis Menu

Press [0] button on the remote commander.

• Check Version Information

To check the version information, please follow the following procedure.

- (1) From the Top Menu of Remocon Diagnosis Menu, select “4. Version Information” by pressing the [4] button on the remote commander. The following screen appears on the on-screen display.

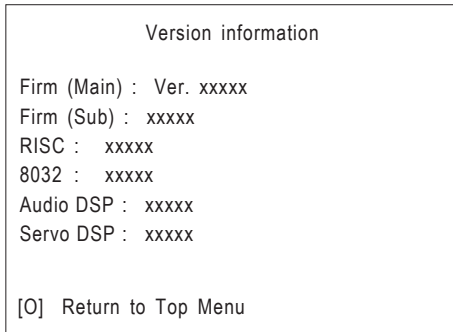


To return to the Top Menu of Remocon Diagnosis Menu, press [0] button on the remote commander.

7-5. AUTOMATIC ACOUSTIC FIELD CALIBRATION MICROPHONE TEST MODE

Procedure:

 1. Press the [I/⏻] button to turn the power on.
2. Press the [FUNCTION] button to set the function “DVD”.
3. Insert ECM-AC2 supplied as an accessory into the AUDIO IN/ A.CAL MIC jack.
4. While pressing the [■] and [≡] buttons simultaneously, turn the [VOLUME] control in the direction of (+).
5. Confirm that the following are shown on the display panel.
 - ① The JACK inserted/non-inserted detection display and the STEREO/MONO detection display.
 - ② Presence of DIGITAL voice input to the microcomputer. (OK: input, NG: no input)
 - ③ The value of the MIC input to the microcomputer. (shown “255h”)



- ① “NON” : Not detected
“ST” : STEREO
“MN” : MONO

- ② OK : input
NG : no input

- ③ 0-255 (Changes in real time)

6. To exit from this mode, press the [■] and [≡] buttons simultaneously, turn the [VOLUME] control in the direction of (+).


8. DEMO PLAY OUT

It is a mode to release the demonstration reproduced by the dedicated demonstration disc.

1. During playback the DEMO Disc, press the [■] and [▷] buttons for five seconds simultaneously.
2. The message “DEMO OFF” is displayed, a mode to reproduce the demonstration is released.

9. DIGITAL MEDIA PORT TEST

1. Connect the DMPORT CHECK JIG (P/N: J-2501-309-A) with the terminal DMPORT.
2. Press the [I/⏻] button to turn the power on.
3. Confirm that both LEDs of the DMPORT confirmation JIG lights. (Confirmation the power supply line.)
4. Set the [FUNCTION] button with “DMPORT” on this model.
5. Press the [■], [◀] buttons and turn the [VOLUME] control in the direction of (+) simultaneously, the DMPORT test mode is activated.
6. It is confirmed that “DMPORT OK” is displayed on this set display. (Confirmation of communication line)
7. To a pin jack of the DMPORT confirmation JIG input information relevant to audio signal (sine-wave 1.0Vrms) and composite video signal (white 100% 1.0Vp-p, color bar, etc.)
8. Confirm the output of speakers and monitor TV. (Confirmation of analog signal)
9. To exit from this mode, press the [■], [◀] buttons and turn the [VOLUME] control in the direction of (+).

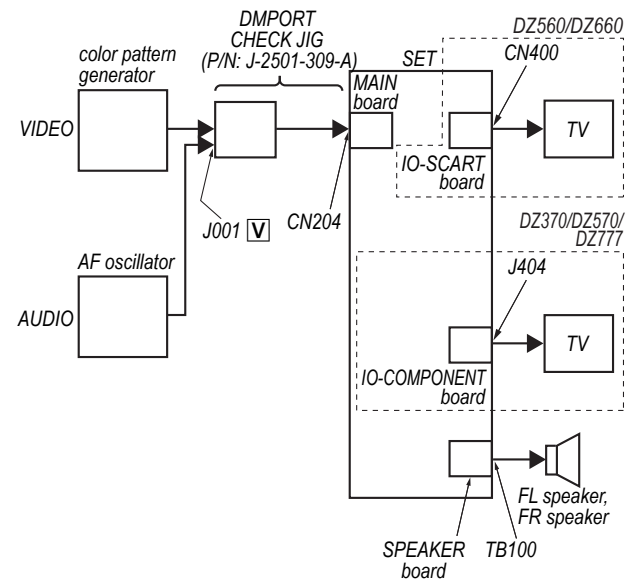

10. PROTECTION FACTOR (SD DETECTION/ DC DETECTION) IDENTIFICATION TEST MODE

When an error is detected, the FL tube alternately displays “PROTECTOR ⇔ PUSH POWER”.

↓ Press the [I/⏻] button.
 * Buttons other than the [I/⏻] button are invalid.
 “STANDBY” blinks three times on the FL tube.

↓
 The protection release state (POWER OFF) is established.
 (No FL tube display)

↓ Press the [I/⏻] button two times.
 The power to the system turns on, and the normal operation is established. (Restore)

During the protection state:

1. If the AC plug is connected or disconnected during the protection state, the protection state is released, and the normal operation is established. (The protection state is not maintained.)
2. The protection factor is displayed by pressing the [FUNCTION], [⏻] and [▶▶] buttons at the same time during the protection state
 (during the “PROTECTOR ⇔ PUSH POWER” display).
 ⇔ When SD is detected: Repeats
 “SD DETECT ⇔ PROTECTOR”.
 ⇔ When DC is detected: Repeats
 “DC DETECT ⇔ PROTECTOR”.

PL: SD detection

When the “L” output from the SD (shutdown) port on the S-MASTER POWER Driver Shutdown and voltage descent (15V or less) of 30V power supply (PVDD) are detected.

DC detection

When the “L” output from the power/speaker error detection circuit (DC detection port) is detected for two seconds continually, the power system other than that of the FL tube is turned off, and the protection state is established.

HCD-DZ370/DZ560/DZ570/DZ660/DZ777

SECTION 5 ELECTRICAL ADJUSTMENTS


DVD SECTION

When the optical pick-up assy is replaced, perform the “EXECUTING IOP MEASUREMENT”.

EXECUTING IOP MEASUREMENT (See page 31)

TUNER SECTION

[FM Tune Level Check]

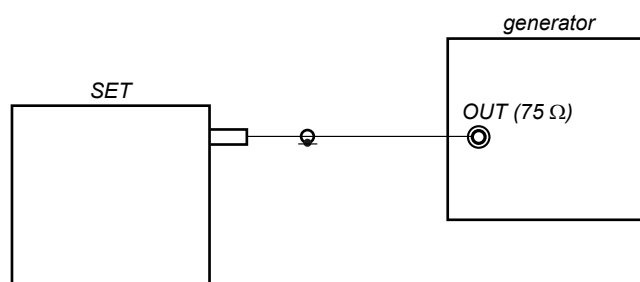

Procedure:

1. Turn the power on.
2. Input the following signal from Signal Generator to FM antenna input directly.

* Carrier Freq : A = 87.5 MHz, B = 98 MHz, C = 108 MHz
Deviation : 75 kHz
Modulation : 1 kHz
ANT input : 35 dBu (EMF)

Note: Please use 75 ohm “coaxial cable” to connect SG and the set. You cannot use video cable for checking.
Please use SG whose output impedance is 75 ohm.

3. Set to FM tuner function and tune A, B and C signals.
4. Confirm “TUNED” is lit on the display for A, B and C signals.

The mark of “TUNED” means “The selected station signal is received in good condition.”

SECTION 6

DIAGRAMS

THIS NOTE IS COMMON FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS.
(In addition to this, the necessary note is printed in each block.)

For Printed Wiring Boards.

 

Note:

- : Parts extracted from the component side.
- : Through hole.
- : Pattern from the side which enables seeing.
(The other layers' patterns are not indicated.)

Caution:

Pattern face side: Parts on the pattern face side seen from the pattern face are indicated.
(SIDE B)
Parts face side: Parts on the parts face side seen from the parts face are indicated.
(SIDE A)

- Indication of transistor.

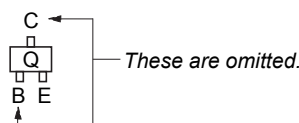

- Abbreviation

AUS : Australian model
E3 : 240 V AC Area in E model
E12 : 220-240 V AC area in E model
E15 : Iran model
E32 : 110 – 240V AC area in E model
KR : Korean model
MX : Mexican model
TW : Taiwan model

For Schematic Diagrams.

Note:

- All capacitors are in μF unless otherwise noted. (p: pF)
50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $1/4$ W or less unless otherwise specified.
- Δ : internal component.
- : panel designation.

Note:


The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.

Note:


Les composants identifiés par une marque Δ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

- : B+ Line.
- - - : B- Line.
- Voltages and waveforms are dc with respect to ground under no-signal (detuned) conditions.
- Voltages and waveforms are dc with respect to ground in service mode.
- Waveforms are taken with a oscilloscope.
Voltage variations may be noted due to normal production tolerances.
- no mark : TUNER (FM)
- < > : DVD PLAY
- * : Impossible to measure
- Voltages are taken with VOM (Input impedance 10 M Ω).
- Circled numbers refer to waveforms.
- Signal path.
- ⇒ : TUNER
- ⇒ : DVD PLAY
- ⇒ : VIDEO
- ⇒ : Y
- ⇒ : CHROMA
- ⇒ : COMPONENT VIDEO
- Abbreviation
- AUS : Australian model
- E3 : 240 V AC Area in E model
- E12 : 220-240 V AC area in E model
- E15 : Iran model
- E32 : 110 – 240V AC area in E model
- KR : Korean model
- MX : Mexican model
- TW : Taiwan model


- Circuit Boards Location

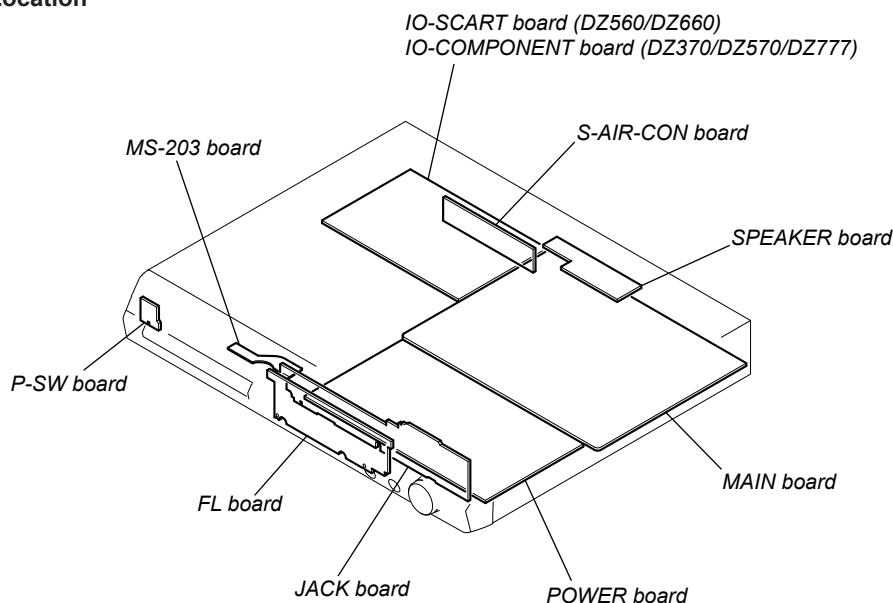


• Waveforms
– MAIN Board –

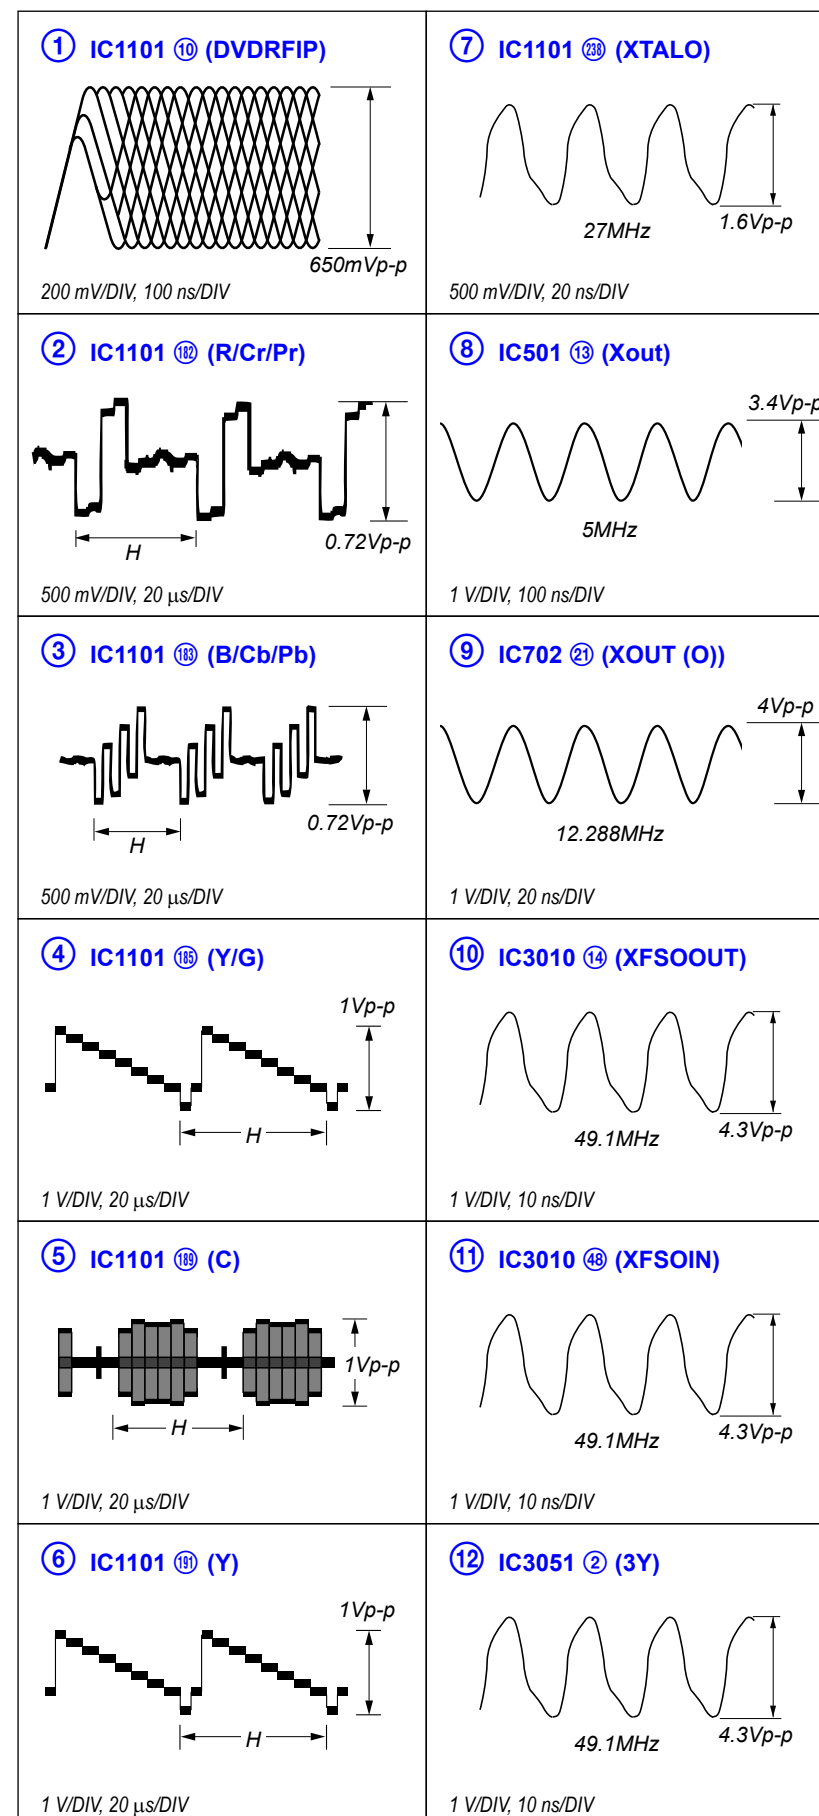


– IO-SCART Board (DZ560/DZ660) –

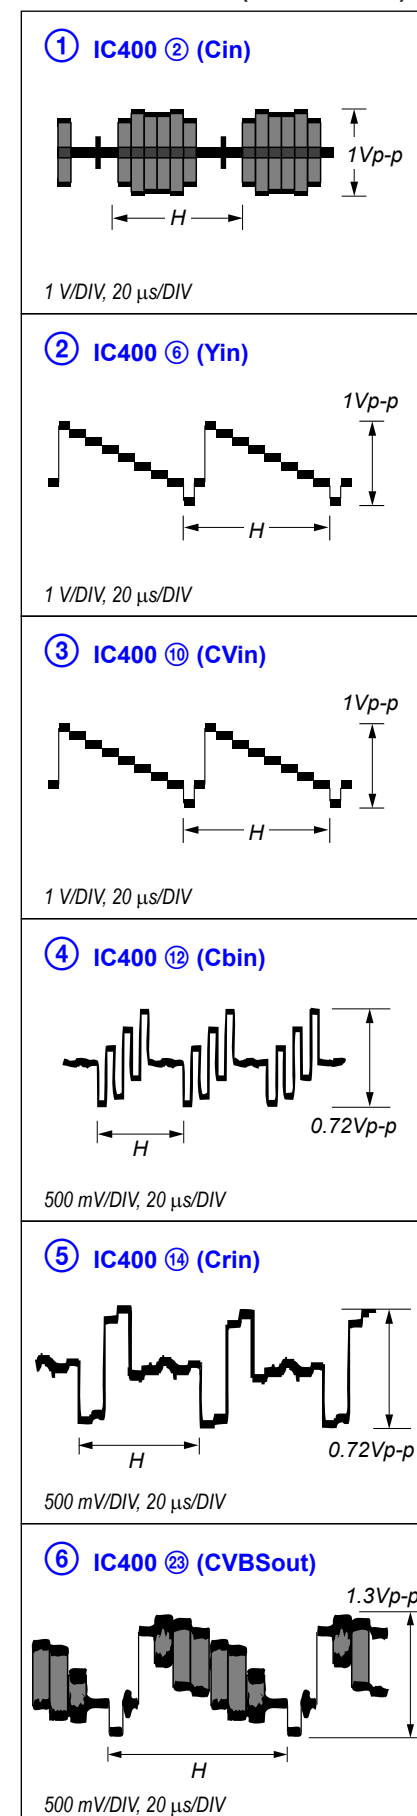


– IO-COMPONENT Board (DZ370/DZ570/DZ777) –

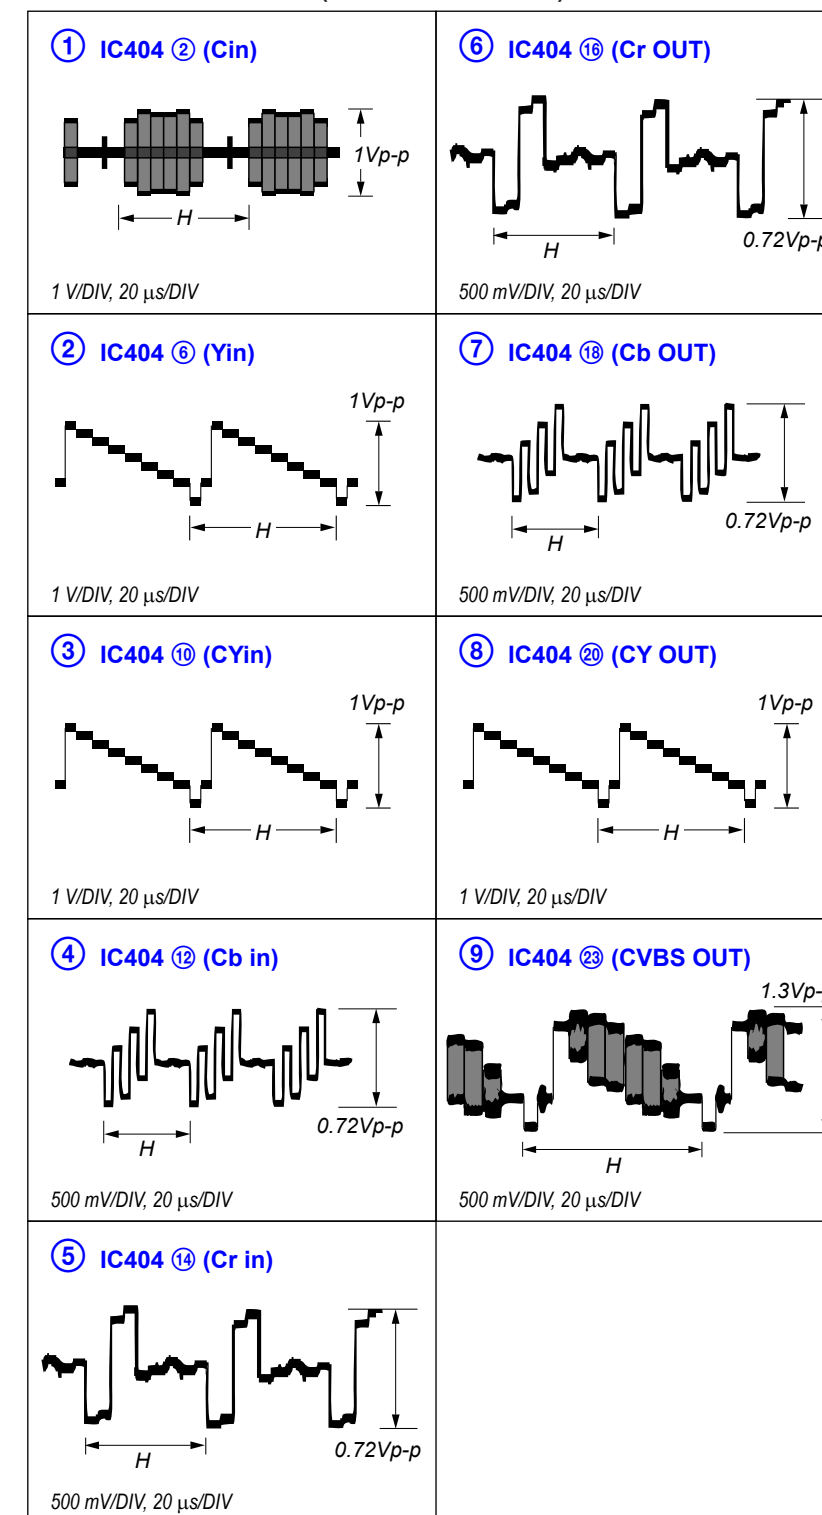


6-1. BLOCK DIAGRAM – RF Section –

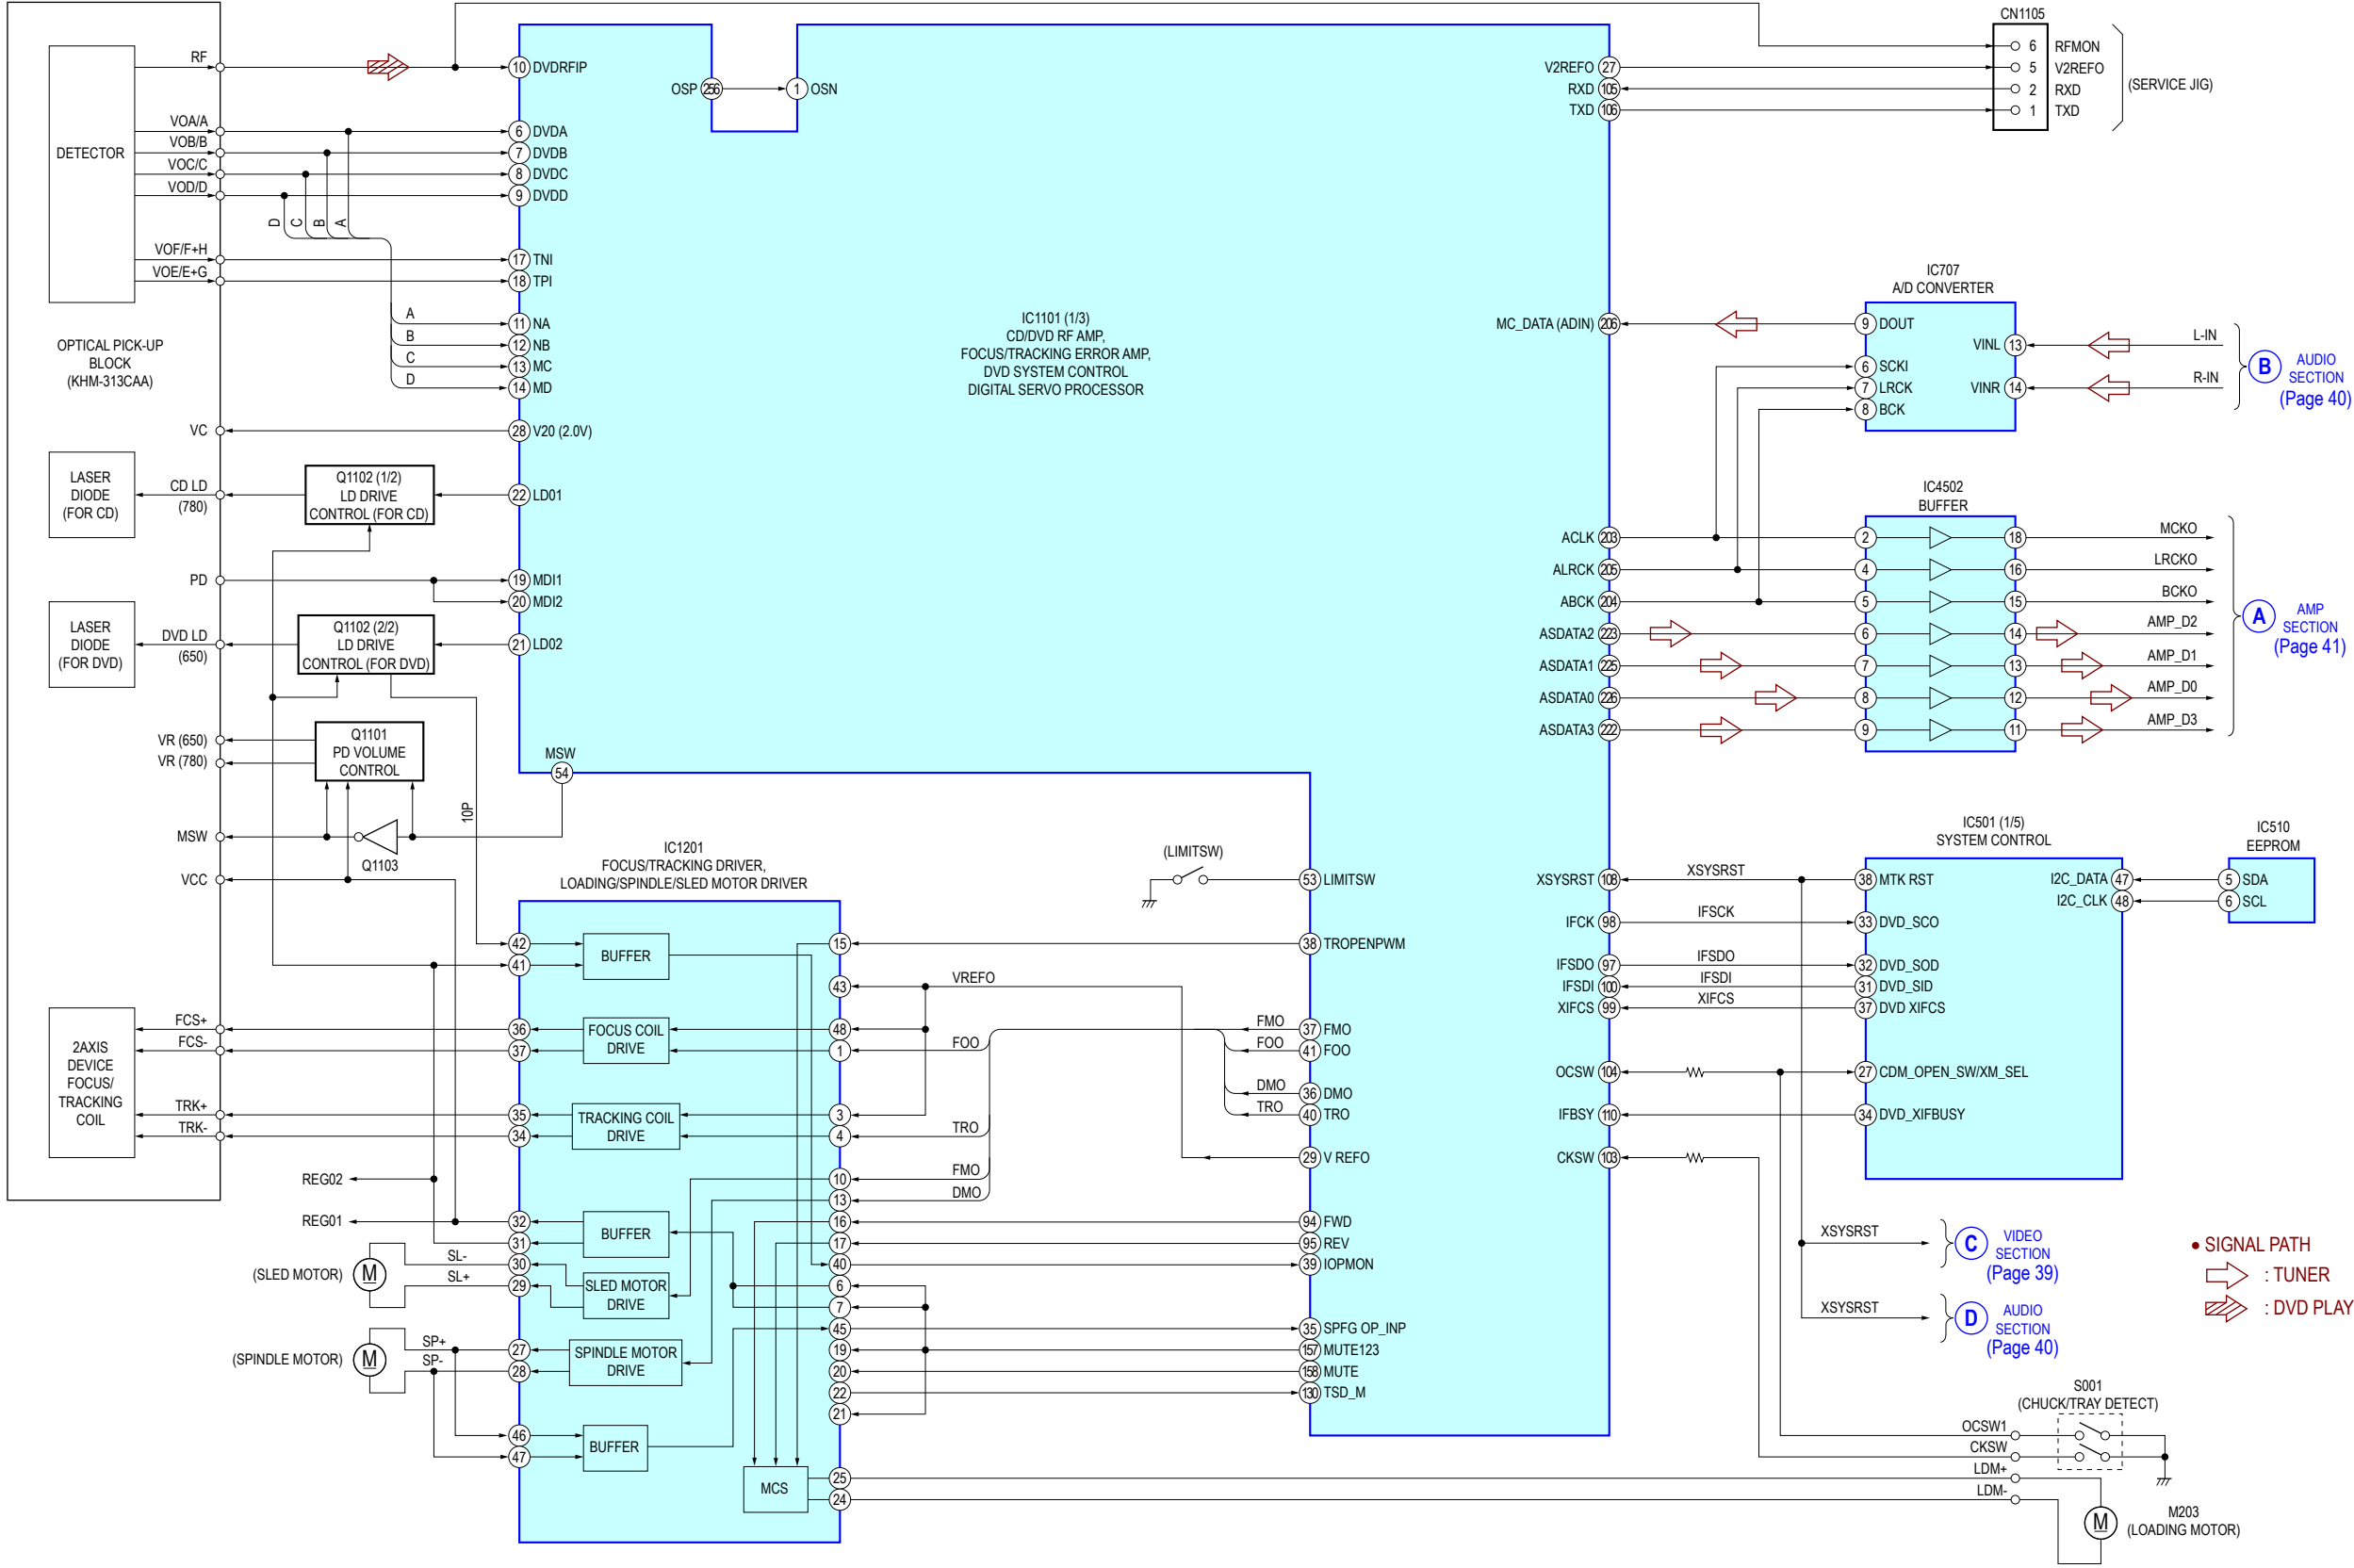


6-2. BLOCK DIAGRAM – VIDEO Section –

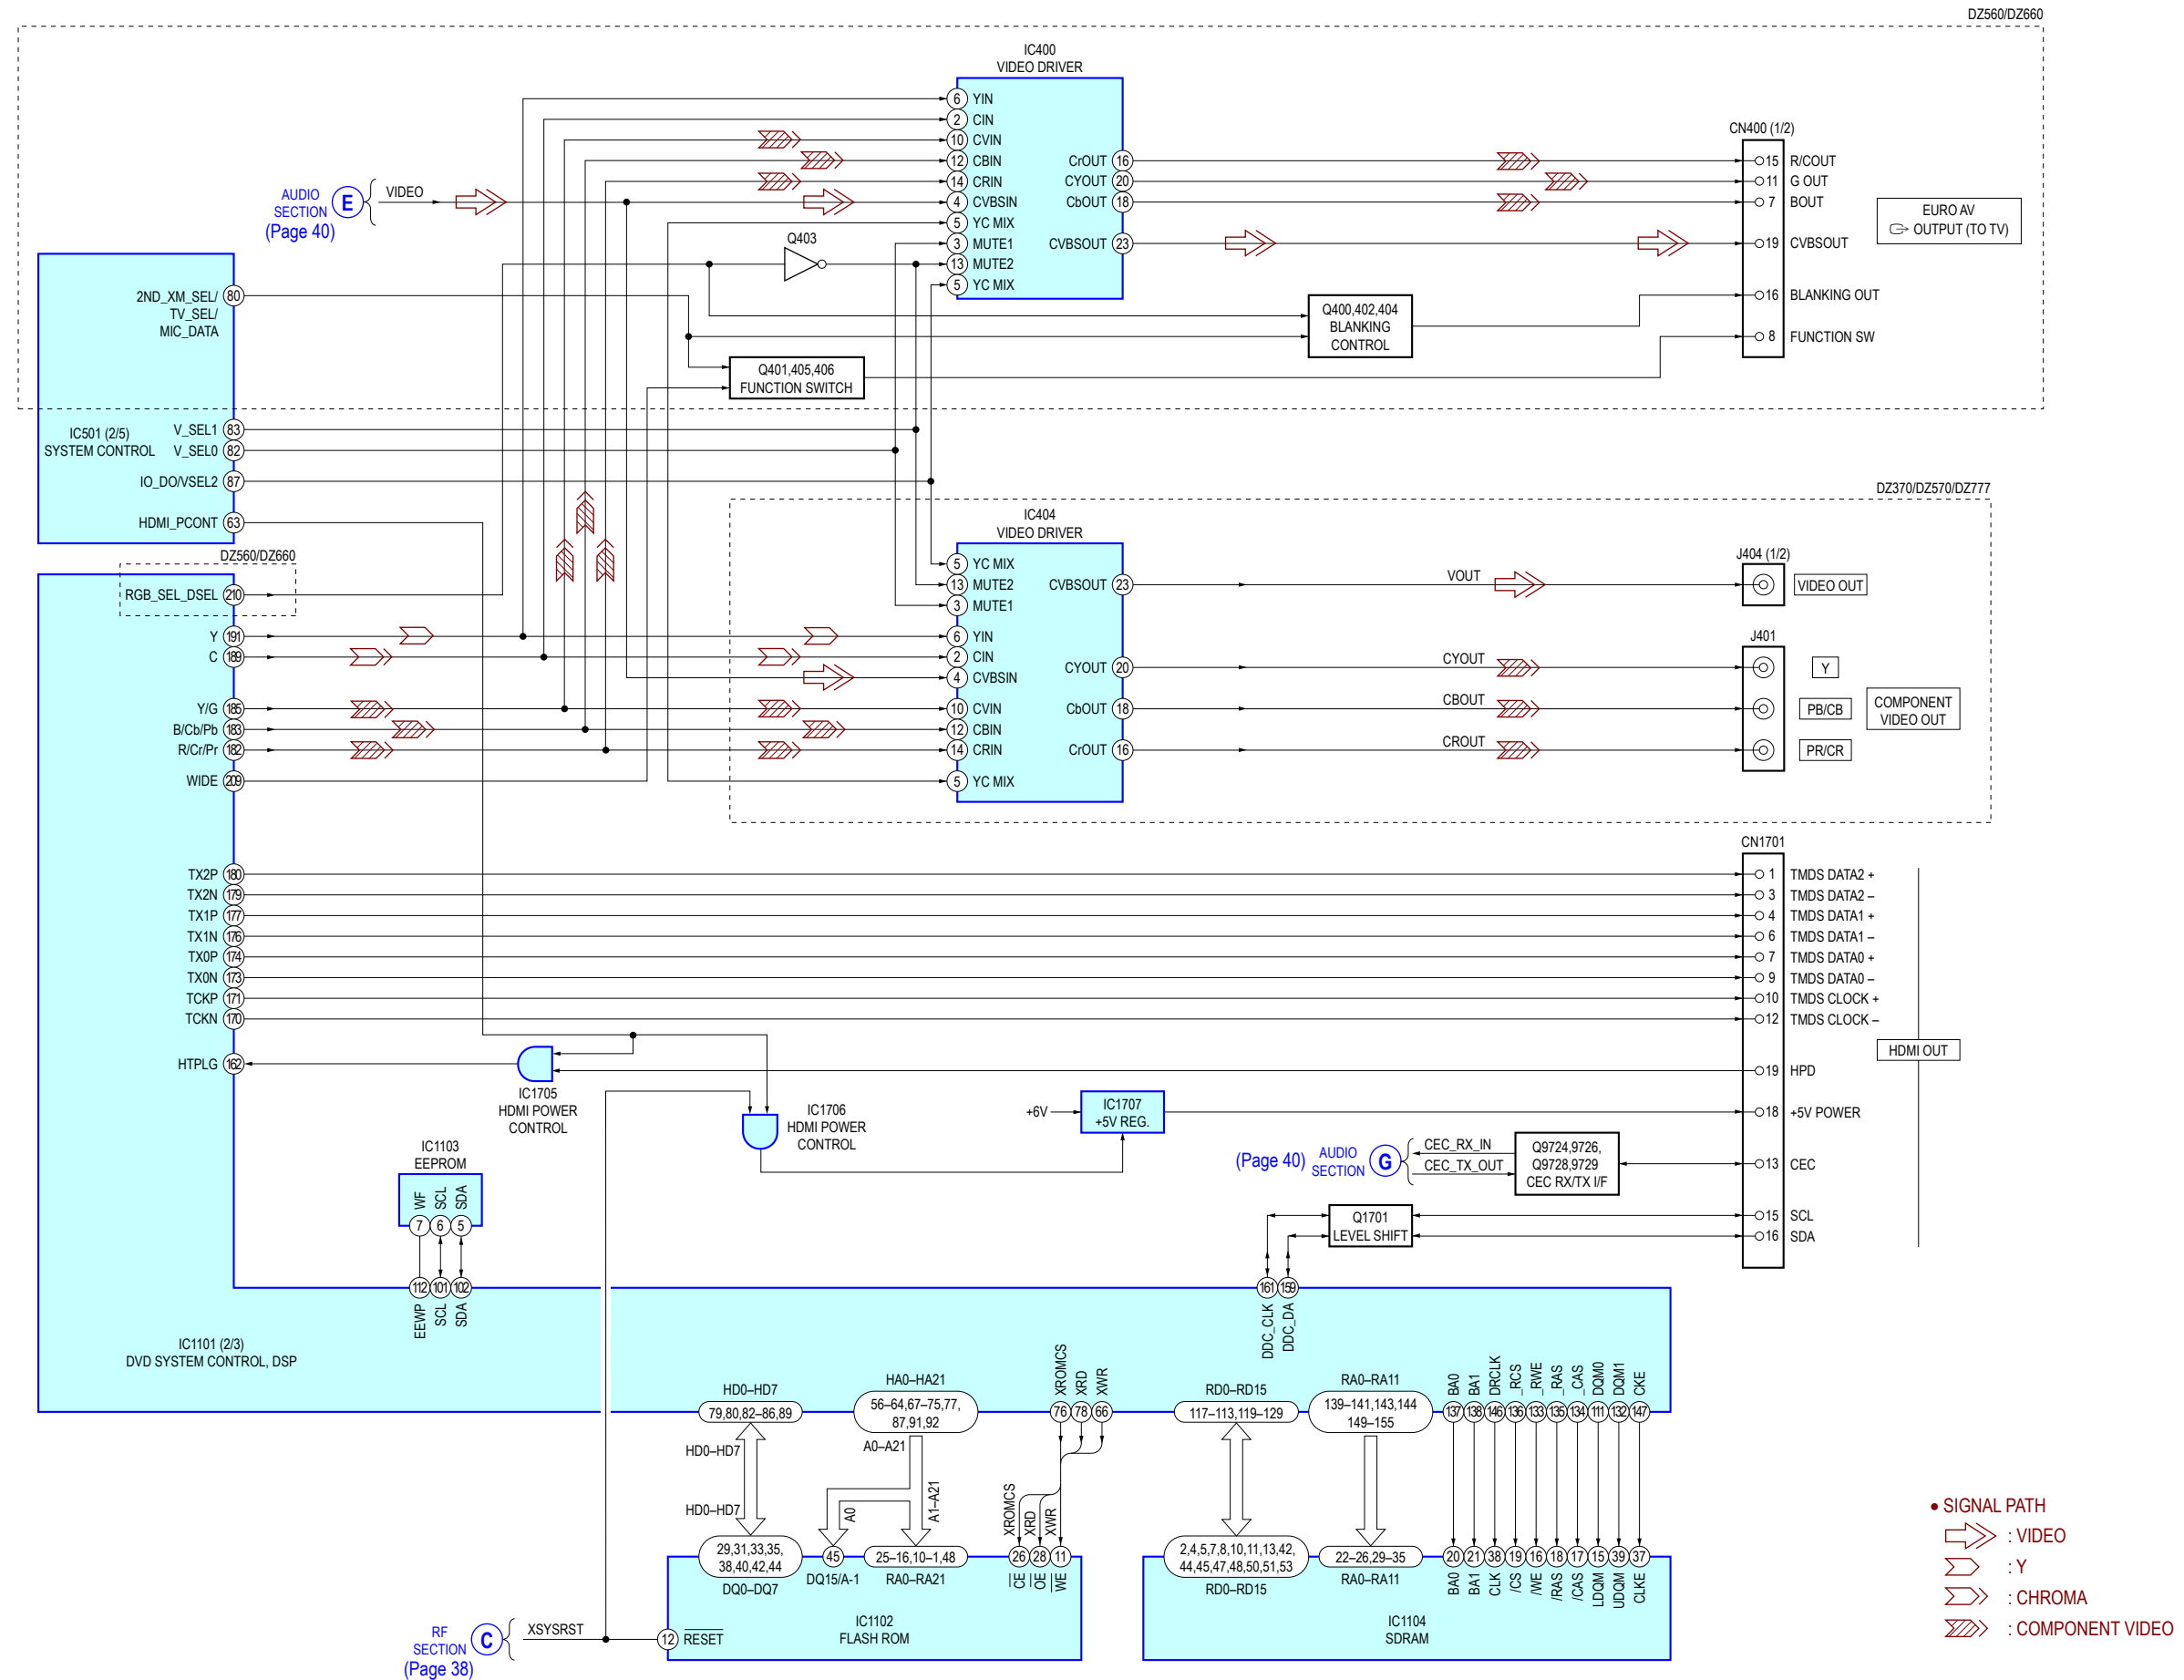


6-3. BLOCK DIAGRAM – AUDIO Section –

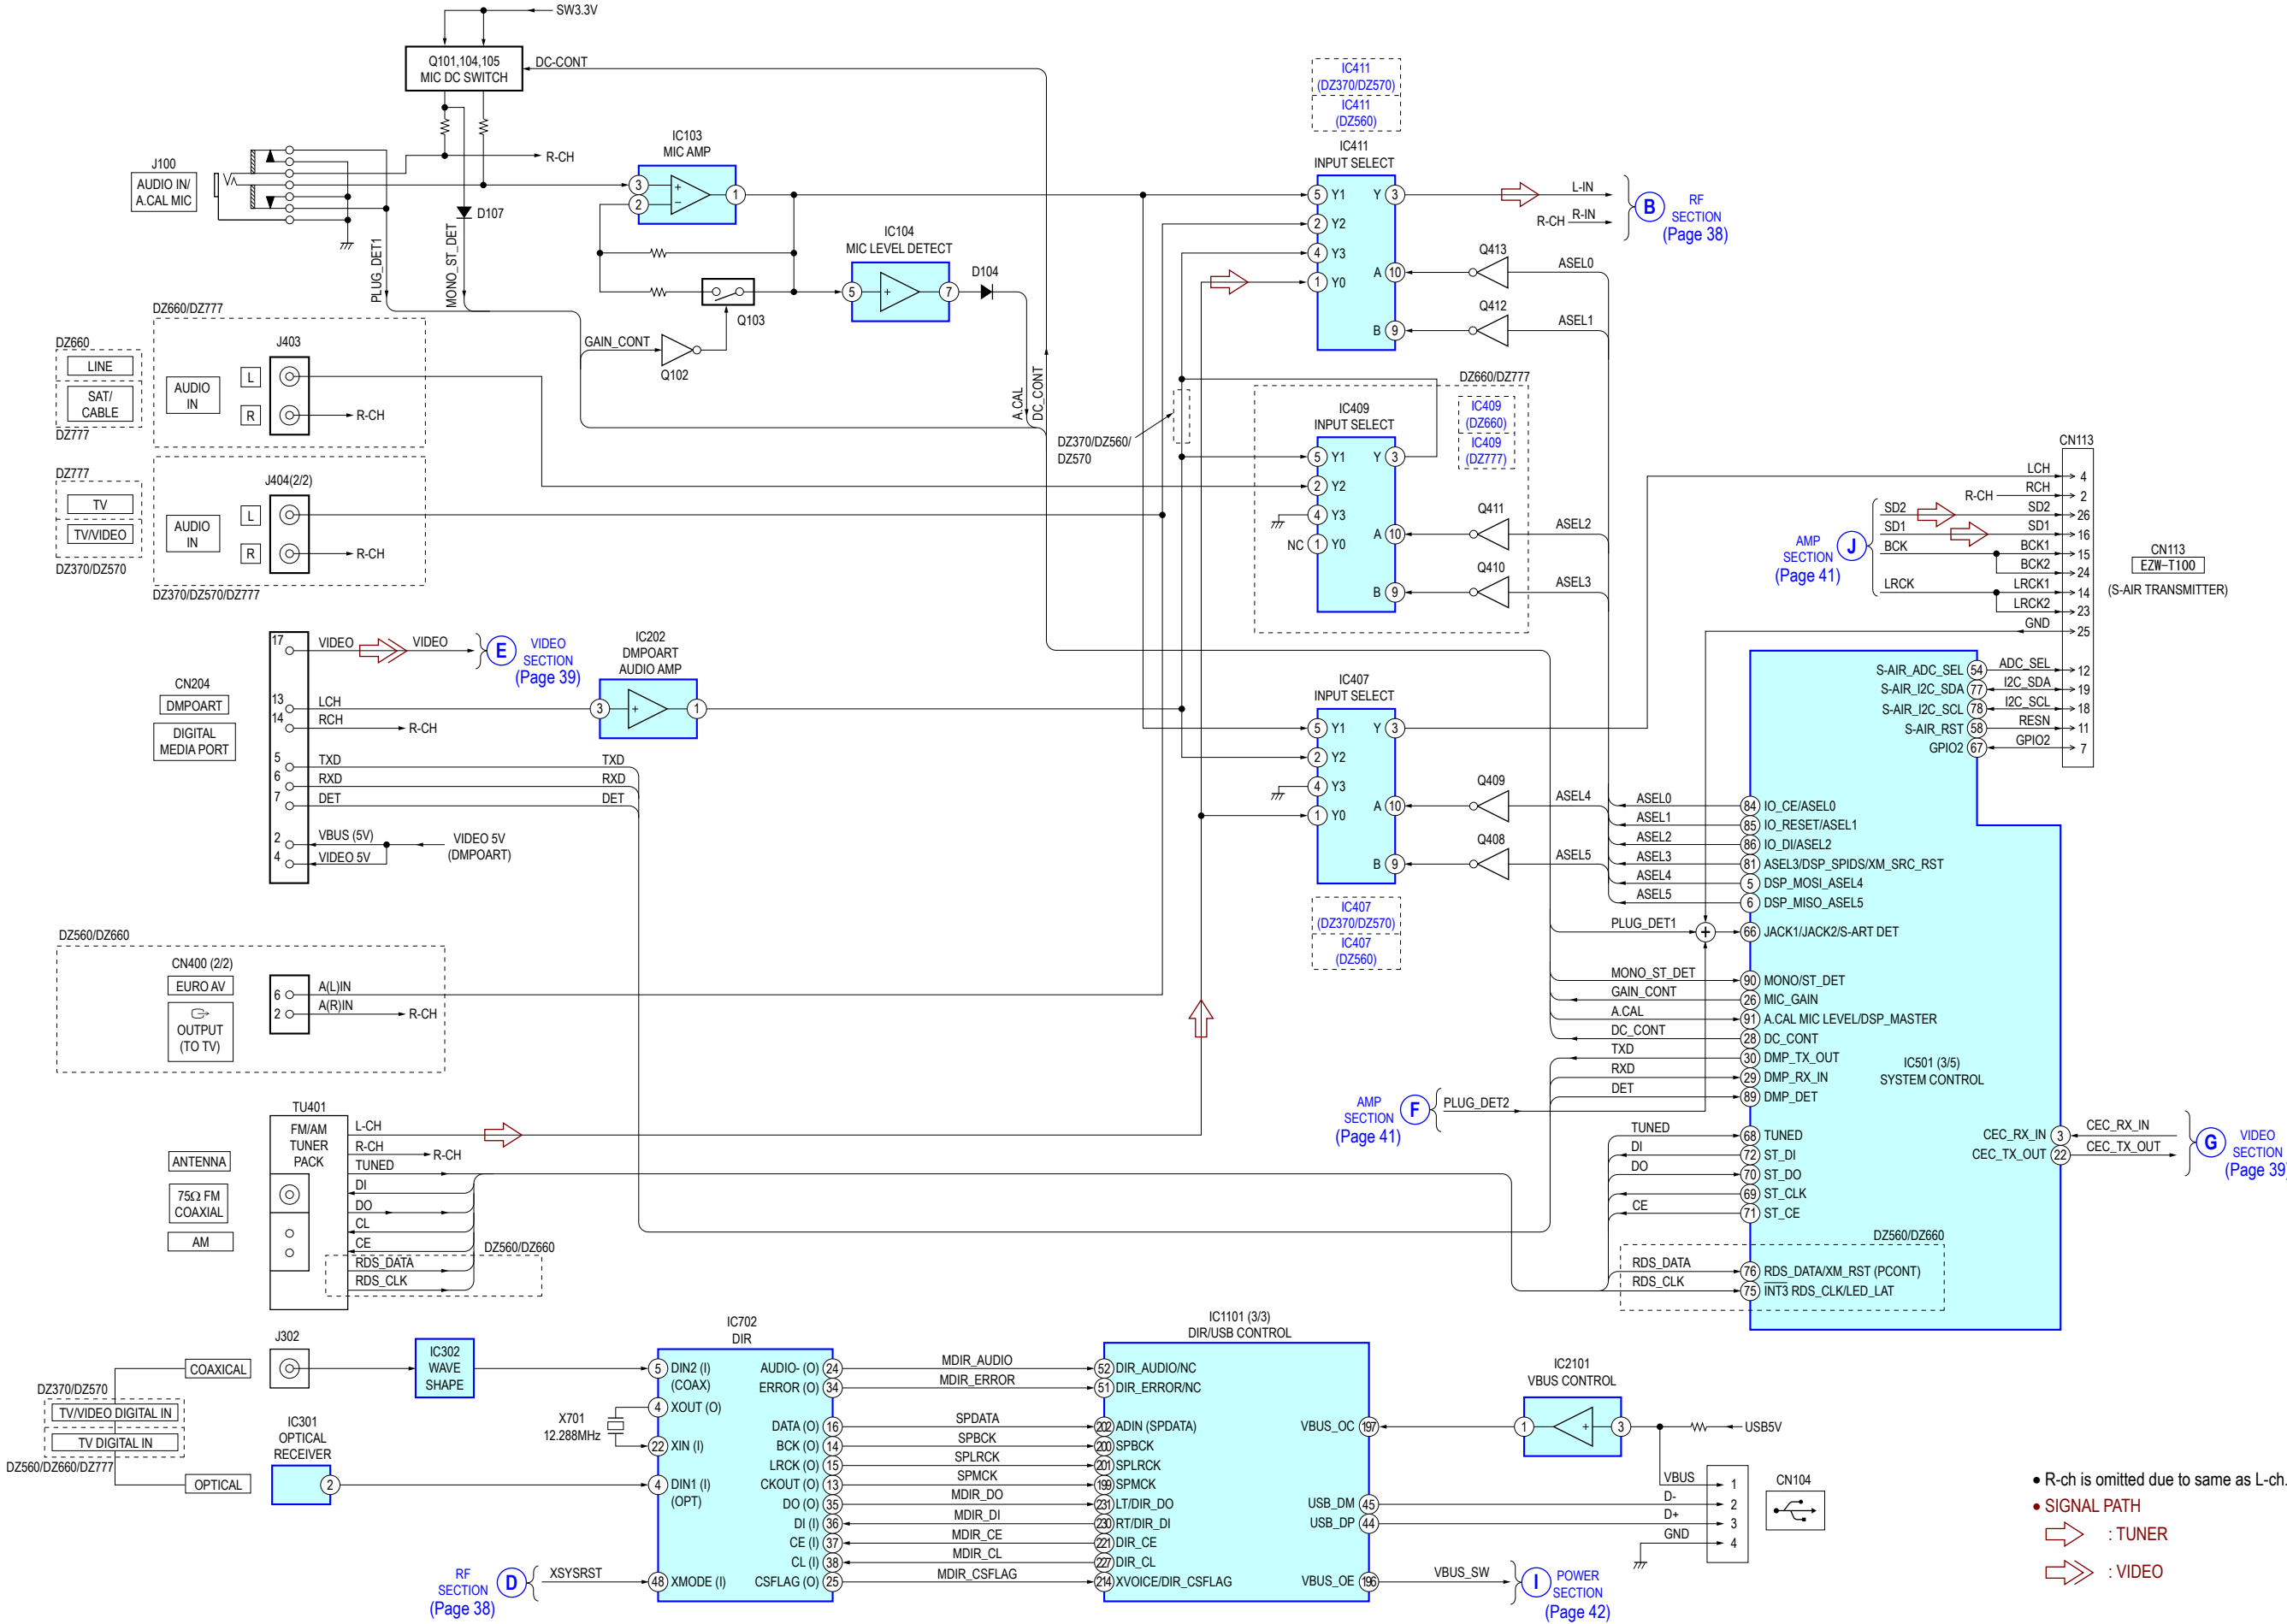

6-4. BLOCK DIAGRAM – AMP Section –

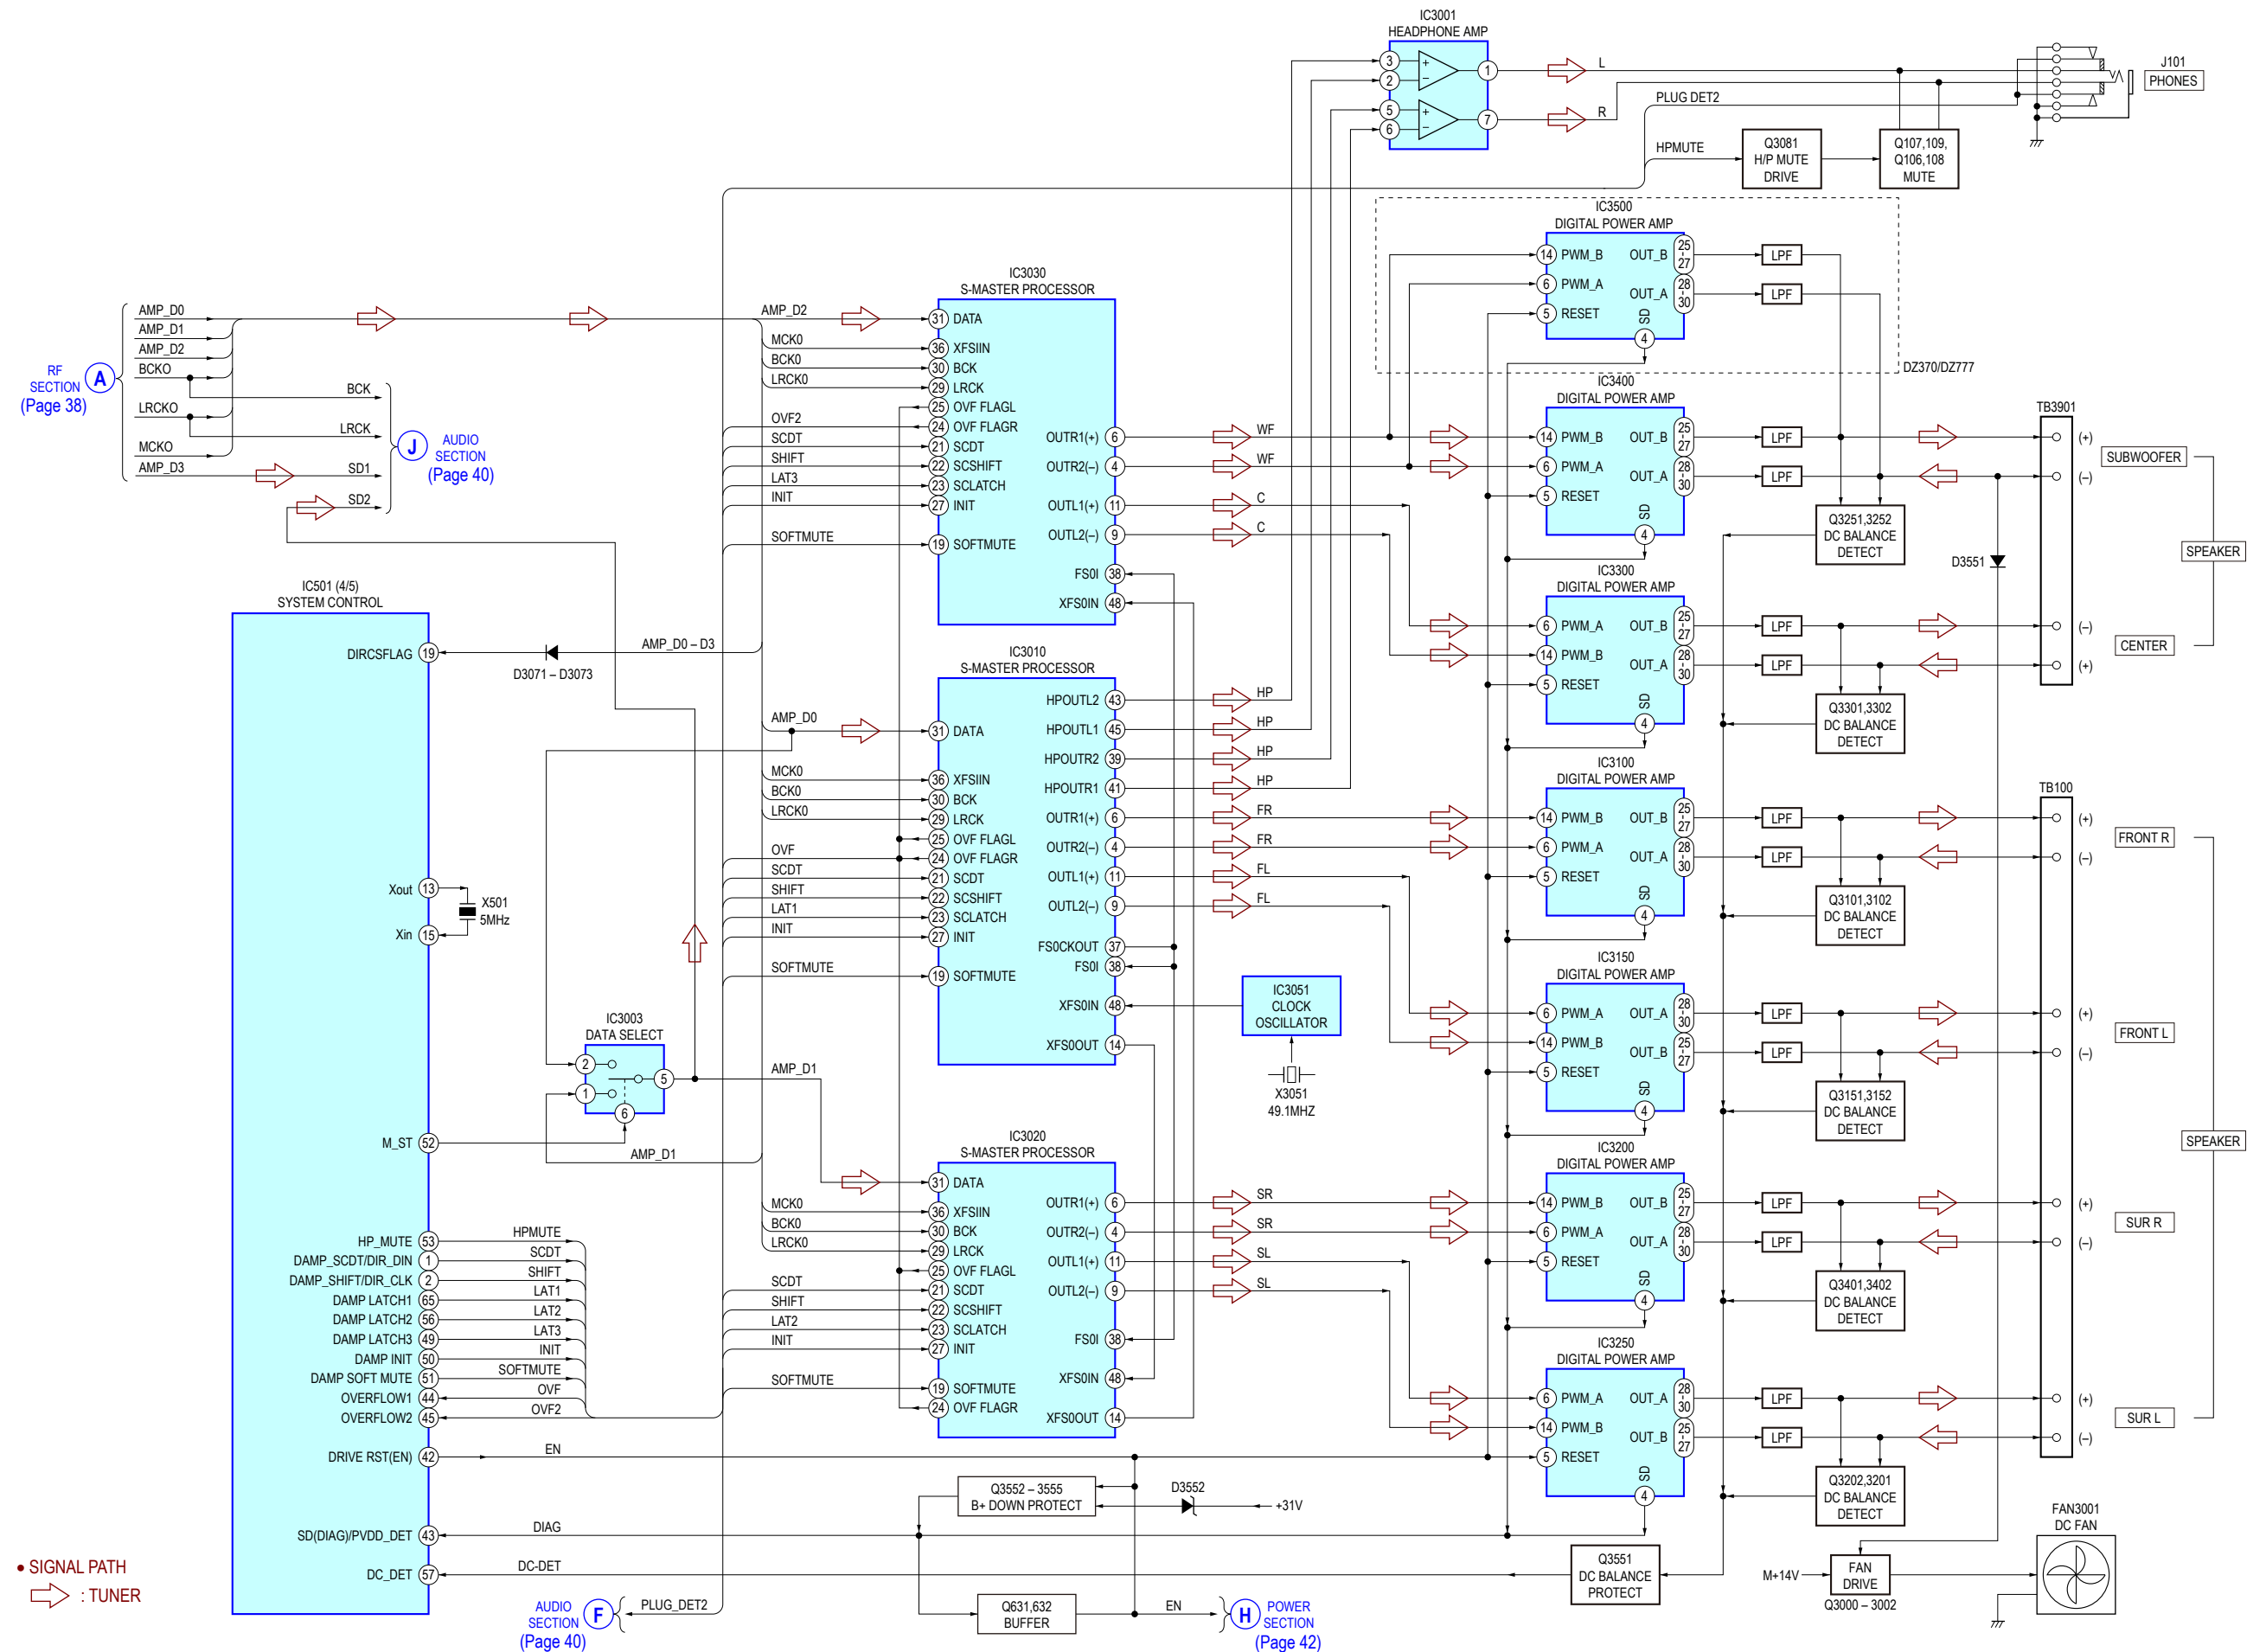


42

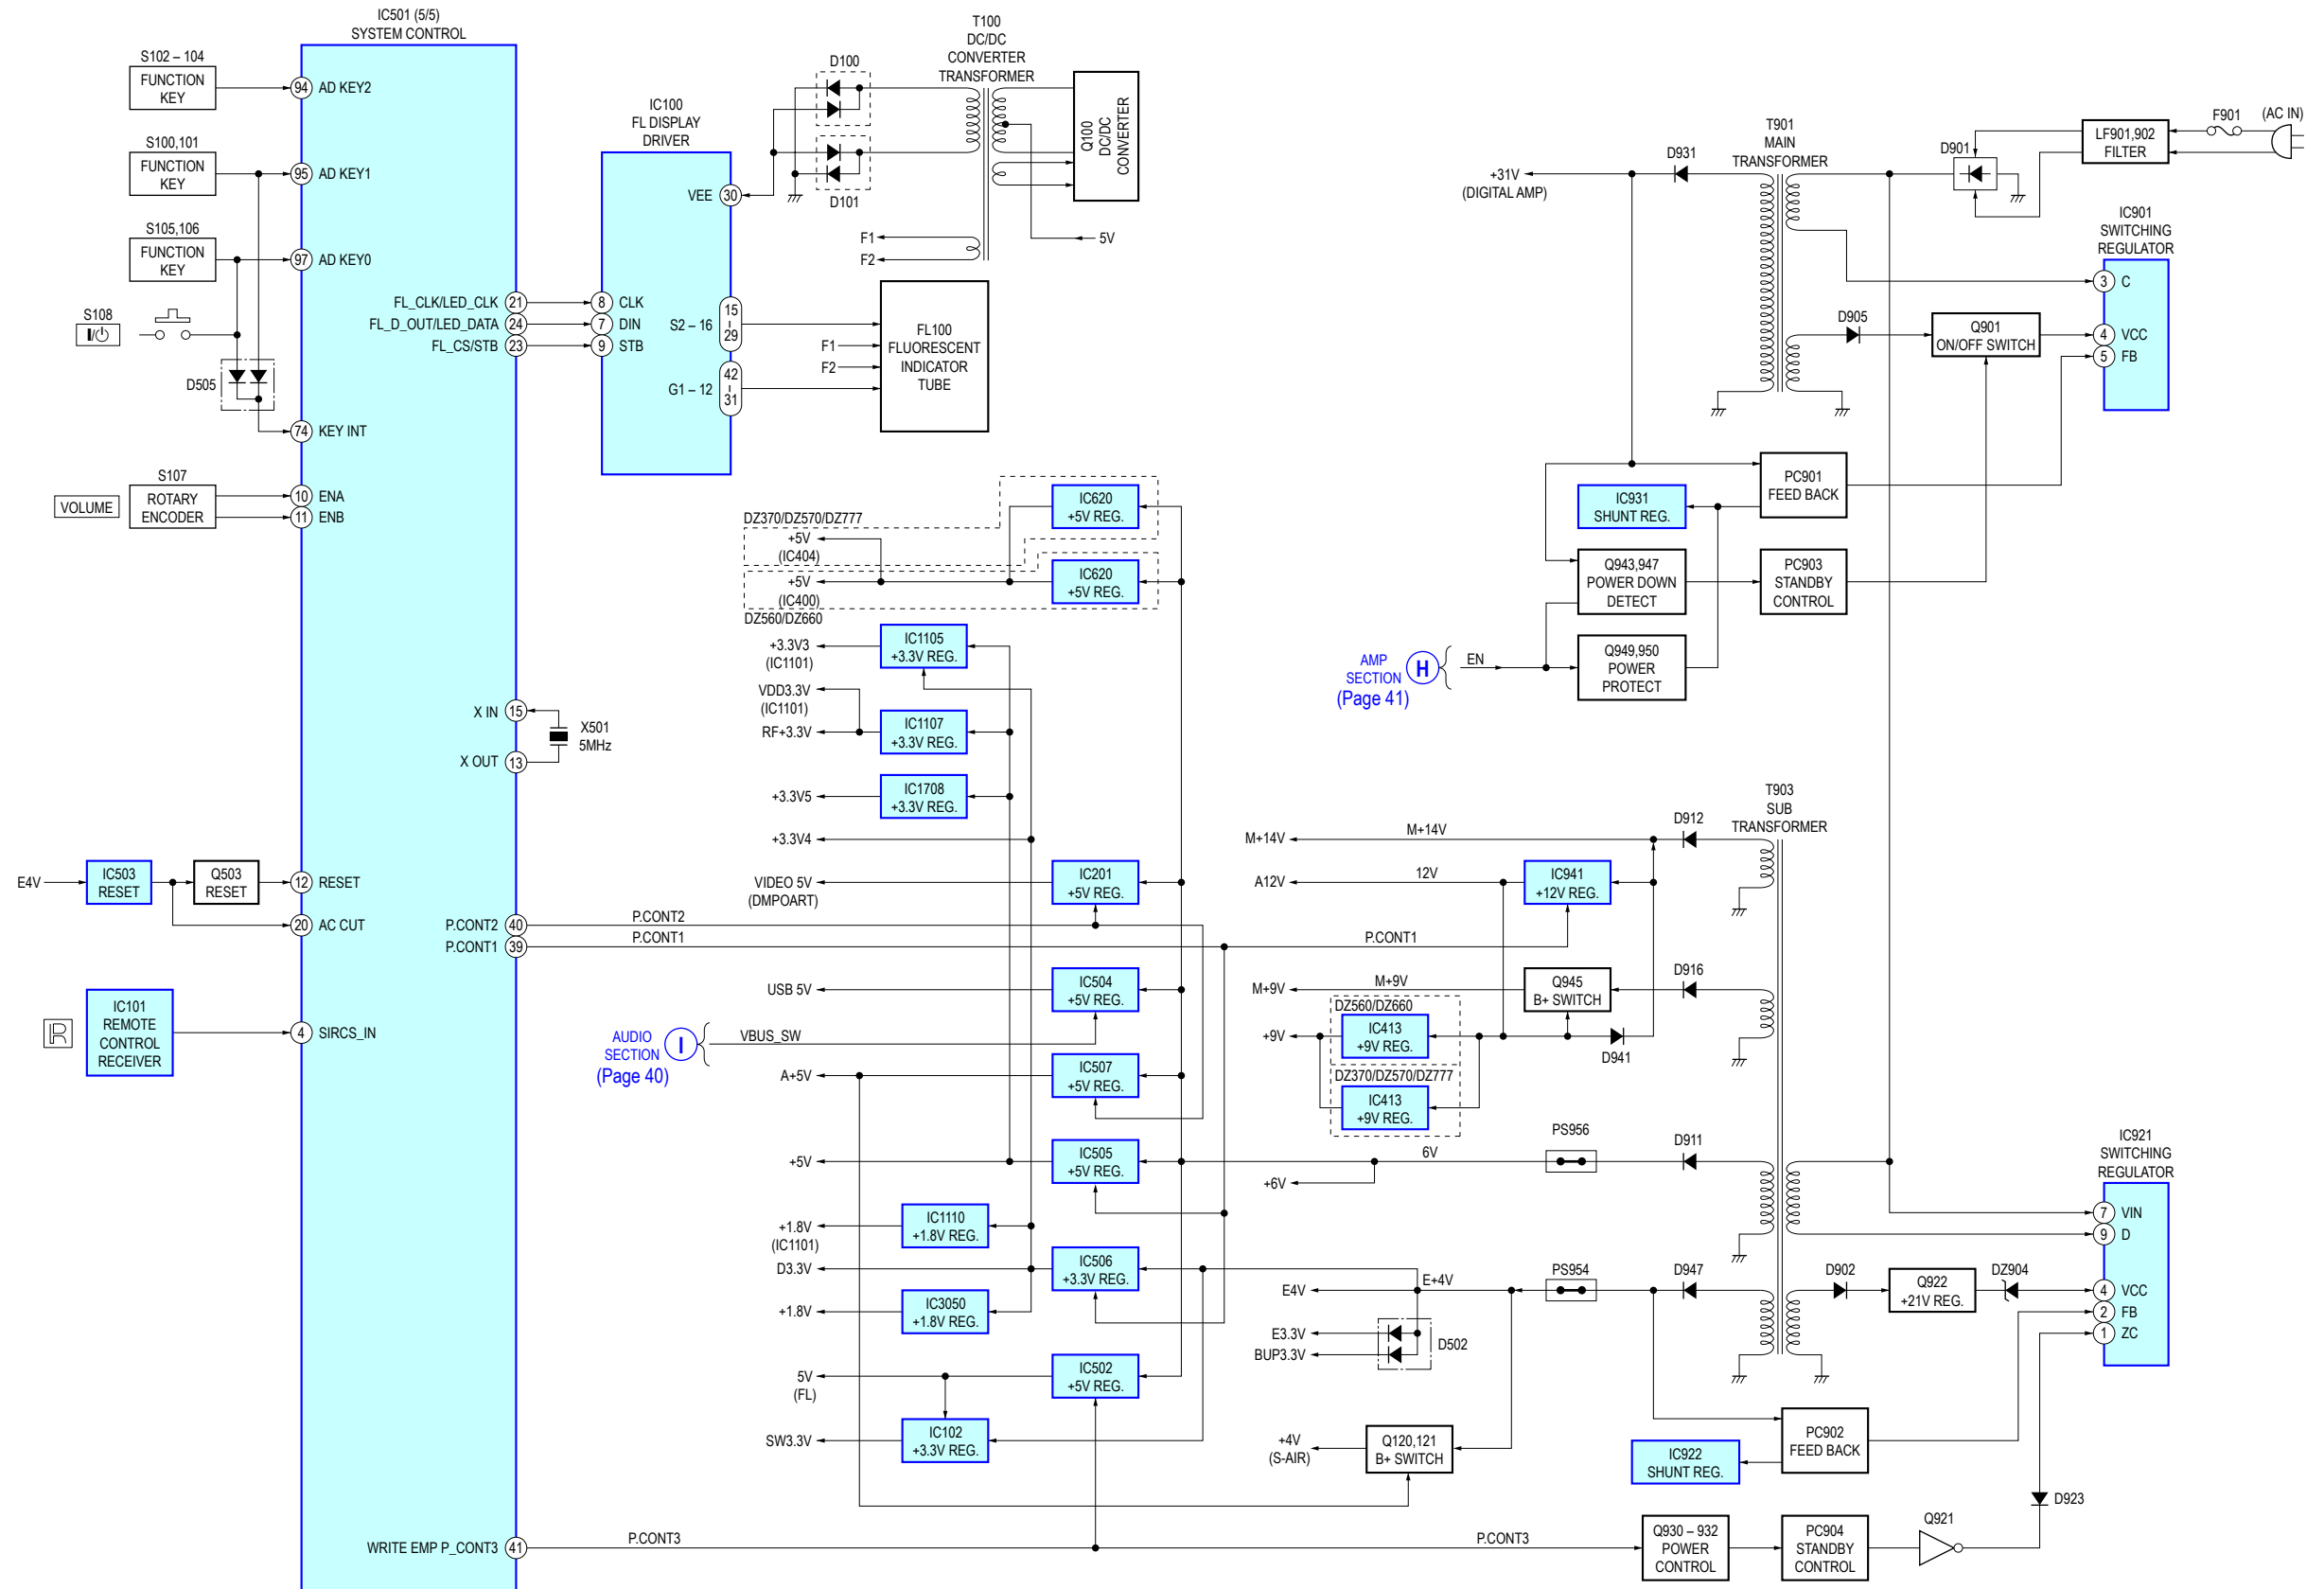


When IC510 and IC1103 on the Main board are damaged, exchange the new Main board for the Main board which IC damaged.

6-6. PRINTED WIRING BOARD – MAIN Board (Side A) – • See page 36 for Circuit Boards Location. • : Uses unleaded solder.

14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1

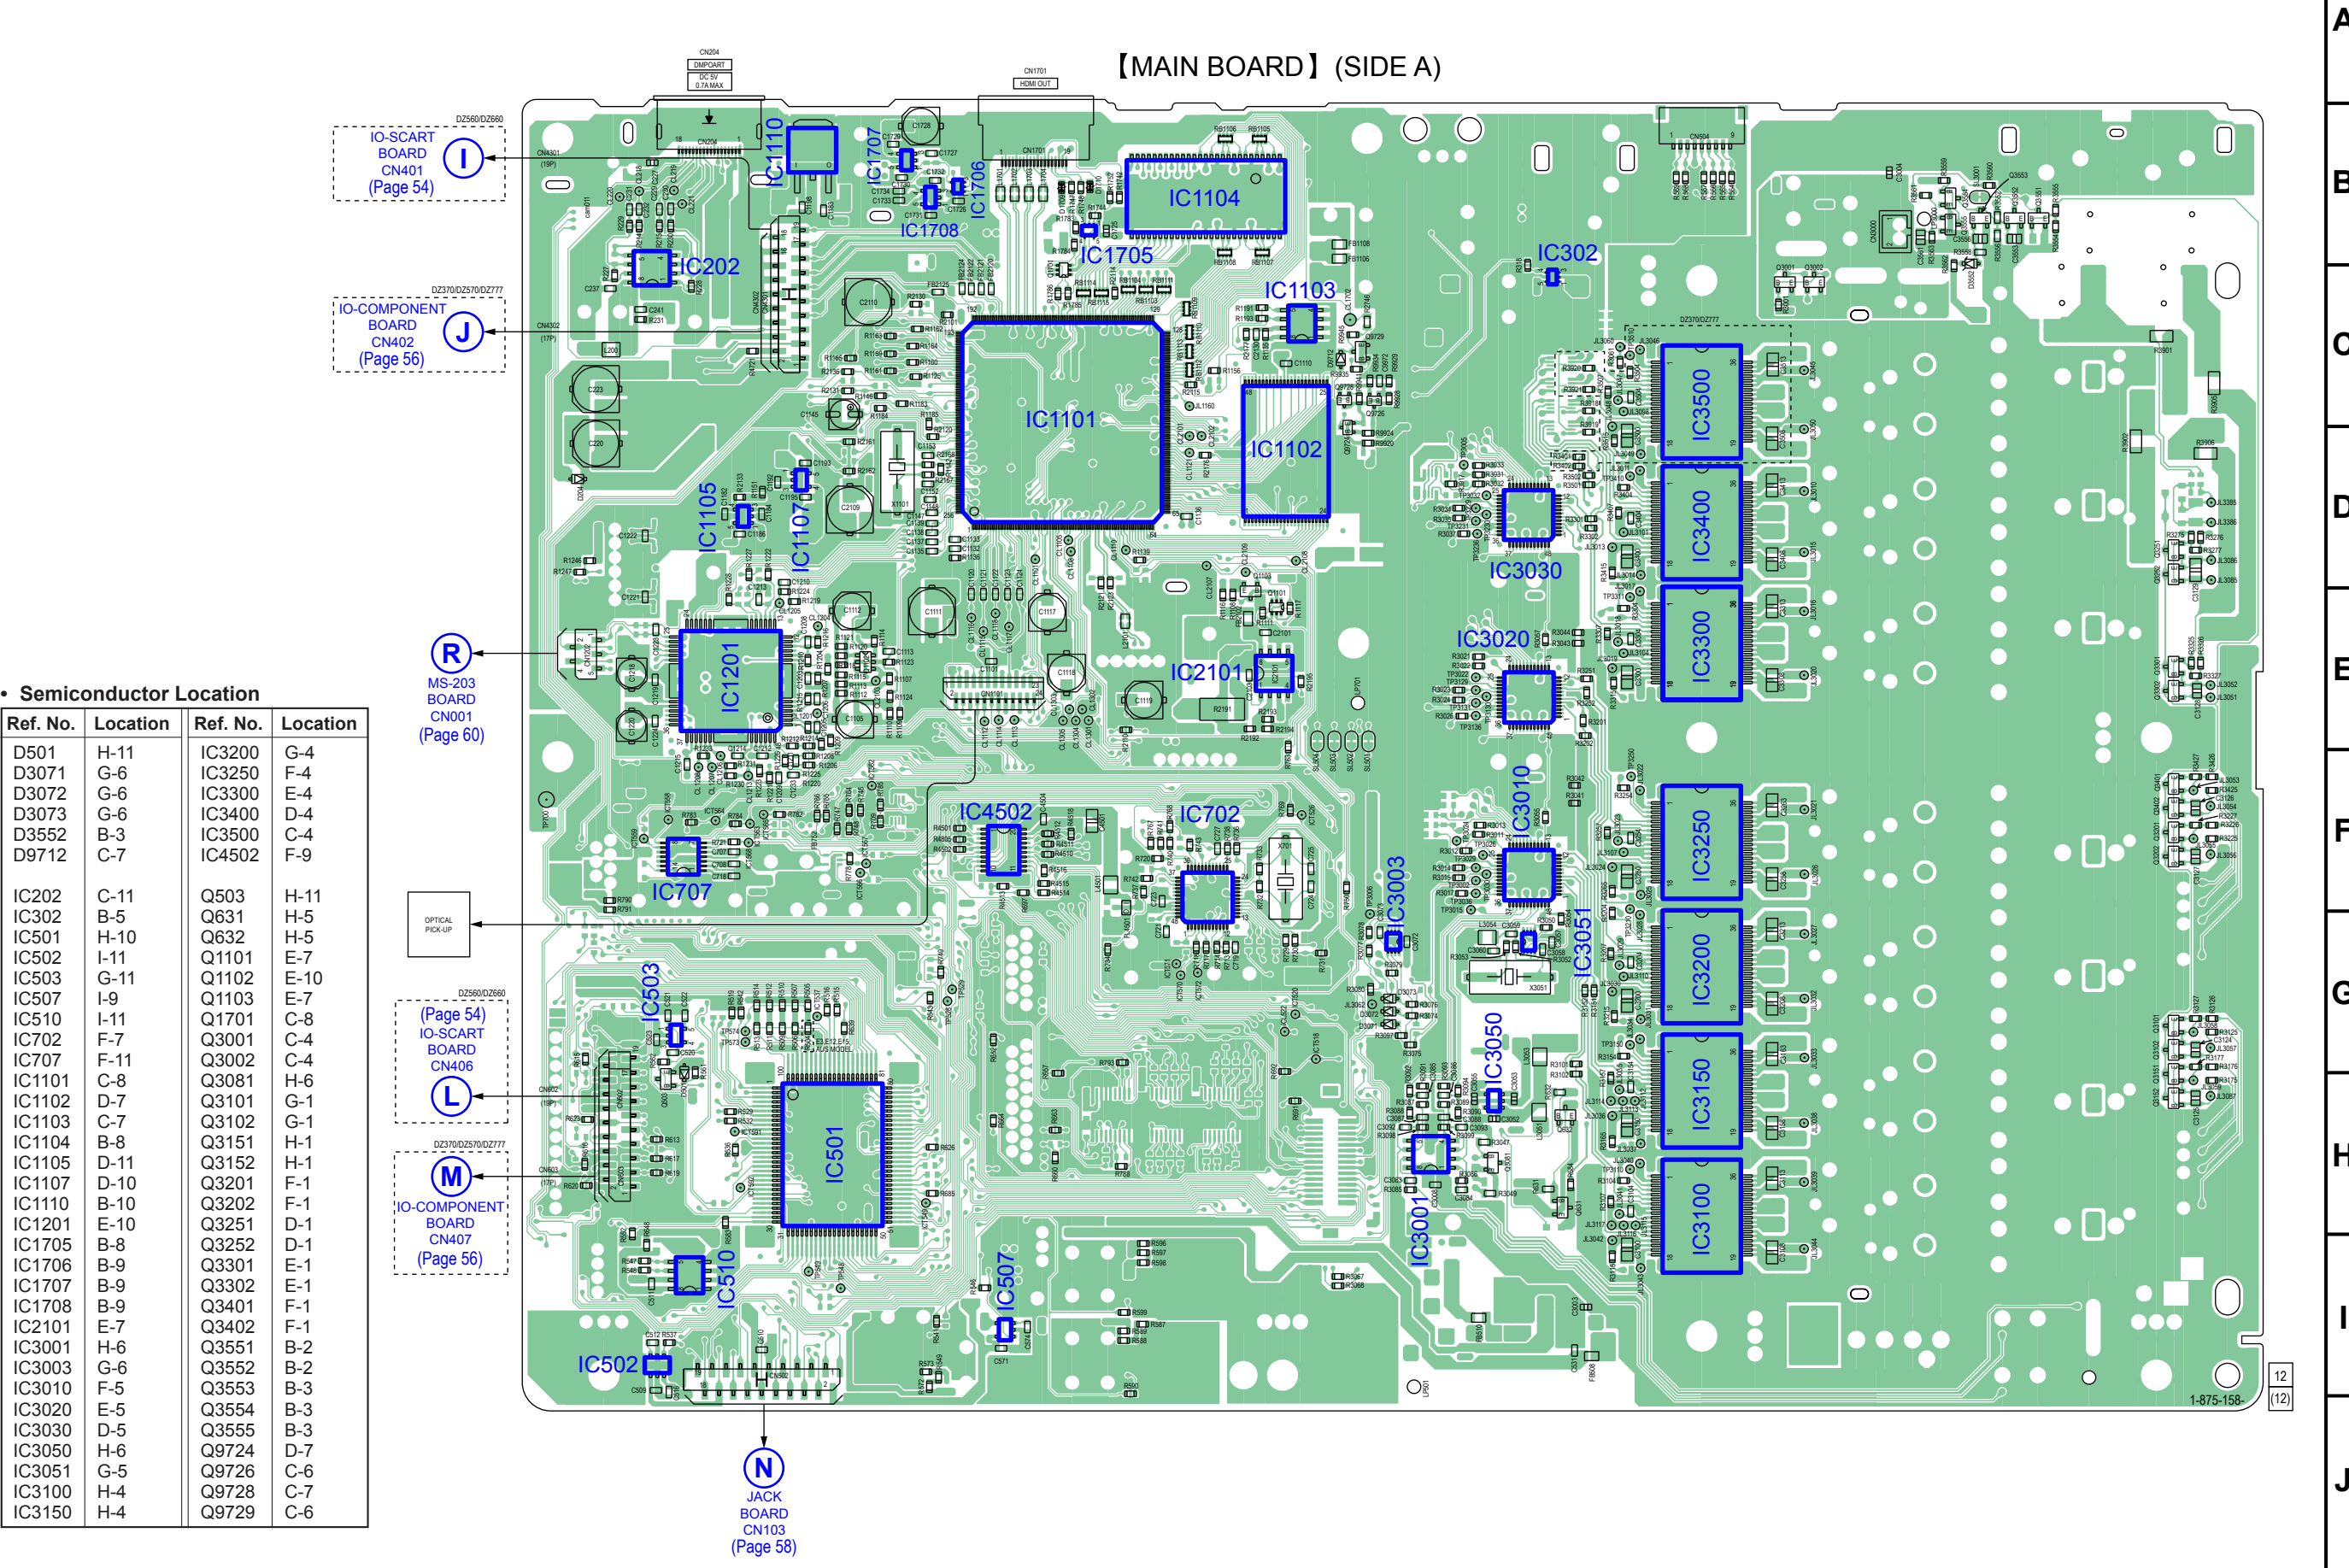


6-7. PRINTED WIRING BOARD – MAIN Board (Side B) – • See page 36 for Circuit Boards Location. • : Uses unleaded solder.

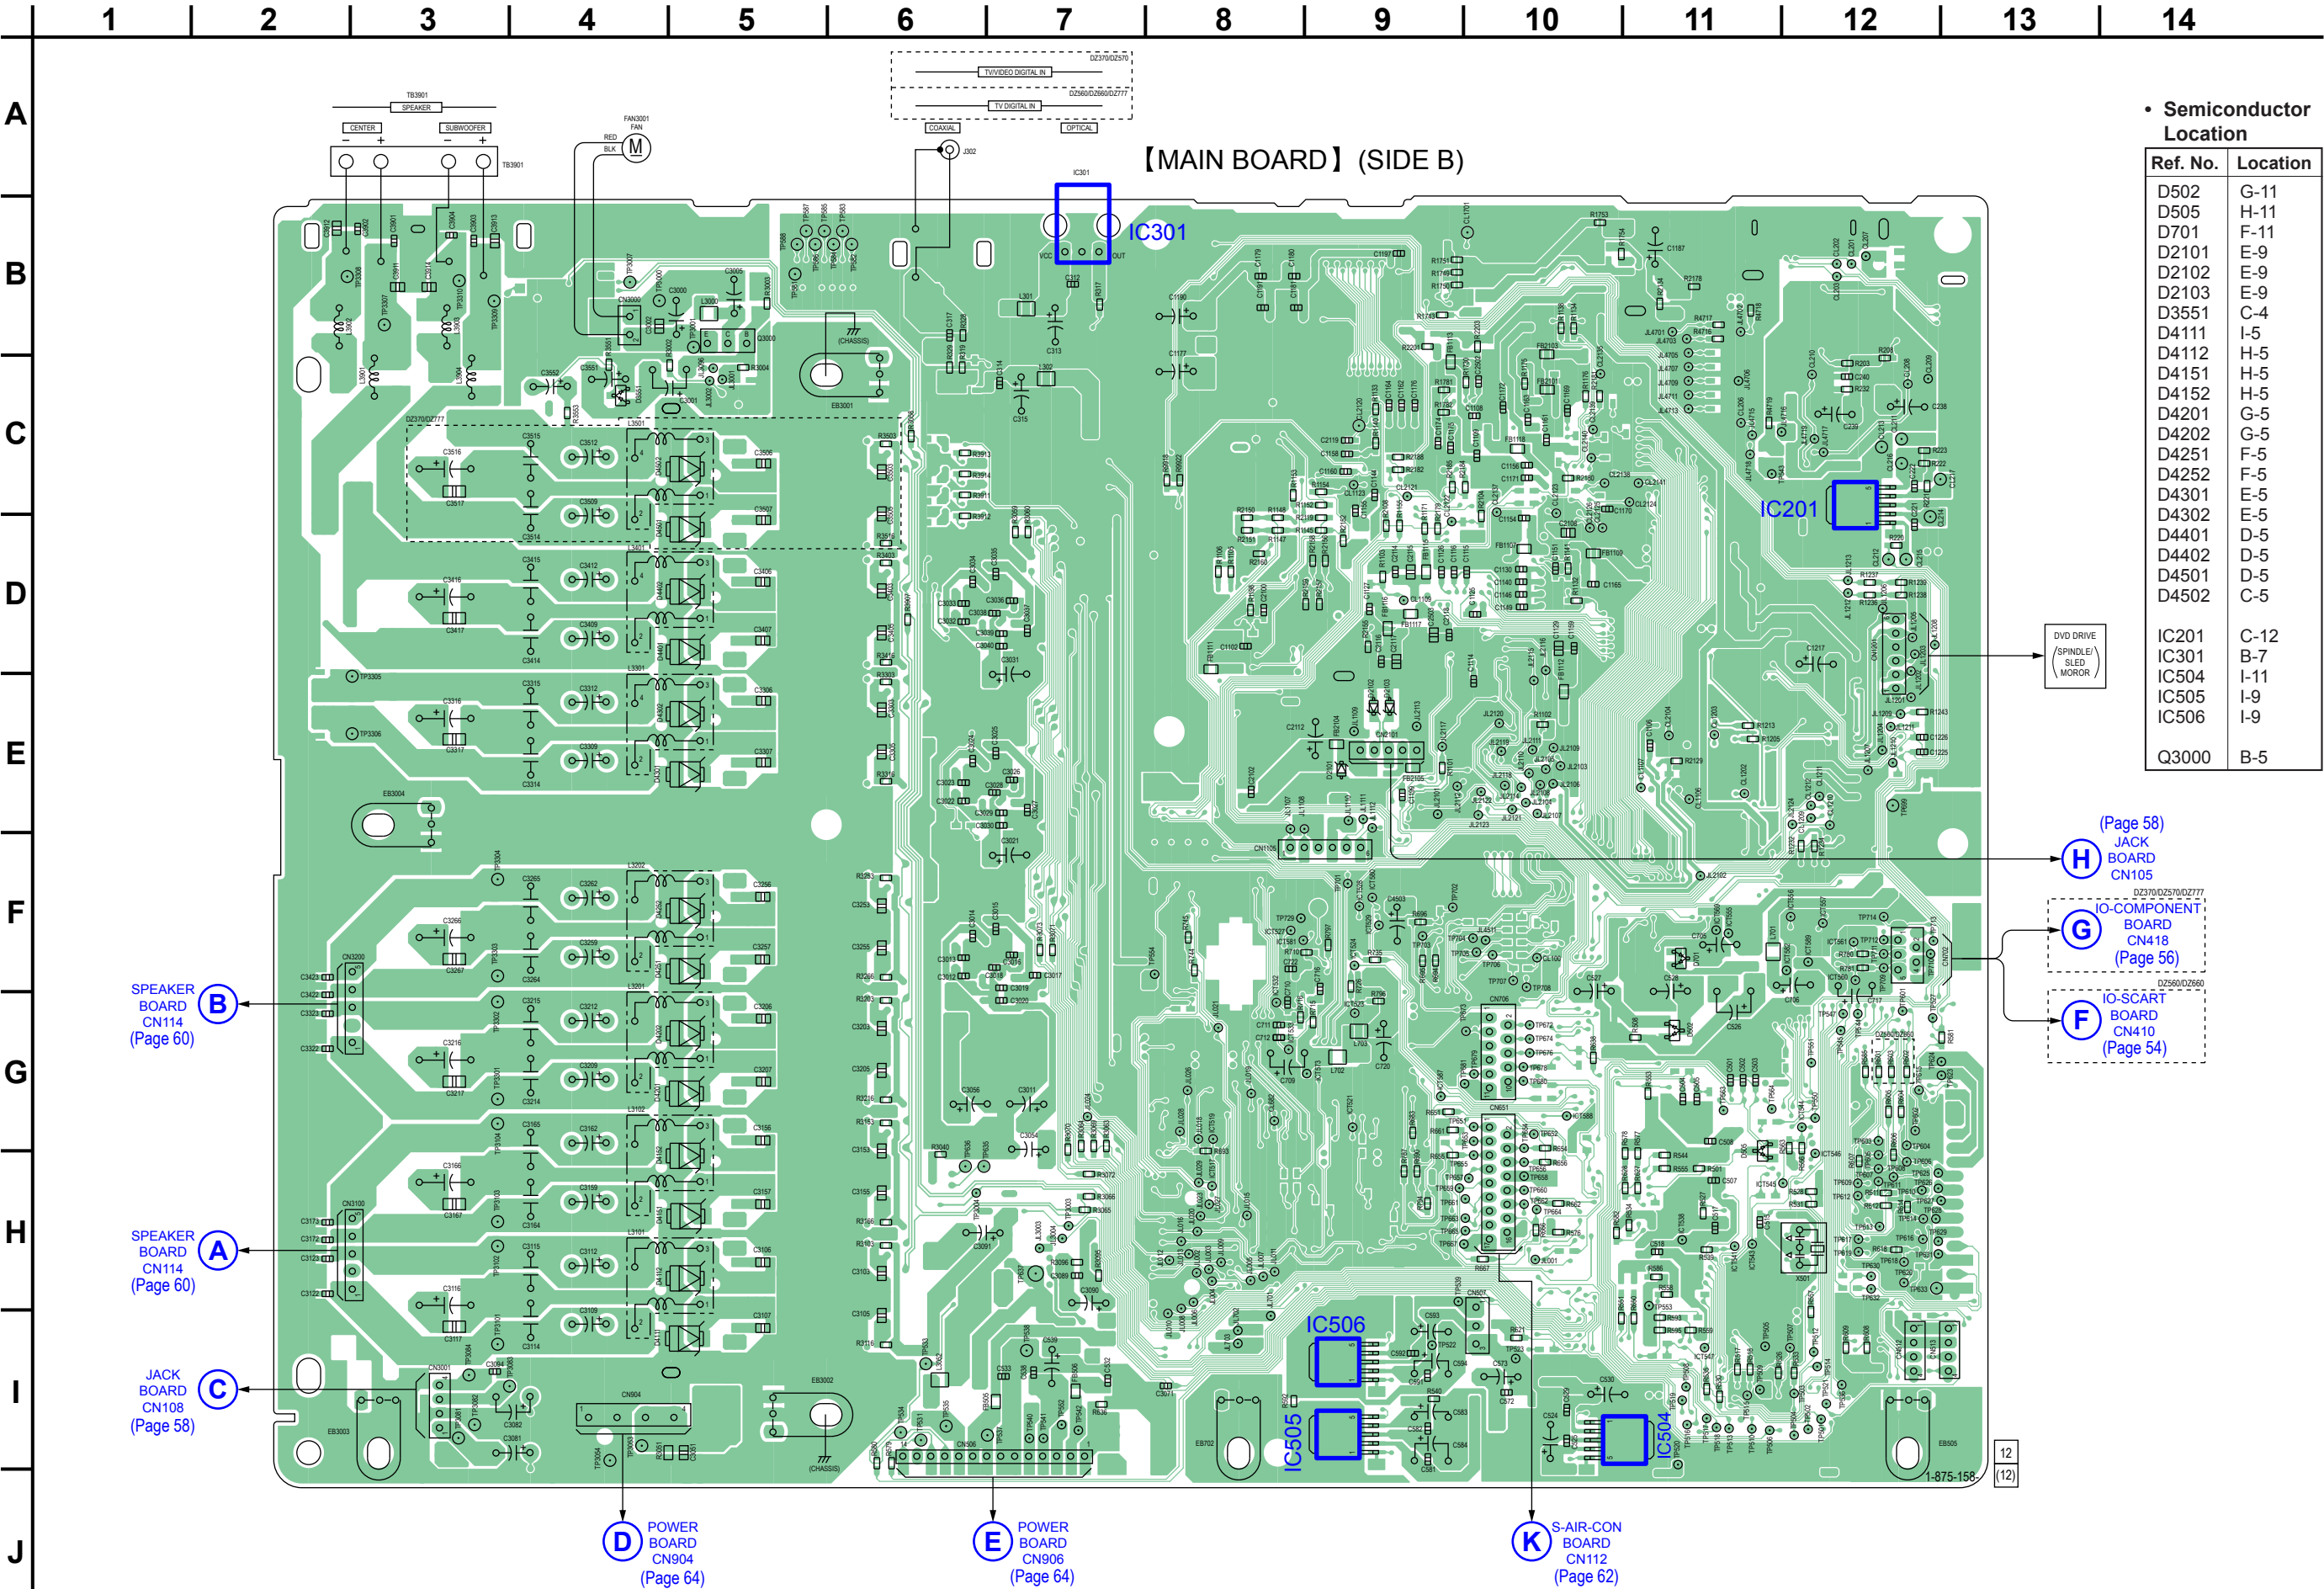


• Semiconductor Location

Ref. No.	Location
D502	G-11
D505	H-11
D701	F-11
D2101	E-9
D2102	E-9
D2103	E-9
D3551	C-4
D4111	I-5
D4112	H-5
D4151	H-5
D4152	H-5
D4201	G-5
D4202	G-5
D4251	F-5
D4252	F-5
D4301	E-5
D4302	E-5
D4401	D-5
D4402	D-5
D4501	D-5
D4502	C-5
IC201	C-12
IC301	B-7
IC504	I-11
IC505	I-9
IC506	I-9
Q3000	B-5

6-8. SCHEMATIC DIAGRAM – MAIN Board (1/9) – • See page 67 for IC Block Diagrams.

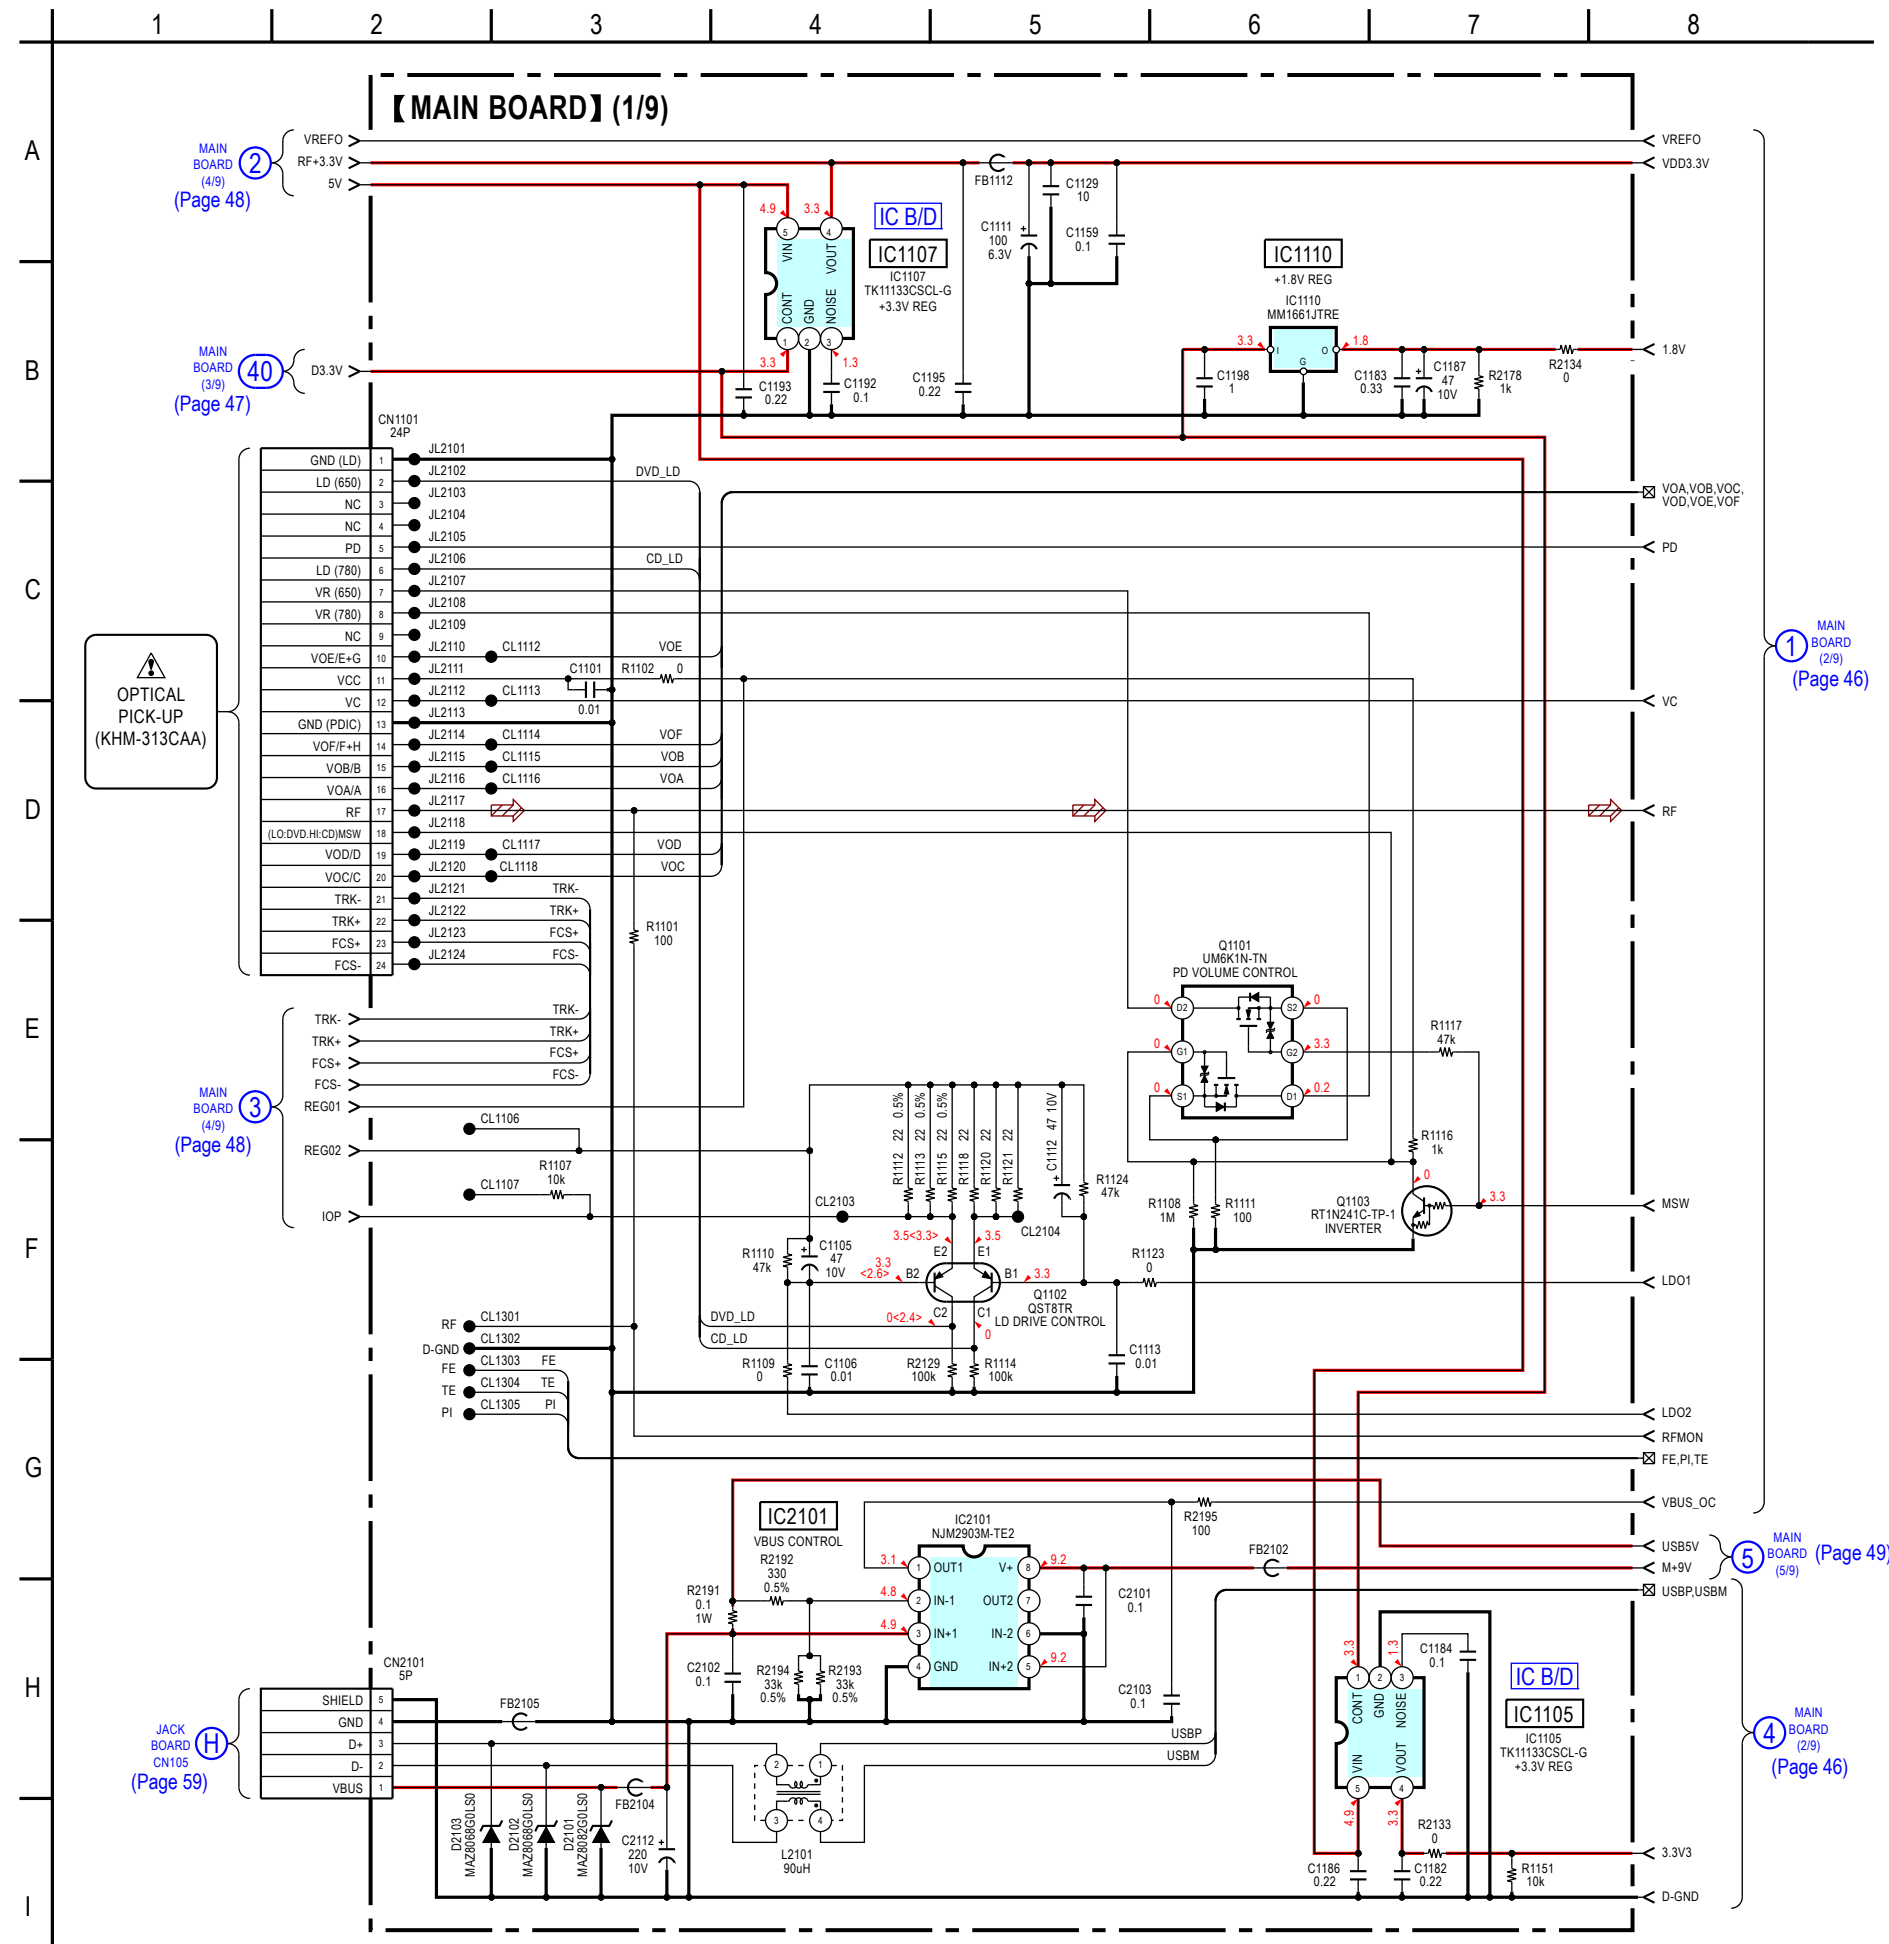


6-9. SCHEMATIC DIAGRAM – MAIN Board (2/9) – • See page 37 for waveforms. • See page 72 for IC Pin Function Description of IC1101.

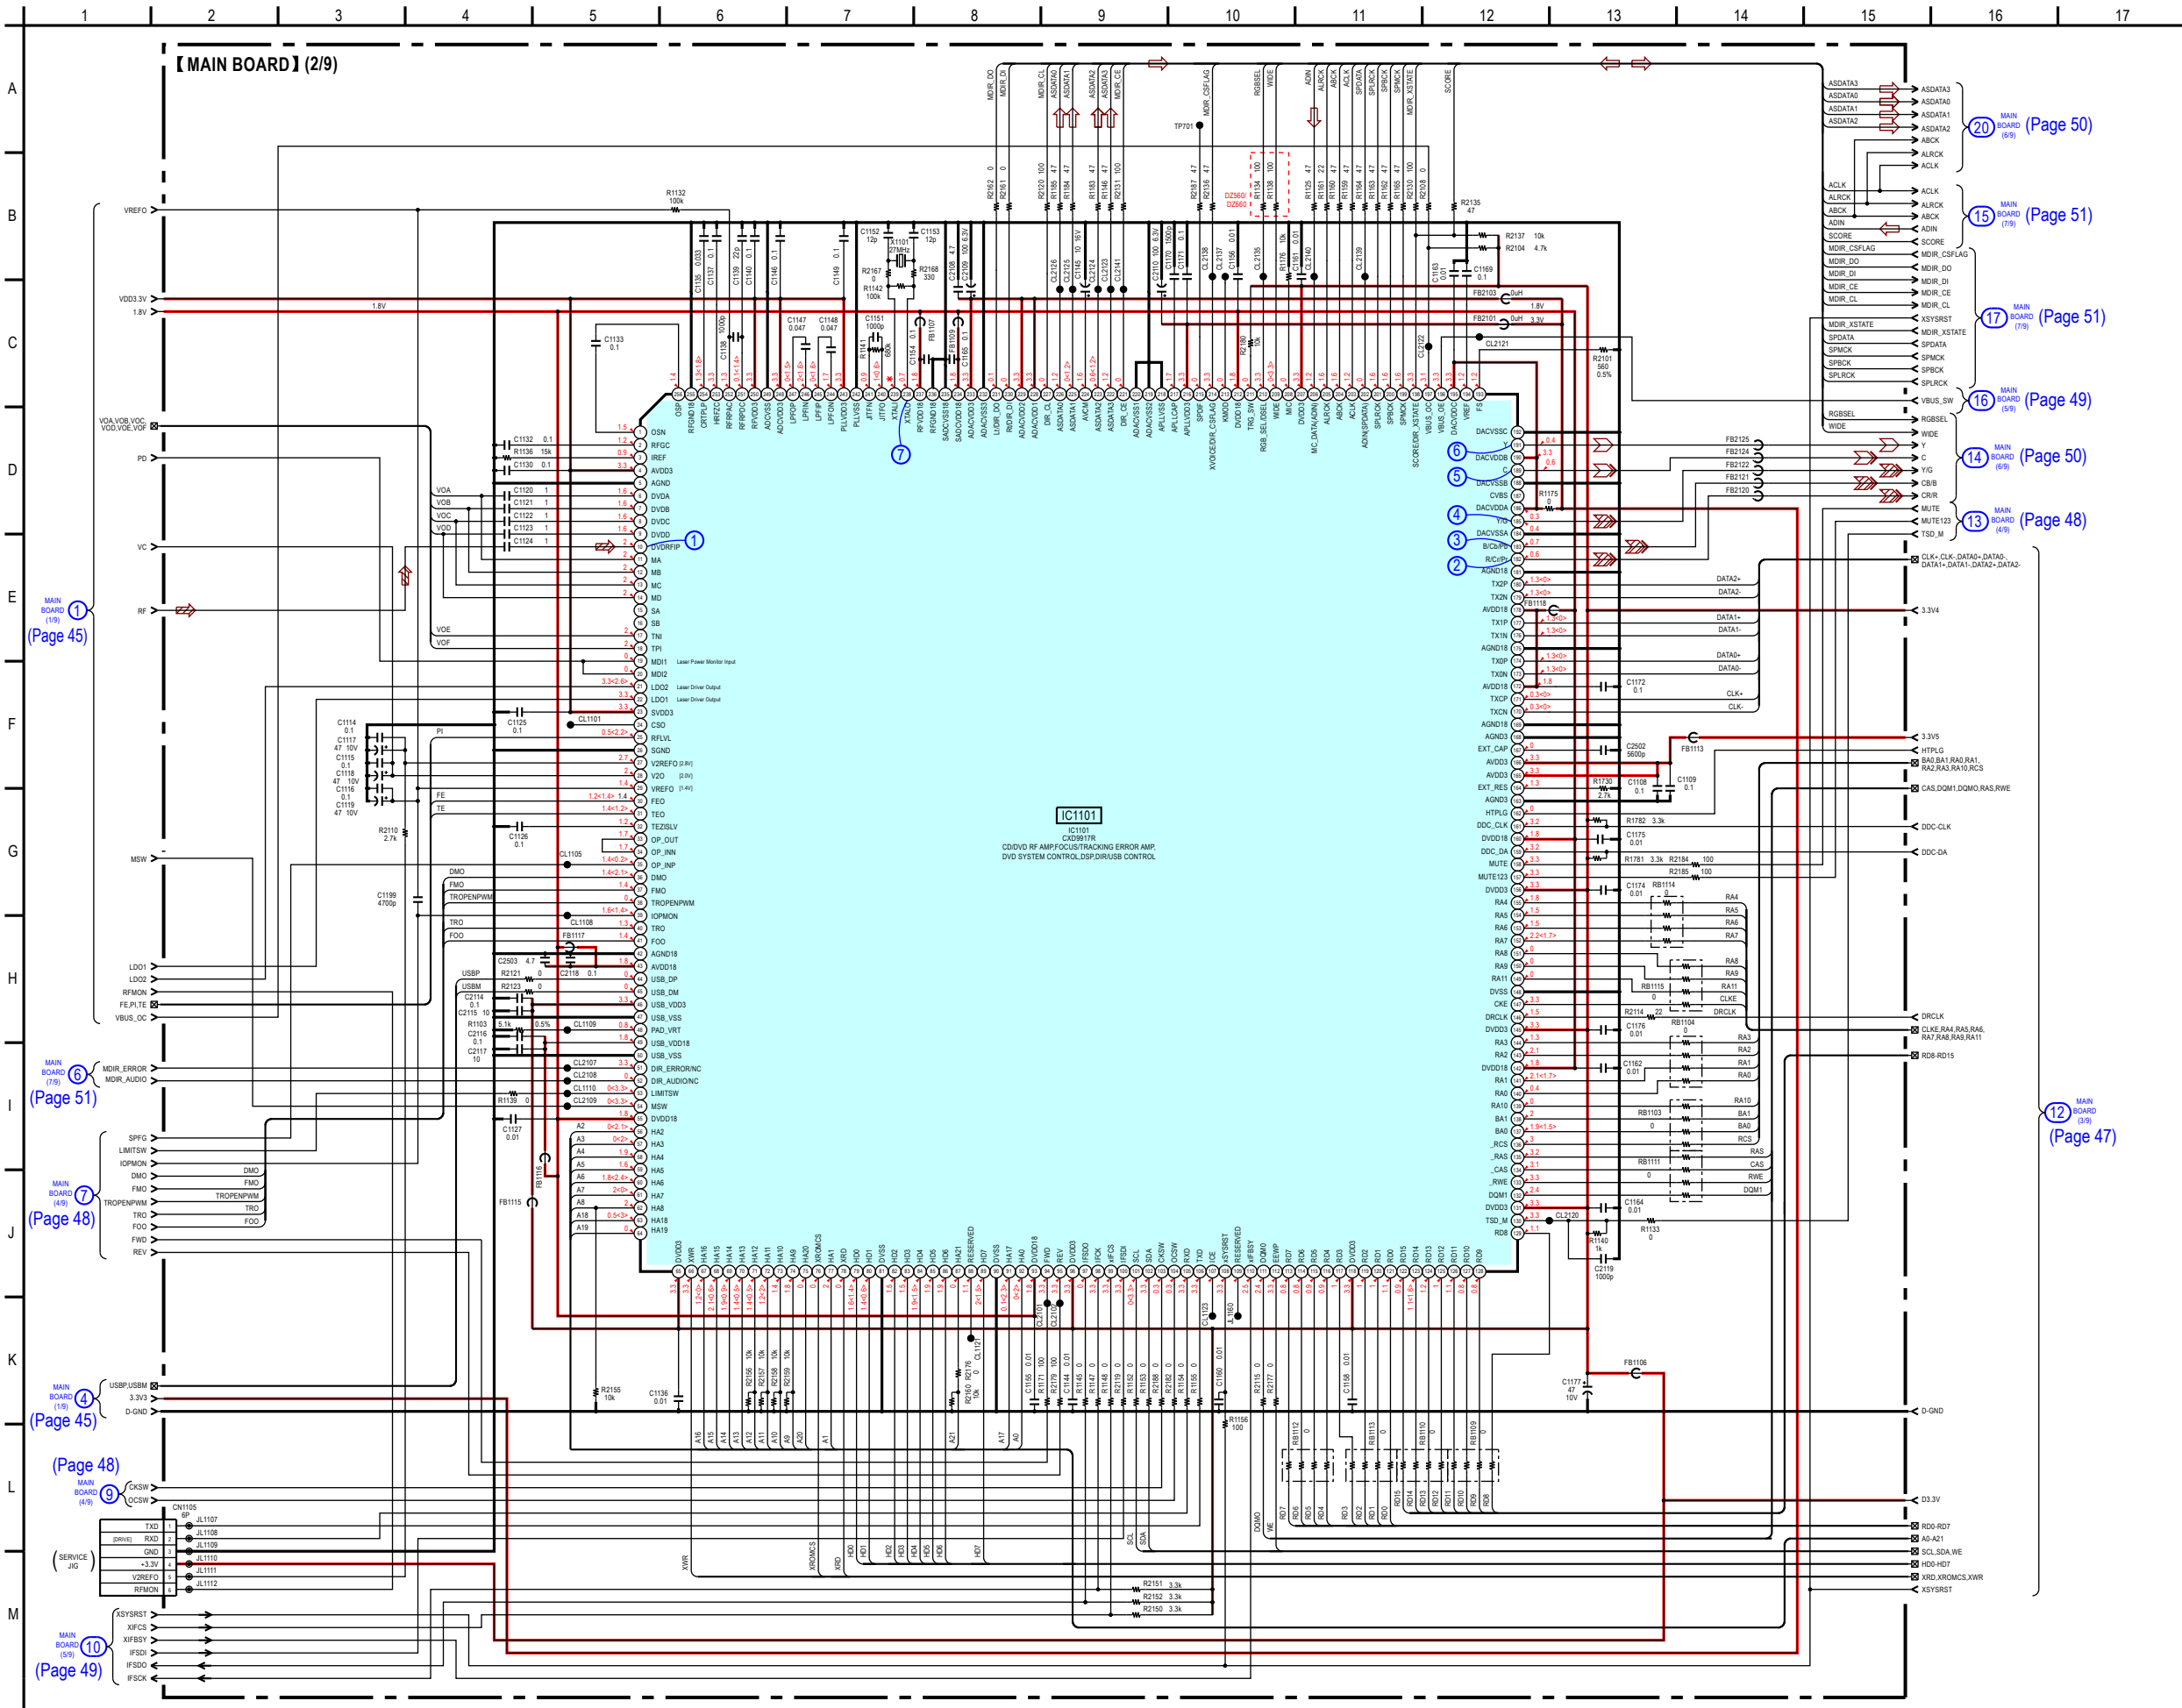


6-10. SCHEMATIC DIAGRAM – MAIN Board (3/9) – • See page 67 for IC Block Diagrams.


When IC1103 on the Main board is damaged, exchange the new Main board for the Main board which IC damaged.

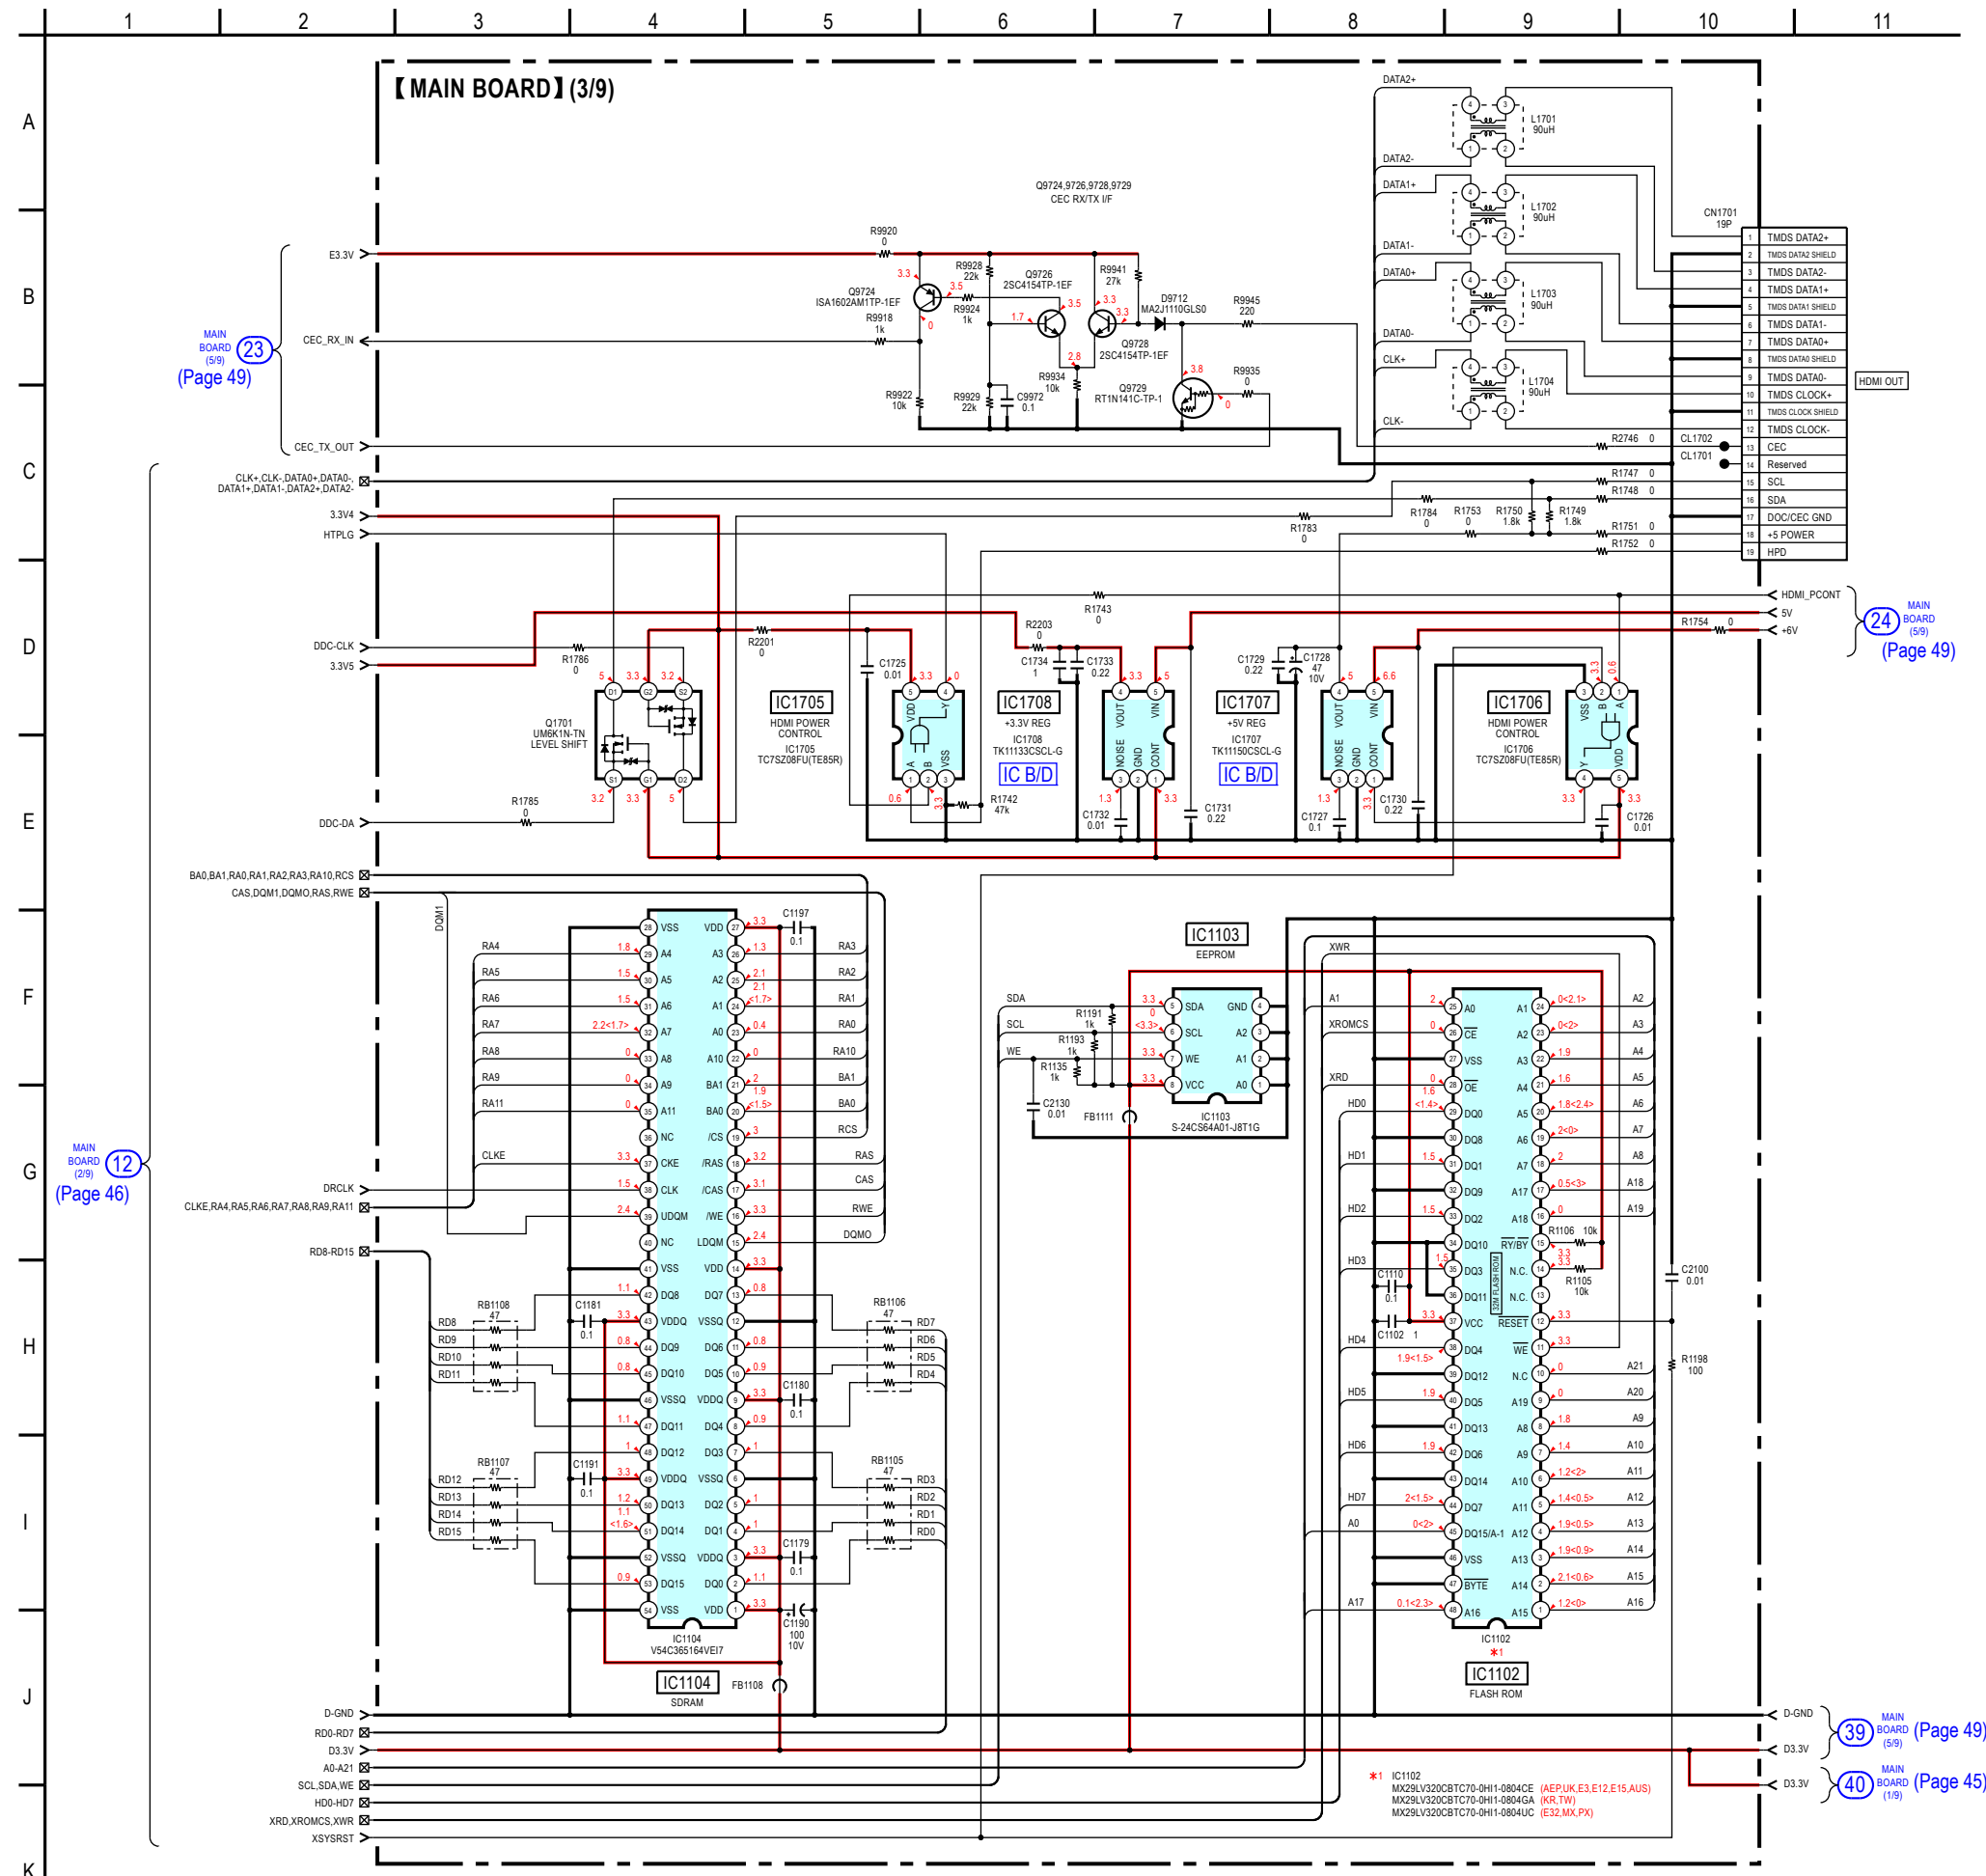


6-11. SCHEMATIC DIAGRAM – MAIN Board (4/9), MS-203 Board – • See page 66 for IC Block Diagram.

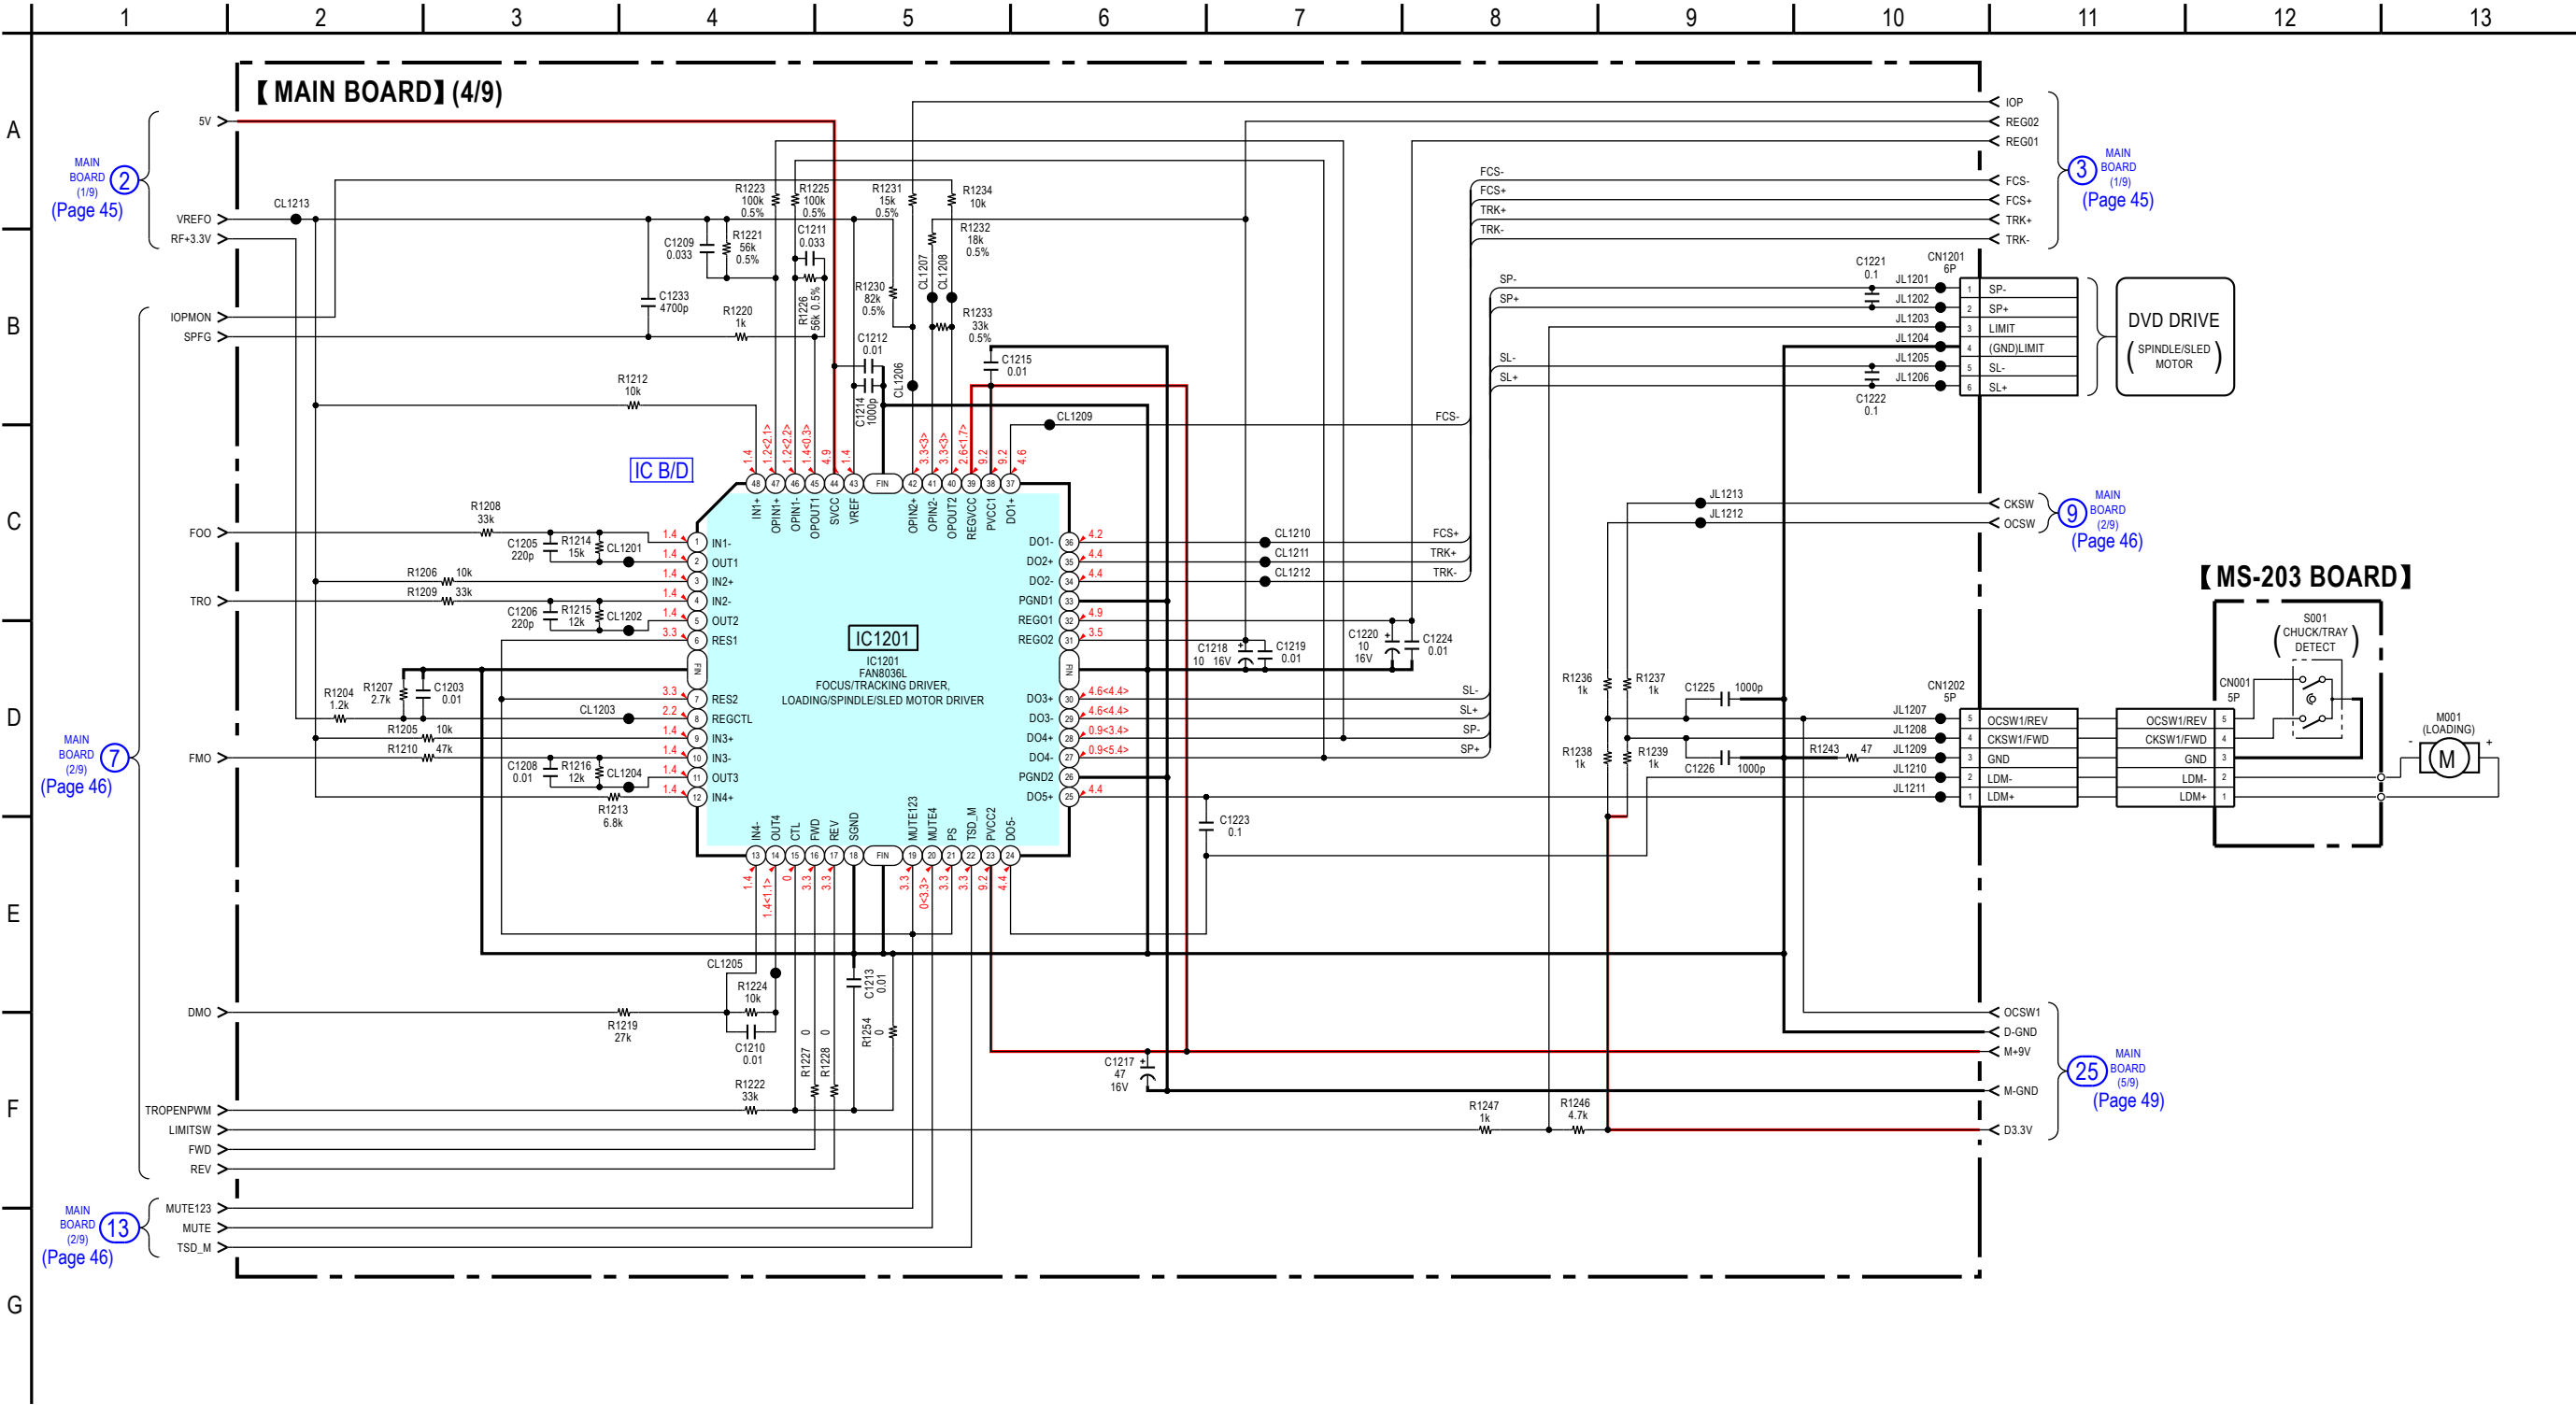


6-13. SCHEMATIC DIAGRAM – MAIN Board (6/9) – • See page 71 for IC Block Diagram.

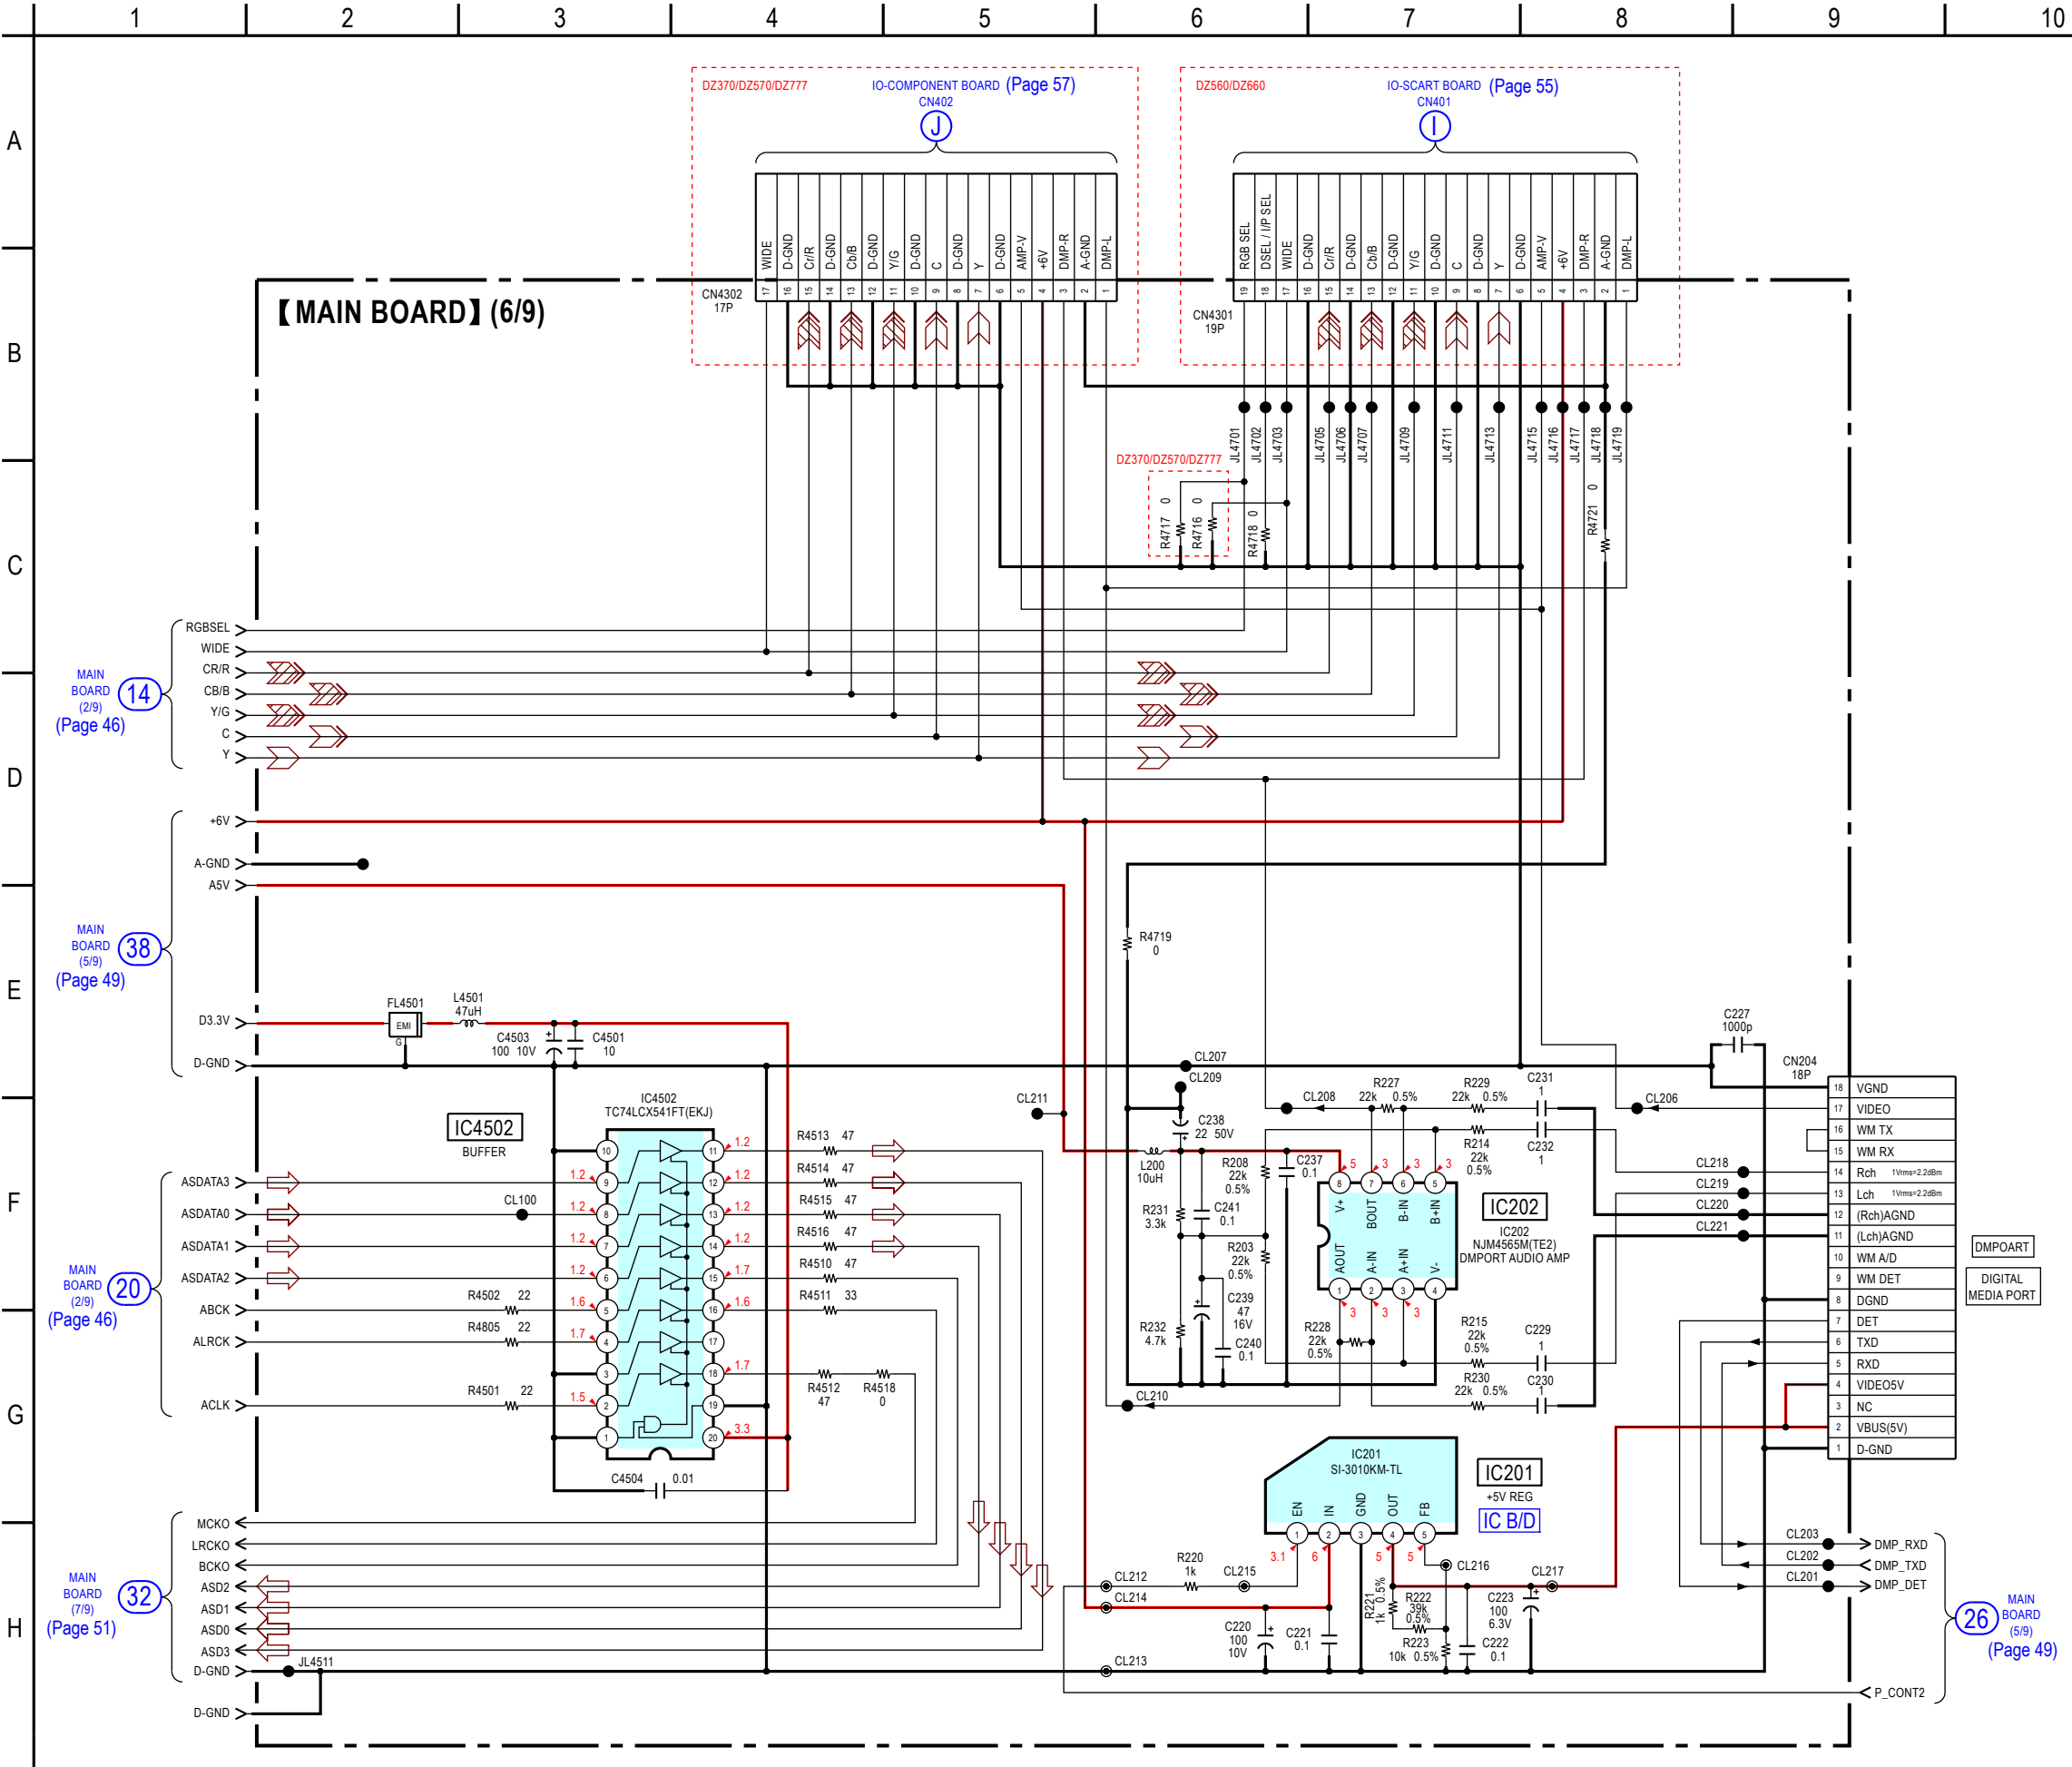


6-16. SCHEMATIC DIAGRAM – MAIN Board (9/9) – • See page 37 for waveforms. • See page 66, 67, 69 for IC Block Diagrams.

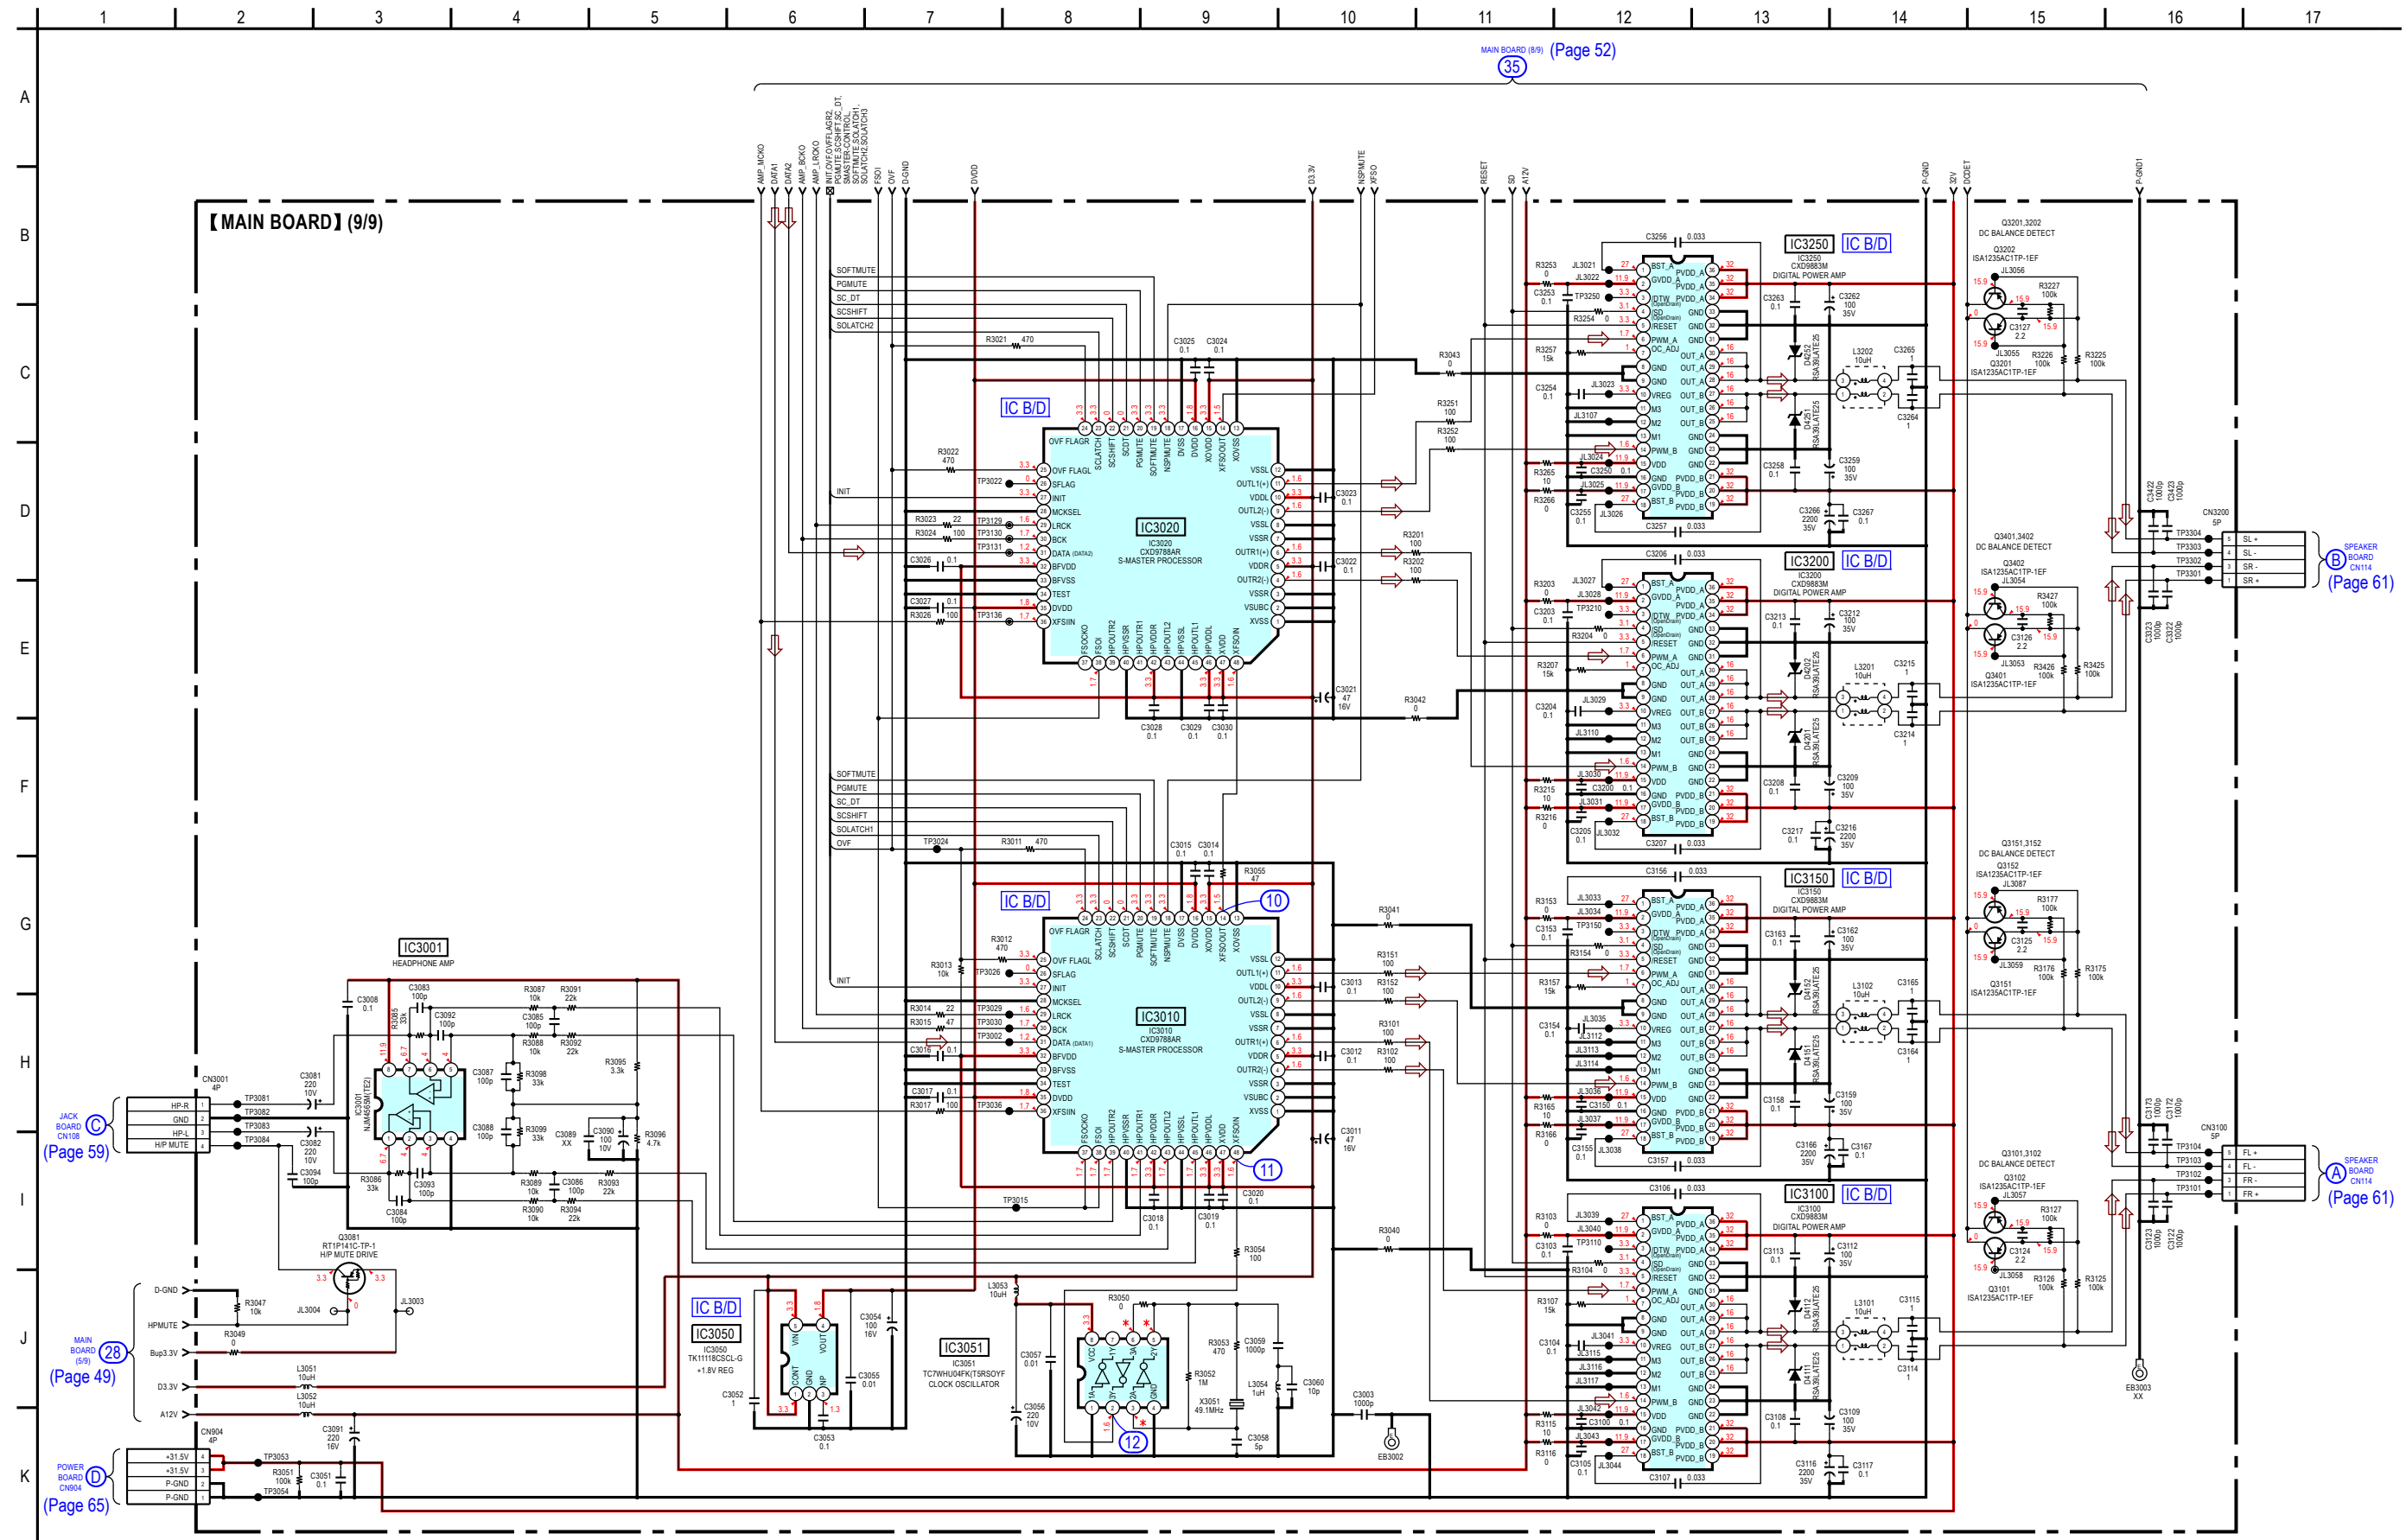


6-17. PRINTED WIRING BOARD – IO-SCART Board (DZ560/DZ660) – • See page 36 for Circuit Boards Location. •  : Uses unleaded solder.

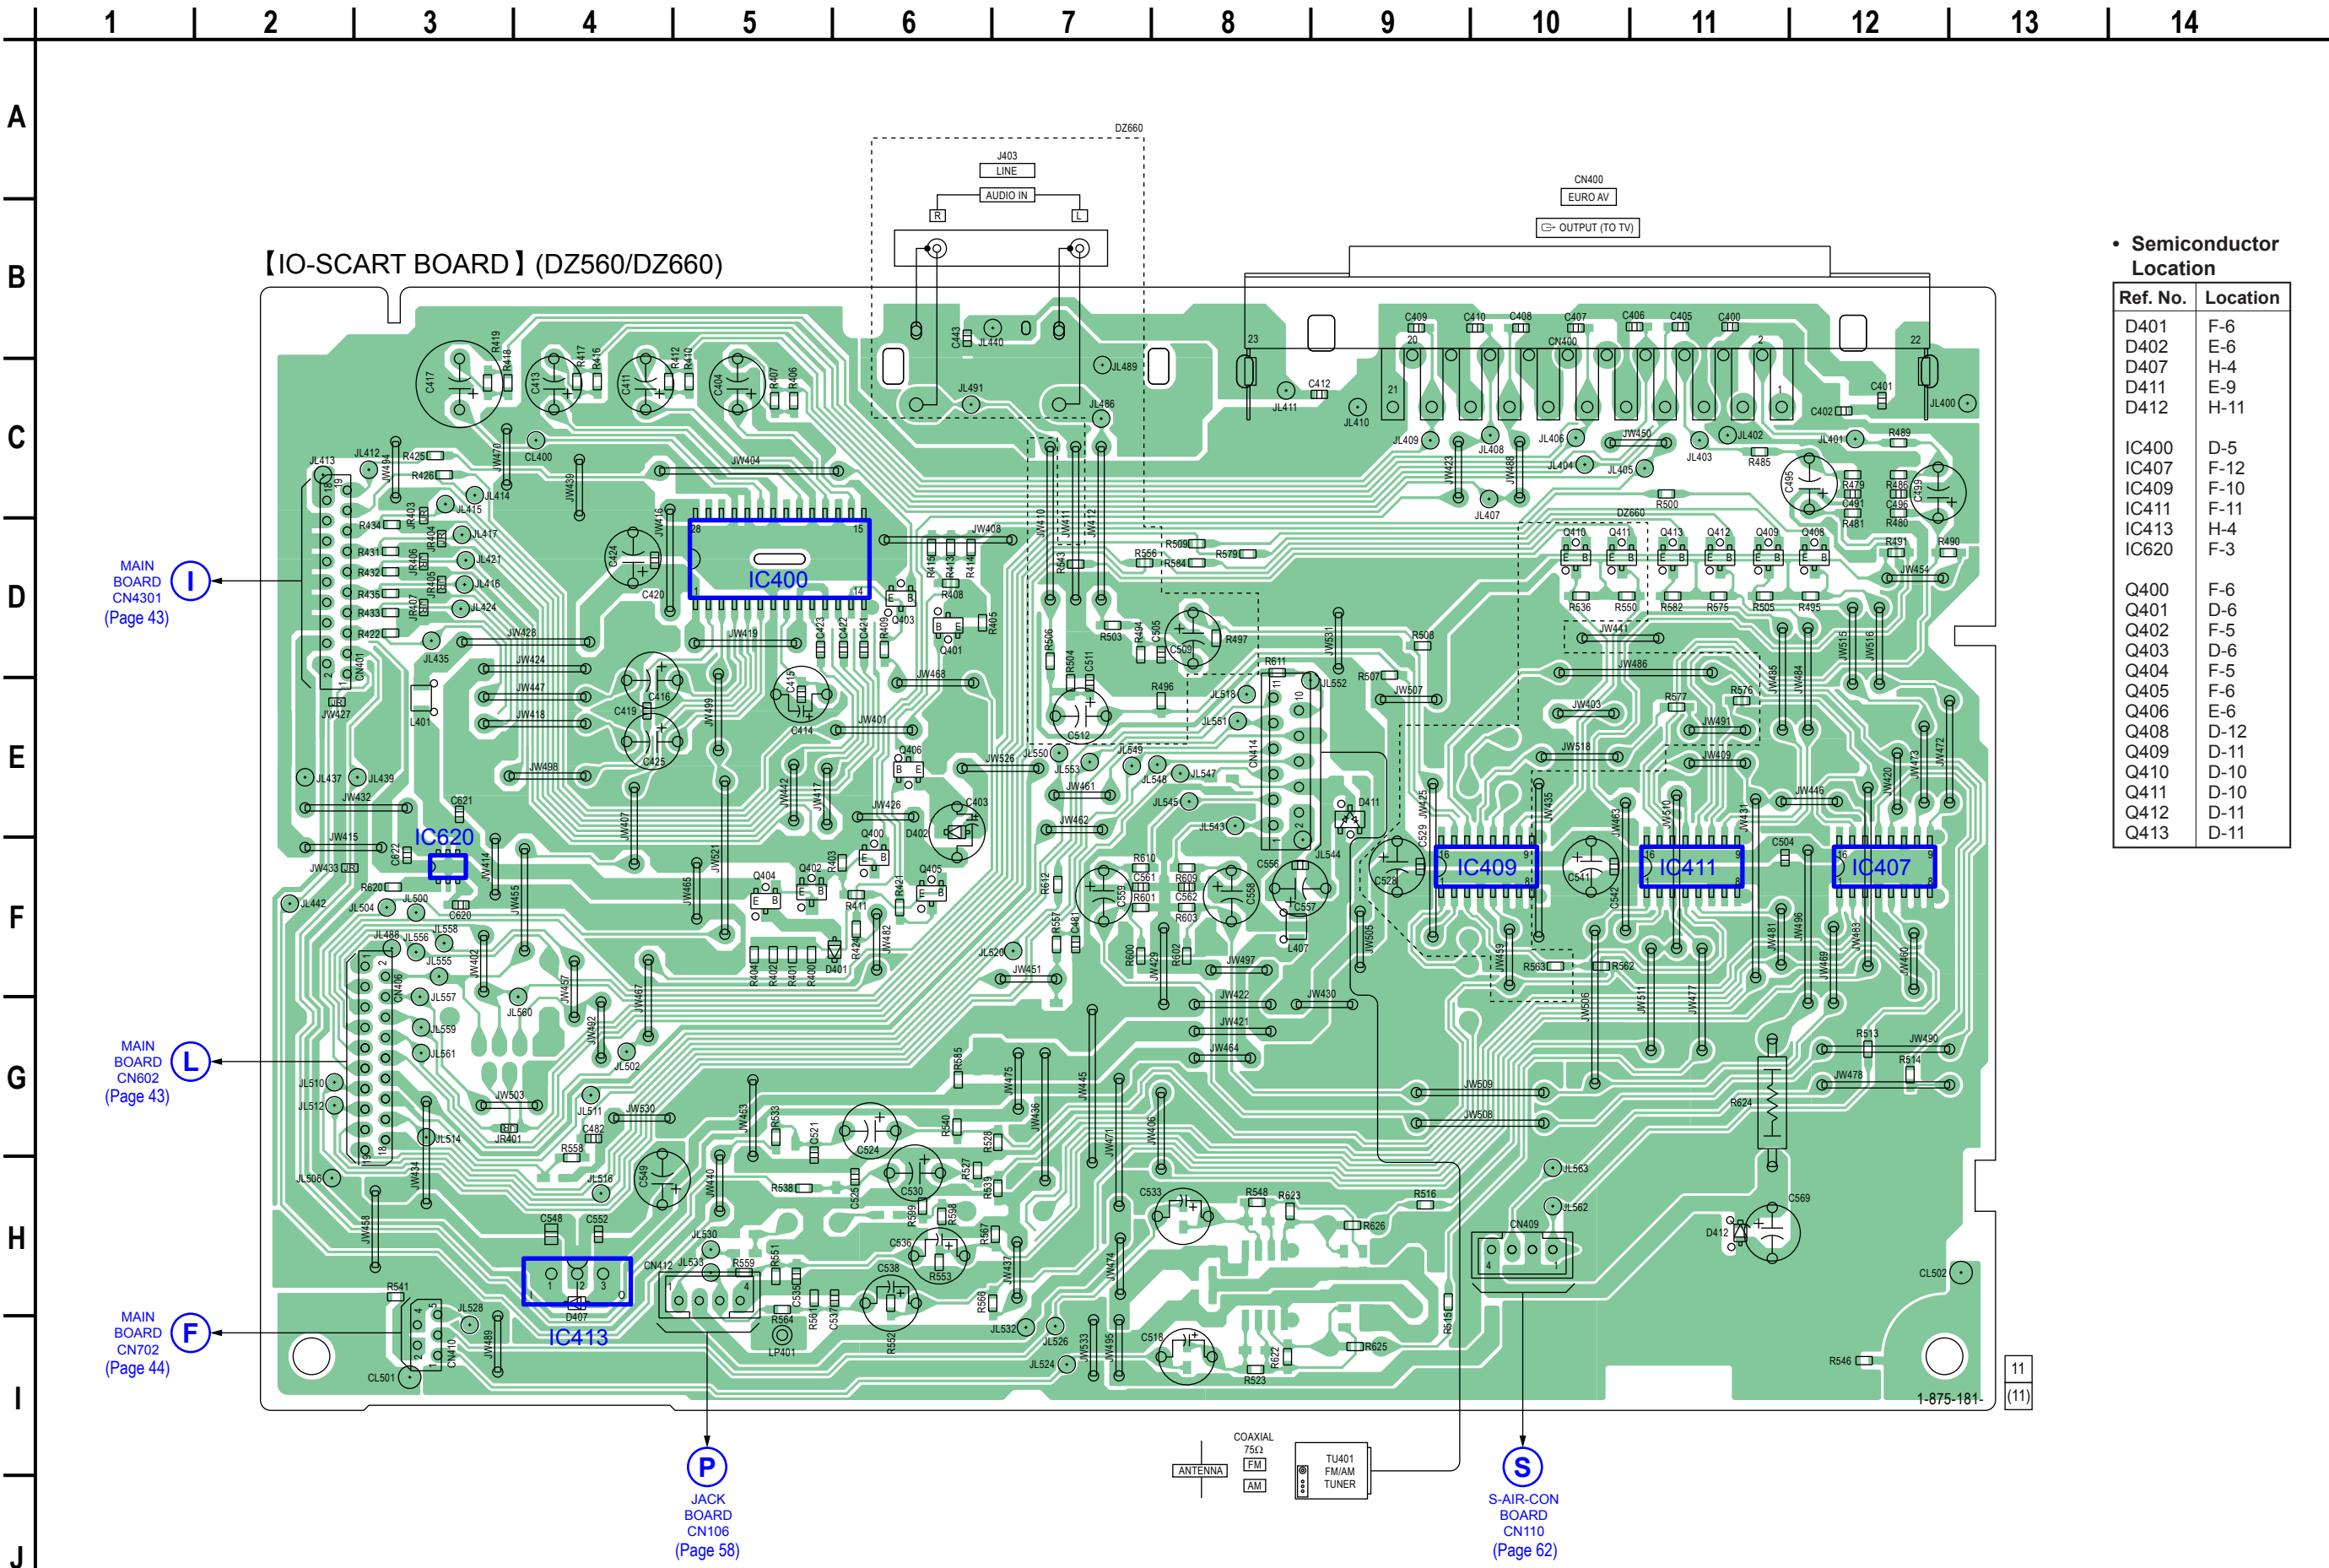

6-18. SCHEMATIC DIAGRAM – IO-SCART Board (DZ560/DZ660) – • See page 37 for waveforms. • See page 70 for IC Block Diagrams.

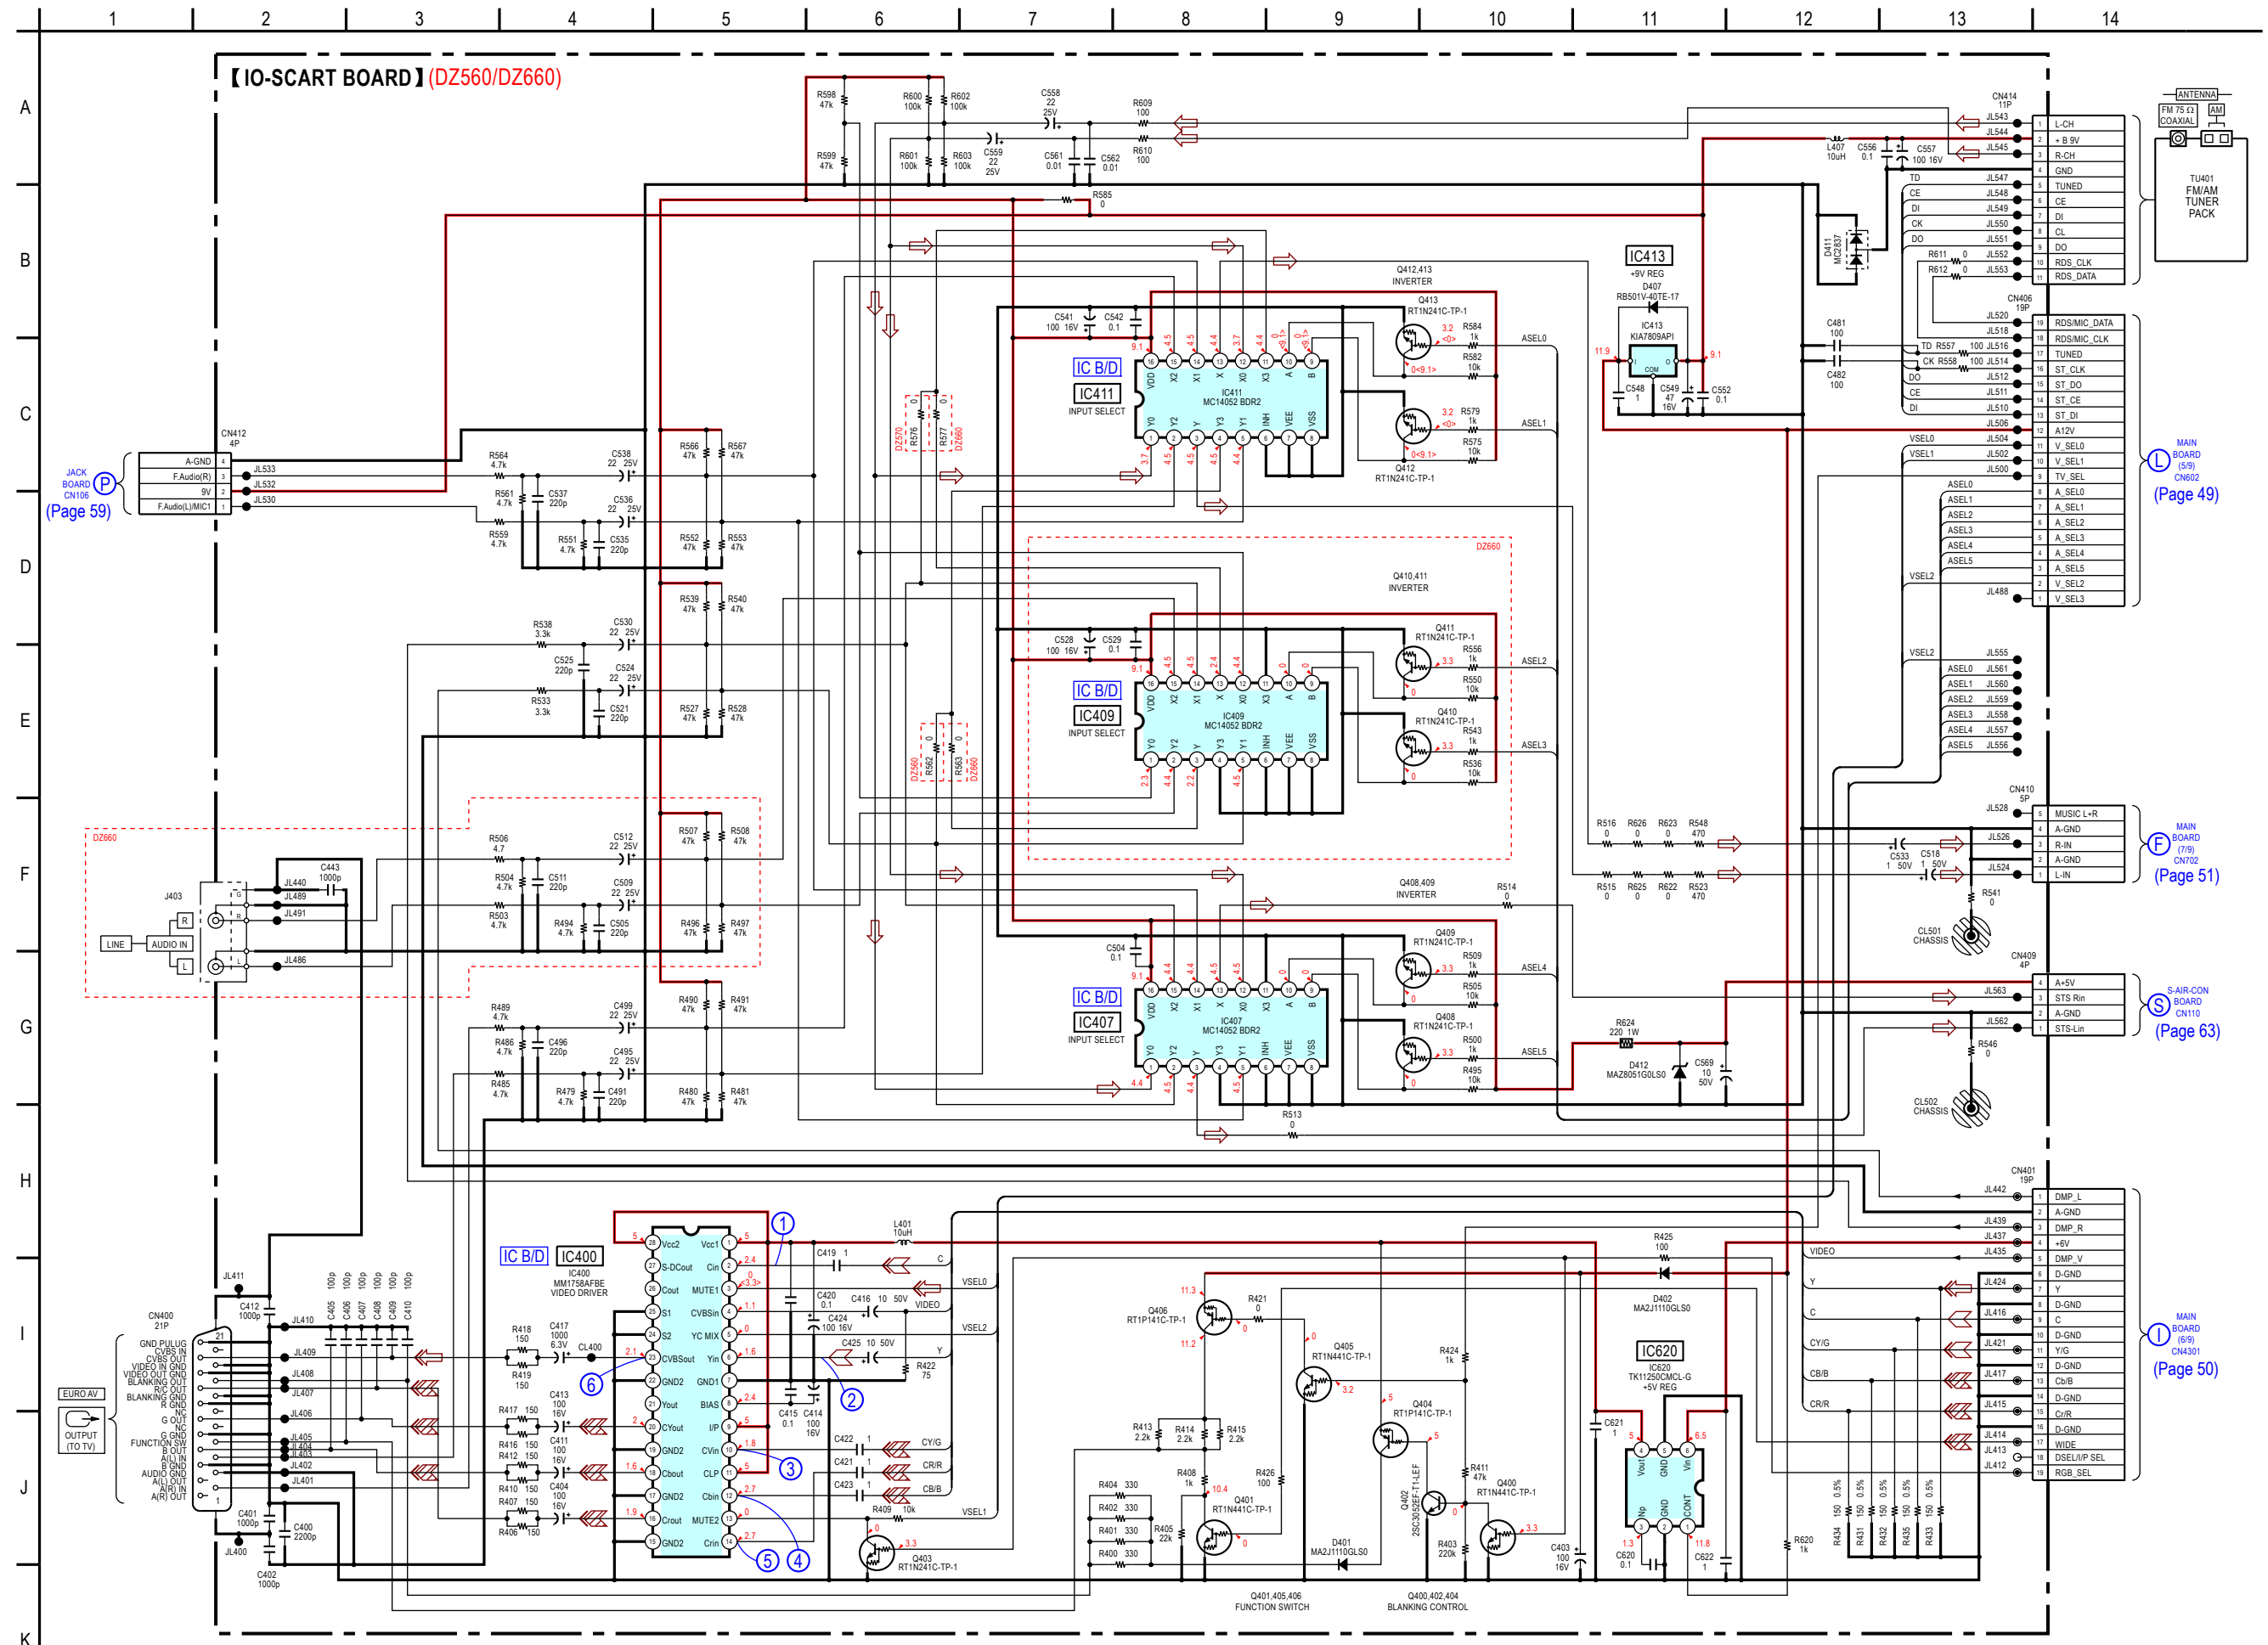


6-19. PRINTED WIRING BOARD – IO-COMPONENT Board (DZ370/DZ570/DZ777) – • See page 36 for Circuit Boards Location. •  : Uses unleaded solder.

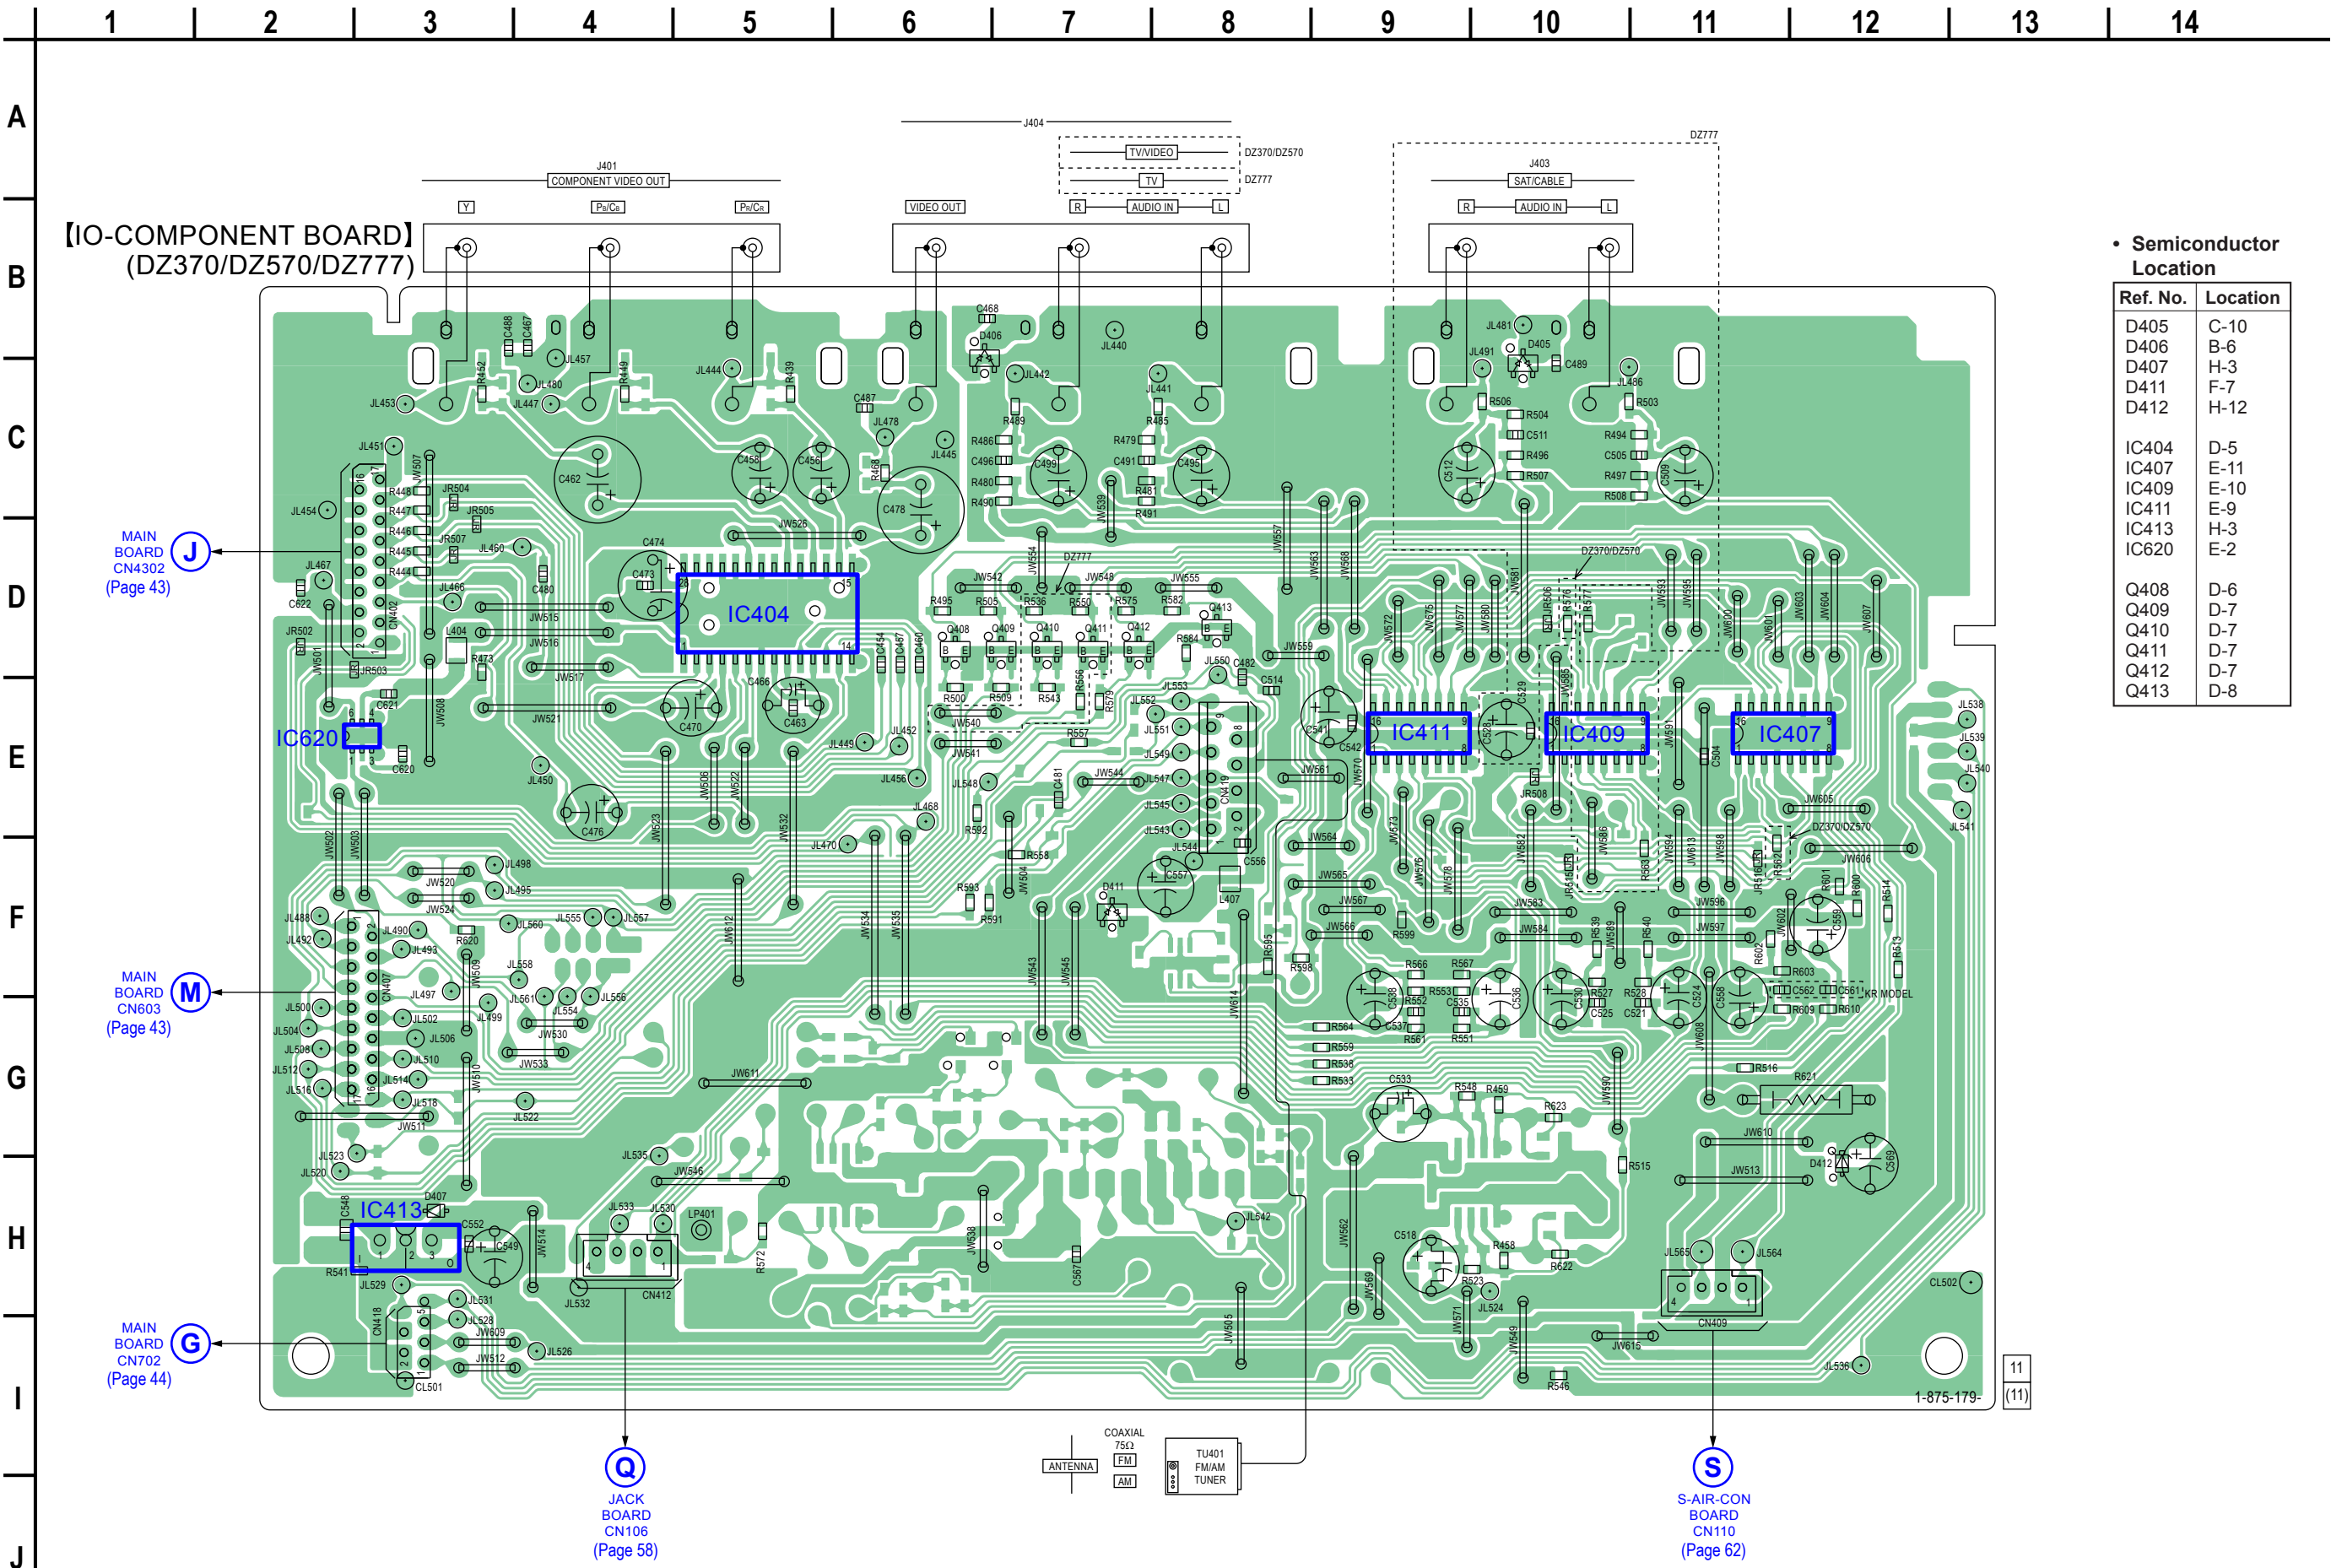


• Semiconductor Location

Ref. No.	Location
D405	C-10
D406	B-6
D407	H-3
D411	F-7
D412	H-12
IC404	D-5
IC407	E-11
IC409	E-10
IC411	E-9
IC413	H-3
IC620	E-2
Q408	D-6
Q409	D-7
Q410	D-7
Q411	D-7
Q412	D-7
Q413	D-8

6-20. SCHEMATIC DIAGRAM – IO-COMPONENT Board (DZ370/DZ570/DZ777) – • See page 37 for waveforms. • See page 70 for IC Block Diagrams.

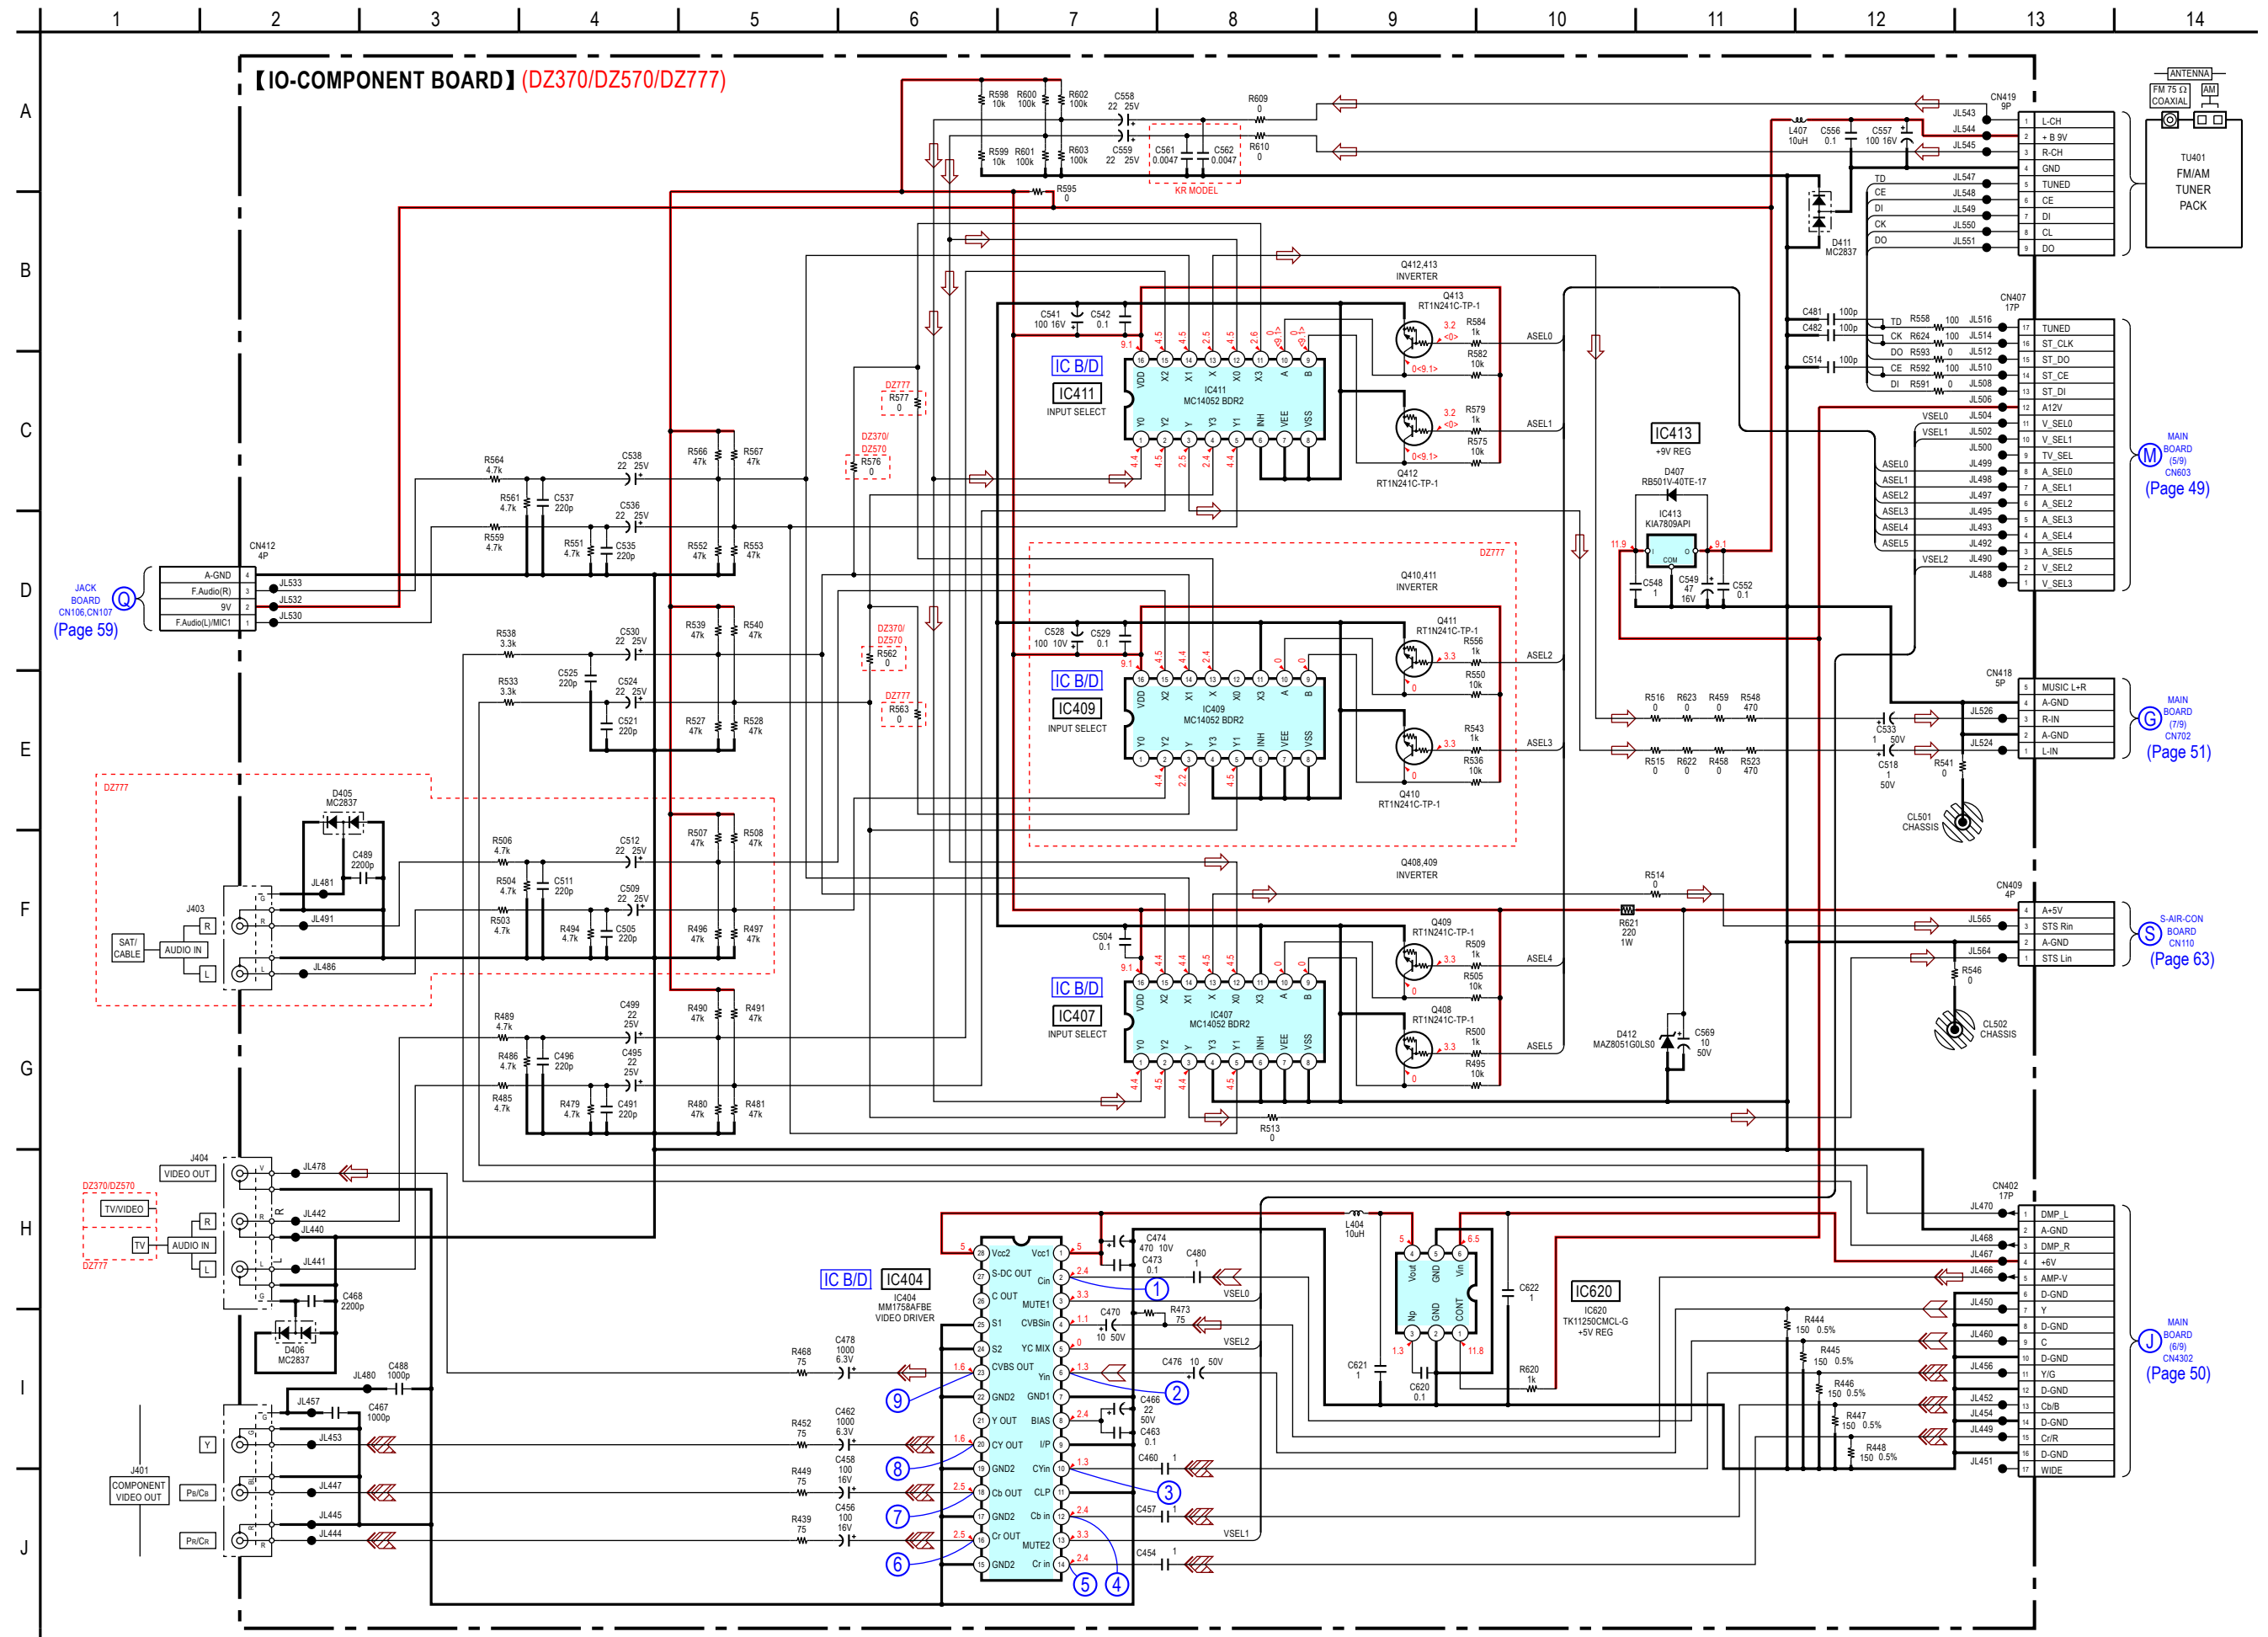


6-21. PRINTED WIRING BOARDS – JACK, P-SW Board – • See page 36 for Circuit Boards Location. • : Uses unleaded solder.

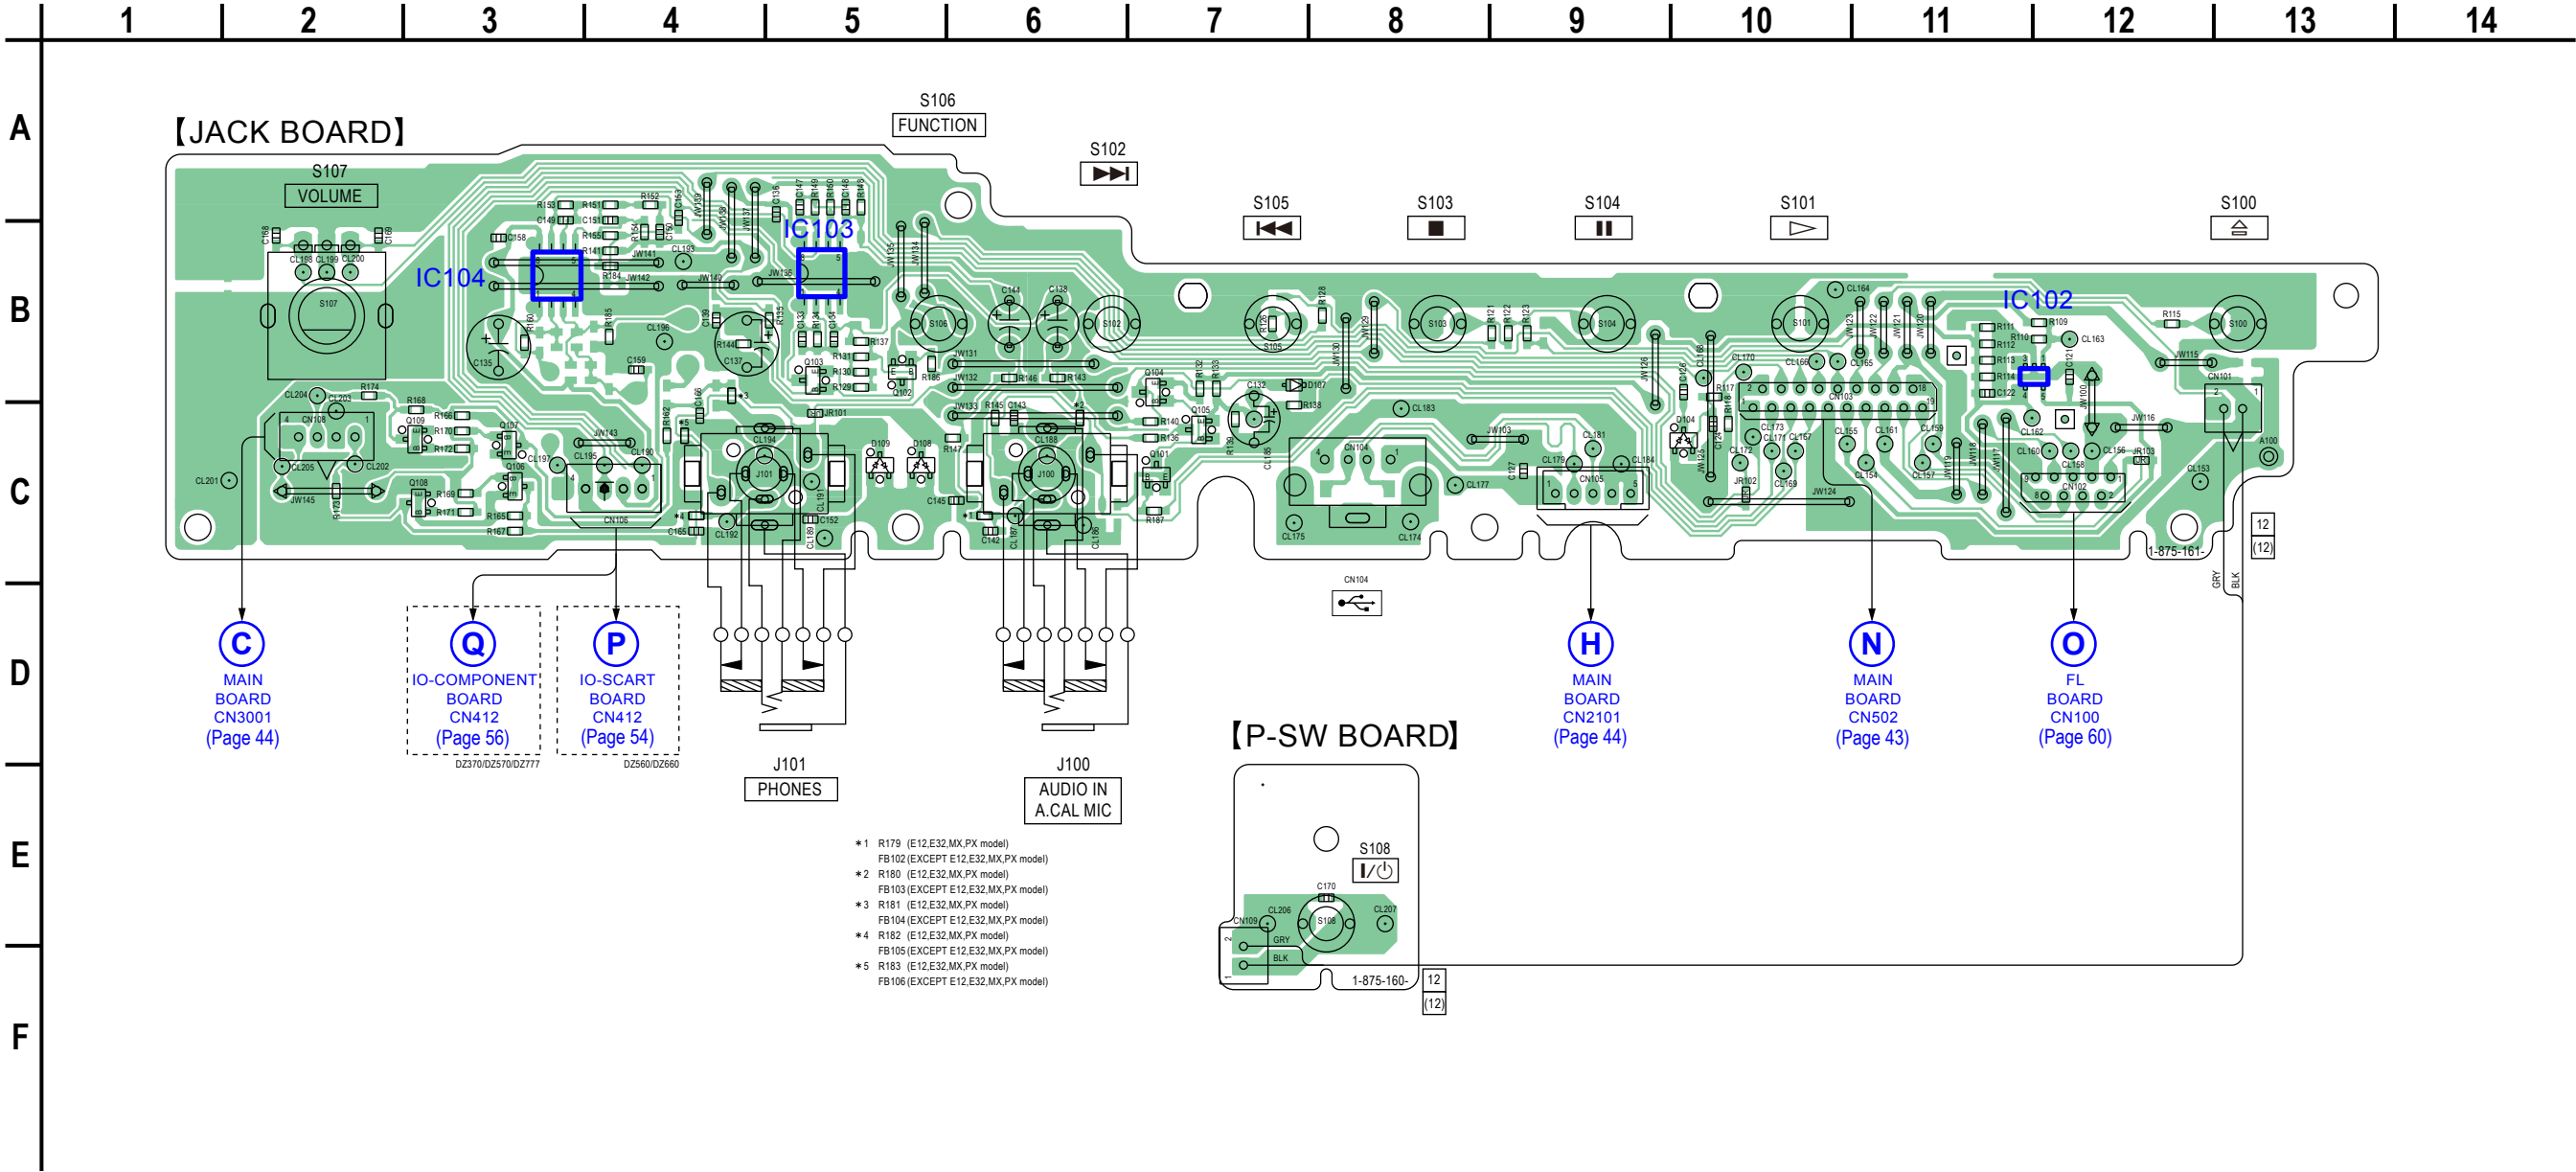


• Semiconductor Location

Ref. No.	Location
D104	C-10
D107	B-8
D108	C-5
D109	C-5
IC102	B-12
IC103	B-5
IC104	B-3
Q101	C-7
Q102	B-5
Q103	B-5
Q104	B-7
Q105	C-7
Q106	C-3
Q107	C-3
Q108	C-3
Q109	C-3

6-22. SCHEMATIC DIAGRAM – JACK, P-SW Board –

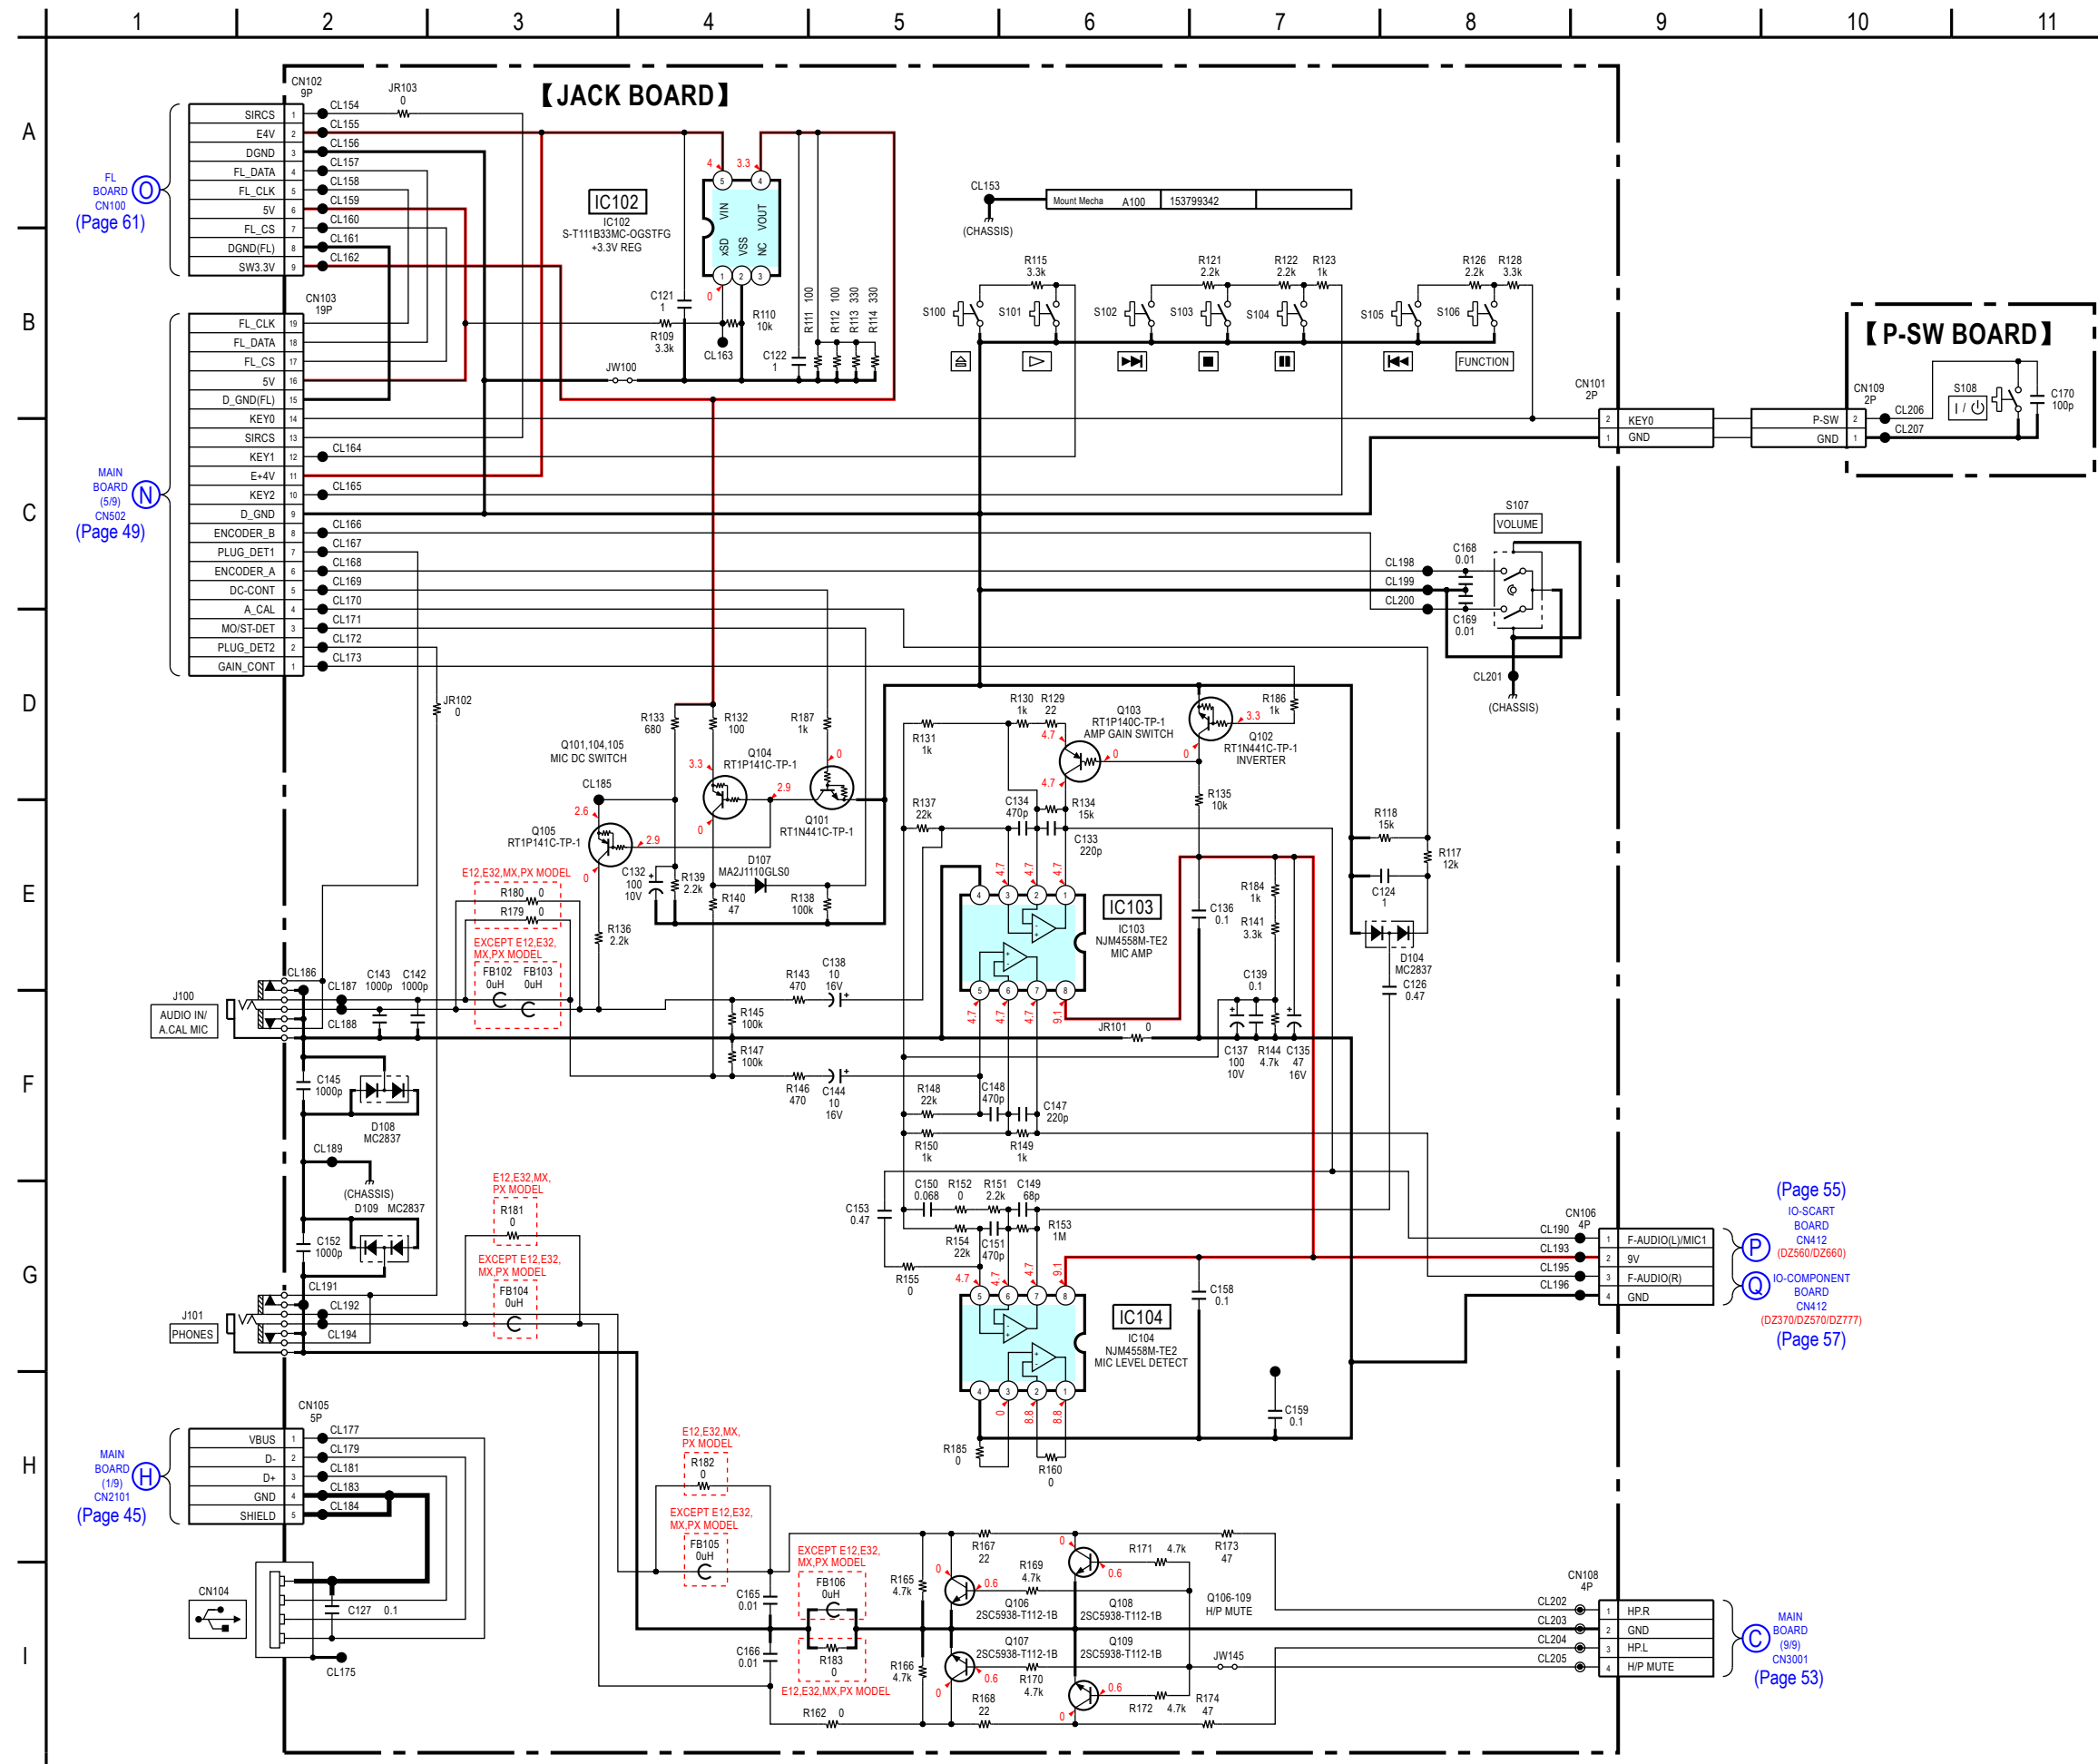


6-23. PRINTED WIRING BOARDS – FL, MS-203, SPEAKER Board – • See page 36 for Circuit Boards Location. • : Uses unleaded solder.

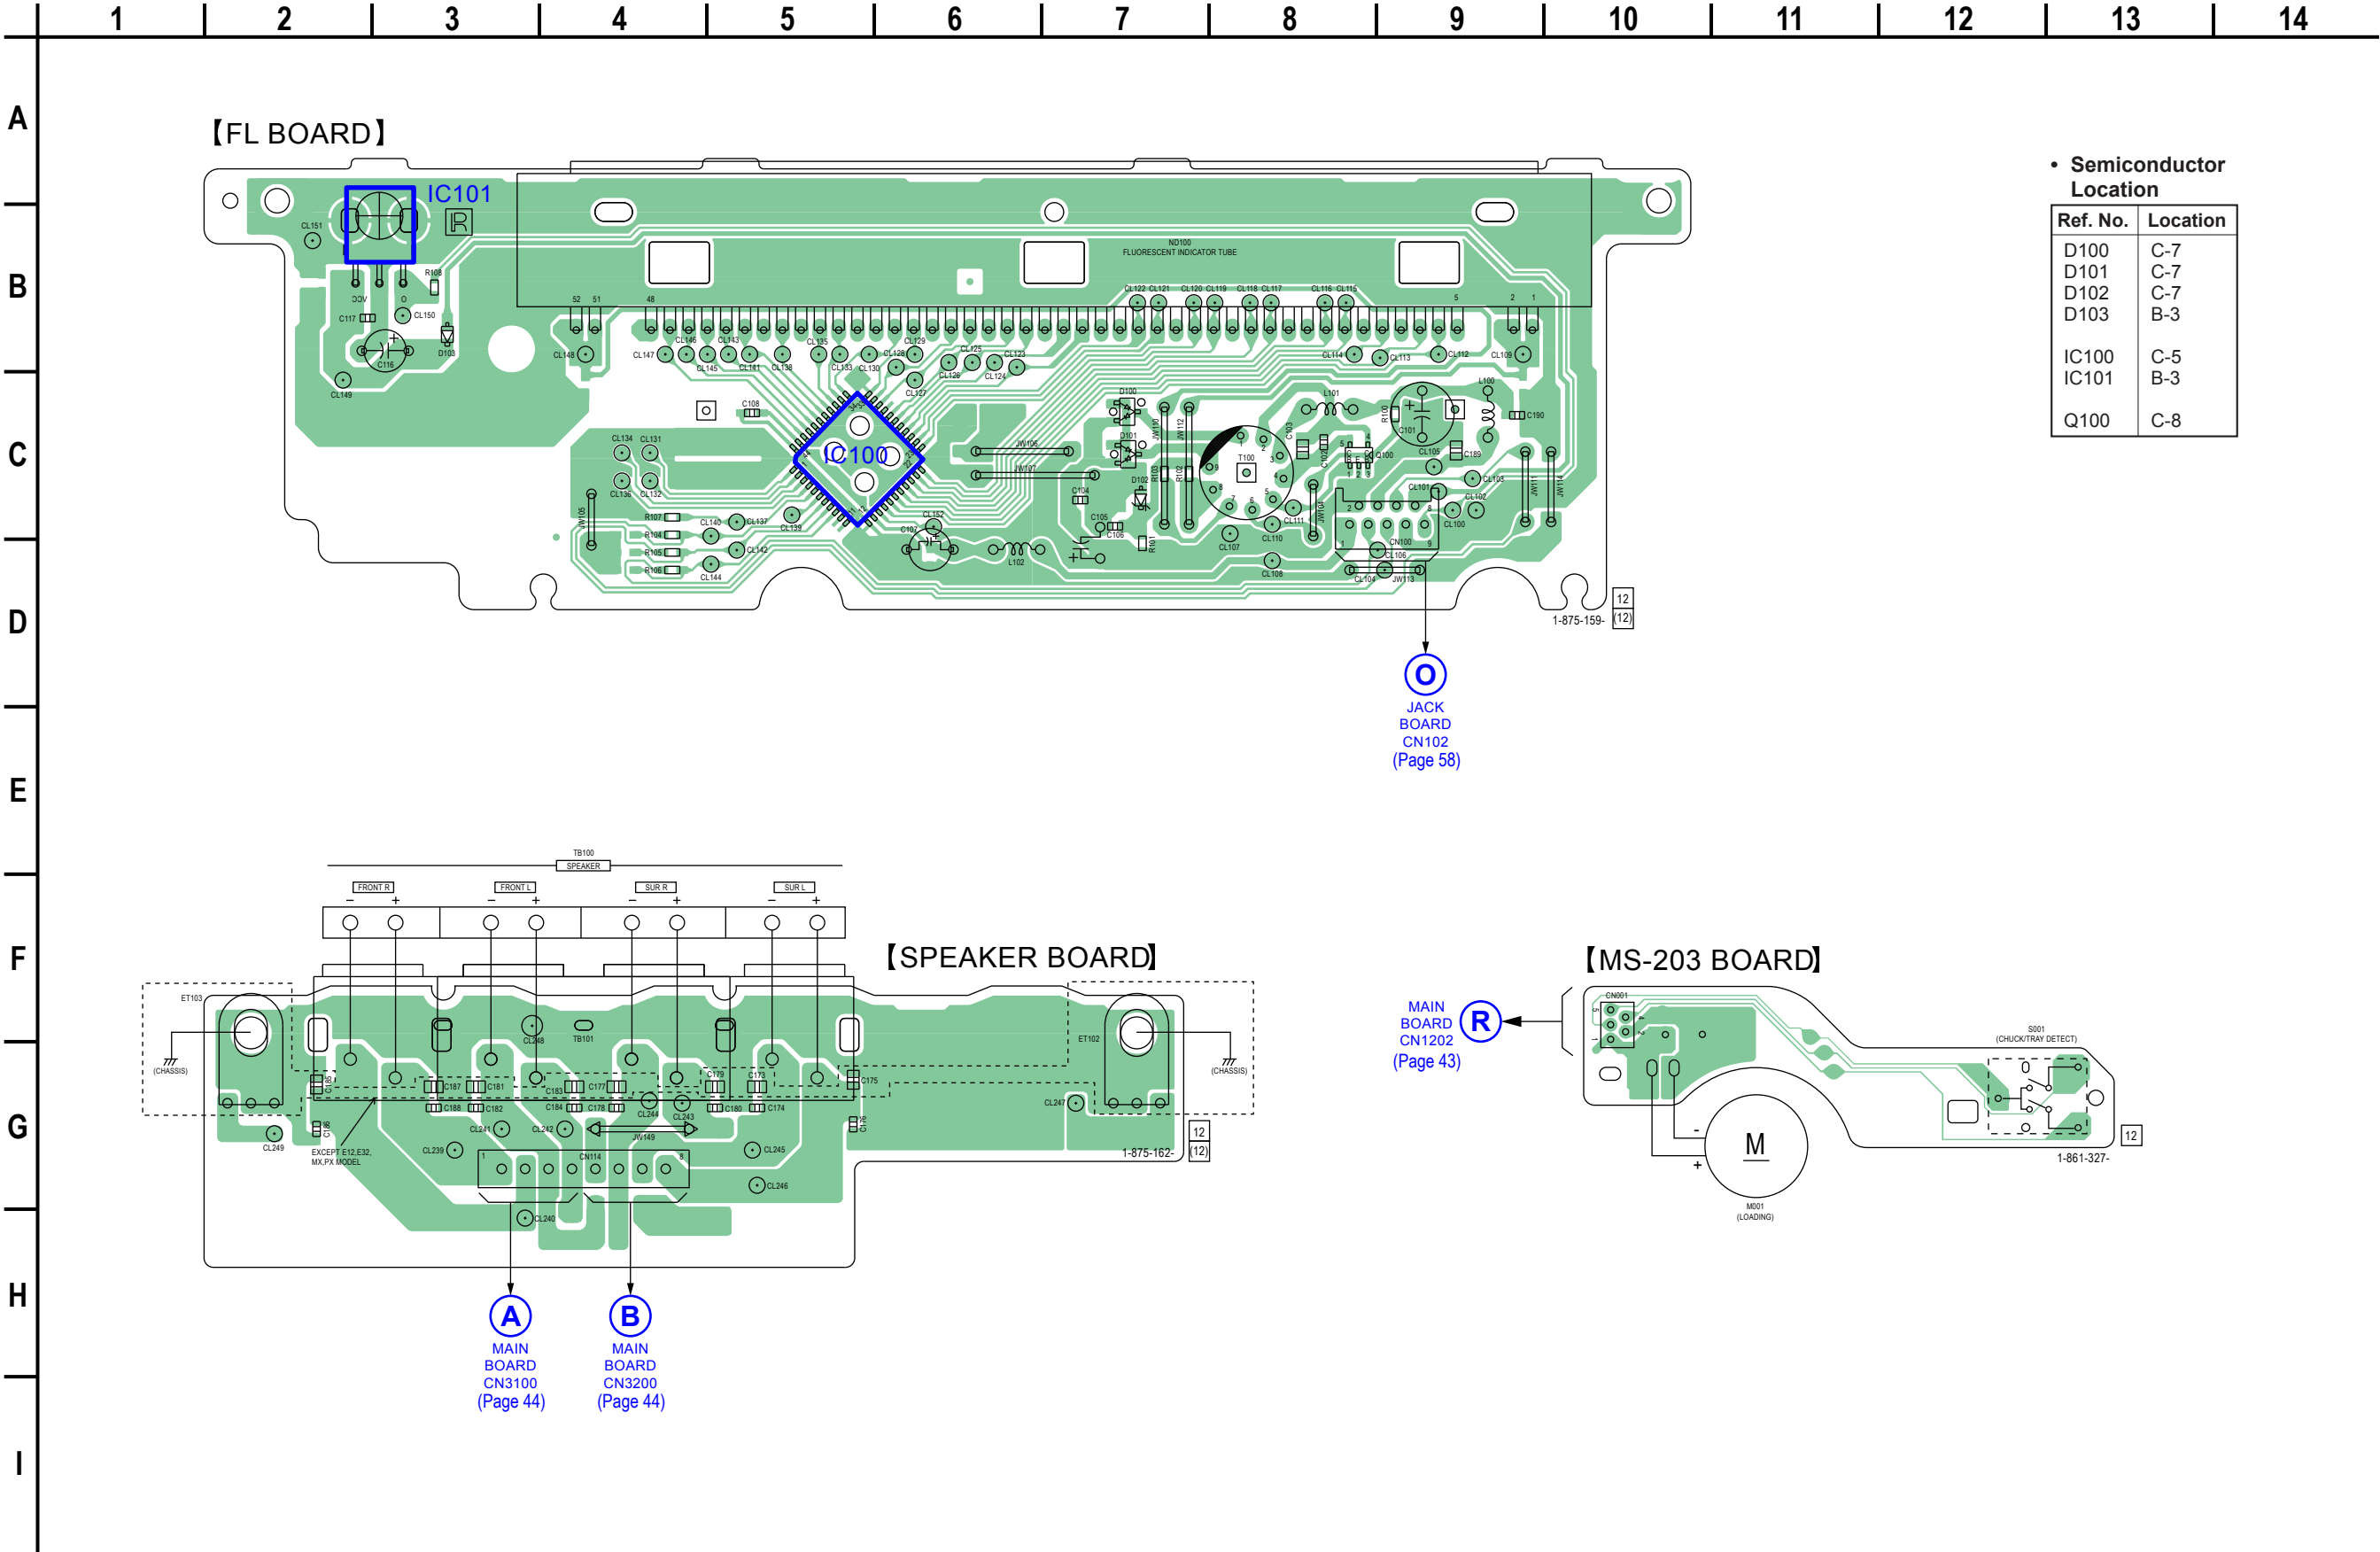


• Semiconductor Location

Ref. No.	Location
D100	C-7
D101	C-7
D102	C-7
D103	B-3
IC100	C-5
IC101	B-3
Q100	C-8


6-24. SCHEMATIC DIAGRAM – FL, SPEAKER Board –

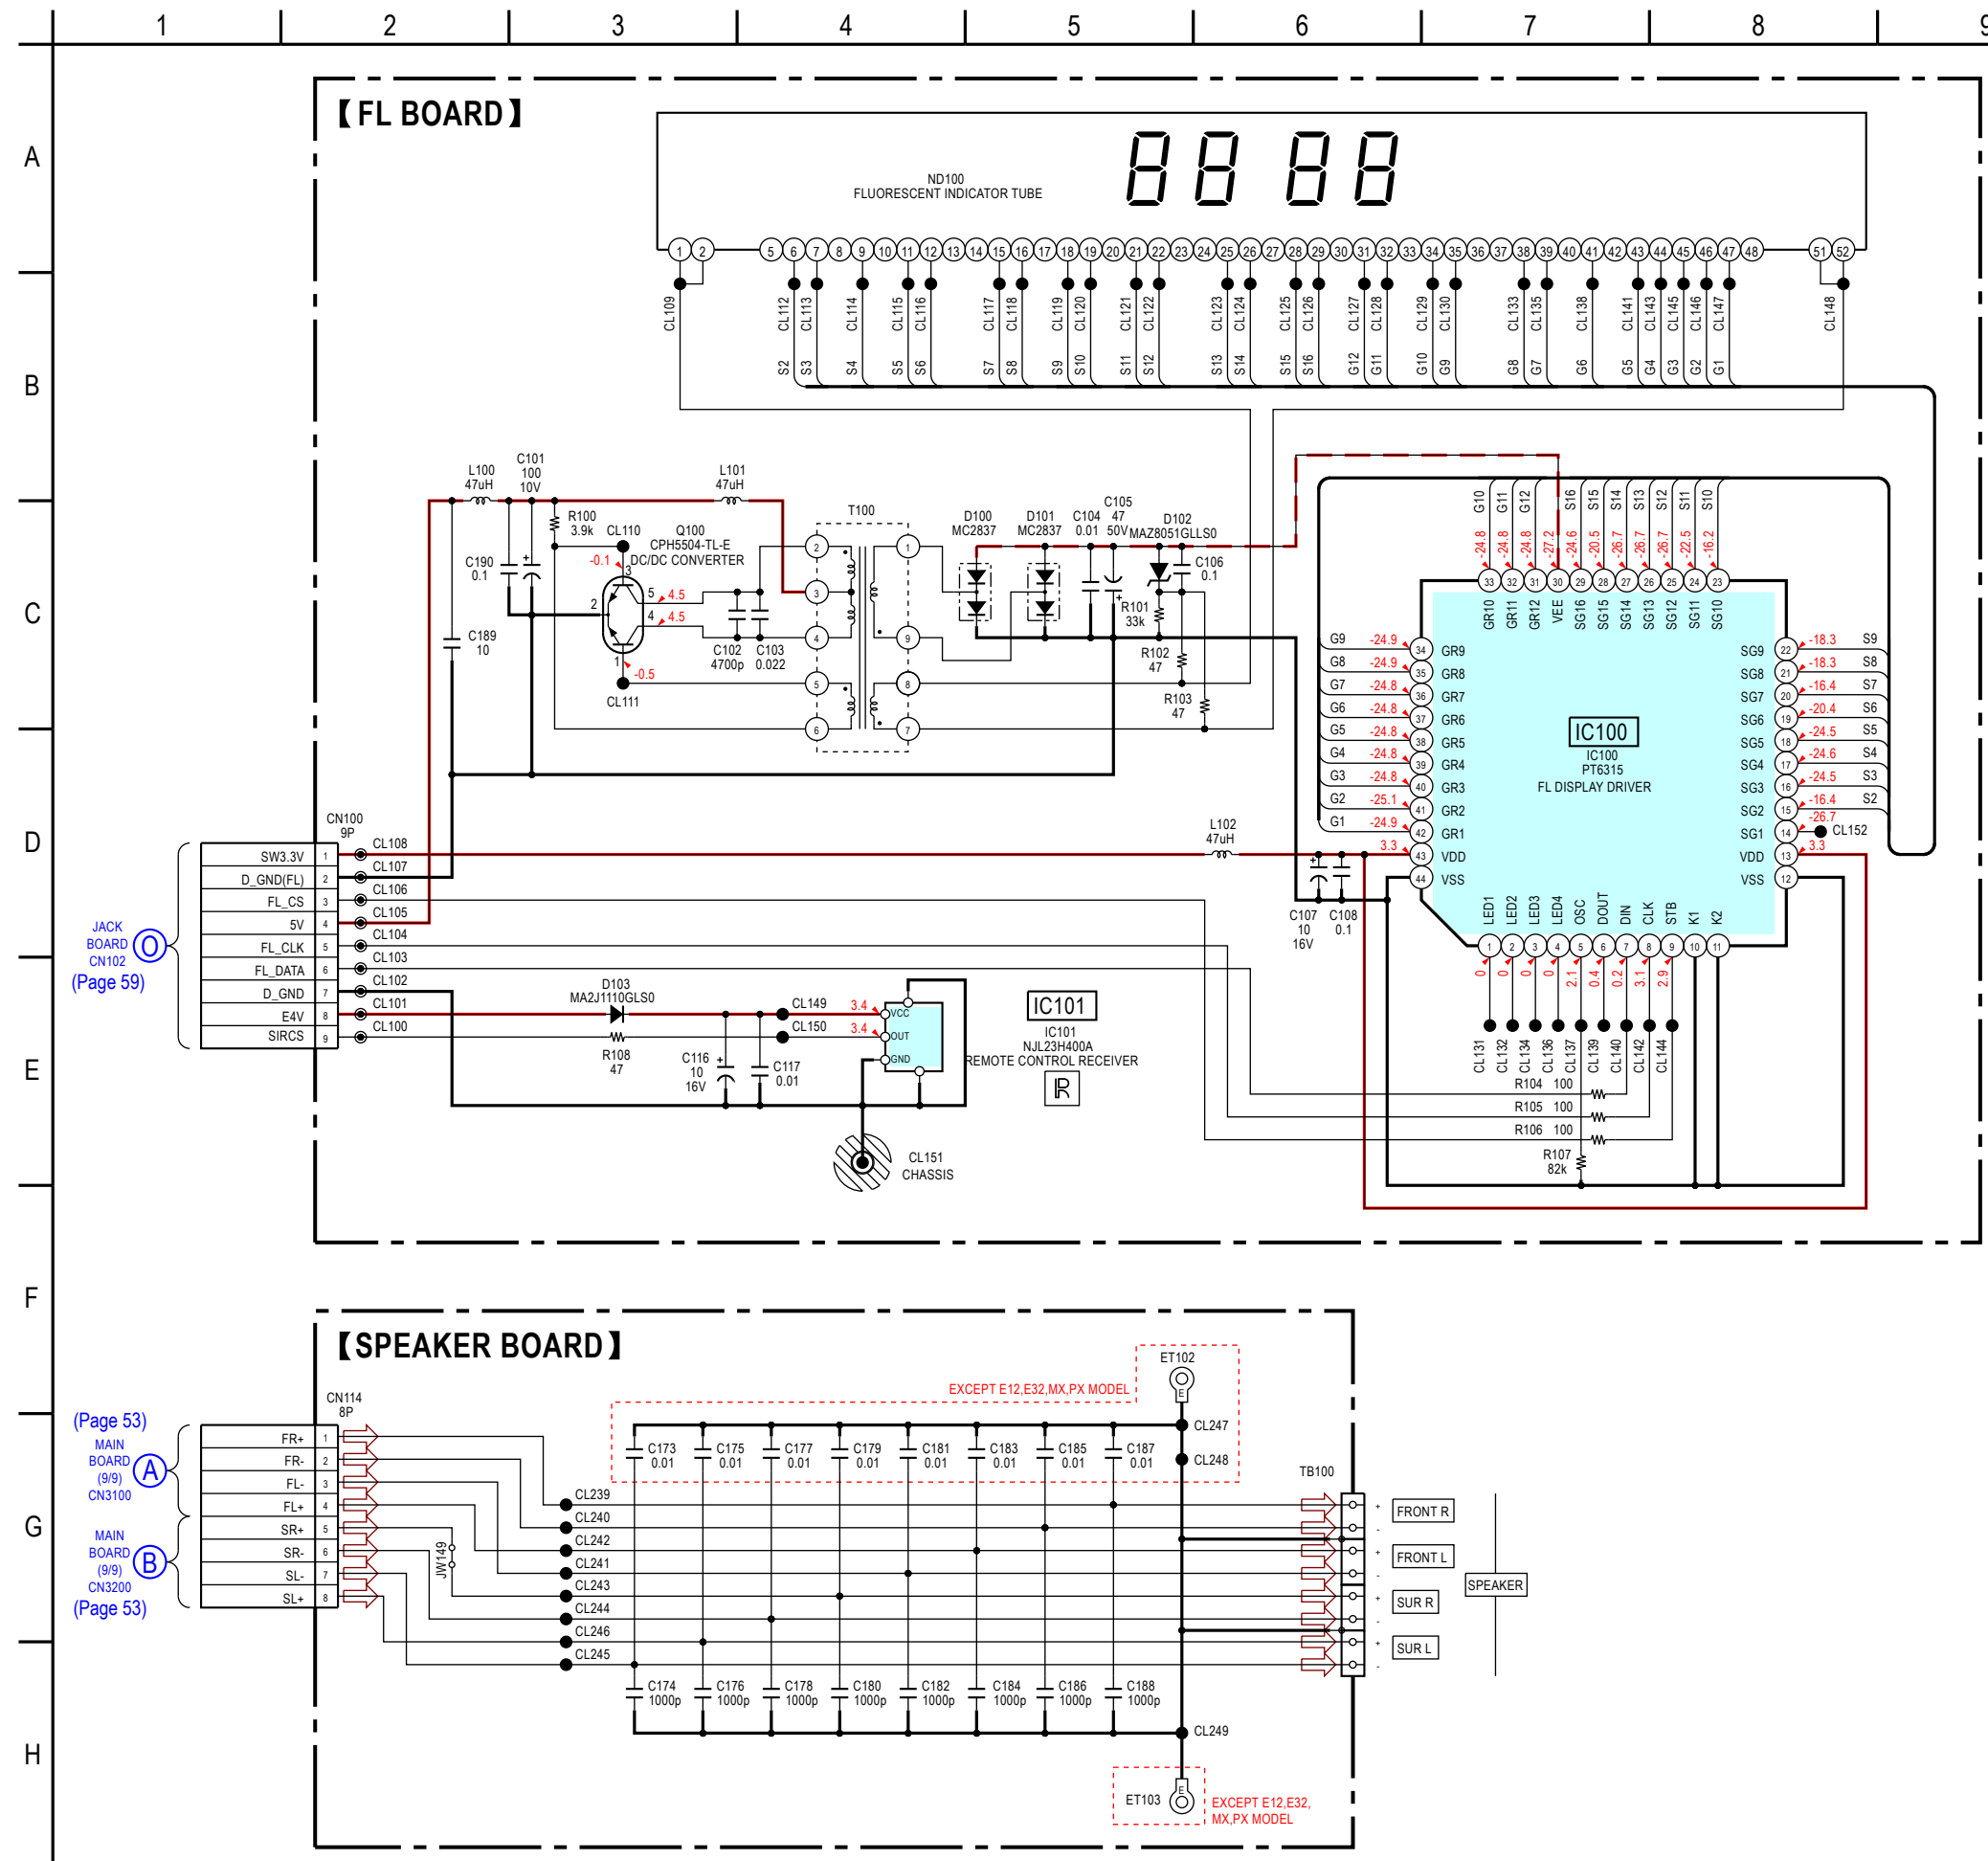


6-25. PRINTED WIRING BOARD – S-AIR-CON Board – • See page 36 for Circuit Boards Location. •  : Uses unleaded solder.

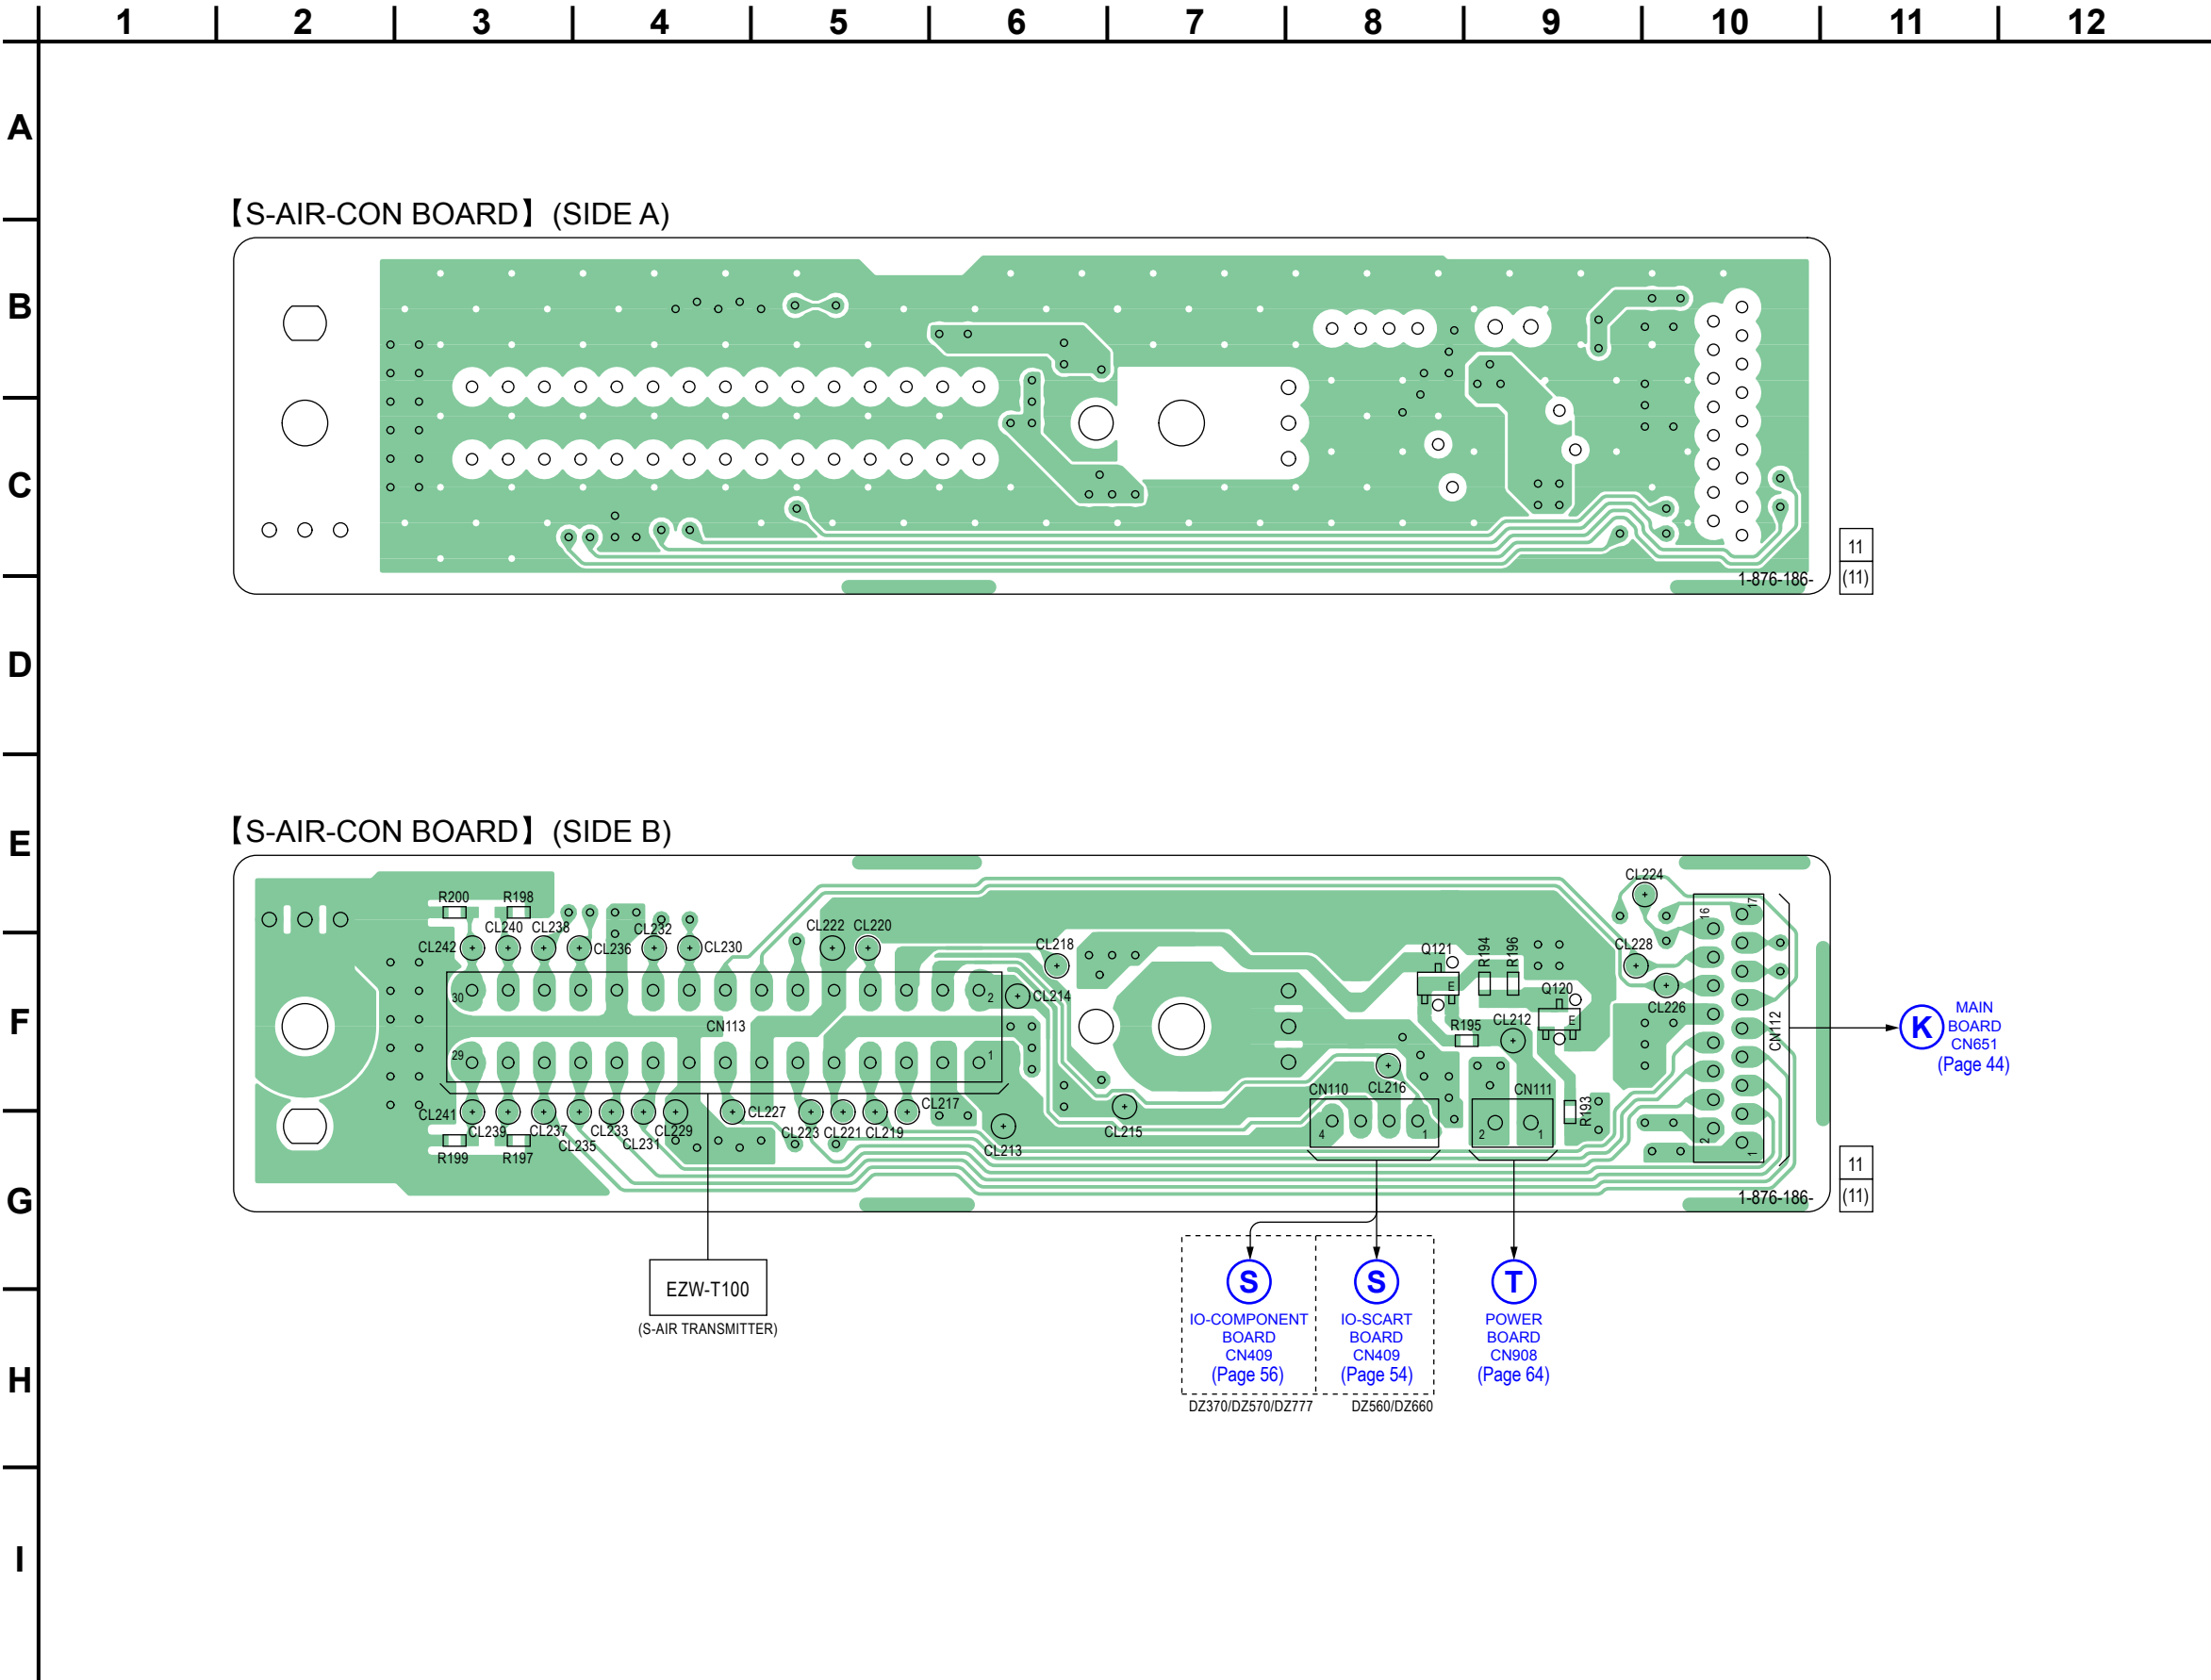

6-26. SCHEMATIC DIAGRAM – S-AIR-CON Board –

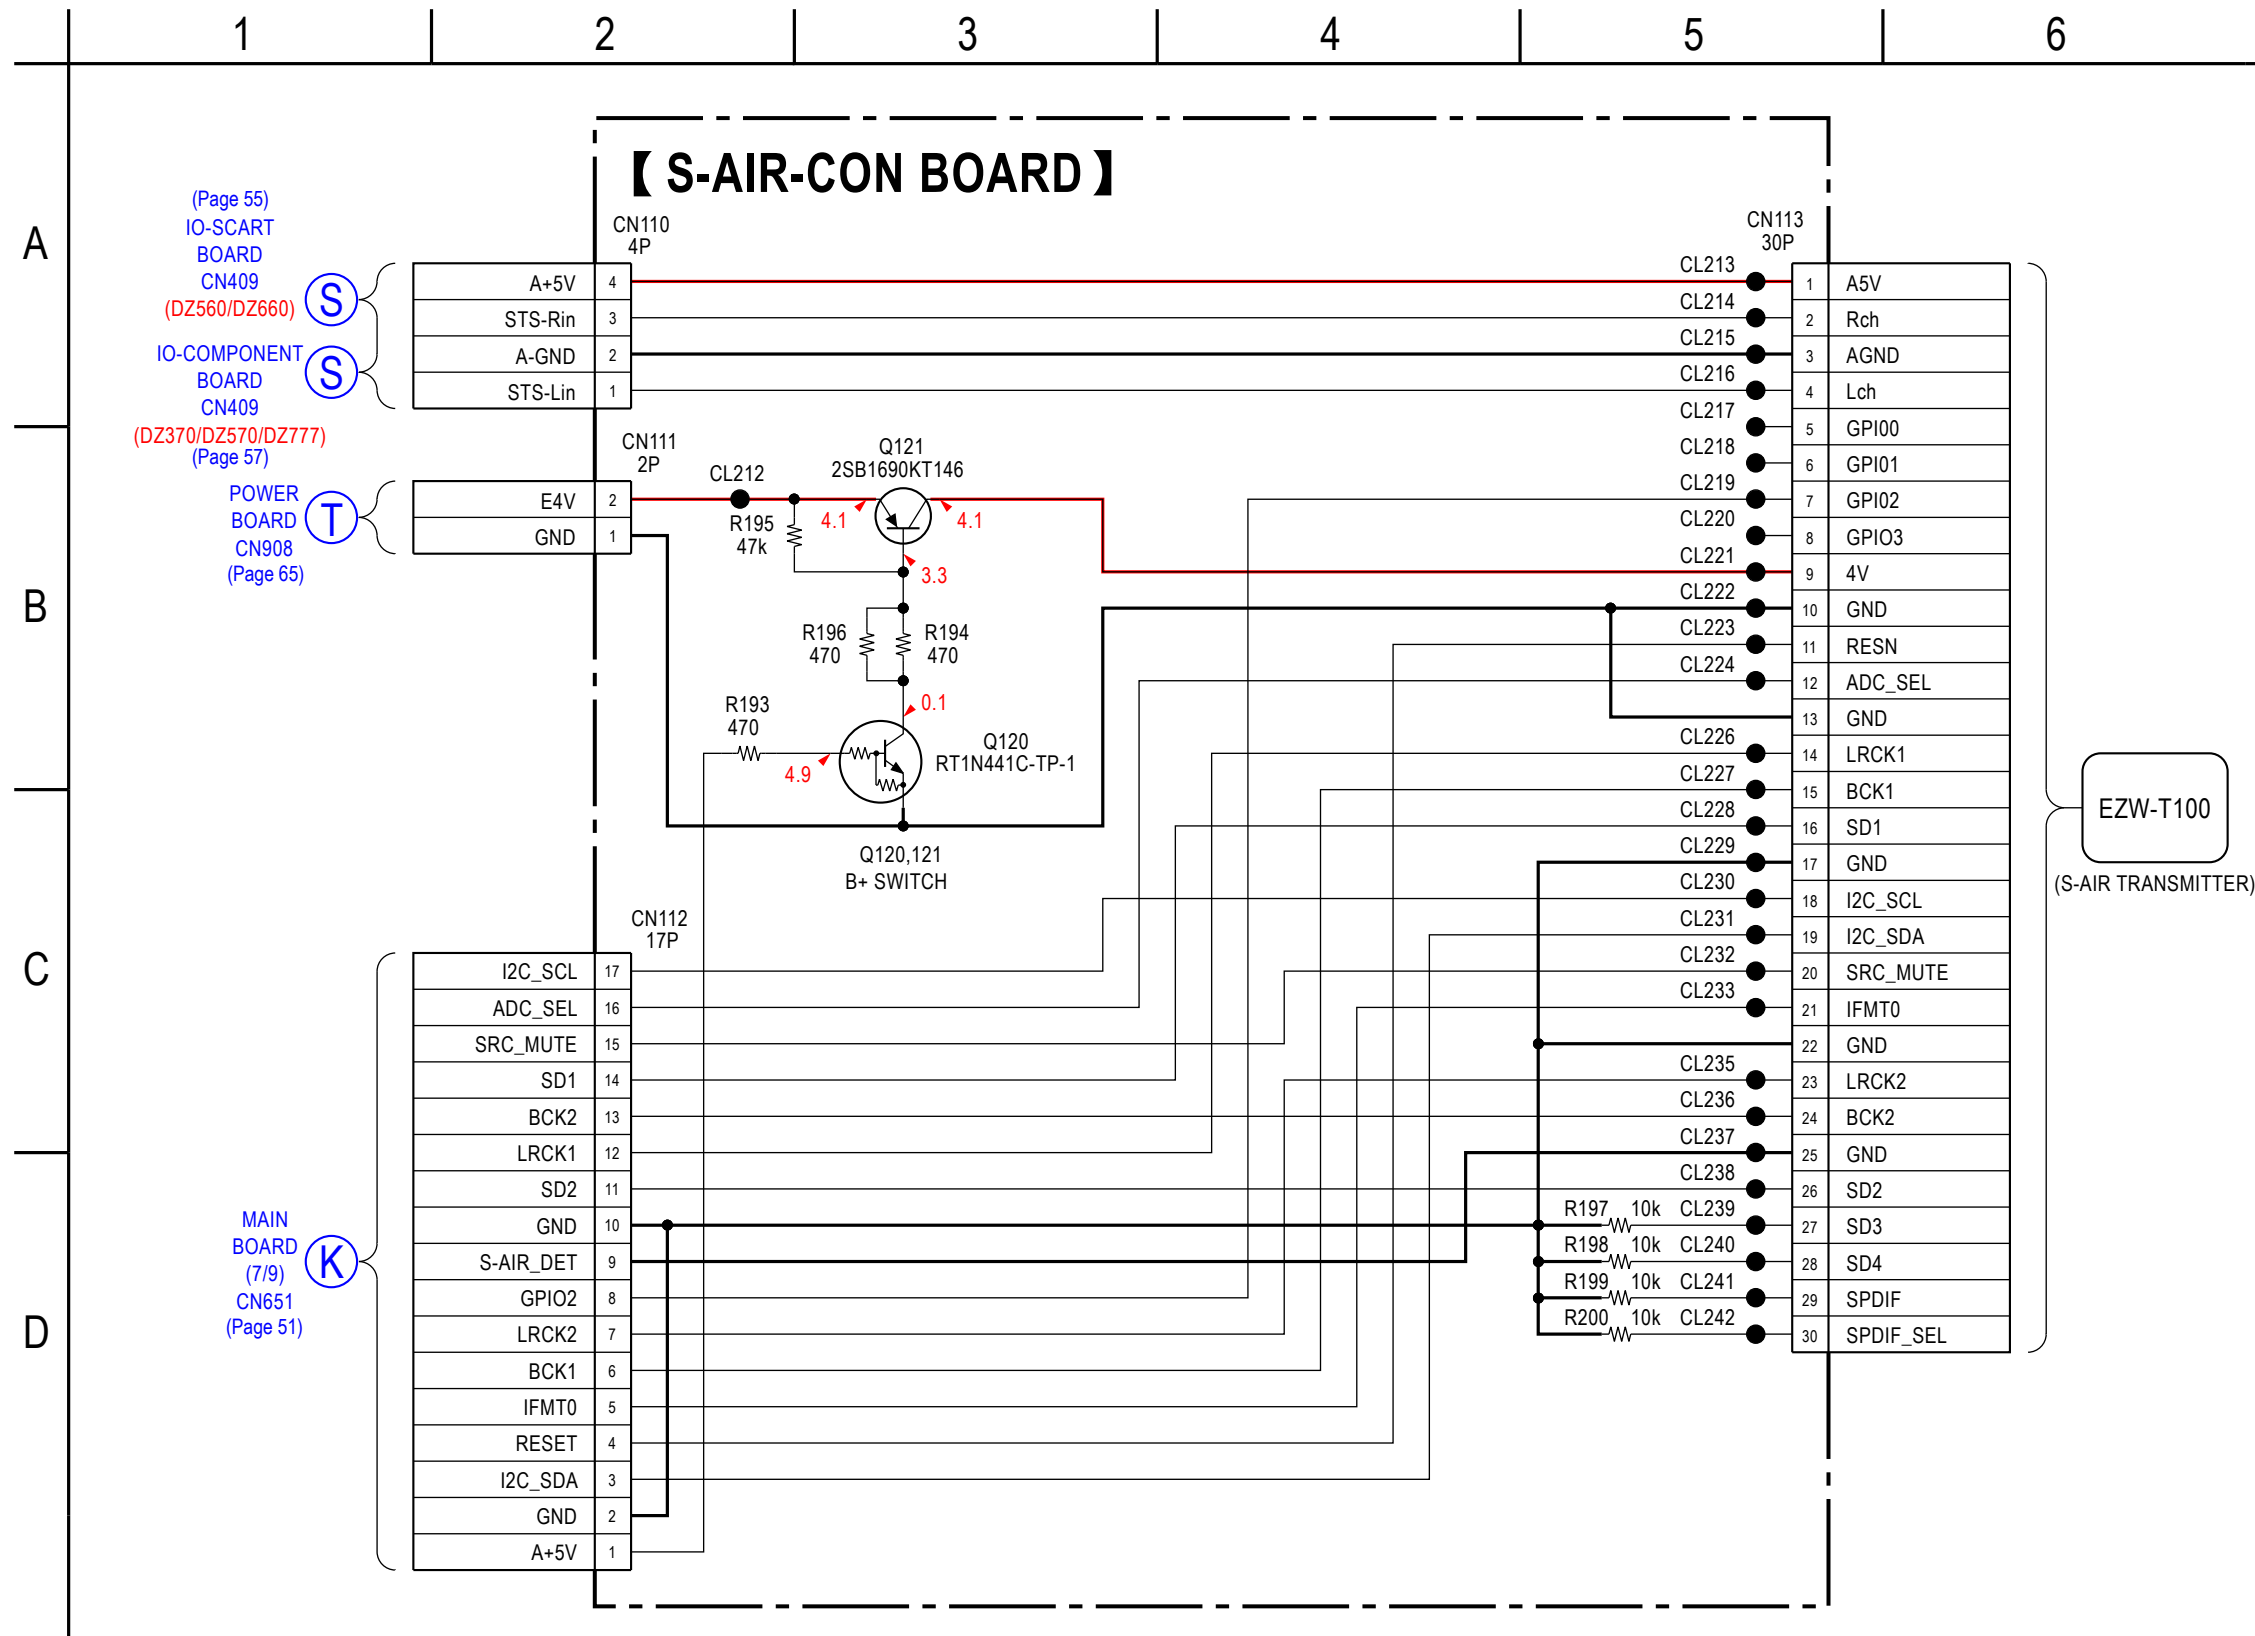


6-27. PRINTED WIRING BOARD – POWER Board – • See page 36 for Circuit Boards Location. •  : Uses unleaded solder.

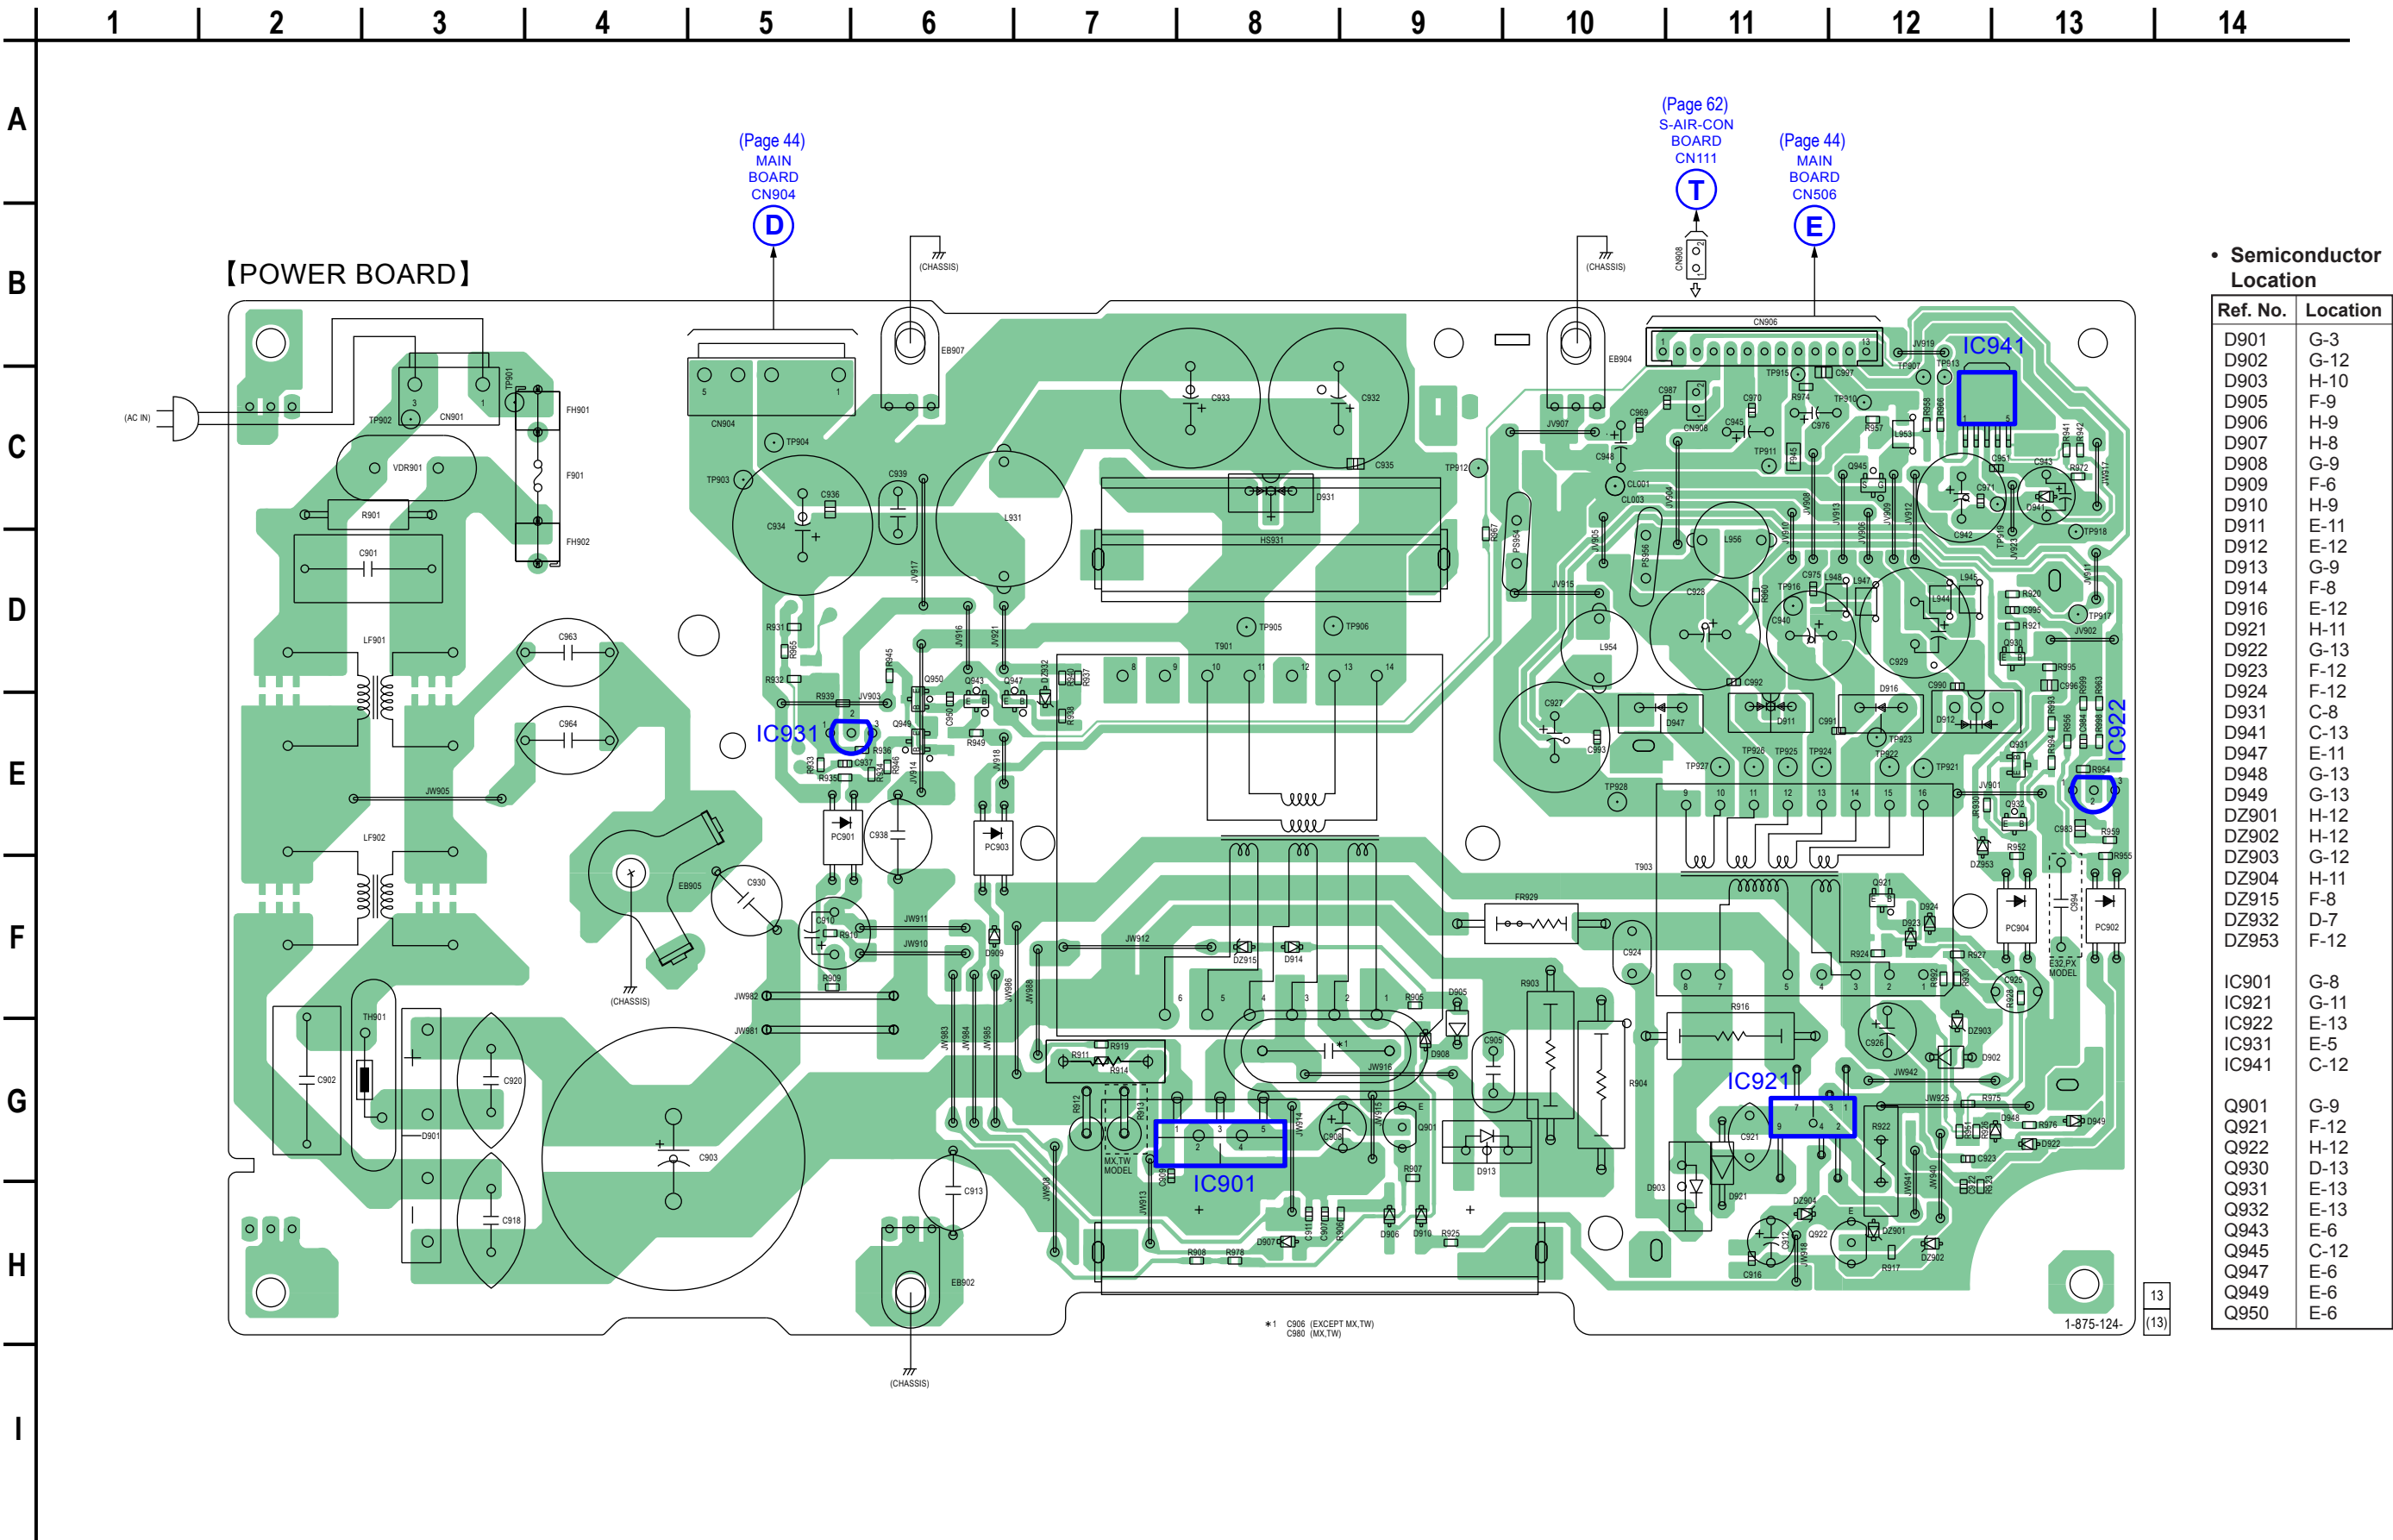

• Semiconductor Location


Ref. No.	Location
D901	G-3
D902	G-12
D903	H-10
D905	F-9
D906	H-9
D907	H-8
D908	G-9
D909	F-6
D910	H-9
D911	E-11
D912	E-12
D913	G-9
D914	F-8
D916	E-12
D921	H-11
D922	G-13
D923	F-12
D924	F-12
D931	C-8
D941	C-13
D947	E-11
D948	G-13
D949	G-13
DZ901	H-12
DZ902	H-12
DZ903	G-12
DZ904	H-11
DZ915	F-8
DZ932	D-7
DZ953	F-12
IC901	G-8
IC921	G-11
IC922	E-13
IC931	E-5
IC941	C-12
Q901	G-9
Q921	F-12
Q922	H-12
Q930	D-13
Q931	E-13
Q932	E-13
Q943	E-6
Q945	C-12
Q947	E-6
Q949	E-6
Q950	E-6

6-28. SCHEMATIC DIAGRAM – POWER Board – • See page 71 for IC Block Diagrams.

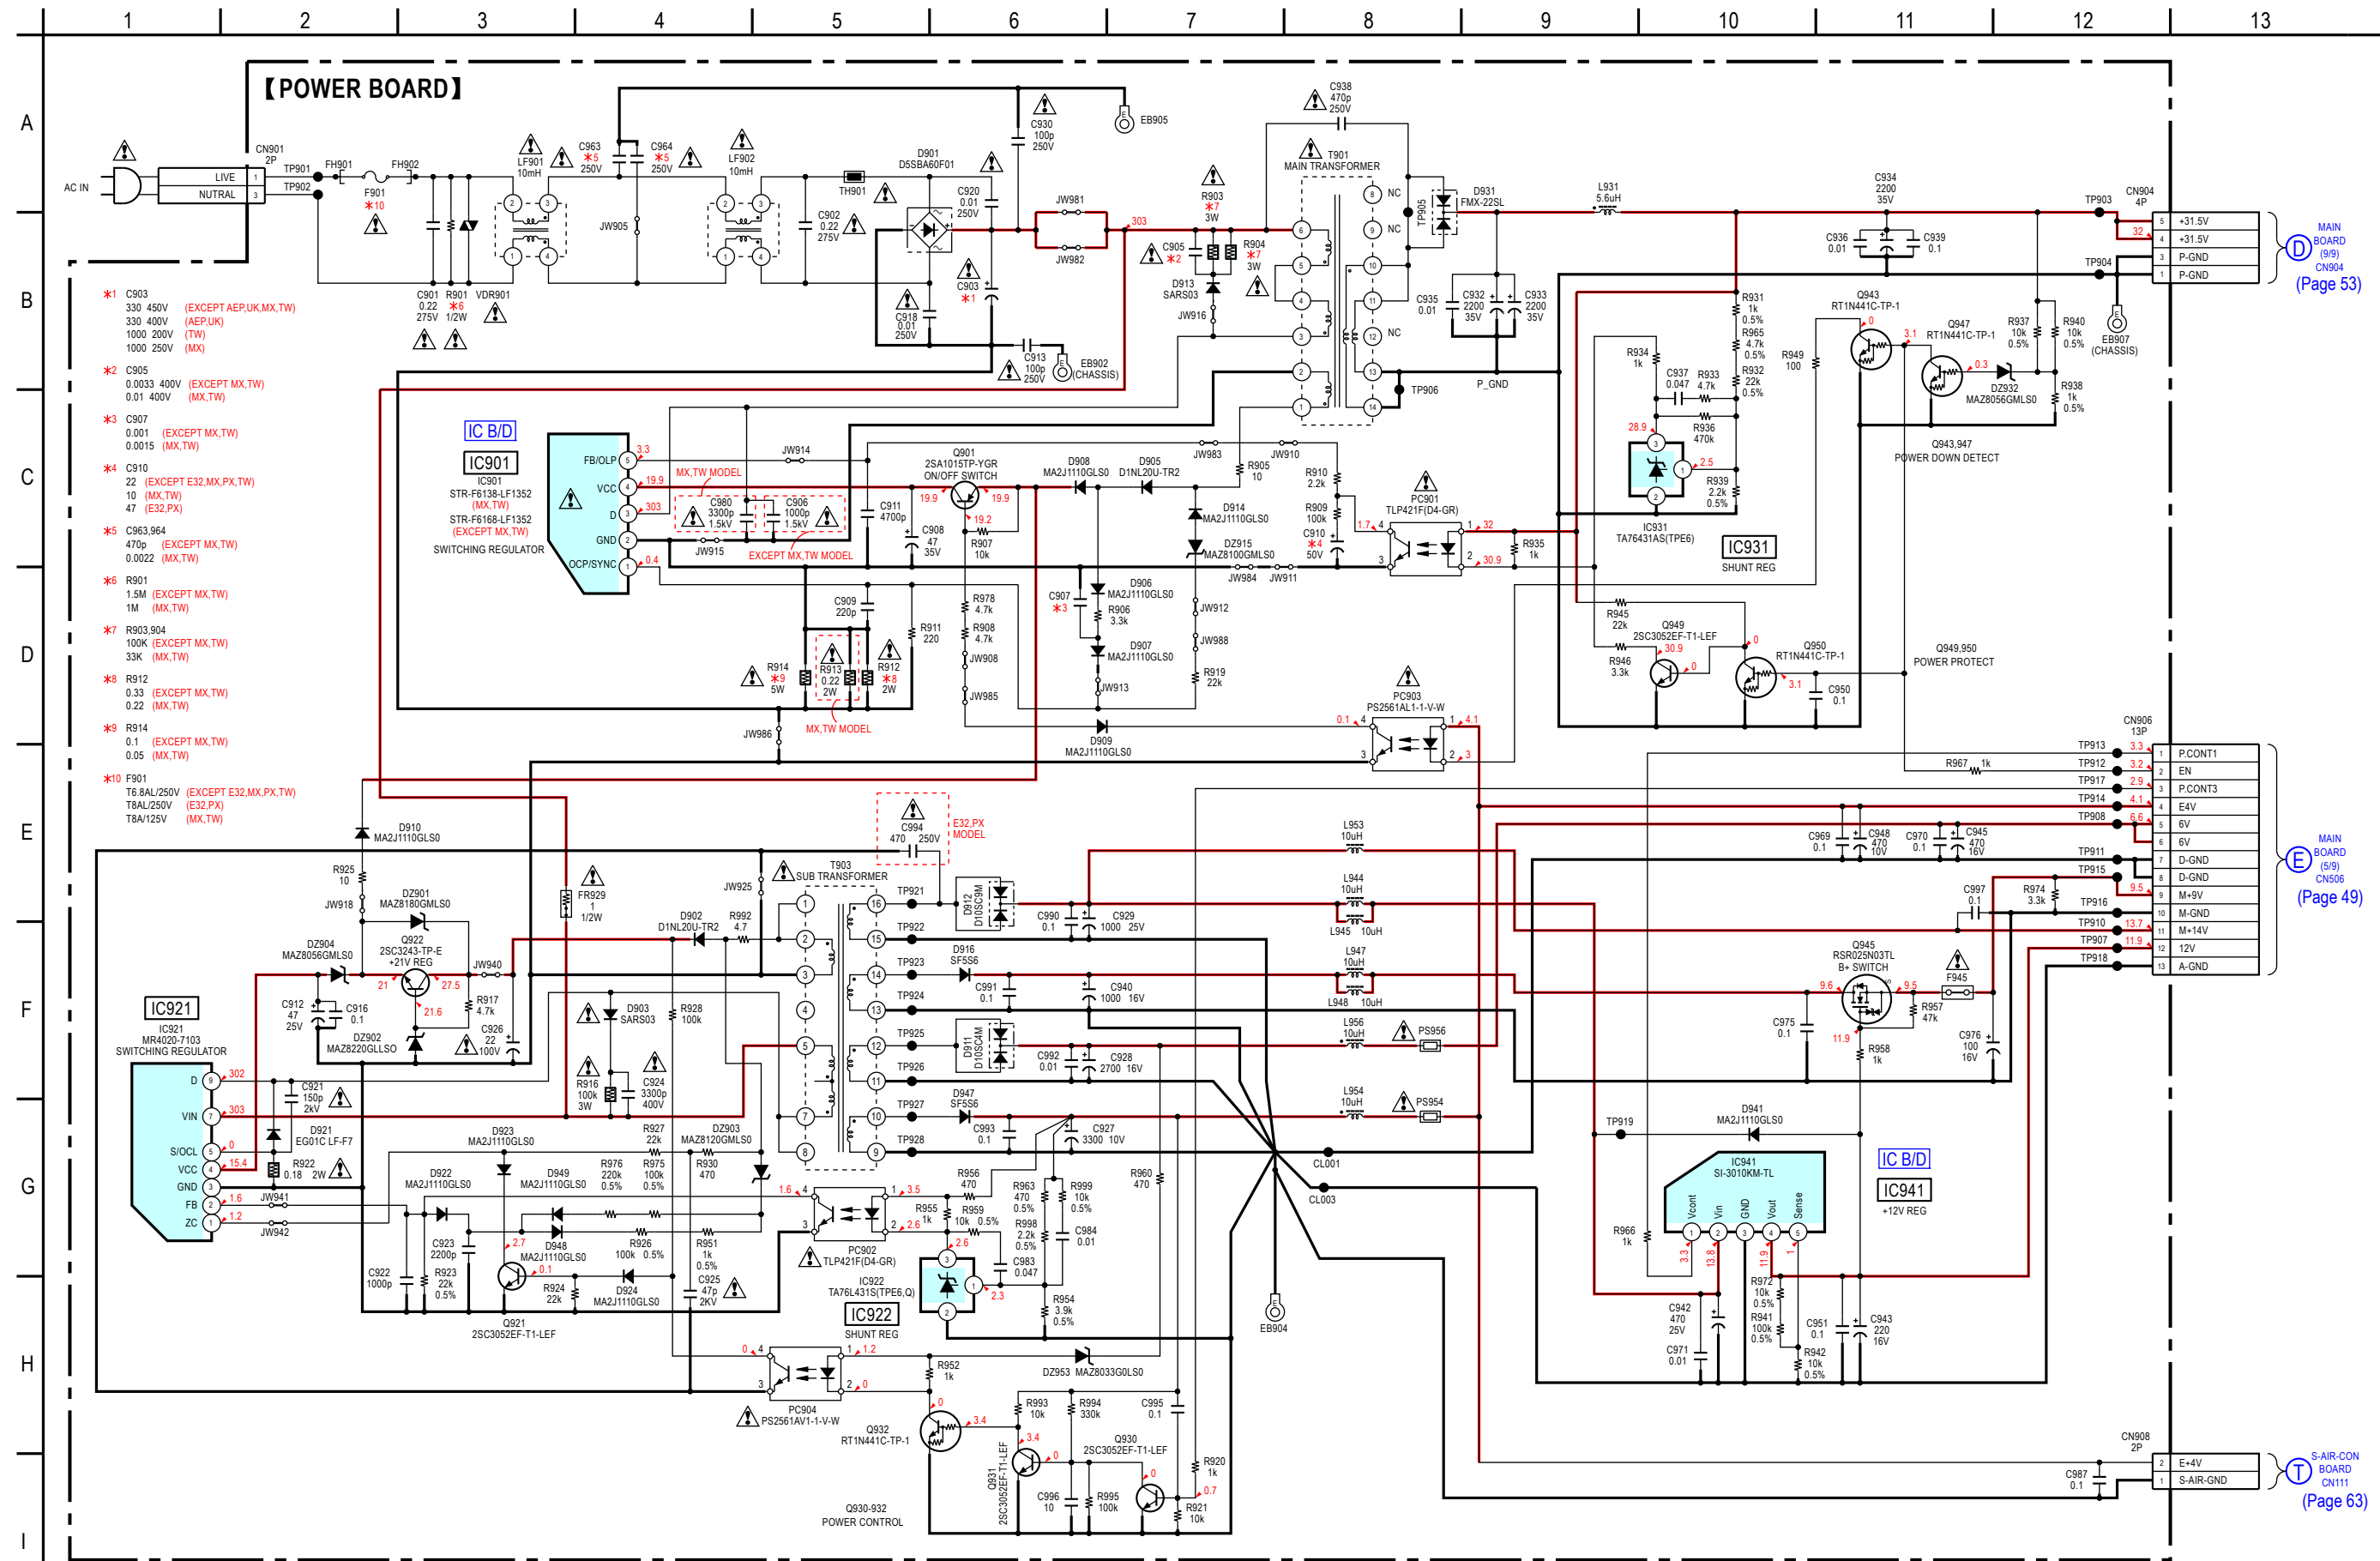


• IC Block Diagrams


IC1201 FAN8036L (MAIN Board (4/9))

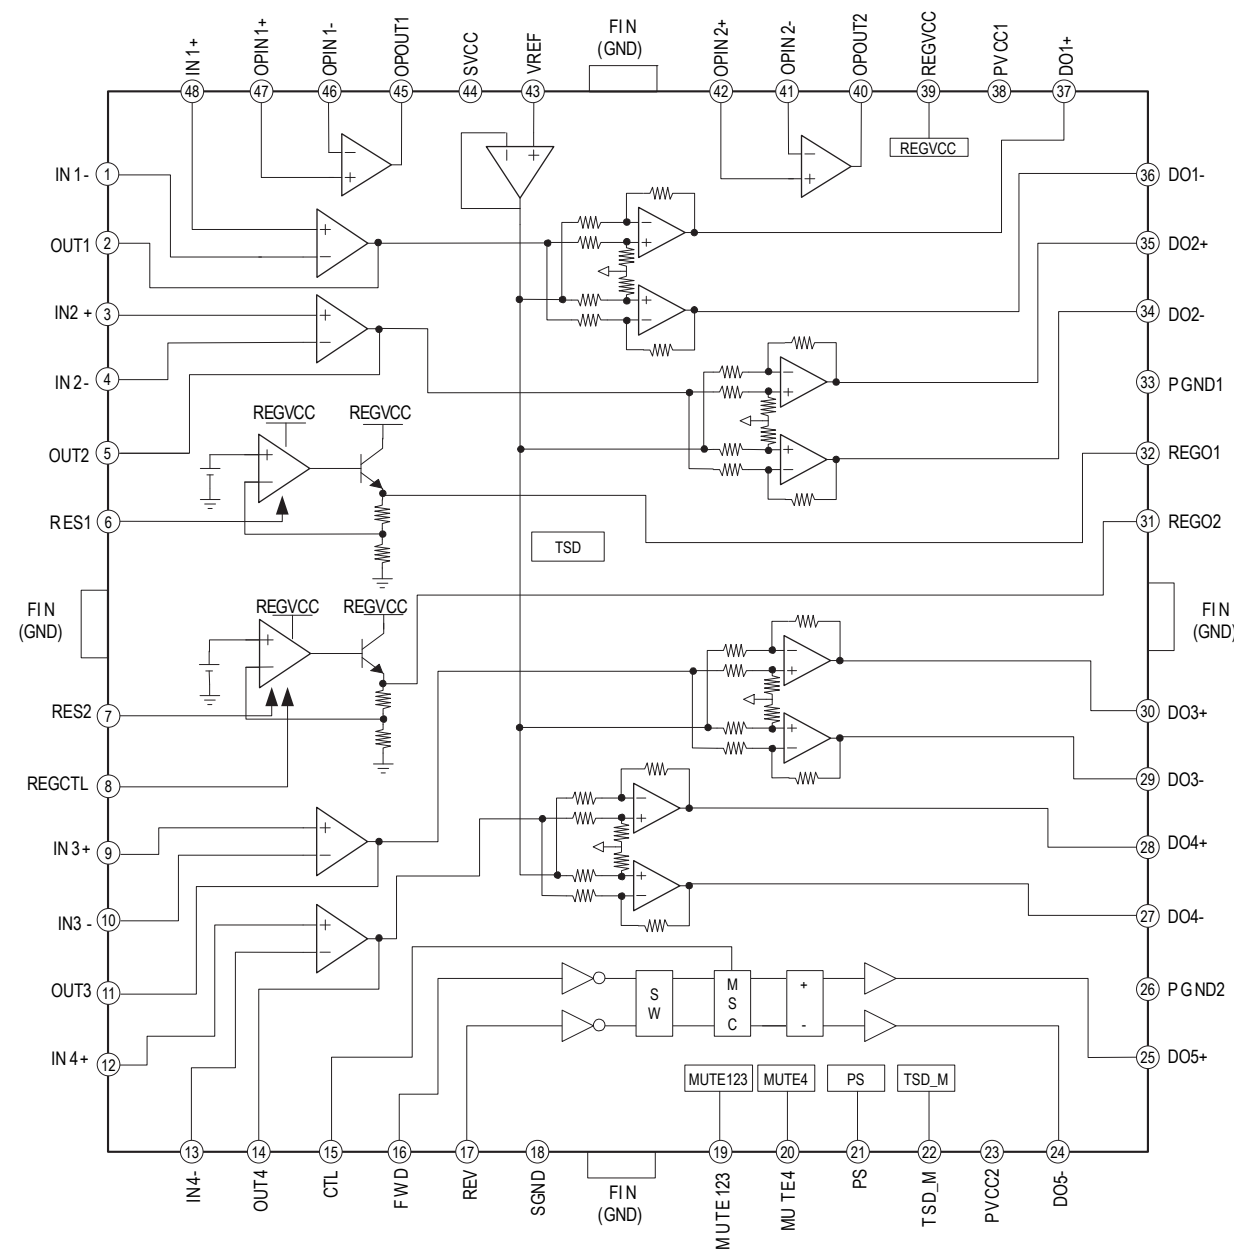


IC3003 TC7WH157FK(TE85R) (MAIN Board (7/9))

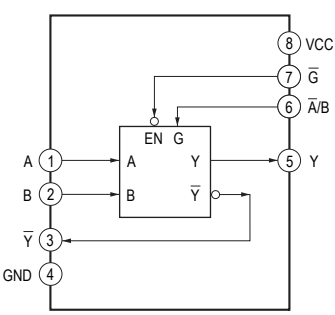


IC3010 CDX9788AR (MAIN Board (9/9))
IC3020 CDX9788AR (MAIN Board (9/9))
IC3030 CDX9788AR (MAIN Board (8/9))

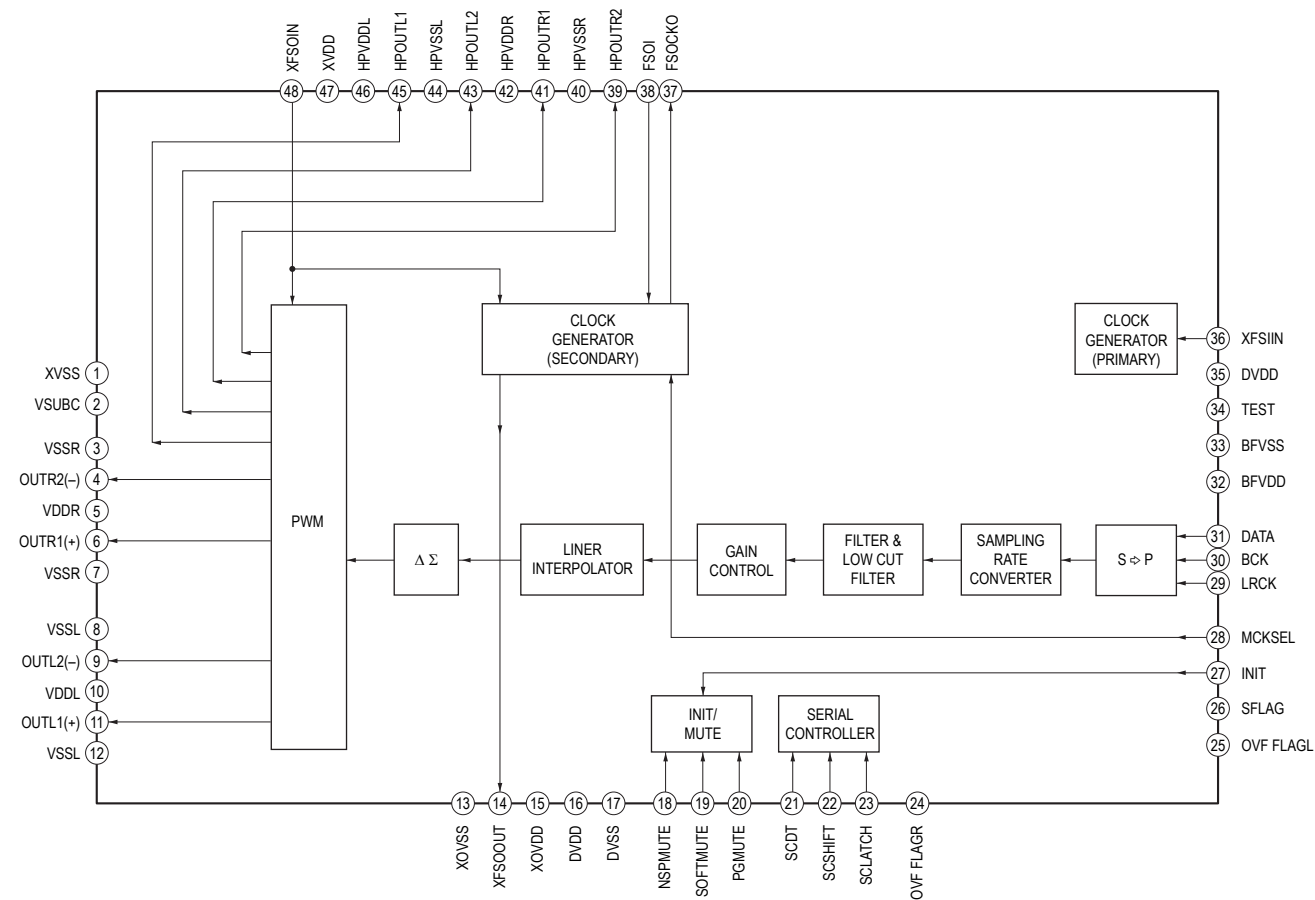


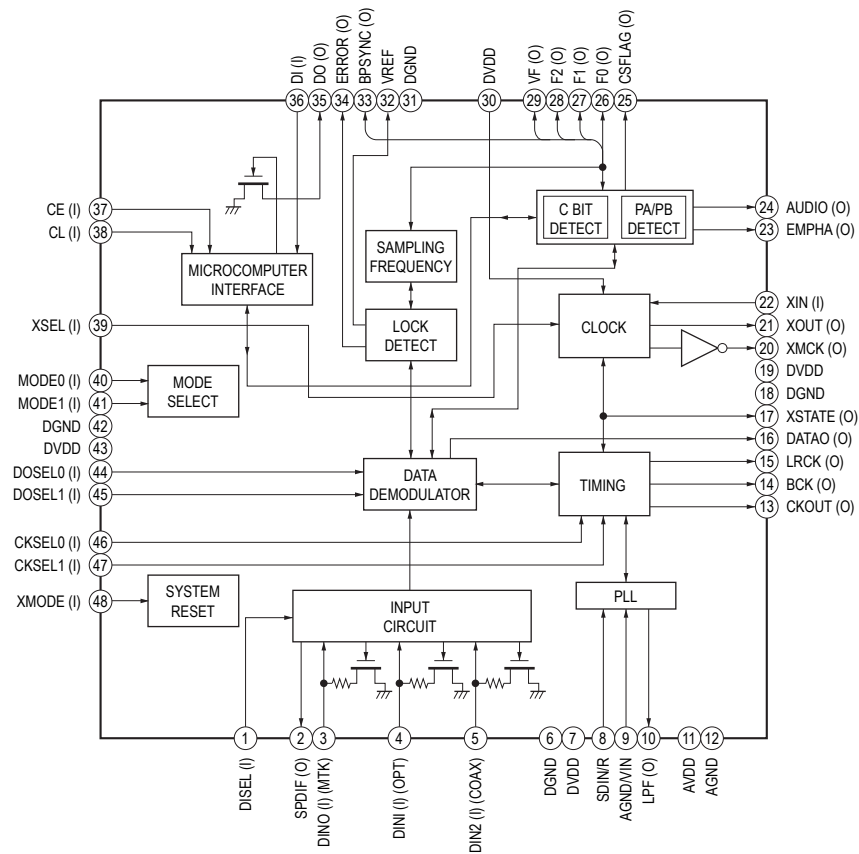IC702 LC89056W-E (MAIN Board (7/9))


IC507 TK11150CSCL-G (MAIN Board (5/9))
IC1105 TK11133CSCL-G (MAIN Board (1/9))
IC1107 TK11133CSCL-G (MAIN Board (1/9))
IC1707 TK11150CSCL-G (MAIN Board (3/9))
IC1708 TK11133CSCL-G (MAIN Board (3/9))
IC3050 TK11118CSCL-G (MAIN Board (9/9))

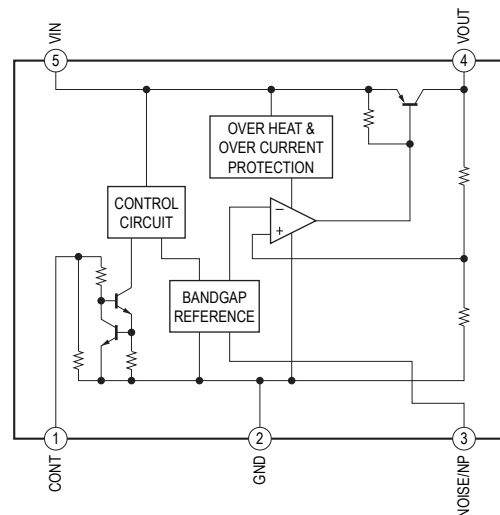

IC707 PCM1808PWR (MAIN Board (7/9))

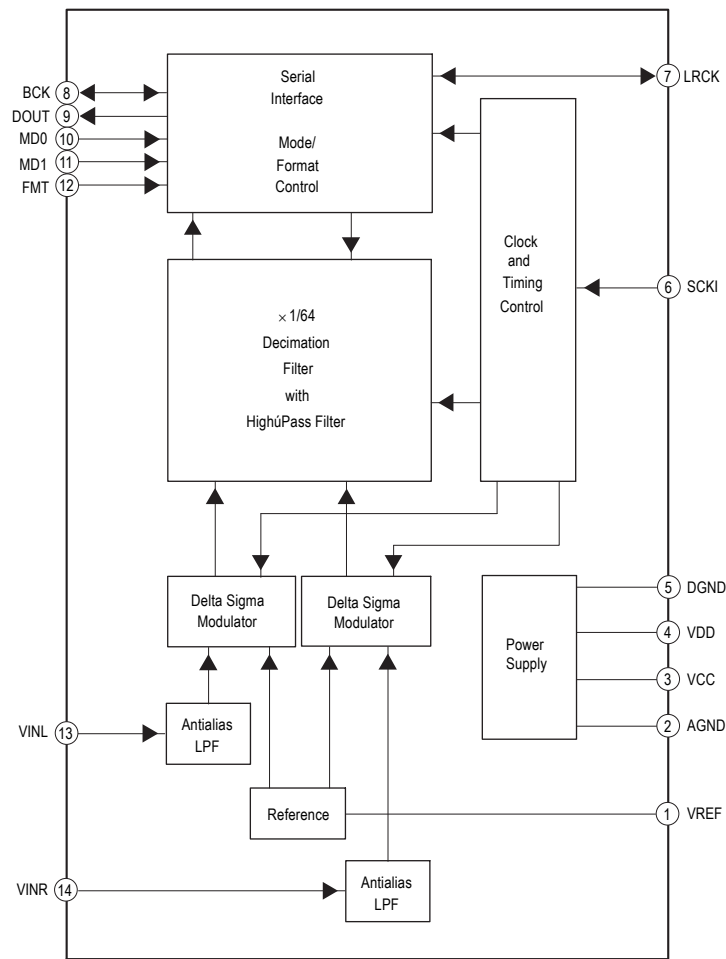


IC3100 CXD9883M (MAIN Board (9/9))
 IC3150 CXD9883M (MAIN Board (9/9))
 IC3200 CXD9883M (MAIN Board (9/9))
 IC3250 CXD9883M (MAIN Board (9/9))
 IC3300 CXD9883M (MAIN Board (8/9))
 IC3400 CXD9883M (MAIN Board (8/9))
 IC3500 CXD9883M (MAIN Board (8/9))

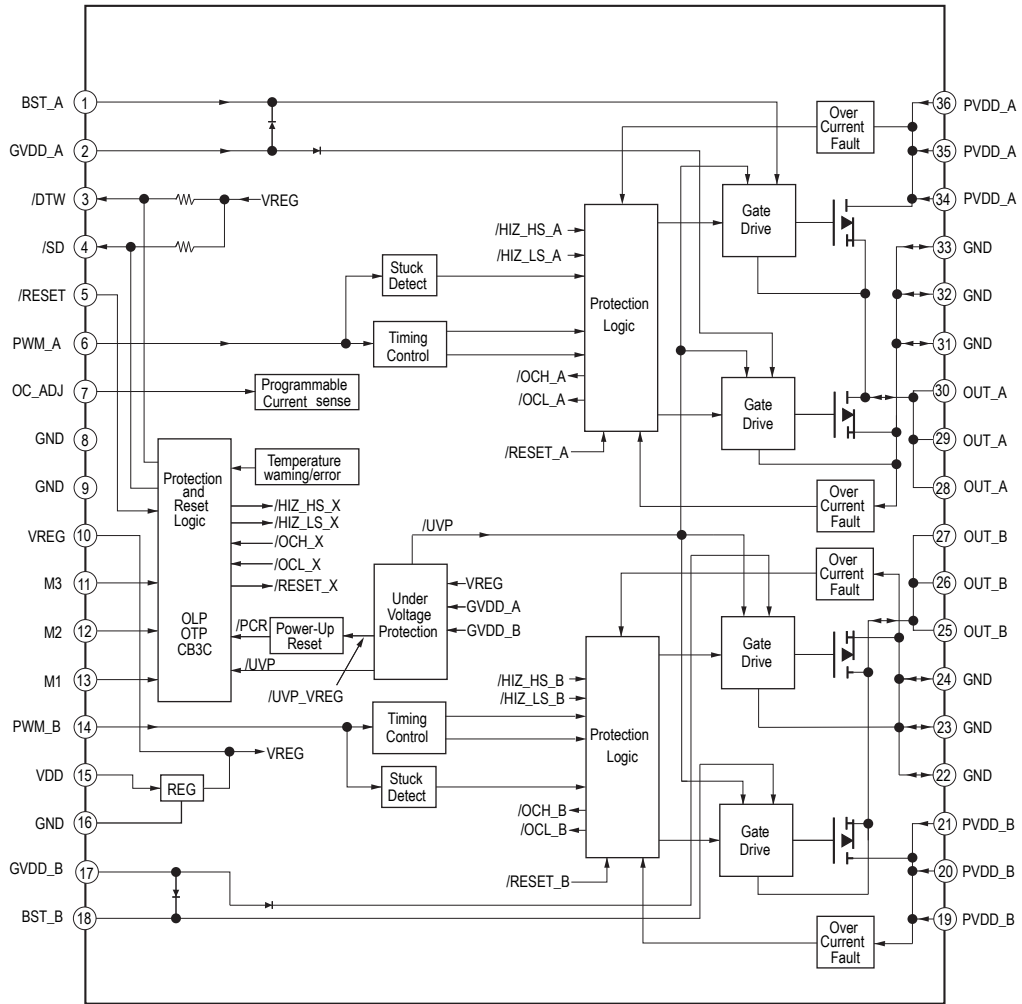

IC400 MM1758AFBE (IO-SCART Board (DZ560/DZ660))

IC404 MM1758AFBE (IO-COMPONENT Board (DZ370/DZ570/DZ777))

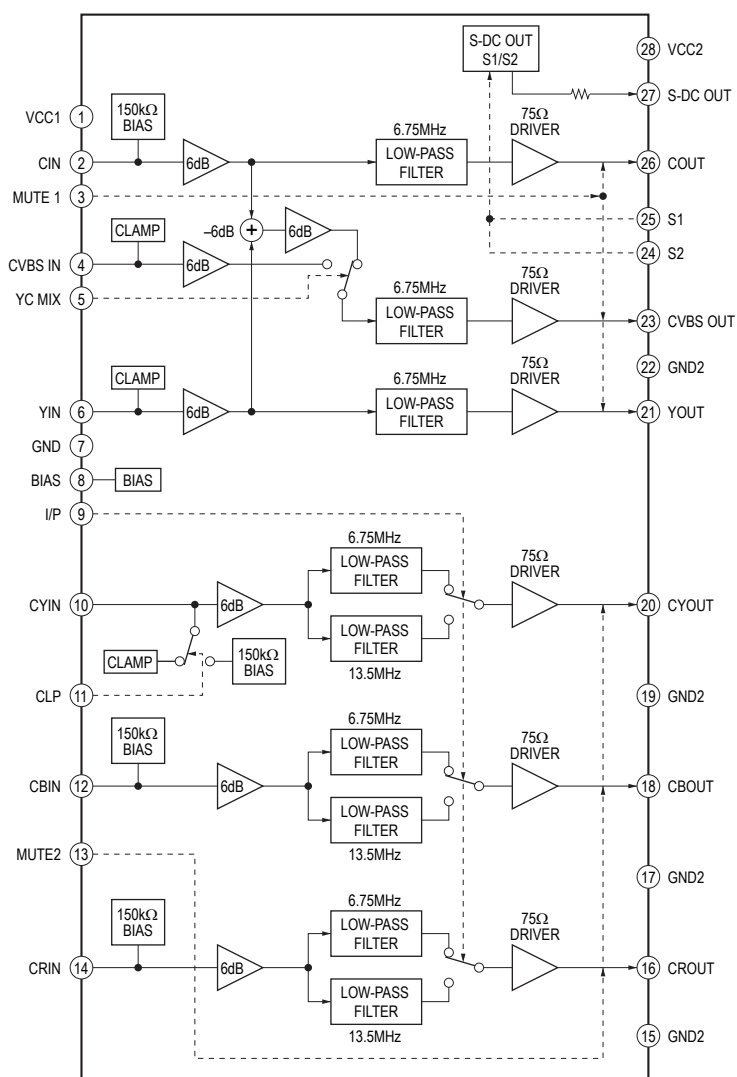

IC407 MC14052BDR2 (IO-SCART Board (DZ560/DZ660))


IC409 MC14052BDR2 (IO-SCART Board (DZ560/DZ660))

IC411 MC14052BDR2 (IO-SCART Board (DZ560/DZ660))

IC407 MC14052BDR2 (IO-COMPONENT Board (DZ370/DZ570/DZ777))


IC409 MC14052BDR2 (IO-COMPONENT Board (DZ370/DZ570/DZ777))

IC411 MC14052BDR2 (IO-COMPONENT Board (DZ370/DZ570/DZ777))

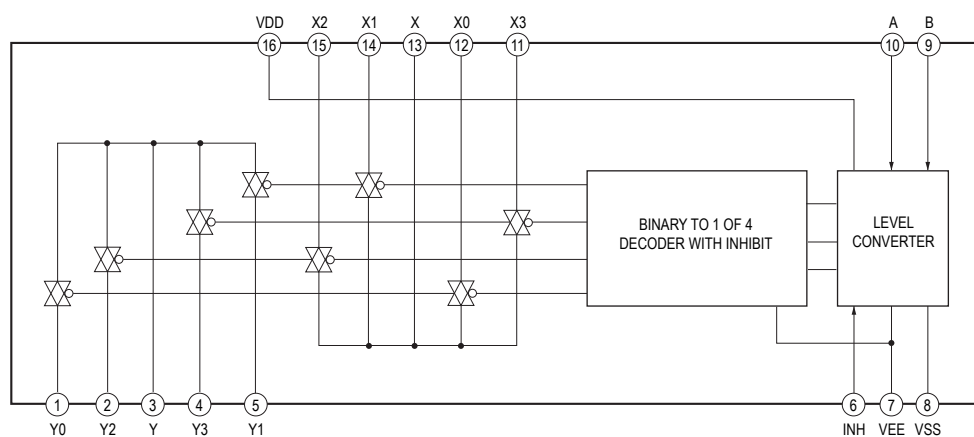

IC901 STR-F6138-LF1352 (POWER Board) (MX,TW)

IC901 STR-F6168-LF1352 (POWER Board) (EXCEPT MX,TW)

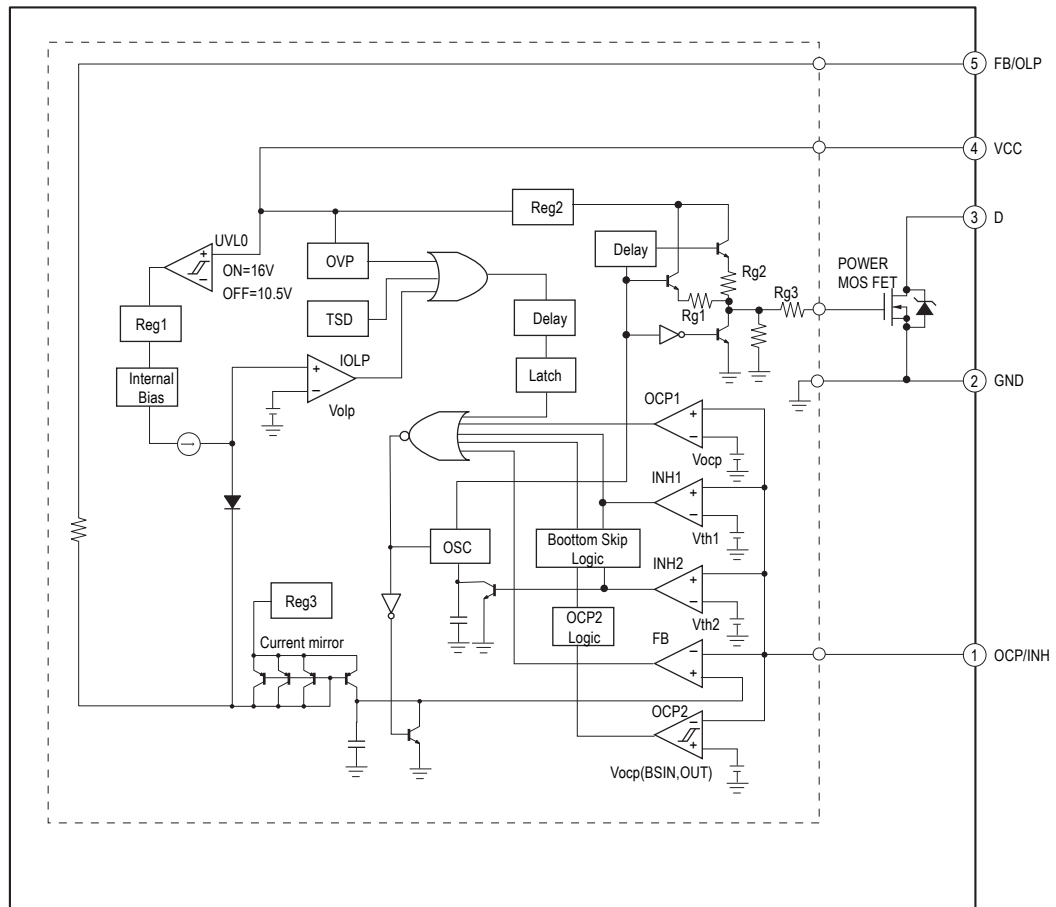


IC941 SI-3010KM-TL (POWER Board)

IC201 SI-3010KM-TL (MAIN Board (6/9))

IC504 SI-3010KM-TL (MAIN Board (5/9))

IC505 SI-3010KM-TL (MAIN Board (5/9))

IC506 SI-3010KM-TL (MAIN Board (5/9))

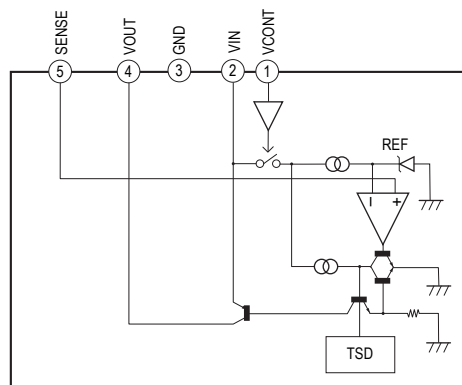

HCD-DZ370/DZ560/DZ570/DZ660/DZ777

• IC Pin Function Description

MAIN BOARD (2/9) IC1101 CXD9917R

(CD/DVD RF AMP, FOCUS/TRACKING ERROR AMP, DVD SYSTEM CONTROL, DIGITAL SERVO PROCESSOR, DIR/USB CONTROL)

Pin No.	Pin Name	I/O	Description
1	OSN	—	RF offset cancellation capacitor connecting terminal
2	RFGC	I	RF AGC loop capacitor connecting terminal
3	IREF	I	Current reference setting terminal
4	AVDD3	—	Power supply (VDD3.3V)
5	AGND	—	Ground
6	DVDA	I	AC coupled input path A
7	DVDB	I	AC coupled input path B
8	DVDC	I	AC coupled input path C
9	DVDD	I	AC coupled input path D
10	DVDRFIP	I	DC coupled DVD RF signal input RFIP
11	MA	I	DC coupled main-beam RF signal input A
12	MB	I	DC coupled main-beam RF signal input B
13	MC	I	DC coupled main-beam RF signal input C
14	MD	I	DC coupled main-beam RF signal input D
15	SA	—	Not used (Open)
16	SB	—	Not used (Open)
17	TNI	I	DC coupled main-beam RF signal input E
18	TPI	I	DC coupled main-beam RF signal input F
19	MDI1	I	Laser power monitor input
20	MDI2	I	Laser power monitor input
21	LDO2	O	Laser diode (DVD) drive signal output
22	LDO1	O	Laser diode (CD) drive signal output
23	SVDD3	—	Power supply (RF+3.3V)
24	CSO	O	Not used (Open)
25	RFLVL	O	RFRP low pass output
26	SGND	—	Ground
27	V2REFO	O	Reference voltage (2.8V) output
28	V20	O	Reference voltage (2.0V) output
29	VREFO	O	Reference voltage (1.4V) output
30	FEO	O	Focus error monitor output
31	TEO	O	Tracking error monitor output
32	TEZISLV	O	TE Slicing Level input
33	OP_OUT	O	Op amp output
34	OP_INN	I	Op amp negative input
35	OP_INP	I	Spindle feedback signal input
36	DMO	O	Disc motor control PWM output
37	FMO	O	Feed motor control PWM output
38	TROPENPWM	O	Tray PWM output/Tray open output
39	IOPMON	I	Iop Monitor input
40	TRO	O	Tracking servo control signal output
41	FOO	O	Focus servo control signal output
42	AGND18	—	Ground
43	AVDD18	—	Power supply (+1.8V)
44	USB_DP	I/O	USB port serial data input/output
45	USBDM	I/O	USB port serial data input/output
46	USB_VDD3	—	USB power supply (+3.3V)
47	USB_VSS	—	USB ground
48	PAD_VRT	—	Not used
49	USB_VDD18	—	Power supply (+1.8V)
50	USB_VSS	I	Ground
51	DIR_ERROR/NC	I	DIR PLL error signal input
52	DIR_AUDIO/NC	I	DIR audio signal input (Not used in this set)

Pin No.	Pin Name	I/O	Description
53	LIMITSW	I	LIMIT SW signal input
54	MSW	O	DVD/CD PD –VR select signal output
55	DVDD18	—	Power supply (+1.8V)
56 to 62	HA2 to HA8	O	Flash ROM address bus A2 to A8 output
63, 64	HA18, HA19	O	Flash ROM address bus A18, A19 output
65	DVDD3	—	Power supply (+3.3V)
66	XWR	O	Flash ROM write signal output
67 to 74	HA16 to HA9	O	Flash ROM address bus A16 to A9 output
75	HA20		Flash ROM address bus A20 output
76	XROMCS	O	Flash ROM chip select signal output
77	HA1	O	Flash ROM address bus A1 output
78	XRD	O	Flash ROM read signal output
79, 80	HD0, HD1	I/O	Flash ROM data bus D0, D1 input/output
81	DVSS	—	Ground terminal
82 to 86	HD2 to HD6	I/O	Flash ROM data bus D2 to D6 input/output
87	HA21	I/O	Flash ROM data bus D21 input/output
88	RESERVED	—	Not used (Open)
89	HD7	I/O	Flash ROM data bus D7 input/output
90	DVSS	—	Ground terminal
91, 92	HA17, HA0	O	Flash ROM address bus A17, A0 output
93	DVDD18	O	Flash ROM data bus D18 input/output
94	FWR	O	Loading motor control (FWR) signal output
95	REV	O	Loading motor control (REV) signal output
96	DVDD3	—	Power supply (+3.3V)
97	IFSDO	O	CPU I/F serial data output
98	IFCK	O	CPU I/F serial clock output
99	xIFCS	O	CPU I/F chip select output
100	IFSDI	I	CPU I/F serial data input
101	SCL	O	EEPROM serial clock output
102	SDA	I/O	EEPROM serial data input/output
103	CKSW	I	Chuck/Tray detect switch signal input
104	OCSW	I	Chuck/Tray detect switch signal input
105	RXD	I	RXD signal input from Jig
106	TXD	O	TXD signal output to Jig
107	ICE	O	Not used (Open)
108	xSYSRST	I	System reset signal input
109	RESERVED	I	Not used (Open)
110	xIFBSY	I	Busy signal input from CPU I/F
111	DQM0	O	SDRAM lower byte mask signal output
112	EEWP	I	EEPROM ready/Busy wake up signal input
113 to 117	RD7 to 3	I/O	SDROM data bus D7 to D3 input/output
118	DVDD3	—	Power supply (+3.3V)
119 to 121	RD2 to RD0	I/O	SDROM data bus D2 to D0 input/output
122 to 129	RD15 to RD8	I/O	SDROM data bus D15 to D8 input/output
130	TSD_M	I	TSD signal input
131	DVDD3	—	Power supply (+3.3V)
132	DQM1	O	SDRAM lower byte mask signal output
133	_RWE	O	SDRAM write enable signal output
134	_CAS	O	SDRAM column address strobe signal output
135	_RAS	O	SDRAM row address strobe signal output
136	_RCS	O	SDRAM chip select signal output
137, 138	BA0, BA1	O	SDRAM bank address 0, 1 output
139	RA10	O	SDRAM address bus A10 output
140, 141	RA0, RA1	O	SDRAM address bus A0, A1 output
142	DVDD18	—	Power supply (+1.8V)
143, 144	RA2, RA3	O	SDRAM address bus A0, A3 output

HCD-DZ370/DZ560/DZ570/DZ660/DZ777

Pin No.	Pin Name	I/O	Description
145	DVDD3	—	Power supply (+3.3V)
146	DRCLK	O	SDRAM clock output
147	CKE	O	SDRAM clock enable signal output
148	DVSS	—	Ground terminal
149	RA11	O	SDRAM address bus A11 output
150 to 155	RA9 to RA4	O	SDRAM address bus A9 to A4 output
156	DVDD3	—	Power supply (+3.3V)
157	MUTE123	O	Mute signal output for Focus/Tracking/Sledding
158	MUTE	O	Mute signal output for Spindle motor
159	DDC_DA	I/O	HDMI DDC line data input/output
160	DVDD18	—	Power supply (+1.8V)
161	DDC_CLK	I/O	HDMI DDC line clock input/output
162	HIPLG	I	HDMI HPD signal input
163	AGND3	—	Ground
164	EXT_RES	I	Ext. resistor connected terminal
165, 166	AVDD3	—	Power supply (+3.3V)
167	EXT_CAP	I	Ext. capacitor connected terminal
168, 169	AGND3, AGND18	—	Ground
170	TXCN	O	HDMI TXD-clock output
171	TXCP	O	HDMI TXD-clock output
172	AVDD18	—	Power supply (+1.8V)
173	TX0N	O	HDMI TXD-0 output
174	TX0P	O	HDMI TXD-0 output
175	AGND18	—	Power supply (+1.8V)
176	TX1N	O	HDMI TXD-1 output
177	TX1P	O	HDMI TXD-1 output
178	AVD18	—	Power supply (+1.8V)
179	TX2N	O	HDMI TXD-2 output
180	TX2P	O	HDMI TXD-2 output
181	AGND18	—	Power supply (+1.8V)
182	R/Cr/Pr	O	Video chroma R/Cr/Pr signal output
183	B/Cb/Pb	O	Video chroma B/Cb/Pb signal output
184	DACVSSA	—	Ground
185	Y/G	O	Video Y/chroma G signal output
186	DACVDDA	—	Power supply (+3.3V)
187	CVBS	O	Video Composite signal output (Not used in this set)
188	DACVSSB	—	Ground
189	C	O	Video chroma signal output
190	DACVddb	—	Power supply (+3.3V)
191	Y	O	Video Y signal output
192	DACVSSC	—	Ground
193	FS	I	Full Scale Adjustment setting terminal
194	VREF	I	Reference Voltage input terminal
195	DACVDDC	—	Power supply (+3.3V)
196	VBUS_OE	O	VBUS power control signal output
197	VBUS_OC	I	VBUS detect signal input
198	SCORE/DIR_XSTATE	I	DIR status signal input
199	SPMCK	I	DIR MCK clock input
200	SPBCK	I	DIR BCK clock input
201	SPLRCK	I	DIR LRCK clock input
202	ADIN (SPDATA)	I	Audio digital data input
203	ACLK	O	A/D converter and DAMP clock output
204	ABCK	O	A/D converter and DAMP BCK clock output
205	ALRCK	O	A/D converter and DAMP LRCK clock output
206	MC_DATA (ADIN)	I	A/D converter data input
207	DVDD3	—	Power supply (+3.3V)

Pin No.	Pin Name	I/O	Description
208	MIC	O	Not used (Fixed to Ground)
209	WIDE	O	WIDE select signal output
210	RGB_SEL/DSEL	O	Video output select signal output
211	TRG_SW	I	Not used (Pull up)
212	DVDD18	—	Power supply (+3.3V)
213	KMOD	O	Not used (Open)
214	XVOICE/DIR_CSFLAG	I	Channel status renewal flag input
215	SPDIF	O	Not used (Open)
216	APLLVDD3	—	Power supply (+3.3V)
217	APLLCAP	—	Ext capacitor connected terminal
218	APLLVSS	—	Ground
219	ADACVSS2	—	Ground
220	ADACVSS1	—	Ground
221	DIR_CE	O	DIR I/F chip select signal output
222	ASDATA3	O	Audio digital signal output to D-AMP (Not used in this set)
223	ASDATA2	O	Audio digital signal output to D-AMP
224	AVCM	—	Ext capacitor connected terminal
225	ASDATA1	O	Audio digital signal output to D-AMP
226	ASDATA0	O	Audio digital signal output to D-AMP
227	DIR_CL	O	DIR I/F clock output
228	ADACVDD1	—	Power supply (+3.3V)
229	ADACVDD2	—	Power supply (+3.3V)
230	Rt/DIR_DI	O	DIR I/F data output
231	Lt/DIR_DO	I	DIR I/F data input
232	ADACSS3	—	Ground
233	ADACVDD3	—	Power supply (+3.3V)
234	SADCVDD18	—	Power supply (+1.8V)
235	SADCVSS18	—	Ground
236	FGND18	—	Ground
237	RFVDD18	—	Power supply (+1.8V)
238	XTALO	O	Crystal output for main clock (27MHz)
239	XTALI	I	Crystal input for main clock (27MHz)
240	JITFO	O	The output terminal of RF jitter meter
241	JITFN	I	The input terminal of RF jitter meter
242	PLLVSS	—	Ground
243	PLLVDD3	—	Power supply (+3.3V)
244	LPFON	O	The negative output of loop filter amplifier
245	LPFIP	I	The positive input terminal of loop filter amplifier
246	LPFIN	I	The negative input terminal of loop filter amplifier
247	LPFOP	O	The positive output of loop filter amplifier
248	ADCVDD3	—	Power supply (+3.3V)
249	ADCVSS	—	Ground
250	RFVDD3	—	Power supply (+3.3V)
251	RFRPDC	O	RF ripple detect output
252	RFRPAC	I	RF ripple detect input (through AC-coupling)
253	HRFZC	I	High frequency RF ripple zero crossing
254	CRTPLP	O	Defect level filter capacitor connected terminal
255	RFGND18	—	Power supply (+3.3V)
256	OSP	O	RF offset cancellation capacitor connecting

HCD-DZ370/DZ560/DZ570/DZ660/DZ777

MAIN BOARD (5/9) IC501 R5F3640DDFAR (SYSTEM CONTROL)

Pin No.	Pin Name	I/O	Description
1	DAMP_SCDT/DIR_DIN	O	D-AMP processor and DIR data output
2	DAMP_SHIFT/DIR_CLK	O	D-AMP processor and DIR clock output
3	CEC_RX_IN	I	CEC data input
4	SIRCS_IN	I	Sircs input
5	DSP_MOSI/ASEL4	O	Audio input select signal output.
6	DSP_MISO/ASEL5	O	Audio input select signal output.
7	DSP_SPICLK	O	Not used (Open)
8	BYTE	I	External data bus input. (Connected to ground)
9	CNVSS	I	Change processor mode input (L: Single chip mode)
10, 11	EN_A, EN_B	I	Volume control pulse input for ENCODER
12	RESET	I	System reset signal input
13	XOUT	O	Crystal output for main clock (5MHz)
14	VSS	—	Ground
15	XIN	I	Crystal input for main clock (5MHz)
16	VCC	—	Power supply (BUP+3.3V)
17	NMI	I	Not used (Fixed to "H" (BUP+3.3V))
18	DIR_ZERO INT2	O	Not used (Open)
19	DIRCSFLAG INT3 /A.CAL_OUT_LEVEL	I	Out level detect for auto calibration input
20	AC_CUT INT0	I	AC-CUT detect signal input
21	FL_CLK/LED_CLK	O	FL and LED driver clock output
22	CEC_TX_OUT	O	CEC data output
23	FL_CS/STB	O	FL and LED driver chip select signal output
24	FL_D_OUT/LED_DATA	O	FL and LED driver data output
25	DIVER_RST_CS/ S-AIR_SRC_MUTE	O	Not used (Open)
26	MIC_GAIN	O	MIC gain control signal output
27	CDM_OPEN_SW/ XM_SEL	I	CDM open switch signal input
28	DC_CONT	O	A.CAL MIC DC control signal output
29	DMP_RX_IN	I	DMPOART data input
30	DMP_TX_OUT	O	DMPOART data output
31	DVD_SID	O	Serial data output to CDX9917R/CDX9927R
32	DVD_SOD	I	Serial data input from CDX9917R/CDX9927R
33	DVD_SCO	I	Serial clock input from CDX9917R/CDX9927R
34	DVD_XIFBUSY	O	RTS signal output to CDX9917R/CDX9927R
35	XM_TX_OUT/ MIC_DET_OUT	O	Not used (Open)
36	XM_RX_IN/KRMOD	I	Not used (Open)
37	DVD XIFCS	I	Chip select signal output from CXD9917R/CDX9927R
38	MTK RST	O	System reset output
39	P_CONT1	O	Power control signal output
40	P_CONT2	O	Power control signal output
41	WRITE EMP P_CONT3	O	Power control signal output
42	DRIVE_RST(EN)	O	D-AMP driver reset signal output
43	SD(DIAG)/PVDD_DET	I	D-AMP driver shut down signal input
44	OVERFLOW1	I	D-AMP processor F/C/S over flow detect signal input
45	OVERFLOW2	I	D-AMP processor SW over flow detect signal input
46	WRITE CE	I	Not used (Fixed to "H" (+3.3V))
47	I2C_DATA	I/O	EEPROM I2C serial data input/output
48	I2C_CLK	I/O	EEPROM I2C serial clock input/output
49	DAMP LATCH3	O	D-AMP processor latch-3 signal output
50	DAMP INIT	O	D-AMP processor reset signal output
51	DAMP SOFT MUTE	O	D-AMP processor soft mute signal output

Pin No.	Pin Name	I/O	Description
52	M_ST	O	LINK (Multi STEREO) control signal output
53	HP_MUTE	O	Headphone mute signal output
54	S-AIR_ADC_SEL	O	S-AIR ADC selector signal output
55	MIC_CLK	O	Not used (Open)
56	DAMP LATCH2	O	D-AMP processor latch-2 signal output
57	DC_DET	I	Speaker DC balance protect signal input
58	S-AIR_RST	O	S-AIR reset signal output
59	DIR_HCE	O	Not used (Open)
60	DIR_ERR	O	Not used (Open)
61	DIR_XSTATE	O	Not used (Open)
62	VCC	—	Power supply (BUP+3.3V)
63	HDMI_PCONT	O	HDMI hot plug power control signal output
64	VSS	—	Ground
65	DAMP LATCH1	O	D-AMP processor latch-1 signal output
66	JACK1/JACK2/ S-AIR_DET	I	MIC or Headphone insert detect signal input
67	GPIO2	I	S-AIR interrupt signal input
68	TUNED	I	TUNER TUNED signal input
69	ST_CLK	O	TUNER clock output
70	ST_DO	I	TUNER data input
71	ST_CE	O	TUNER chip enable signal output
72	ST_DI	O	TUNER data output
73	DSP_INTR	O	Not used (Open)
74	INT4 KEY INT	I	Wake up signal input from function key
75	INT3 RDS_CLK/ LED_LAT	I	RDS clock input
76	RDS-DATA/ XM_RST(PCONT)	I	RDS data input
77	S-AIR I2C_SDA	I/O	I2C serial data input/output for S-AIR
78	S-AIR I2C_SCL	I/O	I2C serial clock input/output for S-AIR
79	DSP_SF_CE	O	Not used (Open)
80	2ND_XM_SEL/ TV_SEL/MIC_DATA	O	TV control signal output
81	ASEL3/DSP_SPIDS/ XM_SRC_RST	O	Audio select signal output
82	V_SEL0	O	Video select signal output
83	V_SEL1	O	Video select signal output
84	IO_CE/ASEL0	O	Audio select signal output
85	IO_RESET/ASEL1	O	Audio select signal output
86	IO_DI/ASEL2	O	Audio select signal output
87	IO_DO/VSEL2	O	Video select signal output
88	IO_CLK	O	Not used (Open)
89	DMP_DET	I	DMPOART detect signal input
90	MONO/ST_DET	I	AUDIO IN jack MONO or STEREO detect signal input
91	A.CAL MIC LEVEL/ DSP_MASTER	I	MIC level detect signal input for auto calibration
92	DESTINATION	I	Destination select input
93	MODEL	I	Model select input
94	KEY2	I	Key input 2 input
95	KEY1	I	Key input 1 input
96	VSS	—	Ground
97	KEY0	I	Key input 0 input
98	VREF	—	Reference voltage (E3.3V)
99	VCC	—	Power supply (BUP+3.3V)
100	DIR_HDOUT	O	Not used (Pull up)

SECTION 7 EXPLODED VIEWS

Note:


- XX and -X mean standardized parts, so they may have some difference from the original one.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.

• Abbreviation

AUS	: Australian model
E3	: 240 V AC Area in E model
E12	: 220-240 V AC area in E model
E15	: Iran model
E32	: 110 – 240V AC area in E model
KR	: Korean model
MX	: Mexican model
TW	: Taiwan model

The components identified by mark $\triangle$ or dotted line with mark $\triangle$ are critical for safety.
Replace only with part number specified.


The components identified by mark $\triangle$ contain confidential information.
Strictly follow the instructions whenever the components are repaired and/or replaced.

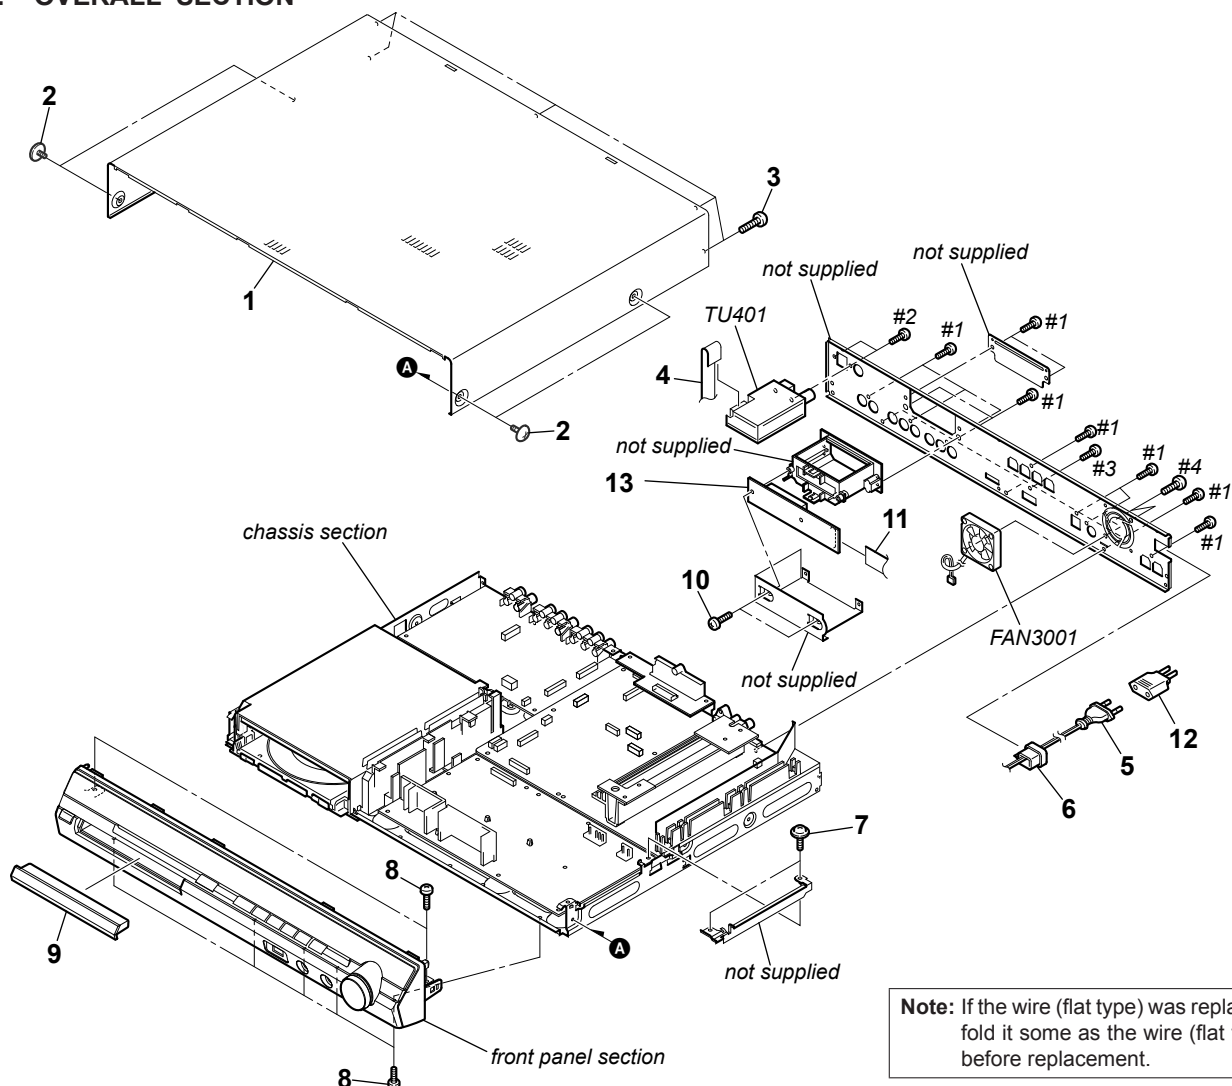7-1. OVERALL SECTION

Note: If the wire (flat type) was replaced, fold it some as the wire (flat type) before replacement.


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
1	3-273-758-01	CASE (DSR)		9	3-273-727-01	PANEL, LOADING (DSR)	
2	3-363-099-22	SCREW (CASE 3 TP2)		10	3-077-331-11	+BV 3 (3-CR)	
3	3-704-515-32	SCREW (BV/RING)		11	1-828-350-11	WIRE (FLAT TYPE) (17 CORE)	
4	1-827-720-11	WIRE (FLAT TYPE) (11 CORE) (DZ560/DZ660)		$\triangle$ 12	1-569-008-22	ADAPTOR, CONVERSION 2P (E15,E32,PX)	
4	1-828-955-11	WIRE (FLAT TYPE) (9 CORE) (DZ370/DZ570/DZ777)		13	A-1438-875-A	S-AIR-CON BOARD, COMPLETE	
$\triangle$ 5	1-769-079-61	CORD, POWER (KR)		FAN3001	1-787-331-11	FAN, D.C.	
$\triangle$ 5	1-827-597-42	CORD, POWER (TW)		TU401	1-693-759-11	TUNER UNIT (FM/AM) (ANTENNA) (AEP,UK)	
$\triangle$ 5	1-834-965-11	CORD, POWER (MX)		TU401	1-693-760-11	TUNER UNIT (FM/AM) (ANTENNA) (KR)	
$\triangle$ 5	1-834-966-21	CORD, POWER (AEP,E3,E12,E15,E32,PX)		TU401	1-693-761-11	TUNER UNIT (FM/AM) (ANTENNA) (EXCEPT AEP,UK,KR)	
$\triangle$ 5	1-834-967-21	CORD, POWER (AUS)		#1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	
$\triangle$ 5	1-835-078-21	CORD, POWER (UK)		#2	7-685-871-01	SCREW +BVTT 3X6 (S)	
6	3-703-244-00	BUSHING (2104), CORD		#3	7-682-547-04	SCREW +B 3X6	
7	2-677-839-01	+PWH 3X8 (SUMITITE)		#4	7-685-881-09	SCREW +BVTT 4X8 (S)	
8	3-077-331-21	+BV 3 (3-CR)					

7-2. FRONT PANEL SECTION

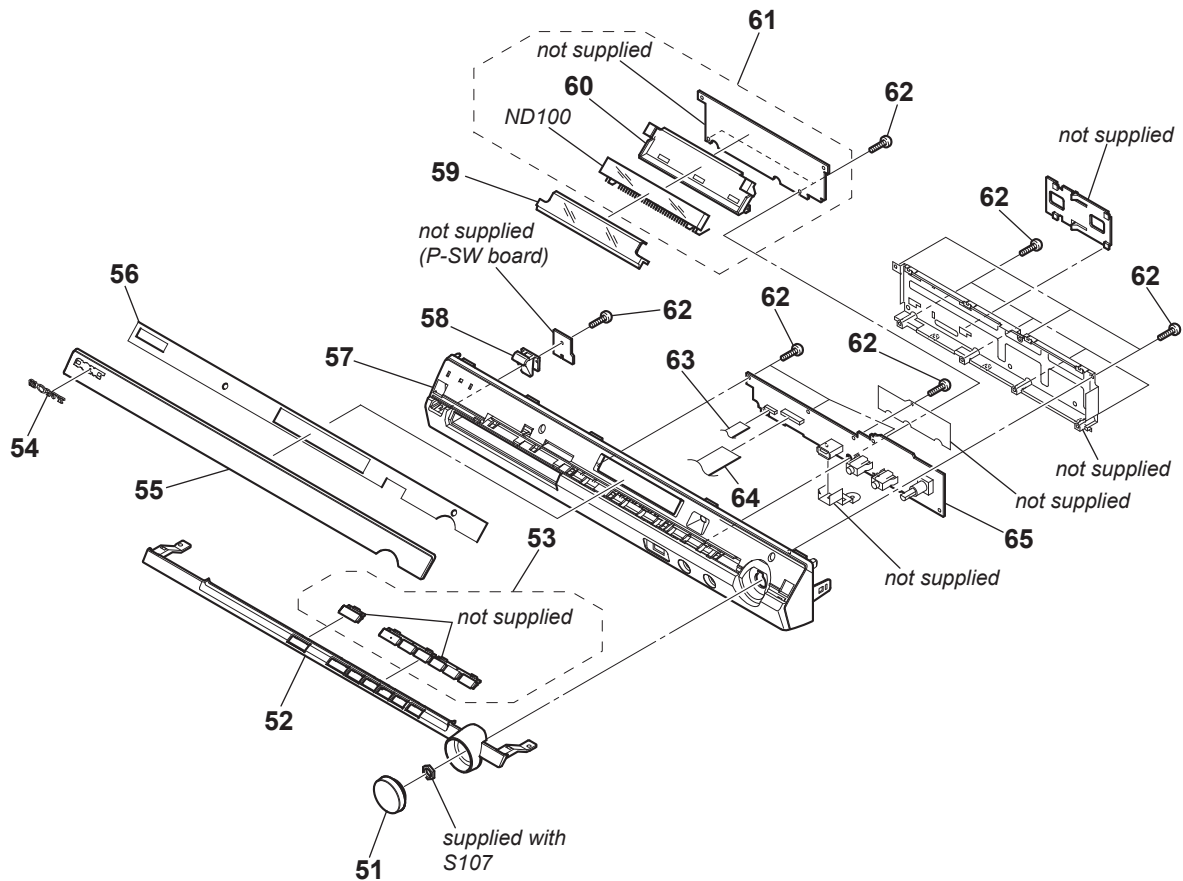

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
51	2-889-990-01	KNOB (VOL)		57	3-273-722-21	PANEL, FRONT (DSR-1) (DZ370/DZ570/DZ777)	
52	3-273-726-01	ORNAMENT (DSR) (DZ370/DZ560/DZ570)		58	3-273-730-01	BUTTON (POWER-DSR)	
52	3-273-726-11	ORNAMENT (DSR) (DZ660/DZ777)		59	3-273-732-01	FILTER, COLOR	
53	3-273-728-01	BUTTON (PLAY-SP) (DZ370/DZ560/DZ570/DZ660)		60	3-273-731-01	HOLDER (FL)	
53	3-273-729-01	BUTTON (PLAY) (DZ777)		61	A-1382-431-A	FL BOARD, COMPLETE	
54	3-943-995-01	EMBLEM (NO. 5), SONY		62	3-087-053-01	+BVTP 2.6 (3CR)	
55	3-273-724-51	WINDOW, INDICATION (DSR-1) (DZ570)		63	1-828-307-11	WIRE (FLAT TYPE) (9 CORE)	
55	3-273-724-91	WINDOW, INDICATION (DSR-1) (DZ560)		64	1-828-363-11	WIRE (FLAT TYPE) (19 CORE)	
55	3-273-725-01	WINDOW, INDICATION (DSR-2) (DZ777)		65	A-1382-433-A	JACK BOARD, COMPLETE	
55	3-273-725-71	WINDOW, INDICATION (DSR-2) (DZ660)				(EXCEPT E12,E32,MX,PX)	
55	3-273-725-81	WINDOW, INDICATION (DSR-2) (DZ370)		65	A-1382-542-A	JACK BOARD, COMPLETE (E12,E32,MX,PX)	
56	3-280-669-01	SHEET (DSR WINDOW), ADHESIVE		ND100	1-519-988-11	INDICATOR TUBE, FLUORESCENT	
57	3-273-722-01	PANEL, FRONT (DSR-1) (DZ560/DZ660)					


Note: If the wire (flat type) was replaced, fold it some as the wire (flat type) before replacement.

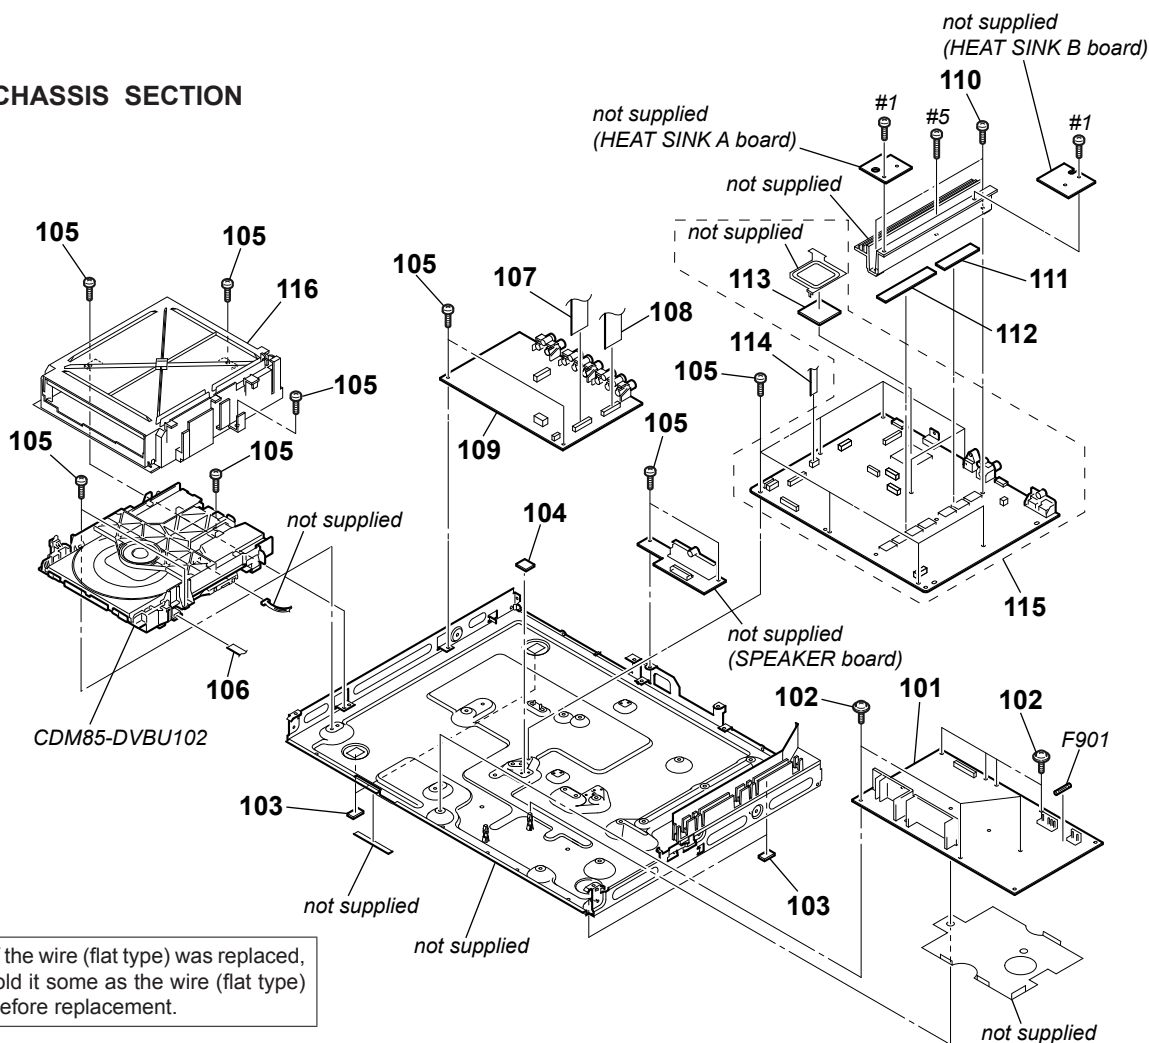

Note: If the wire (flat type) was replaced, fold it some as the wire (flat type) before replacement.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
101	A-1382-402-A	POWER BOARD, COMPLETE (AEP,UK)		△ 115	A-1438-879-A	MAIN BOARD, COMPLETE (for SERVICE) (DZ560)	
101	A-1392-694-A	POWER BOARD, COMPLETE (E3,E12,E15,AUS,KR)		△ 115	A-1438-894-A	MAIN BOARD, COMPLETE (for SERVICE) (DZ570:E3,E15)	
101	A-1392-696-A	POWER BOARD, COMPLETE (TW)		△ 115	A-1438-911-A	MAIN BOARD, COMPLETE (for SERVICE) (DZ570:E32)	
101	A-1452-054-A	POWER BOARD, COMPLETE (MX)		△ 115	A-1438-926-A	MAIN BOARD, COMPLETE (for SERVICE) (DZ570:MX)	
101	A-1452-056-A	POWER BOARD, COMPLETE (E32,PX)		△ 115	A-1438-935-A	MAIN BOARD, COMPLETE (for SERVICE) (DZ660)	
102	2-677-839-01	+PWH 3X8 (SUMITITE)		△ 115	A-1438-955-A	MAIN BOARD, COMPLETE (for SERVICE) (DZ777:E3,E15)	
103	4-232-478-31	FOOT		△ 115	A-1520-942-A	MAIN BOARD, COMPLETE (for SERVICE) (DZ370)	
104	4-231-099-91	SHEET, RADIATION		△ 115	A-1520-960-A	MAIN BOARD, COMPLETE (for SERVICE) (DZ570:E12)	
105	3-077-331-21	+BV 3 (3-CR)		△ 115	A-1520-967-A	MAIN BOARD, COMPLETE (for SERVICE) (DZ570:AUS)	
106	1-828-293-11	WIRE (FLAT TYPE) (5 CORE)		△ 115	A-1520-974-A	MAIN BOARD, COMPLETE (for SERVICE) (DZ570:TW)	
107	1-828-349-11	WIRE (FLAT TYPE) (17 CORE) (DZ370/DZ570/DZ777)		△ 115	A-1520-982-A	MAIN BOARD, COMPLETE (for SERVICE) (DZ570:KR)	
107	1-828-359-11	WIRE (FLAT TYPE) (19 CORE) (DZ560/DZ660)		△ 115	A-1520-993-A	MAIN BOARD, COMPLETE (for SERVICE) (DZ777:AUS)	
108	1-828-347-11	WIRE (FLAT TYPE) (17 CORE) (DZ370/DZ570/DZ777)		△ 115	A-1521-002-A	MAIN BOARD, COMPLETE (for SERVICE) (DZ777:KR)	
108	1-828-357-11	WIRE (FLAT TYPE) (19 CORE) (DZ560/DZ660)		△ 115	A-1546-349-A	MAIN BOARD, COMPLETE (for SERVICE) (DZ570:PX)	
109	A-1438-877-A	IO-SCART BOARD, COMPLETE (DZ560)		116	3-273-733-01	COVER (CDM-DSR)	
109	A-1438-892-A	IO-COMPONENT BOARD, COMPLETE (DZ370/DZ570:EXCEPT KR)		△ F901	1-533-311-12	FUSE, GLASS CYLINDRICAL (DIA. 5) (8A/125V) (MX,TW)	
109	A-1438-909-A	IO-COMPONENT BOARD, COMPLETE (DZ570:KR)		△ F901	1-576-233-51	FUSE (H.B.C.) (T6.3AL/250V) (EXCEPT E32,MX,PX,TW)	
109	A-1438-933-A	IO-SCART BOARD, COMPLETE (DZ660)		△ F901	1-576-300-51	FUSE (H.B.C.) (T8AL/250V) (E32,PX)	
109	A-1438-953-A	IO-COMPONENT BOARD, COMPLETE (DZ777:EXCEPT KR)		#1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	
109	A-1438-963-A	IO-COMPONENT BOARD, COMPLETE (DZ777:KR)		#5	7-685-648-79	SCREW +BVTP 3X12 TYPE2 IT-3	
110	3-077-331-11	+BV 3 (3-CR)					
111	3-100-158-01	SHEET, RADIATION (DZ370/DZ777)					
111	3-100-158-21	SHEET, RADIATION (DZ560/DZ570/DZ660)					
112	3-100-158-11	SHEET, RADIATION					
113	4-231-099-41	SHEET, RADIATION					
114	1-828-287-11	WIRE (FLAT TYPE) (5 CORE)					

7-4. DVD MECHANISM DECK SECTION
(CDM85-DVBU102)

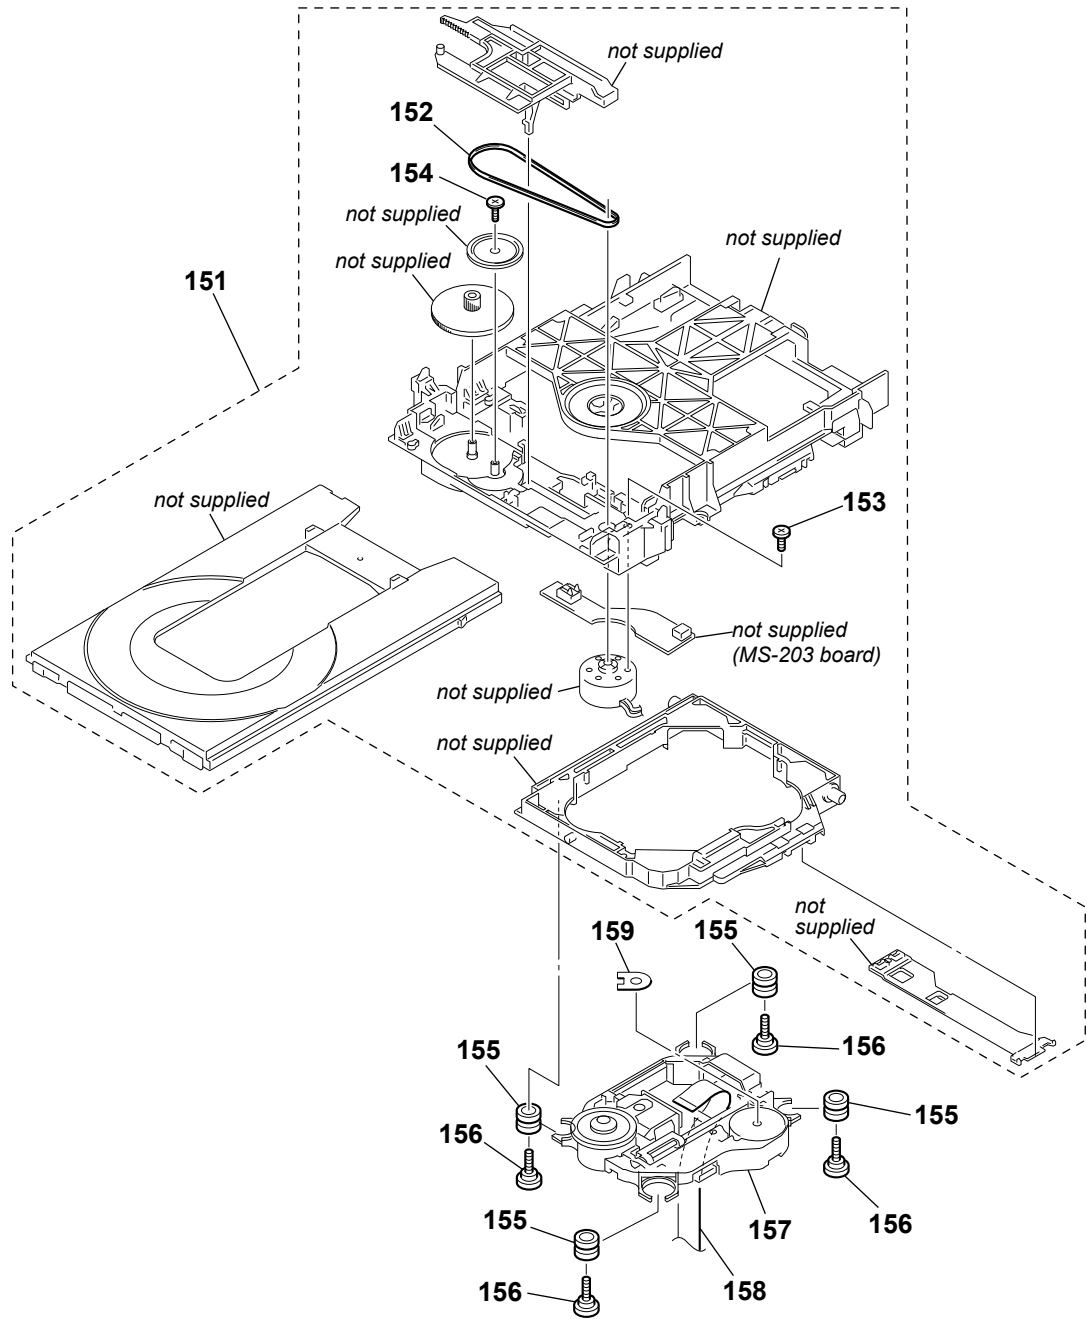

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
151	A-6071-669-A	LOADING ASSY (M)		156	3-087-599-01	INSULATOR SCREW	
152	3-088-371-01	BELT		△ 157	8-820-321-05	OPTICAL PICK-UP KHM-313CAA/C2RP	
153	4-974-725-11	SCREW (M1.7X2.5), P		158	1-828-773-51	WIRE (FLAT TYPE) (24 CORE)	
154	4-674-137-11	SCREW (PTP 2X5)		159	3-113-851-01	SHEET (E12)	
155	2-634-618-01	INSULATOR					

Note: If the wire (flat type) was replaced, fold it some as the wire (flat type) before replacement.

SECTION 8
ELECTRICAL PARTS LIST

Note:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- XX and -X mean standardized parts, so they may have some difference from the original one.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- RESISTORS
All resistors are in ohms.
METAL: Metal-film resistor.
METAL OXIDE: Metal oxide-film resistor.
F: nonflammable

- CAPACITORS
uF: μ F
COILS
uH: μ H
SEMICONDUCTORS
In each case, u: μ , for example:
uA. . . : μ A. . . , μ PA. . . ,
uPB. . . : μ PB. . . , μ PC. . . ,
uPD. . . : μ PD. . .
Abbreviation
AUS : Australian model
E3 : 240 V AC Area in E model
E12 : 220-240 V AC area in E model
E15 : Iran model
E32 : 110 – 240V AC area in E model
KR : Korean model
MX : Mexican model
TW : Taiwan model

When indicating parts by reference number, please include the board name.

The components identified by mark $\triangle$ or dotted line with mark $\triangle$ are critical for safety.
Replace only with part number specified.

The components identified by mark $\triangle$ contain confidential information.
Strictly follow the instructions whenever the components are repaired and/or replaced.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
	A-1382-431-A	FL BOARD, COMPLETE *****		R101	1-216-839-11	METAL CHIP 33K	5% 1/10W
	3-273-731-01	HOLDER (FL) < CAPACITOR >		R102	1-216-805-11	METAL CHIP 47	5% 1/10W
C101	1-126-382-11	ELECT 100uF	20% 16V	R103	1-216-805-11	METAL CHIP 47	5% 1/10W
C102	1-162-968-11	CERAMIC CHIP 0.0047uF	10% 50V	R104	1-216-809-11	METAL CHIP 100	5% 1/10W
C103	1-163-037-11	CERAMIC CHIP 0.022uF	10% 50V	R105	1-216-809-11	METAL CHIP 100	5% 1/10W
C104	1-162-974-11	CERAMIC CHIP 0.01uF	50V				
C105	1-119-943-11	ELECT 47uF	20% 50V	R106	1-216-809-11	METAL CHIP 100	5% 1/10W
C106	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V	R107	1-216-844-11	METAL CHIP 82K	5% 1/10W
C107	1-126-157-11	ELECT 10uF	20% 16V	R108	1-216-805-11	METAL CHIP 47	5% 1/10W
C108	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V			< TRANSFORMER >	
C116	1-126-157-11	ELECT 10uF	20% 16V	T100	1-443-645-11	TRANSFORMER, DC-DC CONVERTER	
C117	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V			*****	
C189	1-165-989-11	CERAMIC CHIP 10uF	10% 6.3V	A-1438-892-A		IO-COMPONENT BOARD, COMPLETE (DZ370/DZ570:EXCEPT KR)	
C190	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V	A-1438-909-A		IO-COMPONENT BOARD, COMPLETE (DZ570:KR)	
		< CONNECTOR >		A-1438-953-A		IO-COMPONENT BOARD, COMPLETE (DZ777:EXCEPT KR)	
CN100	1-779-546-11	CONNECTOR, FFC (LIF(NON-ZIF)) 9P		A-1438-963-A		IO-COMPONENT BOARD, COMPLETE (DZ777:KR)	
		< DIODE >				*****	
D100	6-501-579-01	DIODE MC2837				< CAPACITOR >	
D101	6-501-579-01	DIODE MC2837		C454	1-165-908-11	CERAMIC CHIP 1uF	10% 10V
D102	6-501-729-01	DIODE MAZ8051GLLS0		C456	1-126-933-11	ELECT 100uF	20% 16V
D103	6-501-817-01	DIODE MA2J1110GLS0		C457	1-165-908-11	CERAMIC CHIP 1uF	10% 10V
		< IC >		C458	1-126-933-11	ELECT 100uF	20% 16V
IC100	6-701-729-01	IC PT6315		C460	1-165-908-11	CERAMIC CHIP 1uF	10% 10V
IC101	6-600-349-21	IC NJL23H400A (IR)					
		< COIL >		C462	1-126-916-11	ELECT 1000uF	20% 6.3V
L100	1-410-671-31	INDUCTOR 47uH		C463	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V
L101	1-410-671-31	INDUCTOR 47uH		C466	1-126-965-11	ELECT 22uF	20% 50V
L102	1-410-671-31	INDUCTOR 47uH		C467	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V
		< FLUORESCENT INDICATOR TUBE >		C468	1-162-966-11	CERAMIC CHIP 0.0022uF	10% 50V
ND100	1-519-988-11	INDICATOR TUBE, FLUORESCENT					
		< TRANSISTOR >		C470	1-126-964-11	ELECT 10uF	20% 50V
Q100	6-550-065-01	TRANSISTOR CPH5504-TL-E		C473	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V
		< RESISTOR >		C474	1-126-925-11	ELECT 470uF	20% 10V
R100	1-216-828-11	METAL CHIP 3.9K	5% 1/10W	C476	1-126-964-11	ELECT 10uF	20% 50V
				C478	1-126-916-11	ELECT 1000uF	20% 6.3V
				C480	1-165-908-11	CERAMIC CHIP 1uF	10% 10V
				C481	1-162-927-11	CERAMIC CHIP 100PF	5% 50V
				C482	1-162-927-11	CERAMIC CHIP 100PF	5% 50V
				C488	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V
				C489	1-162-966-11	CERAMIC CHIP 0.0022uF	10% 50V (DZ777)
				C491	1-162-960-11	CERAMIC CHIP 220PF	10% 50V
				C495	1-104-662-11	ELECT 22uF	20% 25V
				C496	1-162-960-11	CERAMIC CHIP 220PF	10% 50V

HCD-DZ370/DZ560/DZ570/DZ660/DZ777

IO-COMPONENT IO-SCART

Ref. No.	Part No.	Description	Remark		
R500	1-216-821-11	METAL CHIP	1K	5%	1/10W
R503	1-216-829-11	METAL CHIP	4.7K	5%	1/10W (DZ777)
R504	1-216-829-11	METAL CHIP	4.7K	5%	1/10W (DZ777)
R505	1-216-833-11	METAL CHIP	10K	5%	1/10W
R506	1-216-829-11	METAL CHIP	4.7K	5%	1/10W (DZ777)
R507	1-216-841-11	METAL CHIP	47K	5%	1/10W (DZ777)
R508	1-216-841-11	METAL CHIP	47K	5%	1/10W (DZ777)
R509	1-216-821-11	METAL CHIP	1K	5%	1/10W
R513	1-216-864-11	SHORT CHIP	0		
R514	1-216-864-11	SHORT CHIP	0		
R515	1-216-864-11	SHORT CHIP	0		
R516	1-216-864-11	SHORT CHIP	0		
R523	1-216-864-11	SHORT CHIP	0		
R527	1-216-841-11	METAL CHIP	47K	5%	1/10W
R528	1-216-841-11	METAL CHIP	47K	5%	1/10W
R533	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
R536	1-216-833-11	METAL CHIP	10K	5%	1/10W (DZ777)
R538	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
R539	1-216-841-11	METAL CHIP	47K	5%	1/10W
R540	1-216-841-11	METAL CHIP	47K	5%	1/10W
R541	1-216-864-11	SHORT CHIP	0		
R543	1-216-821-11	METAL CHIP	1K	5%	1/10W (DZ777)
R546	1-216-864-11	SHORT CHIP	0		
R548	1-216-864-11	SHORT CHIP	0		
R550	1-216-833-11	METAL CHIP	10K	5%	1/10W (DZ777)
R551	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R552	1-216-841-11	METAL CHIP	47K	5%	1/10W
R553	1-216-841-11	METAL CHIP	47K	5%	1/10W
R556	1-216-821-11	METAL CHIP	1K	5%	1/10W (DZ777)
R557	1-216-809-11	METAL CHIP	100	5%	1/10W
R558	1-216-809-11	METAL CHIP	100	5%	1/10W
R559	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R561	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R562	1-216-864-11	SHORT CHIP	0 (DZ370/DZ570)		
R563	1-216-864-11	SHORT CHIP	0 (DZ777)		
R564	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R566	1-216-841-11	METAL CHIP	47K	5%	1/10W
R567	1-216-841-11	METAL CHIP	47K	5%	1/10W
R575	1-216-833-11	METAL CHIP	10K	5%	1/10W
R576	1-216-864-11	SHORT CHIP	0 (DZ370/DZ570)		
R577	1-216-864-11	SHORT CHIP	0 (DZ777)		
R579	1-216-821-11	METAL CHIP	1K	5%	1/10W
R582	1-216-833-11	METAL CHIP	10K	5%	1/10W
R584	1-216-821-11	METAL CHIP	1K	5%	1/10W
R591	1-216-864-11	SHORT CHIP	0		
R592	1-216-809-11	METAL CHIP	100	5%	1/10W
R593	1-216-864-11	SHORT CHIP	0		
R595	1-216-864-11	SHORT CHIP	0		
R598	1-216-833-11	METAL CHIP	10K	5%	1/10W
R599	1-216-833-11	METAL CHIP	10K	5%	1/10W
R600	1-216-845-11	METAL CHIP	100K	5%	1/10W
R601	1-216-845-11	METAL CHIP	100K	5%	1/10W
R602	1-216-845-11	METAL CHIP	100K	5%	1/10W

Ref. No.	Part No.	Description			Remark
R603	1-216-845-11	METAL CHIP	100K	5%	1/10W
R609	1-216-864-11	SHORT CHIP	0		
R610	1-216-864-11	SHORT CHIP	0		
R620	1-216-821-11	METAL CHIP	1K	5%	1/10W
R621	1-215-865-11	METAL OXIDE	220	5%	1W
R622	1-216-864-11	SHORT CHIP	0		
R623	1-216-864-11	SHORT CHIP	0		

	A-1438-877-A	IO-SCART BOARD, COMPLETE (DZ560)			
	A-1438-933-A	IO-SCART BOARD, COMPLETE (DZ660)			

< CAPACITOR >					
C400	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
C401	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C402	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C403	1-126-933-11	ELECT	100uF	20%	16V
C404	1-126-933-11	ELECT	100uF	20%	16V
C405	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C406	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C407	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C408	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C409	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C410	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C411	1-126-933-11	ELECT	100uF	20%	16V
C412	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C413	1-126-933-11	ELECT	100uF	20%	16V
C414	1-126-933-11	ELECT	100uF	20%	16V
C415	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C416	1-126-964-11	ELECT	10uF	20%	50V
C417	1-126-916-11	ELECT	1000uF	20%	6.3V
C419	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C420	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C421	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C422	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C423	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C424	1-126-933-11	ELECT	100uF	20%	16V
C425	1-126-964-11	ELECT	10uF	20%	50V
C443	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V (DZ660)
C481	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C482	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C491	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
C495	1-104-662-11	ELECT	22uF	20%	25V
C496	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
C499	1-104-662-11	ELECT	22uF	20%	25V
C504	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C505	1-162-960-11	CERAMIC CHIP	220PF	10%	50V (DZ660)
C509	1-104-662-11	ELECT	22uF	20%	25V (DZ660)
C511	1-162-960-11	CERAMIC CHIP	220PF	10%	50V (DZ660)
C512	1-104-662-11	ELECT	22uF	20%	25V (DZ660)
C518	1-126-960-11	ELECT	1uF	20%	50V
C521	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
C524	1-104-662-11	ELECT	22uF	20%	25V
C525	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
C528	1-126-933-11	ELECT	100uF	20%	16V (DZ660)

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
C529	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V (DZ660)	JW433	1-216-864-11	SHORT CHIP	0		
C530	1-104-662-11	ELECT	22uF	20%	25V			< COIL >			
C533	1-126-960-11	ELECT	1uF	20%	50V						
C535	1-162-960-11	CERAMIC CHIP	220PF	10%	50V	L401	1-469-525-91	INDUCTOR	10uH		
C536	1-104-662-11	ELECT	22uF	20%	25V	L407	1-469-525-91	INDUCTOR	10uH		
								< TRANSISTOR >			
C537	1-162-960-11	CERAMIC CHIP	220PF	10%	50V	Q400	8-729-038-28	TRANSISTOR	RT1N441C-TP-1		
C538	1-104-662-11	ELECT	22uF	20%	25V	Q401	8-729-038-28	TRANSISTOR	RT1N441C-TP-1		
C541	1-126-933-11	ELECT	100uF	20%	16V	Q402	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF		
C542	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	Q403	8-729-027-52	TRANSISTOR	DTC124EKA-T146		
C548	1-127-573-11	CERAMIC CHIP	1uF	10%	16V	Q404	8-729-027-23	TRANSISTOR	DTA114EKA-T146		
C549	1-126-947-11	ELECT	47uF	20%	35V	Q405	8-729-038-28	TRANSISTOR	RT1N441C-TP-1		
C552	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	Q406	8-729-027-23	TRANSISTOR	DTA114EKA-T146		
C556	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	Q408	8-729-027-52	TRANSISTOR	DTC124EKA-T146		
C557	1-126-933-11	ELECT	100uF	20%	16V	Q409	8-729-027-52	TRANSISTOR	DTC124EKA-T146		
C558	1-104-662-11	ELECT	22uF	20%	25V	Q410	8-729-027-52	TRANSISTOR	DTC124EKA-T146 (DZ660)		
C559	1-104-662-11	ELECT	22uF	20%	25V	Q411	8-729-027-52	TRANSISTOR	DTC124EKA-T146 (DZ660)		
C561	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V	Q412	8-729-027-52	TRANSISTOR	DTC124EKA-T146		
C562	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V	Q413	8-729-027-52	TRANSISTOR	DTC124EKA-T146		
C569	1-126-964-11	ELECT	10uF	20%	50V			< RESISTOR >			
C620	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V						
C621	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	R400	1-216-815-11	METAL CHIP	330	5%	1/10W
C622	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	R401	1-216-815-11	METAL CHIP	330	5%	1/10W
		< CONNECTOR >				R402	1-216-815-11	METAL CHIP	330	5%	1/10W
CN400	1-816-044-11	CONNECTOR, SQUARE TYPE 21P (EURO AV  OUTPUT (TO TV))				R403	1-216-849-11	METAL CHIP	220K	5%	1/10W
CN401	1-779-287-11	CONNECTOR, FFC (LIF(NON-ZIF)) 19P				R404	1-216-815-11	METAL CHIP	330	5%	1/10W
CN406	1-779-287-11	CONNECTOR, FFC (LIF(NON-ZIF)) 19P									
CN410	1-779-273-11	CONNECTOR, FFC (LIF(NON-ZIF)) 5P				R405	1-216-837-11	METAL CHIP	22K	5%	1/10W
CN412	1-564-706-11	PIN, CONNECTOR (SMALL TYPE) 4P				R406	1-216-811-11	METAL CHIP	150	5%	1/10W
						R407	1-216-811-11	METAL CHIP	150	5%	1/10W
CN414	1-568-830-11	CONNECTOR, FFC 11P				R408	1-216-821-11	METAL CHIP	1K	5%	1/10W
						R409	1-216-833-11	METAL CHIP	10K	5%	1/10W
		< DIODE >									
D401	6-501-817-01	DIODE MA2J1110GLS0				R410	1-216-811-11	METAL CHIP	150	5%	1/10W
D402	6-501-817-01	DIODE MA2J1110GLS0				R411	1-216-841-11	METAL CHIP	47K	5%	1/10W
D407	8-719-058-24	DIODE RB501V-40TE-17				R412	1-216-811-11	METAL CHIP	150	5%	1/10W
D411	6-501-579-01	DIODE MC2837				R413	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
D412	6-501-728-01	DIODE MAZ8051G0LS0				R414	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
		< IC >									
IC400	6-710-470-01	IC MM1758AFBE				R415	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
IC407	8-759-385-76	IC MC14052BDR2				R416	1-216-811-11	METAL CHIP	150	5%	1/10W
IC409	8-759-385-76	IC MC14052BDR2 (DZ660)				R417	1-216-811-11	METAL CHIP	150	5%	1/10W
IC411	8-759-385-76	IC MC14052BDR2				R418	1-216-811-11	METAL CHIP	150	5%	1/10W
IC413	6-700-830-01	IC KIA7809API				R419	1-216-811-11	METAL CHIP	150	5%	1/10W
IC620	6-705-338-01	IC TK11250CMCL-G				R421	1-216-864-11	SHORT CHIP	0		
						R422	1-218-285-11	METAL CHIP	75	5%	1/10W
						R424	1-216-821-11	METAL CHIP	1K	5%	1/10W
						R425	1-216-809-11	METAL CHIP	100	5%	1/10W
						R426	1-216-809-11	METAL CHIP	100	5%	1/10W
		< JACK >									
J403	1-778-940-11	JACK, PIN 2P (LINE (AUDIO IN R/L)) (DZ660)				R431	1-218-827-11	METAL CHIP	150	0.5%	1/10W
						R432	1-218-827-11	METAL CHIP	150	0.5%	1/10W
		< JUMPER RESISTOR >				R433	1-218-827-11	METAL CHIP	150	0.5%	1/10W
						R434	1-218-827-11	METAL CHIP	150	0.5%	1/10W
						R435	1-218-827-11	METAL CHIP	150	0.5%	1/10W
JR401	1-216-864-11	SHORT CHIP	0			R479	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
JR403	1-216-864-11	SHORT CHIP	0			R480	1-216-841-11	METAL CHIP	47K	5%	1/10W
JR404	1-216-864-11	SHORT CHIP	0			R481	1-216-841-11	METAL CHIP	47K	5%	1/10W
JR405	1-216-864-11	SHORT CHIP	0			R485	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
JR406	1-216-864-11	SHORT CHIP	0			R486	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
JR407	1-216-864-11	SHORT CHIP	0			R489	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
JW427	1-216-864-11	SHORT CHIP	0			R490	1-216-841-11	METAL CHIP	47K	5%	1/10W
						R491	1-216-841-11	METAL CHIP	47K	5%	1/10W

HCD-DZ370/DZ560/DZ570/DZ660/DZ777

Ver. 1.1

IO-SCART JACK

Ref. No.	Part No.	Description			Remark	Ref. No.	Part No.	Description			Remark
R494	1-216-829-11	METAL CHIP	4.7K	5%	1/10W (DZ660)	R599	1-216-841-11	METAL CHIP	47K	5%	1/10W
R495	1-216-833-11	METAL CHIP	10K	5%	1/10W	R600	1-216-845-11	METAL CHIP	100K	5%	1/10W
R496	1-216-841-11	METAL CHIP	47K	5%	1/10W (DZ660)	R601	1-216-845-11	METAL CHIP	100K	5%	1/10W
R497	1-216-841-11	METAL CHIP	47K	5%	1/10W (DZ660)	R602	1-216-845-11	METAL CHIP	100K	5%	1/10W
R500	1-216-821-11	METAL CHIP	1K	5%	1/10W	R603	1-216-845-11	METAL CHIP	100K	5%	1/10W
R503	1-216-829-11	METAL CHIP	4.7K	5%	1/10W (DZ660)	R609	1-216-864-11	SHORT CHIP	0		
R504	1-216-829-11	METAL CHIP	4.7K	5%	1/10W (DZ660)	R610	1-216-864-11	SHORT CHIP	0		
R505	1-216-833-11	METAL CHIP	10K	5%	1/10W	R611	1-216-864-11	SHORT CHIP	0		
R506	1-216-829-11	METAL CHIP	4.7K	5%	1/10W (DZ660)	R612	1-216-864-11	SHORT CHIP	0		
R507	1-216-841-11	METAL CHIP	47K	5%	1/10W (DZ660)	R620	1-216-821-11	METAL CHIP	1K	5%	1/10W
R508	1-216-841-11	METAL CHIP	47K	5%	1/10W (DZ660)	*****					
R509	1-216-821-11	METAL CHIP	1K	5%	1/10W	A-1382-433-A	JACK BOARD, COMPLETE (EXCEPT E12,E32,MX,PX)				
R513	1-216-864-11	SHORT CHIP	0			A-1382-542-A	JACK BOARD, COMPLETE (E12,E32,MX,PX) *****				
R514	1-216-864-11	SHORT CHIP	0			< CAPACITOR >					
R515	1-216-864-11	SHORT CHIP	0			C121	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
R516	1-216-864-11	SHORT CHIP	0			C122	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
R523	1-216-864-11	SHORT CHIP	0			C124	1-115-156-11	CERAMIC CHIP	1uF		10V
R527	1-216-841-11	METAL CHIP	47K	5%	1/10W	C126	1-125-891-11	CERAMIC CHIP	0.47uF	10%	10V
R528	1-216-841-11	METAL CHIP	47K	5%	1/10W	C127	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
R533	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	C132	1-104-658-11	ELECT	100uF	20%	10V
R536	1-216-833-11	METAL CHIP	10K	5%	1/10W (DZ660)	C133	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
R538	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	C134	1-164-315-11	CERAMIC CHIP	470PF	5%	50V
R539	1-216-841-11	METAL CHIP	47K	5%	1/10W	C135	1-124-589-11	ELECT	47uF	20%	16V
R540	1-216-841-11	METAL CHIP	47K	5%	1/10W	C136	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
R541	1-216-864-11	SHORT CHIP	0			C137	1-124-584-00	ELECT	100uF	20%	10V
R543	1-216-821-11	METAL CHIP	1K	5%	1/10W (DZ660)	C138	1-126-157-11	ELECT	10uF	20%	16V
R546	1-216-864-11	SHORT CHIP	0			C139	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
R548	1-216-864-11	SHORT CHIP	0			C142	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
R549	1-216-864-11	SHORT CHIP	0			C143	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
R550	1-216-833-11	METAL CHIP	10K	5%	1/10W (DZ660)	C144	1-126-157-11	ELECT	10uF	20%	16V
R551	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	C145	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
R552	1-216-841-11	METAL CHIP	47K	5%	1/10W	C147	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
R553	1-216-841-11	METAL CHIP	47K	5%	1/10W	C148	1-164-315-11	CERAMIC CHIP	470PF	5%	50V
R556	1-216-821-11	METAL CHIP	1K	5%	1/10W (DZ660)	C149	1-162-925-11	CERAMIC CHIP	68PF	5%	50V
R557	1-216-809-11	METAL CHIP	100	5%	1/10W	C150	1-110-563-11	CERAMIC CHIP	0.068uF	10%	16V
R558	1-216-809-11	METAL CHIP	100	5%	1/10W	C151	1-164-315-11	CERAMIC CHIP	470PF	5%	50V
R559	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	C152	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
R561	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	C153	1-125-891-11	CERAMIC CHIP	0.47uF	10%	10V
R562	1-216-864-11	SHORT CHIP	0 (DZ560)			C158	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
R563	1-216-864-11	SHORT CHIP	0 (DZ660)			C159	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
R564	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	C165	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
R566	1-216-841-11	METAL CHIP	47K	5%	1/10W	C166	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
R567	1-216-841-11	METAL CHIP	47K	5%	1/10W	C168	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
R575	1-216-833-11	METAL CHIP	10K	5%	1/10W	C169	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
R576	1-216-864-11	SHORT CHIP	0 (DZ560)			< CONNECTOR >					
R577	1-216-864-11	SHORT CHIP	0 (DZ660)			CN102	1-779-277-11	CONNECTOR, FFC (LIF(NON-ZIF)) 9P			
R579	1-216-821-11	METAL CHIP	1K	5%	1/10W	CN103	1-779-287-11	CONNECTOR, FFC (LIF(NON-ZIF)) 19P			
R582	1-216-833-11	METAL CHIP	10K	5%	1/10W	CN104	1-819-866-11	CONNECTOR, USB (A) (USB)			
R584	1-216-821-11	METAL CHIP	1K	5%	1/10W	CN105	1-564-721-11	PIN, CONNECTOR (SMALL TYPE) 5P			
R585	1-216-864-11	SHORT CHIP	0			< DIODE >					
R598	1-216-841-11	METAL CHIP	47K	5%	1/10W	D104	6-501-579-01	DIODE MC2837			

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
D107	6-501-817-01	DIODE MA2J1110GLS0		R135	1-216-833-11	METAL CHIP 10K 5%	1/10W
D108	6-501-579-01	DIODE MC2837		R136	1-216-825-11	METAL CHIP 2.2K 5%	1/10W
D109	6-501-579-01	DIODE MC2837		R137	1-216-837-11	METAL CHIP 22K 5%	1/10W
		< FERRITE BEAD >		R138	1-216-845-11	METAL CHIP 100K 5%	1/10W
				R139	1-216-825-11	METAL CHIP 2.2K 5%	1/10W
FB102	1-500-236-22	BEAD, FERRITE (CHIP) (1608) (EXCEPT E12,E32,MX,PX)		R140	1-216-805-11	METAL CHIP 47 5%	1/10W
FB103	1-500-236-22	BEAD, FERRITE (CHIP) (1608) (EXCEPT E12,E32,MX,PX)		R141	1-216-827-11	METAL CHIP 3.3K 5%	1/10W
FB104	1-500-236-22	BEAD, FERRITE (CHIP) (1608) (EXCEPT E12,E32,MX,PX)		R143	1-216-817-11	METAL CHIP 470 5%	1/10W
FB105	1-500-236-22	BEAD, FERRITE (CHIP) (1608) (EXCEPT E12,E32,MX,PX)		R144	1-216-829-11	METAL CHIP 4.7K 5%	1/10W
FB106	1-500-236-22	BEAD, FERRITE (CHIP) (1608) (EXCEPT E12,E32,MX,PX)		R145	1-216-845-11	METAL CHIP 100K 5%	1/10W
		< IC >		R146	1-216-817-11	METAL CHIP 470 5%	1/10W
IC102	6-705-312-01	IC S-T111B33MC-OGSTFG		R147	1-216-845-11	METAL CHIP 100K 5%	1/10W
IC103	8-759-100-96	IC uPC4558G2		R148	1-216-837-11	METAL CHIP 22K 5%	1/10W
IC104	8-759-100-96	IC uPC4558G2		R149	1-216-821-11	METAL CHIP 1K 5%	1/10W
		< JACK >		R150	1-216-821-11	METAL CHIP 1K 5%	1/10W
J100	1-819-878-51	JACK (AUDIO IN/A.CAL MIC)		R151	1-216-825-11	METAL CHIP 2.2K 5%	1/10W
J101	1-819-878-51	JACK (PHONES)		R152	1-216-864-11	SHORT CHIP 0	
		< JUMPER RESISTOR >		R153	1-216-857-11	METAL CHIP 1M 5%	1/10W
JR101	1-216-864-11	SHORT CHIP 0		R154	1-216-837-11	METAL CHIP 22K 5%	1/10W
JR102	1-216-864-11	SHORT CHIP 0		R155	1-216-864-11	SHORT CHIP 0	
JR103	1-216-864-11	SHORT CHIP 0		R160	1-216-864-11	SHORT CHIP 0	
		< TRANSISTOR >		R162	1-216-864-11	SHORT CHIP 0	
Q101	8-729-038-28	TRANSISTOR RT1N441C-TP-1		R165	1-216-829-11	METAL CHIP 4.7K 5%	1/10W
Q102	8-729-038-28	TRANSISTOR RT1N441C-TP-1		R166	1-216-829-11	METAL CHIP 4.7K 5%	1/10W
Q103	8-729-038-11	TRANSISTOR RT1P140C-TP-1		R167	1-216-801-11	METAL CHIP 22 5%	1/10W
Q104	8-729-027-23	TRANSISTOR DTA114EKA-T146		R168	1-216-801-11	METAL CHIP 22 5%	1/10W
Q105	8-729-027-23	TRANSISTOR DTA114EKA-T146		R169	1-216-829-11	METAL CHIP 4.7K 5%	1/10W
Q106	6-550-889-01	TRANSISTOR 2SC5938-T112-1B		R170	1-216-829-11	METAL CHIP 4.7K 5%	1/10W
Q107	6-550-889-01	TRANSISTOR 2SC5938-T112-1B		R171	1-216-829-11	METAL CHIP 4.7K 5%	1/10W
Q108	6-550-889-01	TRANSISTOR 2SC5938-T112-1B		R172	1-216-829-11	METAL CHIP 4.7K 5%	1/10W
Q109	6-550-889-01	TRANSISTOR 2SC5938-T112-1B		R173	1-216-805-11	METAL CHIP 47 5%	1/10W
		< RESISTOR >		R174	1-216-805-11	METAL CHIP 47 5%	1/10W
R109	1-216-827-11	METAL CHIP 3.3K 5%	1/10W	R179	1-216-864-11	SHORT CHIP 0 (E12,E32,MX,PX)	
R110	1-216-833-11	METAL CHIP 10K 5%	1/10W	R180	1-216-864-11	SHORT CHIP 0 (E12,E32,MX,PX)	
R111	1-216-809-11	METAL CHIP 100 5%	1/10W	R181	1-216-864-11	SHORT CHIP 0 (E12,E32,MX,PX)	
R112	1-216-809-11	METAL CHIP 100 5%	1/10W	R182	1-216-864-11	SHORT CHIP 0 (E12,E32,MX,PX)	
R113	1-216-815-11	METAL CHIP 330 5%	1/10W	R183	1-216-864-11	SHORT CHIP 0 (E12,E32,MX,PX)	
R114	1-216-815-11	METAL CHIP 330 5%	1/10W	R184	1-216-821-11	METAL CHIP 1K 5%	1/10W
R115	1-216-827-11	METAL CHIP 3.3K 5%	1/10W	R185	1-216-864-11	SHORT CHIP 0	
R117	1-216-834-11	METAL CHIP 12K 5%	1/10W	R186	1-216-821-11	METAL CHIP 1K 5%	1/10W
R118	1-216-835-11	METAL CHIP 15K 5%	1/10W	R187	1-216-821-11	METAL CHIP 1K 5%	1/10W
R121	1-216-825-11	METAL CHIP 2.2K 5%	1/10W			< SWITCH >	
R122	1-216-825-11	METAL CHIP 2.2K 5%	1/10W	S100	1-762-875-21	SWITCH, KEYBOARD (≡)	
R123	1-216-821-11	METAL CHIP 1K 5%	1/10W	S101	1-762-875-21	SWITCH, KEYBOARD (▷)	
R126	1-216-825-11	METAL CHIP 2.2K 5%	1/10W	S102	1-762-875-21	SWITCH, KEYBOARD (▶▶)	
R128	1-216-827-11	METAL CHIP 3.3K 5%	1/10W	S103	1-762-875-21	SWITCH, KEYBOARD (■)	
R129	1-216-801-11	METAL CHIP 22 5%	1/10W	S104	1-762-875-21	SWITCH, KEYBOARD (■)	
R130	1-216-821-11	METAL CHIP 1K 5%	1/10W	S105	1-762-875-21	SWITCH, KEYBOARD (◀◀)	
R131	1-216-821-11	METAL CHIP 1K 5%	1/10W	S106	1-762-875-21	SWITCH, KEYBOARD (FUNCTION)	
R132	1-216-809-11	METAL CHIP 100 5%	1/10W	S107	1-480-136-11	ENCODER, ROTARY (12 TYPE) (VOLUME)	
R133	1-216-819-11	METAL CHIP 680 5%	1/10W			*****	
R134	1-216-835-11	METAL CHIP 15K 5%	1/10W				

HCD-DZ370/DZ560/DZ570/DZ660/DZ777

Ver. 1.1

MAIN

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
115	A-1438-879-A	MAIN BOARD, COMPLETE (for SERVICE) (DZ560)		C521	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
115	A-1438-894-A	MAIN BOARD, COMPLETE (for SERVICE) (DZ570:E3,E15)		C522	1-127-715-11	CERAMIC CHIP 0.22uF	10% 16V
115	A-1438-911-A	MAIN BOARD, COMPLETE (for SERVICE) (DZ570:E32)		C523	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V
115	A-1438-926-A	MAIN BOARD, COMPLETE (for SERVICE) (DZ570:MX)		C524	1-104-658-11	ELECT 100uF	20% 10V
115	A-1438-935-A	MAIN BOARD, COMPLETE (for SERVICE) (DZ660)		C525	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V
115	A-1438-955-A	MAIN BOARD, COMPLETE (for SERVICE) (DZ777:E3,E15)		C526	1-104-658-11	ELECT 100uF	20% 10V
115	A-1520-942-A	MAIN BOARD, COMPLETE (for SERVICE) (DZ370)		C527	1-126-916-11	ELECT 1000uF	20% 6.3V
115	A-1520-960-A	MAIN BOARD, COMPLETE (for SERVICE) (DZ570:E12)		C528	1-126-916-11	ELECT 1000uF	20% 6.3V
115	A-1520-967-A	MAIN BOARD, COMPLETE (for SERVICE) (DZ570:AUS)		C529	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
115	A-1520-974-A	MAIN BOARD, COMPLETE (for SERVICE) (DZ570:TW)		C530	1-126-965-11	ELECT 22uF	20% 50V
115	A-1520-982-A	MAIN BOARD, COMPLETE (for SERVICE) (DZ570:KR)		C531	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V
115	A-1520-993-A	MAIN BOARD, COMPLETE (for SERVICE) (DZ777:AUS)		C532	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V
115	A-1521-002-A	MAIN BOARD, COMPLETE (for SERVICE) (DZ777:KR)		C533	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V
115	A-1546-349-A	MAIN BOARD, COMPLETE (for SERVICE) (DZ570:PX)		C538	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V
*****				C539	1-126-933-11	ELECT 100uF	20% 16V
4-231-099-41	SHEET, RADIATION			C571	1-165-908-11	CERAMIC CHIP 1uF	10% 10V
	< CAPACITOR >			C572	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V
C220	1-128-995-21	ELECT CHIP 100uF	20% 10V	C573	1-126-965-11	ELECT 22uF	20% 50V
C221	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V	C574	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V
C222	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V	C581	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C223	1-126-206-11	ELECT CHIP 100uF	20% 6.3V	C582	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V
C227	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V	C583	1-104-658-11	ELECT 100uF	20% 10V
C229	1-165-908-11	CERAMIC CHIP 1uF	10% 10V	C584	1-126-933-11	ELECT 100uF	20% 16V
C230	1-165-908-11	CERAMIC CHIP 1uF	10% 10V	C591	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C231	1-165-908-11	CERAMIC CHIP 1uF	10% 10V	C592	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C232	1-165-908-11	CERAMIC CHIP 1uF	10% 10V	C593	1-104-658-11	ELECT 100uF	20% 10V
C237	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V	C594	1-126-933-11	ELECT 100uF	20% 16V
C238	1-126-965-11	ELECT 22uF	20% 50V	C705	1-126-964-11	ELECT 10uF	20% 50V
C239	1-126-947-11	ELECT 47uF	20% 35V	C706	1-126-964-11	ELECT 10uF	20% 50V
C240	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V	C707	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V
C241	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V	C708	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V
C312	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V	C709	1-126-923-11	ELECT 220uF	20% 10V
C313	1-126-933-11	ELECT 100uF	20% 16V	C710	1-107-726-11	CERAMIC CHIP 0.01uF	10% 16V
C314	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V	C711	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V
C315	1-126-933-11	ELECT 100uF	20% 16V	C712	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C317	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V	C716	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C501	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V	C717	1-126-964-11	ELECT 10uF	20% 50V
C502	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V	C718	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V
C503	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V	C719	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V
C504	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V	C720	1-126-923-11	ELECT 220uF	20% 10V
C505	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V	C721	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C507	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V	C722	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V
C508	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V	C723	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V
C509	1-165-908-11	CERAMIC CHIP 1uF	10% 10V	C724	1-162-915-11	CERAMIC CHIP 10PF	0.5PF 50V
C510	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V	C725	1-162-915-11	CERAMIC CHIP 10PF	0.5PF 50V
C511	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V	C727	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V
C512	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V	C1101	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C515	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V	C1102	1-165-908-11	CERAMIC CHIP 1uF	10% 10V
C516	1-165-908-11	CERAMIC CHIP 1uF	10% 10V	C1105	1-128-994-21	ELECT CHIP 47uF	20% 10V
C517	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V	C1106	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C518	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V	C1108	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V
C520	1-127-715-11	CERAMIC CHIP 0.22uF	10% 16V	C1109	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V
				C1110	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V
				C1111	1-126-206-11	ELECT CHIP 100uF	20% 6.3V
				C1112	1-128-994-21	ELECT CHIP 47uF	20% 10V
				C1113	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
				C1114	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V
				C1115	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V
				C1116	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V
				C1117	1-128-994-21	ELECT CHIP 47uF	20% 10V
				C1118	1-128-994-21	ELECT CHIP 47uF	20% 10V
				C1119	1-128-994-21	ELECT CHIP 47uF	20% 10V
				C1120	1-165-908-11	CERAMIC CHIP 1uF	10% 10V

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
C1121	1-165-908-11	CERAMIC CHIP 1uF 10%	10V			C1206	1-164-230-11	CERAMIC CHIP 220PF 5%	50V		
C1122	1-165-908-11	CERAMIC CHIP 1uF 10%	10V			C1208	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V		
C1123	1-165-908-11	CERAMIC CHIP 1uF 10%	10V			C1209	1-164-677-11	CERAMIC CHIP 0.033uF 10%	16V		
C1124	1-165-908-11	CERAMIC CHIP 1uF 10%	10V			C1210	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V		
C1125	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V			C1211	1-164-677-11	CERAMIC CHIP 0.033uF 10%	16V		
C1126	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V			C1212	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V		
C1127	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V			C1213	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V		
C1129	1-165-989-11	CERAMIC CHIP 10uF 10%	6.3V			C1214	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V		
C1130	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V			C1215	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V		
C1132	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V			C1217	1-126-947-11	ELECT 47uF 20%	35V		
C1133	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V			C1218	1-124-779-00	ELECT CHIP 10uF 20%	16V		
C1135	1-164-677-11	CERAMIC CHIP 0.033uF 10%	16V			C1219	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V		
C1136	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V			C1220	1-124-779-00	ELECT CHIP 10uF 20%	16V		
C1137	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V			C1221	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V		
C1138	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V			C1222	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V		
C1139	1-162-919-11	CERAMIC CHIP 22PF 5%	50V			C1223	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V		
C1140	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V			C1224	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V		
C1144	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V			C1225	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V		
C1145	1-124-779-00	ELECT CHIP 10uF 20%	16V			C1226	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V		
C1146	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V			C1233	1-162-968-11	CERAMIC CHIP 0.0047uF 10%	50V		
C1147	1-165-176-11	CERAMIC CHIP 0.047uF 10%	16V			C1725	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V		
C1148	1-165-176-11	CERAMIC CHIP 0.047uF 10%	16V			C1726	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V		
C1149	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V			C1727	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V		
C1151	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V			C1728	1-128-994-21	ELECT CHIP 47uF 20%	10V		
C1152	1-162-916-11	CERAMIC CHIP 12PF 5%	50V			C1729	1-127-715-11	CERAMIC CHIP 0.22uF 10%	16V		
C1153	1-162-916-11	CERAMIC CHIP 12PF 5%	50V			C1730	1-127-715-11	CERAMIC CHIP 0.22uF 10%	16V		
C1154	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V			C1731	1-127-715-11	CERAMIC CHIP 0.22uF 10%	16V		
C1155	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V			C1732	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V		
C1156	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V			C1733	1-127-715-11	CERAMIC CHIP 0.22uF 10%	16V		
C1158	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V			C1734	1-165-908-11	CERAMIC CHIP 1uF 10%	10V		
C1159	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V			C2100	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V		
C1160	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V			C2101	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V		
C1161	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V			C2102	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V		
C1162	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V			C2103	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V		
C1163	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V			C2108	1-127-760-11	CERAMIC CHIP 4.7uF 10%	6.3V		
C1164	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V			C2109	1-126-206-11	ELECT CHIP 100uF 20%	6.3V		
C1165	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V			C2110	1-126-206-11	ELECT CHIP 100uF 20%	6.3V		
C1169	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V			C2112	1-126-923-11	ELECT 220uF 20%	10V		
C1170	1-162-965-11	CERAMIC CHIP 0.0015uF 10%	50V			C2114	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V		
C1171	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V			C2115	1-165-989-11	CERAMIC CHIP 10uF 10%	6.3V		
C1172	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V			C2116	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V		
C1174	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V			C2117	1-165-989-11	CERAMIC CHIP 10uF 10%	6.3V		
C1175	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V			C2118	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V		
C1176	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V			C2119	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V		
C1177	1-126-947-11	ELECT 47uF 20%	35V			C2130	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V		
C1179	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V			C2502	1-164-172-11	CERAMIC CHIP 0.0056uF 10%	25V		
C1180	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V			C2503	1-127-760-11	CERAMIC CHIP 4.7uF 10%	6.3V		
C1181	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V			C3000	1-126-382-11	ELECT 100uF 20%	16V		
C1182	1-127-715-11	CERAMIC CHIP 0.22uF 10%	16V			C3001	1-126-947-11	ELECT 47uF 20%	35V		
C1183	1-128-934-11	CERAMIC CHIP 0.33uF 20%	10V			C3002	1-115-339-11	CERAMIC CHIP 0.1uF 10%	50V		
C1184	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V			C3003	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V		
C1186	1-127-715-11	CERAMIC CHIP 0.22uF 10%	16V			C3005	1-126-795-11	ELECT 10uF 20%	50V		
C1187	1-126-947-11	ELECT 47uF 20%	35V			C3008	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V		
C1190	1-104-658-11	ELECT 100uF 20%	10V			C3011	1-126-947-11	ELECT 47uF 20%	35V		
C1191	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V			C3012	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V		
C1192	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V			C3013	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V		
C1193	1-127-715-11	CERAMIC CHIP 0.22uF 10%	16V			C3014	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V		
C1195	1-127-715-11	CERAMIC CHIP 0.22uF 10%	16V			C3015	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V		
C1197	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V			C3016	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V		
C1198	1-165-908-11	CERAMIC CHIP 1uF 10%	10V			C3017	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V		
C1199	1-162-968-11	CERAMIC CHIP 0.0047uF 10%	50V			C3018	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V		
C1203	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V			C3019	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V		
C1205	1-164-230-11	CERAMIC CHIP 220PF 5%	50V			C3020	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V		

HCD-DZ370/DZ560/DZ570/DZ660/DZ777

Ver. 1.1

MAIN

Ref. No.	Part No.	Description	Remark
C3021	1-126-947-11	ELECT 47uF 20%	35V
C3022	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C3023	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C3024	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C3025	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C3026	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C3027	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C3028	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C3029	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C3030	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C3031	1-126-947-11	ELECT 47uF 20%	35V
C3032	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C3033	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C3034	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C3035	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C3036	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C3037	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C3038	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C3039	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C3040	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C3051	1-115-339-11	CERAMIC CHIP 0.1uF 10%	50V
C3052	1-165-908-11	CERAMIC CHIP 1uF 10%	10V
C3053	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C3054	1-126-933-11	ELECT 100uF 20%	16V
C3055	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
C3056	1-126-923-11	ELECT 220uF 20%	10V
C3057	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
C3058	1-162-910-11	CERAMIC CHIP 5PF 0.25PF	50V
C3059	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V
C3060	1-162-915-11	CERAMIC CHIP 10PF 0.5PF	50V
C3071	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
C3072	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C3073	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C3081	1-126-923-11	ELECT 220uF 20%	10V
C3082	1-126-923-11	ELECT 220uF 20%	10V
C3083	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
C3084	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
C3085	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
C3086	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
C3087	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
C3088	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
C3090	1-104-658-11	ELECT 100uF 20%	10V
C3091	1-126-934-11	ELECT 220uF 20%	16V
C3092	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
C3093	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
C3094	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
C3100	1-104-329-11	CERAMIC CHIP 0.1uF 10%	50V
C3103	1-107-725-11	CERAMIC CHIP 0.1uF 10%	16V
C3104	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C3105	1-107-725-11	CERAMIC CHIP 0.1uF 10%	16V
C3106	1-115-185-11	CERAMIC CHIP 0.033uF 10%	50V
C3107	1-115-185-11	CERAMIC CHIP 0.033uF 10%	50V
C3108	1-104-329-11	CERAMIC CHIP 0.1uF 10%	50V
C3109	1-112-246-11	ELECT 100uF 20%	35V
C3112	1-112-246-11	ELECT 100uF 20%	35V
C3113	1-104-329-11	CERAMIC CHIP 0.1uF 10%	50V
C3114	1-114-885-51	FILM 1uF 5%	50V (DZ370/DZ777)
C3114	1-137-198-81	FILM 1uF 5%	50V (DZ560/DZ570/DZ660)
C3115	1-114-885-51	FILM 1uF 5%	50V (DZ370/DZ777)
C3115	1-137-198-81	FILM 1uF 5%	50V (DZ560/DZ570/DZ660)

Ref. No.	Part No.	Description	Remark
C3116	1-112-831-11	ELECT 2200uF 20%	35V (DZ370/DZ570/DZ777)
C3116	1-126-953-11	ELECT 2200uF 20%	35V (DZ560/DZ660)
C3117	1-104-329-11	CERAMIC CHIP 0.1uF 10%	50V
C3122	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V
C3123	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V
C3124	1-164-505-11	CERAMIC CHIP 2.2uF	16V
C3125	1-164-505-11	CERAMIC CHIP 2.2uF	16V
C3126	1-164-505-11	CERAMIC CHIP 2.2uF	16V
C3127	1-164-505-11	CERAMIC CHIP 2.2uF	16V
C3128	1-164-505-11	CERAMIC CHIP 2.2uF	16V
C3129	1-117-370-11	CERAMIC CHIP 10uF	10V
C3150	1-104-329-11	CERAMIC CHIP 0.1uF 10%	50V
C3153	1-107-725-11	CERAMIC CHIP 0.1uF 10%	16V
C3154	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C3155	1-107-725-11	CERAMIC CHIP 0.1uF 10%	16V
C3156	1-115-185-11	CERAMIC CHIP 0.033uF 10%	50V
C3157	1-115-185-11	CERAMIC CHIP 0.033uF 10%	50V
C3158	1-104-329-11	CERAMIC CHIP 0.1uF 10%	50V
C3159	1-112-246-11	ELECT 100uF 20%	35V
C3162	1-112-246-11	ELECT 100uF 20%	35V
C3163	1-104-329-11	CERAMIC CHIP 0.1uF 10%	50V
C3164	1-114-885-51	FILM 1uF 5%	50V (DZ370/DZ777)
C3164	1-137-198-81	FILM 1uF 5%	50V (DZ560/DZ570/DZ660)
C3165	1-114-885-51	FILM 1uF 5%	50V (DZ370/DZ777)
C3165	1-137-198-81	FILM 1uF 5%	50V (DZ560/DZ570/DZ660)
C3166	1-112-831-11	ELECT 2200uF 20%	35V (DZ370/DZ570/DZ777)
C3166	1-126-953-11	ELECT 2200uF 20%	35V (DZ560/DZ660)
C3167	1-104-329-11	CERAMIC CHIP 0.1uF 10%	50V
C3172	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V
C3173	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V
C3200	1-104-329-11	CERAMIC CHIP 0.1uF 10%	50V
C3203	1-107-725-11	CERAMIC CHIP 0.1uF 10%	16V
C3204	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C3205	1-107-725-11	CERAMIC CHIP 0.1uF 10%	16V
C3206	1-115-185-11	CERAMIC CHIP 0.033uF 10%	50V
C3207	1-115-185-11	CERAMIC CHIP 0.033uF 10%	50V
C3208	1-104-329-11	CERAMIC CHIP 0.1uF 10%	50V
C3209	1-112-246-11	ELECT 100uF 20%	35V
C3212	1-112-246-11	ELECT 100uF 20%	35V
C3213	1-104-329-11	CERAMIC CHIP 0.1uF 10%	50V
C3214	1-114-885-51	FILM 1uF 5%	50V (DZ370/DZ777)
C3214	1-137-198-81	FILM 1uF 5%	50V (DZ560/DZ570/DZ660)
C3215	1-114-885-51	FILM 1uF 5%	50V (DZ370/DZ777)
C3215	1-137-198-81	FILM 1uF 5%	50V (DZ560/DZ570/DZ660)
C3216	1-112-831-11	ELECT 2200uF 20%	35V (DZ370/DZ570/DZ777)
C3216	1-126-953-11	ELECT 2200uF 20%	35V (DZ560/DZ660)
C3217	1-104-329-11	CERAMIC CHIP 0.1uF 10%	50V
C3250	1-104-329-11	CERAMIC CHIP 0.1uF 10%	50V
C3253	1-107-725-11	CERAMIC CHIP 0.1uF 10%	16V
C3254	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C3255	1-107-725-11	CERAMIC CHIP 0.1uF 10%	16V

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
C3256	1-115-185-11	CERAMIC CHIP	0.033uF	10%	50V	C3417	1-104-329-11	CERAMIC CHIP	0.1uF	10%	50V
C3257	1-115-185-11	CERAMIC CHIP	0.033uF	10%	50V	C3422	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C3258	1-104-329-11	CERAMIC CHIP	0.1uF	10%	50V	C3423	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C3259	1-112-246-11	ELECT	100uF	20%	35V	C3500	1-104-329-11	CERAMIC CHIP	0.1uF	10%	50V
C3262	1-112-246-11	ELECT	100uF	20%	35V						(DZ370/DZ777)
						C3503	1-107-725-11	CERAMIC CHIP	0.1uF	10%	16V
C3263	1-104-329-11	CERAMIC CHIP	0.1uF	10%	50V						(DZ370/DZ777)
C3264	1-114-885-51	FILM	1uF	5%	50V						
					(DZ370/DZ777)	C3504	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3264	1-137-198-81	FILM	1uF	5%	50V						(DZ370/DZ777)
					(DZ560/DZ570/DZ660)	C3505	1-107-725-11	CERAMIC CHIP	0.1uF	10%	16V
C3265	1-114-885-51	FILM	1uF	5%	50V						(DZ370/DZ777)
					(DZ370/DZ777)	C3506	1-115-185-11	CERAMIC CHIP	0.033uF	10%	50V
C3265	1-137-198-81	FILM	1uF	5%	50V						(DZ370/DZ777)
					(DZ560/DZ570/DZ660)	C3507	1-115-185-11	CERAMIC CHIP	0.033uF	10%	50V
											(DZ370/DZ777)
C3266	1-112-831-11	ELECT	2200uF	20%	35V	C3508	1-104-329-11	CERAMIC CHIP	0.1uF	10%	50V
					(DZ370/DZ570/DZ777)						(DZ370/DZ777)
C3266	1-126-953-11	ELECT	2200uF	20%	35V						
					(DZ560/DZ660)	C3509	1-112-246-11	ELECT	100uF	20%	35V
C3267	1-104-329-11	CERAMIC CHIP	0.1uF	10%	50V						(DZ370/DZ777)
C3300	1-104-329-11	CERAMIC CHIP	0.1uF	10%	50V	C3512	1-112-246-11	ELECT	100uF	20%	35V
C3303	1-107-725-11	CERAMIC CHIP	0.1uF	10%	16V						(DZ370/DZ777)
						C3513	1-104-329-11	CERAMIC CHIP	0.1uF	10%	50V
C3304	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V						(DZ370/DZ777)
C3305	1-107-725-11	CERAMIC CHIP	0.1uF	10%	16V	C3514	1-137-198-81	FILM	1uF	5%	50V
C3306	1-115-185-11	CERAMIC CHIP	0.033uF	10%	50V						(DZ370/DZ777)
C3307	1-115-185-11	CERAMIC CHIP	0.033uF	10%	50V	C3515	1-137-198-81	FILM	1uF	5%	50V
C3308	1-104-329-11	CERAMIC CHIP	0.1uF	10%	50V						(DZ370/DZ777)
C3309	1-112-246-11	ELECT	100uF	20%	35V	C3516	1-112-831-11	ELECT	2200uF	20%	35V
C3312	1-112-246-11	ELECT	100uF	20%	35V						(DZ370/DZ777)
C3313	1-104-329-11	CERAMIC CHIP	0.1uF	10%	50V	C3517	1-104-329-11	CERAMIC CHIP	0.1uF	10%	50V
C3314	1-114-885-51	FILM	1uF	5%	50V						(DZ370/DZ777)
					(DZ370/DZ777)	C3551	1-126-960-11	ELECT	1uF	20%	50V
C3314	1-137-198-81	FILM	1uF	5%	50V	C3552	1-126-964-11	ELECT	10uF	20%	50V
					(DZ560/DZ570/DZ660)	C3553	1-115-339-11	CERAMIC CHIP	0.1uF	10%	50V
C3315	1-114-885-51	FILM	1uF	5%	50V	C3556	1-115-339-11	CERAMIC CHIP	0.1uF	10%	50V
					(DZ370/DZ777)	C3561	1-165-989-11	CERAMIC CHIP	10uF	10%	6.3V
C3315	1-137-198-81	FILM	1uF	5%	50V	C3901	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
					(DZ560/DZ570/DZ660)	C3902	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C3316	1-112-831-11	ELECT	2200uF	20%	35V	C3903	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
					(DZ370/DZ570/DZ777)						
C3316	1-126-953-11	ELECT	2200uF	20%	35V	C3904	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
					(DZ560/DZ660)	C3911	1-163-021-11	CERAMIC CHIP	0.01uF	10%	50V
C3317	1-104-329-11	CERAMIC CHIP	0.1uF	10%	50V	C3912	1-163-021-11	CERAMIC CHIP	0.01uF	10%	50V
						C3913	1-163-021-11	CERAMIC CHIP	0.01uF	10%	50V
C3322	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	C3914	1-163-021-11	CERAMIC CHIP	0.01uF	10%	50V
C3323	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V						
C3400	1-104-329-11	CERAMIC CHIP	0.1uF	10%	50V	C4501	1-117-370-11	CERAMIC CHIP	10uF		10V
C3403	1-107-725-11	CERAMIC CHIP	0.1uF	10%	16V	C4503	1-104-658-11	ELECT	100uF	20%	10V
C3404	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C4504	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
						C9972	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3405	1-107-725-11	CERAMIC CHIP	0.1uF	10%	16V						< CONNECTOR >
C3406	1-115-185-11	CERAMIC CHIP	0.033uF	10%	50V						
C3407	1-115-185-11	CERAMIC CHIP	0.033uF	10%	50V						
C3408	1-104-329-11	CERAMIC CHIP	0.1uF	10%	50V	CN204	1-817-615-21	CONNECTOR, SQUARE TYPE (RECE)	18P		(DMPORT)
C3409	1-112-246-11	ELECT	100uF	20%	35V						
						CN502	1-820-117-41	CONNECTOR, FFC/FPC	19P		
C3412	1-112-246-11	ELECT	100uF	20%	35V	CN504	1-784-861-51	CONNECTOR, FFC (LIF(NON-ZIF))	9P		
C3413	1-104-329-11	CERAMIC CHIP	0.1uF	10%	50V	CN602	1-820-117-41	CONNECTOR, FFC/FPC	19P (DZ560/DZ660)		
C3414	1-114-885-51	FILM	1uF	5%	50V	CN603	1-820-116-41	CONNECTOR, FFC/FPC	17P		(DZ370/DZ570/DZ777)
					(DZ370/DZ777)						
C3414	1-137-198-81	FILM	1uF	5%	50V						
					(DZ560/DZ570/DZ660)	CN651	1-779-285-11	CONNECTOR, FFC (LIF(NON-ZIF))	17P		
C3415	1-114-885-51	FILM	1uF	5%	50V	CN702	1-779-273-11	CONNECTOR, FFC (LIF(NON-ZIF))	5P		
					(DZ370/DZ777)	CN1101	1-815-763-32	CONNECTOR, FFC/FPC	24P		
						* CN1105	1-564-708-11	PIN, CONNECTOR (SMALL TYPE)	6P		
C3415	1-137-198-81	FILM	1uF	5%	50V	* CN1201	1-564-708-11	PIN, CONNECTOR (SMALL TYPE)	6P		
					(DZ560/DZ570/DZ660)						
C3416	1-112-831-11	ELECT	2200uF	20%	35V	CN1202	1-784-365-51	CONNECTOR, FFC/FPC	5P		
					(DZ370/DZ570/DZ777)	CN1701	1-821-755-11	CONNECTOR, HDMI	19P (HDMI OUT)		
C3416	1-126-953-11	ELECT	2200uF	20%	35V	CN2101	1-564-707-11	PIN, CONNECTOR (SMALL TYPE)	5P		
					(DZ560/DZ660)	CN3000	1-564-704-41	PIN, CONNECTOR (SMALL TYPE)	2P		

HCD-DZ370/DZ560/DZ570/DZ660/DZ777

Ver. 1.1

MAIN

Ref. No.	Part No.	Description	Remark
CN3001	1-564-706-11	PIN, CONNECTOR (SMALL TYPE) 4P	
CN4301	1-820-117-41	CONNECTOR, FFC/FPC 19P (DZ560/DZ660)	
CN4302	1-820-116-41	CONNECTOR, FFC/FPC 17P	(DZ370/DZ570/DZ777)
< DIODE >			
D501	6-501-817-01	DIODE MA2J1110GLS0	
D502	6-500-334-01	DIODE MC2836-T112-1	
D505	6-500-334-01	DIODE MC2836-T112-1	
D701	6-501-579-01	DIODE MC2837	
D2101	6-501-749-01	DIODE MAZ8082G0LS0	
D2102	6-501-740-01	DIODE MAZ8068G0LS0	
D2103	6-501-740-01	DIODE MAZ8068G0LS0	
D3071	6-501-817-01	DIODE MA2J1110GLS0	
D3072	6-501-817-01	DIODE MA2J1110GLS0	
D3073	6-501-817-01	DIODE MA2J1110GLS0	
D3551	6-501-579-01	DIODE MC2837	
D3552	6-501-774-01	DIODE MAZ8150G0LS0	
D4111	6-501-696-01	DIODE RSA39LTE25	
D4112	6-501-696-01	DIODE RSA39LTE25	
D4151	6-501-696-01	DIODE RSA39LTE25	
D4152	6-501-696-01	DIODE RSA39LTE25	
D4201	6-501-696-01	DIODE RSA39LTE25	
D4202	6-501-696-01	DIODE RSA39LTE25	
D4251	6-501-696-01	DIODE RSA39LTE25	
D4252	6-501-696-01	DIODE RSA39LTE25	
D4301	6-501-696-01	DIODE RSA39LTE25	
D4302	6-501-696-01	DIODE RSA39LTE25	
D4401	6-501-696-01	DIODE RSA39LTE25	
D4402	6-501-696-01	DIODE RSA39LTE25	
D4501	6-501-696-01	DIODE RSA39LTE25 (DZ370/DZ777)	
D4502	6-501-696-01	DIODE RSA39LTE25 (DZ370/DZ777)	
D9712	6-501-817-01	DIODE MA2J1110GLS0	
< FERRITE BEAD >			
FB505	1-469-365-21	INDUCTOR, FERRITE BEAD FBMJ2125	
FB506	1-469-324-21	FERRITE, EMI (SMD) (2012)	
FB508	1-469-365-21	INDUCTOR, FERRITE BEAD FBMJ2125	
FB510	1-469-324-21	FERRITE, EMI (SMD) (2012)	
FB1106	1-469-324-21	FERRITE, EMI (SMD) (2012)	
FB1107	1-469-324-21	FERRITE, EMI (SMD) (2012)	
FB1108	1-469-324-21	FERRITE, EMI (SMD) (2012)	
FB1109	1-469-324-21	FERRITE, EMI (SMD) (2012)	
FB1111	1-469-670-21	FERRITE, EMI (SMD) (2012)	
FB1112	1-469-670-21	FERRITE, EMI (SMD) (2012)	
FB1113	1-469-670-21	FERRITE, EMI (SMD) (2012)	
FB1115	1-469-670-21	FERRITE, EMI (SMD) (2012)	
FB1116	1-469-670-21	FERRITE, EMI (SMD) (2012)	
FB1117	1-469-670-21	FERRITE, EMI (SMD) (2012)	
FB1118	1-469-670-21	FERRITE, EMI (SMD) (2012)	
FB2101	1-469-324-21	FERRITE, EMI (SMD) (2012)	
FB2102	1-469-379-11	FERRITE, EMI (SMD) (2012)	
FB2103	1-469-324-21	FERRITE, EMI (SMD) (2012)	
FB2104	1-469-379-11	FERRITE, EMI (SMD) (2012)	
FB2105	1-469-379-11	FERRITE, EMI (SMD) (2012)	
FB2120	1-469-118-21	FERRITE, EMI (SMD) (1608)	
FB2121	1-469-118-21	FERRITE, EMI (SMD) (1608)	
FB2122	1-469-118-21	FERRITE, EMI (SMD) (1608)	
FB2124	1-469-118-21	FERRITE, EMI (SMD) (1608)	
FB2125	1-469-118-21	FERRITE, EMI (SMD) (1608)	
< FILTER >			
FL4501	1-234-177-21	FILTER, CHIP EMI	

Ref. No.	Part No.	Description	Remark
< IC >			
IC201	6-705-308-01	IC SI-3010KM-TL	
IC202	8-759-710-97	IC NJM4565M-D	
IC301	6-600-466-01	IC TORX147L(SONY)	(TV/VIDEO (DIGITAL IN OPTICAL)) (DZ370/DZ570)
IC301	6-600-466-01	IC TORX147L(SONY) (TV (DIGITAL IN OPTICAL))	(DZ560/DZ660/DZ777)
IC302	6-706-492-01	IC TC7SHU04FU(T5RSOJF)	
IC501	A-1545-464-A	IC R5F3640DDFAR (for SERVICE)	
IC502	6-705-338-01	IC TK11250CMCL-G	
IC503	6-708-922-01	IC PST3635NR	
IC504	6-705-308-01	IC SI-3010KM-TL	
IC505	6-705-308-01	IC SI-3010KM-TL	
IC506	6-705-308-01	IC SI-3010KM-TL	
IC507	6-705-337-01	IC TK11150CSCL-G	
IC510	(Not supplied)	IC S-24CS16A0I-J8T1G	
IC702	8-759-825-15	IC LC89056W-E	
IC707	6-710-554-01	IC PCM1808PWR	
IC1101	6-711-522-01	IC CXD9917R	
IC1102	6-808-296-01	IC MX29LV320CBTC70-OH1-0804UC	(E32,MX,PX)
IC1102	6-808-297-01	IC MX29LV320CBTC70-OH1-0804CE	(AEP,UK,E3,E12,E15,AUS)
IC1102	6-808-298-01	IC MX29LV320CBTC70-OH1-0804GA (KR,TW)	
IC1103	(Not supplied)	IC S-24CS64A0I-J8T1G	
IC1104	6-707-897-01	IC EDS6416AHTA-75-E	
IC1105	6-702-302-01	IC TK11133CSCL-G	
IC1107	6-702-302-01	IC TK11133CSCL-G	
IC1110	6-707-739-01	IC MM1661JTRE	
IC1201	6-704-524-01	IC FAN8036L	
IC1705	8-759-592-47	IC TC7SZ08FU(TE85R)	
IC1706	8-759-592-47	IC TC7SZ08FU(TE85R)	
IC1707	6-705-337-01	IC TK11150CSCL-G	
IC1708	6-702-302-01	IC TK11133CSCL-G	
IC2101	8-759-700-07	IC NJM2903M	
IC3001	8-759-710-97	IC NJM4565M-D	
IC3003	8-759-680-48	IC TC7WH157FK(TE85R)	
IC3010	6-705-979-01	IC CXD9788AR	
IC3020	6-705-979-01	IC CXD9788AR	
IC3030	6-705-979-01	IC CXD9788AR	
IC3050	6-702-300-01	IC TK11118CSCL-G	
IC3051	6-709-888-01	IC TC7WHU04FK(T5RSOYF)	
IC3100	6-708-921-01	IC CXD9883M	
IC3150	6-708-921-01	IC CXD9883M	
IC3200	6-708-921-01	IC CXD9883M	
IC3250	6-708-921-01	IC CXD9883M	
IC3300	6-708-921-01	IC CXD9883M	
IC3400	6-708-921-01	IC CXD9883M	
IC3500	6-708-921-01	IC CXD9883M (DZ370/DZ777)	
IC4502	6-707-853-01	IC TC74LCX541FT(EKJ)	
< JACK >			
J302	1-784-431-11	JACK, PIN 1P (TV/VIDEO (DIGITAL IN COAXIAL))	(DZ370/DZ570)
J302	1-784-431-11	JACK, PIN 1P (TV (DIGITAL IN COAXIAL))	(DZ560/DZ660/DZ777)
< COIL >			
L200	1-469-525-91	INDUCTOR	10uH
L301	1-469-525-91	INDUCTOR	10uH
L302	1-469-525-91	INDUCTOR	10uH

When IC510 and IC1103 on the Main board are damaged, exchange the new Main board for the Main board which IC damaged.

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
L701	1-469-525-91	INDUCTOR	10uH			R214	1-218-879-11	METAL CHIP	22K	0.5%	1/10W
L702	1-469-525-91	INDUCTOR	10uH			R215	1-218-879-11	METAL CHIP	22K	0.5%	1/10W
L703	1-469-525-91	INDUCTOR	10uH			R220	1-216-821-11	METAL CHIP	1K	5%	1/10W
L1701	1-457-374-21	COIL, COMMON MODE CHOKE				R221	1-218-847-11	METAL CHIP	1K	0.5%	1/10W
L1702	1-457-374-21	COIL, COMMON MODE CHOKE				R222	1-218-885-11	METAL CHIP	39K	0.5%	1/10W
L1703	1-457-374-21	COIL, COMMON MODE CHOKE				R223	1-218-871-11	METAL CHIP	10K	0.5%	1/10W
L1704	1-457-374-21	COIL, COMMON MODE CHOKE				R227	1-218-879-11	METAL CHIP	22K	0.5%	1/10W
L2101	1-457-374-21	COIL, COMMON MODE CHOKE				R228	1-218-879-11	METAL CHIP	22K	0.5%	1/10W
L3000	1-469-527-91	INDUCTOR	47uH			R229	1-218-879-11	METAL CHIP	22K	0.5%	1/10W
L3051	1-469-525-91	INDUCTOR	10uH			R230	1-218-879-11	METAL CHIP	22K	0.5%	1/10W
L3052	1-469-525-91	INDUCTOR	10uH			R231	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
L3053	1-469-525-91	INDUCTOR	10uH			R232	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
L3054	1-412-939-11	INDUCTOR	1uH			R317	1-216-809-11	METAL CHIP	100	5%	1/10W
L3101	1-457-579-11	COIL, CHOKE	10uH			R318	1-216-809-11	METAL CHIP	100	5%	1/10W
L3102	1-457-579-11	COIL, CHOKE	10uH			R319	1-216-841-11	METAL CHIP	47K	5%	1/10W
L3201	1-457-579-11	COIL, CHOKE	10uH			R328	1-218-285-11	METAL CHIP	75	5%	1/10W
L3202	1-457-579-11	COIL, CHOKE	10uH			R329	1-216-817-11	METAL CHIP	470	5%	1/10W
L3301	1-457-579-11	COIL, CHOKE	10uH			R501	1-216-857-11	METAL CHIP	1M	5%	1/10W
L3401	1-457-579-11	COIL, CHOKE	10uH			R504	1-216-821-11	METAL CHIP	1K	5%	1/10W
L3501	1-457-579-11	COIL, CHOKE	10uH (DZ370/DZ777)			R504	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W (TW) (E12)
L3901	1-457-078-11	COIL, AIR-CORE				R504	1-216-833-11	METAL CHIP	10K	5%	1/10W (E3,E15)
L3902	1-457-077-11	COIL, AIR-CORE				R504	1-216-835-11	METAL CHIP	15K	5%	1/10W (AUS)
L3903	1-457-078-11	COIL, AIR-CORE				R504	1-216-841-11	METAL CHIP	47K	5%	1/10W (E32,KR,MX,PX)
L3904	1-457-077-11	COIL, AIR-CORE				R505	1-216-829-11	METAL CHIP	4.7K	5%	1/10W (AEP,UK)
L4501	1-469-527-91	INDUCTOR	47uH			R505	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W (MX)
< TRANSISTOR >						R505	1-216-833-11	METAL CHIP	10K	5%	1/10W (E32)
Q503	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF			R505	1-216-835-11	METAL CHIP	15K	5%	1/10W (KR)
Q631	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF			R505	1-216-837-11	METAL CHIP	22K	5%	1/10W (PX)
Q632	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF			R505	1-216-841-11	METAL CHIP	47K	5%	1/10W (E3,E12,E15,AUS)
Q1101	6-550-008-01	TRANSISTOR	UM6K1N-TN			R506	1-216-839-11	METAL CHIP	33K	5%	1/10W (DZ370)
Q1102	6-550-653-01	TRANSISTOR	QST8TR			R506	1-216-841-11	METAL CHIP	47K	5%	1/10W (DZ560/DZ570/DZ660/DZ777)
Q1103	8-729-027-52	TRANSISTOR	DTC124EKA-T146			R507	1-216-823-11	METAL CHIP	1.5K	5%	1/10W (DZ777)
Q1701	6-550-008-01	TRANSISTOR	UM6K1N-TN			R507	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W (DZ660)
Q3000	8-729-111-29	TRANSISTOR	2SD1616A-K			R507	1-216-837-11	METAL CHIP	22K	5%	1/10W (DZ570)
Q3001	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF			R507	1-216-841-11	METAL CHIP	47K	5%	1/10W (DZ370/DZ560)
Q3002	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF			R508	1-216-864-11	SHORT CHIP	0		
Q3081	8-729-027-23	TRANSISTOR	DTA114EKA-T146			R509	1-216-809-11	METAL CHIP	100	5%	1/10W
Q3101	6-551-696-01	TRANSISTOR	ISA1235AC1TP-1EF			R510	1-216-833-11	METAL CHIP	10K	5%	1/10W
Q3102	6-551-696-01	TRANSISTOR	ISA1235AC1TP-1EF			R511	1-216-821-11	METAL CHIP	1K	5%	1/10W
Q3151	6-551-696-01	TRANSISTOR	ISA1235AC1TP-1EF			R512	1-216-833-11	METAL CHIP	10K	5%	1/10W
Q3152	6-551-696-01	TRANSISTOR	ISA1235AC1TP-1EF			R513	1-216-821-11	METAL CHIP	1K	5%	1/10W
Q3201	6-551-696-01	TRANSISTOR	ISA1235AC1TP-1EF			R514	1-216-833-11	METAL CHIP	10K	5%	1/10W
Q3202	6-551-696-01	TRANSISTOR	ISA1235AC1TP-1EF			R515	1-216-821-11	METAL CHIP	1K	5%	1/10W
Q3251	6-551-696-01	TRANSISTOR	ISA1235AC1TP-1EF			R516	1-216-821-11	METAL CHIP	1K	5%	1/10W
Q3252	6-551-696-01	TRANSISTOR	ISA1235AC1TP-1EF			R517	1-216-809-11	METAL CHIP	100	5%	1/10W
Q3301	6-551-696-01	TRANSISTOR	ISA1235AC1TP-1EF			R518	1-216-809-11	METAL CHIP	100	5%	1/10W
Q3302	6-551-696-01	TRANSISTOR	ISA1235AC1TP-1EF			R519	1-216-833-11	METAL CHIP	10K	5%	1/10W
Q3401	6-551-696-01	TRANSISTOR	ISA1235AC1TP-1EF			R526	1-216-821-11	METAL CHIP	1K	5%	1/10W
Q3402	6-551-696-01	TRANSISTOR	ISA1235AC1TP-1EF			R527	1-216-833-11	METAL CHIP	10K	5%	1/10W
Q3551	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF								
Q3552	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF								
Q3553	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF								
Q3554	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF								
Q3555	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF								
Q9724	6-551-699-01	TRANSISTOR	ISA1602AM1TP-1EF								
Q9726	8-729-620-13	TRANSISTOR	2SC4154TP-1EF								
Q9728	8-729-620-13	TRANSISTOR	2SC4154TP-1EF								
Q9729	8-729-027-43	TRANSISTOR	DTC114EKA-T146								
< RESISTOR >											
R203	1-218-879-11	METAL CHIP	22K	0.5%	1/10W						
R208	1-218-879-11	METAL CHIP	22K	0.5%	1/10W						

HCD-DZ370/DZ560/DZ570/DZ660/DZ777

Ver. 1.1

MAIN

Ref. No.	Part No.	Description	Remark		
R528	1-216-833-11	METAL CHIP	10K	5%	1/10W
R529	1-216-821-11	METAL CHIP	1K	5%	1/10W
R530	1-216-809-11	METAL CHIP	100	5%	1/10W
R531	1-216-833-11	METAL CHIP	10K	5%	1/10W
R532	1-216-821-11	METAL CHIP	1K	5%	1/10W
R533	1-216-809-11	METAL CHIP	100	5%	1/10W
R534	1-216-833-11	METAL CHIP	10K	5%	1/10W
R535	1-216-809-11	METAL CHIP	100	5%	1/10W
R536	1-216-864-11	SHORT CHIP	0		
R537	1-216-821-11	METAL CHIP	1K	5%	1/10W
R539	1-216-833-11	METAL CHIP	10K	5%	1/10W
R540	1-216-833-11	METAL CHIP	10K	5%	1/10W
R541	1-216-821-11	METAL CHIP	1K	5%	1/10W
R542	1-216-833-11	METAL CHIP	10K	5%	1/10W
R543	1-216-864-11	SHORT CHIP	0		
R544	1-216-833-11	METAL CHIP	10K	5%	1/10W
R546	1-216-821-11	METAL CHIP	1K	5%	1/10W
R547	1-216-864-11	SHORT CHIP	0		
R548	1-216-864-11	SHORT CHIP	0		
R549	1-218-885-11	METAL CHIP	39K	0.5%	1/10W
R551	1-216-809-11	METAL CHIP	100	5%	1/10W
R552	1-216-821-11	METAL CHIP	1K	5%	1/10W
R553	1-216-833-11	METAL CHIP	10K	5%	1/10W
R555	1-216-833-11	METAL CHIP	10K	5%	1/10W
R556	1-216-841-11	METAL CHIP	47K	5%	1/10W
R557	1-216-841-11	METAL CHIP	47K	5%	1/10W
R558	1-216-833-11	METAL CHIP	10K	5%	1/10W
R559	1-216-833-11	METAL CHIP	10K	5%	1/10W
R561	1-216-845-11	METAL CHIP	100K	5%	1/10W
R562	1-216-841-11	METAL CHIP	47K	5%	1/10W
R563	1-216-833-11	METAL CHIP	10K	5%	1/10W
R564	1-216-864-11	SHORT CHIP	0		
R565	1-216-864-11	SHORT CHIP	0		
R566	1-216-864-11	SHORT CHIP	0		
R567	1-216-864-11	SHORT CHIP	0		
R568	1-216-864-11	SHORT CHIP	0		
R569	1-216-864-11	SHORT CHIP	0		
R572	1-218-851-11	METAL CHIP	1.5K	0.5%	1/10W
R573	1-218-871-11	METAL CHIP	10K	0.5%	1/10W
R576	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R577	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R578	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R579	1-216-809-11	METAL CHIP	100	5%	1/10W
R580	1-216-809-11	METAL CHIP	100	5%	1/10W
R581	1-216-809-11	METAL CHIP	100	5%	1/10W
R582	1-216-833-11	METAL CHIP	10K	5%	1/10W
R583	1-216-841-11	METAL CHIP	47K	5%	1/10W
R584	1-216-821-11	METAL CHIP	1K	5%	1/10W
R585	1-216-864-11	SHORT CHIP	0 (DZ560/DZ660)		
R586	1-216-833-11	METAL CHIP	10K	5%	1/10W
R587	1-218-871-11	METAL CHIP	10K	0.5%	1/10W
R588	1-218-885-11	METAL CHIP	39K	0.5%	1/10W
R589	1-218-847-11	METAL CHIP	1K	0.5%	1/10W
R590	1-216-821-11	METAL CHIP	1K	5%	1/10W
R592	1-216-864-11	SHORT CHIP	0		
R593	1-216-833-11	METAL CHIP	10K	5%	1/10W
R595	1-216-833-11	METAL CHIP	10K	5%	1/10W
R596	1-218-871-11	METAL CHIP	10K	0.5%	1/10W
R597	1-218-879-11	METAL CHIP	22K	0.5%	1/10W
R598	1-218-851-11	METAL CHIP	1.5K	0.5%	1/10W
R599	1-216-821-11	METAL CHIP	1K	5%	1/10W
R601	1-216-809-11	METAL CHIP	100	5%	1/10W

(DZ560/DZ660)

Ref. No.	Part No.	Description	Remark		
R602	1-216-809-11	METAL CHIP	100	5%	1/10W
(DZ560/DZ660)					
R603	1-216-809-11	METAL CHIP	100	5%	1/10W
R604	1-216-809-11	METAL CHIP	100	5%	1/10W
R605	1-216-809-11	METAL CHIP	100	5%	1/10W
R606	1-216-809-11	METAL CHIP	100	5%	1/10W
R607	1-216-809-11	METAL CHIP	100	5%	1/10W
R608	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R609	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R611	1-216-809-11	METAL CHIP	100	5%	1/10W
R612	1-216-809-11	METAL CHIP	100	5%	1/10W
R613	1-216-809-11	METAL CHIP	100	5%	1/10W
R614	1-216-809-11	METAL CHIP	100	5%	1/10W
R615	1-216-809-11	METAL CHIP	100	5%	1/10W
R616	1-216-809-11	METAL CHIP	100	5%	1/10W
R617	1-216-809-11	METAL CHIP	100	5%	1/10W
R618	1-216-809-11	METAL CHIP	100	5%	1/10W
R619	1-216-864-11	SHORT CHIP	0		
R620	1-216-809-11	METAL CHIP	100	5%	1/10W
R621	1-216-809-11	METAL CHIP	100	5%	1/10W
R626	1-216-833-11	METAL CHIP	10K	5%	1/10W
R627	1-216-837-11	METAL CHIP	22K	5%	1/10W
R628	1-216-841-11	METAL CHIP	47K	5%	1/10W
R631	1-216-833-11	METAL CHIP	10K	5%	1/10W
R632	1-216-841-11	METAL CHIP	47K	5%	1/10W
R636	1-216-864-11	SHORT CHIP	0		
R638	1-216-864-11	SHORT CHIP	0		
R639	1-216-809-11	METAL CHIP	100	5%	1/10W
R648	1-216-864-11	SHORT CHIP	0		
R650	1-216-809-11	METAL CHIP	100	5%	1/10W
R651	1-216-809-11	METAL CHIP	100	5%	1/10W
R652	1-216-809-11	METAL CHIP	100	5%	1/10W
R654	1-216-809-11	METAL CHIP	100	5%	1/10W
R655	1-216-809-11	METAL CHIP	100	5%	1/10W
R656	1-216-809-11	METAL CHIP	100	5%	1/10W
R657	1-216-809-11	METAL CHIP	100	5%	1/10W
R660	1-216-864-11	SHORT CHIP	0		
R661	1-216-864-11	SHORT CHIP	0		
R662	1-216-809-11	METAL CHIP	100	5%	1/10W
R663	1-216-809-11	METAL CHIP	100	5%	1/10W
R664	1-216-809-11	METAL CHIP	100	5%	1/10W
R666	1-216-809-11	METAL CHIP	100	5%	1/10W
R667	1-216-809-11	METAL CHIP	100	5%	1/10W
R683	1-216-809-11	METAL CHIP	100	5%	1/10W
R685	1-216-864-11	SHORT CHIP	0		
R690	1-216-809-11	METAL CHIP	100	5%	1/10W
R691	1-216-864-11	SHORT CHIP	0		
R692	1-216-864-11	SHORT CHIP	0		
R693	1-216-864-11	SHORT CHIP	0		
R694	1-216-864-11	SHORT CHIP	0		
R695	1-216-864-11	SHORT CHIP	0		
R696	1-216-864-11	SHORT CHIP	0		
R697	1-216-864-11	SHORT CHIP	0		
R709	1-216-864-11	SHORT CHIP	0		
R710	1-216-833-11	METAL CHIP	10K	5%	1/10W
R713	1-216-839-11	METAL CHIP	33K	5%	1/10W
R714	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R715	1-216-830-11	METAL CHIP	5.6K	5%	1/10W
R716	1-216-809-11	METAL CHIP	100	5%	1/10W
R717	1-216-809-11	METAL CHIP	100	5%	1/10W
R718	1-216-809-11	METAL CHIP	100	5%	1/10W
R720	1-216-833-11	METAL CHIP	10K	5%	1/10W
R721	1-216-864-11	SHORT CHIP	0		

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
R726	1-216-809-11	METAL CHIP	100	5%	1/10W	R1123	1-216-864-11	SHORT CHIP	0		
R729	1-216-809-11	METAL CHIP	100	5%	1/10W	R1124	1-216-841-11	METAL CHIP	47K	5%	1/10W
R730	1-216-809-11	METAL CHIP	100	5%	1/10W	R1125	1-216-805-11	METAL CHIP	47	5%	1/10W
R731	1-216-821-11	METAL CHIP	1K	5%	1/10W	R1132	1-216-845-11	METAL CHIP	100K	5%	1/10W
R732	1-216-815-11	METAL CHIP	330	5%	1/10W	R1133	1-216-864-11	SHORT CHIP	0		
R733	1-216-857-11	METAL CHIP	1M	5%	1/10W	R1134	1-216-809-11	METAL CHIP	100	5%	1/10W
R734	1-216-809-11	METAL CHIP	100	5%	1/10W						(DZ560/DZ660)
R735	1-216-809-11	METAL CHIP	100	5%	1/10W	R1135	1-216-821-11	METAL CHIP	1K	5%	1/10W
R736	1-216-809-11	METAL CHIP	100	5%	1/10W	R1136	1-216-835-11	METAL CHIP	15K	5%	1/10W
R737	1-216-833-11	METAL CHIP	10K	5%	1/10W	R1138	1-216-809-11	METAL CHIP	100	5%	1/10W
											(DZ560/DZ660)
R738	1-216-809-11	METAL CHIP	100	5%	1/10W	R1139	1-216-864-11	SHORT CHIP	0		
R740	1-216-864-11	SHORT CHIP	0								
R741	1-216-864-11	SHORT CHIP	0			R1140	1-216-821-11	METAL CHIP	1K	5%	1/10W
R742	1-216-833-11	METAL CHIP	10K	5%	1/10W	R1141	1-216-855-11	METAL CHIP	680K	5%	1/10W
R743	1-216-809-11	METAL CHIP	100	5%	1/10W	R1142	1-216-845-11	METAL CHIP	100K	5%	1/10W
R744	1-216-864-11	SHORT CHIP	0			R1145	1-216-864-11	SHORT CHIP	0		
R745	1-216-864-11	SHORT CHIP	0			R1146	1-216-805-11	METAL CHIP	47	5%	1/10W
R746	1-216-864-11	SHORT CHIP	0								
R747	1-216-864-11	SHORT CHIP	0			R1147	1-216-864-11	SHORT CHIP	0		
R748	1-216-864-11	SHORT CHIP	0			R1148	1-216-864-11	SHORT CHIP	0		
R749	1-216-864-11	SHORT CHIP	0			R1151	1-216-833-11	METAL CHIP	10K	5%	1/10W
R750	1-216-809-11	METAL CHIP	100	5%	1/10W	R1152	1-216-864-11	SHORT CHIP	0		
R763	1-216-864-11	SHORT CHIP	0			R1153	1-216-864-11	SHORT CHIP	0		
R764	1-216-864-11	SHORT CHIP	0								
R765	1-216-864-11	SHORT CHIP	0			R1154	1-216-864-11	SHORT CHIP	0		
						R1155	1-216-864-11	SHORT CHIP	0		
R766	1-216-864-11	SHORT CHIP	0			R1156	1-216-809-11	METAL CHIP	100	5%	1/10W
R767	1-216-864-11	SHORT CHIP	0			R1159	1-216-805-11	METAL CHIP	47	5%	1/10W
R768	1-216-864-11	SHORT CHIP	0			R1160	1-216-805-11	METAL CHIP	47	5%	1/10W
R769	1-216-864-11	SHORT CHIP	0								
R778	1-216-864-11	SHORT CHIP	0			R1161	1-216-801-11	METAL CHIP	22	5%	1/10W
						R1162	1-216-805-11	METAL CHIP	47	5%	1/10W
R780	1-216-805-11	METAL CHIP	47	5%	1/10W	R1163	1-216-805-11	METAL CHIP	47	5%	1/10W
R781	1-216-805-11	METAL CHIP	47	5%	1/10W	R1164	1-216-805-11	METAL CHIP	47	5%	1/10W
R782	1-216-801-11	METAL CHIP	22	5%	1/10W	R1165	1-216-805-11	METAL CHIP	47	5%	1/10W
R783	1-216-801-11	METAL CHIP	22	5%	1/10W						
R784	1-216-801-11	METAL CHIP	22	5%	1/10W	R1171	1-216-809-11	METAL CHIP	100	5%	1/10W
						R1175	1-216-864-11	SHORT CHIP	0		
R785	1-216-801-11	METAL CHIP	22	5%	1/10W	R1176	1-216-833-11	METAL CHIP	10K	5%	1/10W
R787	1-216-809-11	METAL CHIP	100	5%	1/10W	R1183	1-216-805-11	METAL CHIP	47	5%	1/10W
R788	1-216-864-11	SHORT CHIP	0			R1184	1-216-805-11	METAL CHIP	47	5%	1/10W
R790	1-216-864-11	SHORT CHIP	0								
R791	1-216-864-11	SHORT CHIP	0			R1185	1-216-805-11	METAL CHIP	47	5%	1/10W
						R1191	1-216-821-11	METAL CHIP	1K	5%	1/10W
R793	1-216-864-11	SHORT CHIP	0			R1193	1-216-821-11	METAL CHIP	1K	5%	1/10W
R794	1-216-864-11	SHORT CHIP	0			R1198	1-216-809-11	METAL CHIP	100	5%	1/10W
R796	1-216-864-11	SHORT CHIP	0			R1204	1-216-822-11	METAL CHIP	1.2K	5%	1/10W
R797	1-216-864-11	SHORT CHIP	0								
R1101	1-216-809-11	METAL CHIP	100	5%	1/10W	R1205	1-216-833-11	METAL CHIP	10K	5%	1/10W
						R1206	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1102	1-216-864-11	SHORT CHIP	0			R1207	1-216-826-11	METAL CHIP	2.7K	5%	1/10W
R1103	1-218-864-11	METAL CHIP	5.1K	0.5%	1/10W	R1208	1-216-839-11	METAL CHIP	33K	5%	1/10W
R1105	1-216-833-11	METAL CHIP	10K	5%	1/10W	R1209	1-216-839-11	METAL CHIP	33K	5%	1/10W
R1106	1-216-833-11	METAL CHIP	10K	5%	1/10W						
R1107	1-216-833-11	METAL CHIP	10K	5%	1/10W	R1210	1-216-841-11	METAL CHIP	47K	5%	1/10W
						R1212	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1108	1-216-857-11	METAL CHIP	1M	5%	1/10W	R1213	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W
R1109	1-216-864-11	SHORT CHIP	0			R1214	1-216-835-11	METAL CHIP	15K	5%	1/10W
R1110	1-216-841-11	METAL CHIP	47K	5%	1/10W	R1215	1-216-834-11	METAL CHIP	12K	5%	1/10W
R1111	1-216-809-11	METAL CHIP	100	5%	1/10W						
R1112	1-211-977-11	METAL CHIP	22	0.5%	1/10W	R1216	1-216-834-11	METAL CHIP	12K	5%	1/10W
						R1219	1-216-838-11	METAL CHIP	27K	5%	1/10W
R1113	1-211-977-11	METAL CHIP	22	0.5%	1/10W	R1220	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1114	1-216-845-11	METAL CHIP	100K	5%	1/10W	R1221	1-218-889-11	METAL CHIP	56K	0.5%	1/10W
R1115	1-211-977-11	METAL CHIP	22	0.5%	1/10W	R1222	1-216-839-11	METAL CHIP	33K	5%	1/10W
R1116	1-216-821-11	METAL CHIP	1K	5%	1/10W						
R1117	1-216-841-11	METAL CHIP	47K	5%	1/10W	R1223	1-218-895-11	METAL CHIP	100K	0.5%	1/10W
						R1224	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1118	1-216-801-11	METAL CHIP	22	5%	1/10W	R1225	1-218-895-11	METAL CHIP	100K	0.5%	1/10W
R1120	1-216-801-11	METAL CHIP	22	5%	1/10W	R1226	1-218-889-11	METAL CHIP	56K	0.5%	1/10W
R1121	1-216-801-11	METAL CHIP	22	5%	1/10W	R1227	1-216-864-11	SHORT CHIP	0		
						R1228	1-216-864-11	SHORT CHIP	0		

HCD-DZ370/DZ560/DZ570/DZ660/DZ777

Ver. 1.1

MAIN

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
R1230	1-218-893-11	METAL CHIP	82K	0.5%	1/10W	R2182	1-216-864-11	SHORT CHIP	0		
R1231	1-218-875-11	METAL CHIP	15K	0.5%	1/10W	R2184	1-216-809-11	METAL CHIP	100	5%	1/10W
R1232	1-218-877-11	METAL CHIP	18K	0.5%	1/10W	R2185	1-216-809-11	METAL CHIP	100	5%	1/10W
R1233	1-218-883-11	METAL CHIP	33K	0.5%	1/10W	R2188	1-216-864-11	SHORT CHIP	0		
R1234	1-216-833-11	METAL CHIP	10K	5%	1/10W	R2191	1-245-287-11	METAL CHIP	0.1	1%	1W
R1236	1-216-821-11	METAL CHIP	1K	5%	1/10W	R2192	1-218-835-11	METAL CHIP	330	0.5%	1/10W
R1237	1-216-821-11	METAL CHIP	1K	5%	1/10W	R2193	1-218-883-11	METAL CHIP	33K	0.5%	1/10W
R1238	1-216-821-11	METAL CHIP	1K	5%	1/10W	R2194	1-218-883-11	METAL CHIP	33K	0.5%	1/10W
R1239	1-216-821-11	METAL CHIP	1K	5%	1/10W	R2195	1-216-809-11	METAL CHIP	100	5%	1/10W
R1243	1-216-805-11	METAL CHIP	47	5%	1/10W	R2201	1-216-864-11	SHORT CHIP	0		
R1246	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R2203	1-216-864-11	SHORT CHIP	0		
R1247	1-216-821-11	METAL CHIP	1K	5%	1/10W	R2746	1-216-864-11	SHORT CHIP	0		
R1730	1-216-826-11	METAL CHIP	2.7K	5%	1/10W	R3001	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1742	1-216-841-11	METAL CHIP	47K	5%	1/10W	R3002	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1743	1-216-864-11	SHORT CHIP	0			R3003	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1747	1-216-864-11	SHORT CHIP	0			R3004	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R1748	1-216-864-11	SHORT CHIP	0			R3011	1-216-817-11	METAL CHIP	470	5%	1/10W
R1749	1-216-824-11	METAL CHIP	1.8K	5%	1/10W	R3012	1-216-817-11	METAL CHIP	470	5%	1/10W
R1750	1-216-824-11	METAL CHIP	1.8K	5%	1/10W	R3013	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1751	1-216-864-11	SHORT CHIP	0			R3014	1-216-801-11	METAL CHIP	22	5%	1/10W
R1752	1-216-864-11	SHORT CHIP	0			R3015	1-216-809-11	METAL CHIP	100	5%	1/10W
R1753	1-216-864-11	SHORT CHIP	0			R3017	1-216-809-11	METAL CHIP	100	5%	1/10W
R1754	1-216-864-11	SHORT CHIP	0			R3021	1-216-817-11	METAL CHIP	470	5%	1/10W
R1781	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	R3022	1-216-817-11	METAL CHIP	470	5%	1/10W
R1782	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	R3023	1-216-801-11	METAL CHIP	22	5%	1/10W
R1783	1-216-864-11	SHORT CHIP	0			R3024	1-216-809-11	METAL CHIP	100	5%	1/10W
R1784	1-216-864-11	SHORT CHIP	0			R3026	1-216-809-11	METAL CHIP	100	5%	1/10W
R1785	1-216-864-11	SHORT CHIP	0			R3031	1-216-817-11	METAL CHIP	470	5%	1/10W
R1786	1-216-864-11	SHORT CHIP	0			R3032	1-216-817-11	METAL CHIP	470	5%	1/10W
R2101	1-218-841-11	METAL CHIP	560	0.5%	1/10W	R3033	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2104	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R3034	1-216-801-11	METAL CHIP	22	5%	1/10W
R2108	1-216-864-11	SHORT CHIP	0			R3035	1-216-809-11	METAL CHIP	100	5%	1/10W
R2110	1-216-826-11	METAL CHIP	2.7K	5%	1/10W	R3037	1-216-809-11	METAL CHIP	100	5%	1/10W
R2114	1-216-801-11	METAL CHIP	22	5%	1/10W	R3040	1-216-864-11	SHORT CHIP	0		
R2115	1-216-864-11	SHORT CHIP	0			R3041	1-216-864-11	SHORT CHIP	0		
R2119	1-216-864-11	SHORT CHIP	0			R3042	1-216-864-11	SHORT CHIP	0		
R2120	1-216-809-11	METAL CHIP	100	5%	1/10W	R3043	1-216-864-11	SHORT CHIP	0		
R2121	1-216-864-11	SHORT CHIP	0			R3044	1-216-864-11	SHORT CHIP	0		
R2123	1-216-864-11	SHORT CHIP	0			R3047	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2129	1-216-845-11	METAL CHIP	100K	5%	1/10W	R3049	1-216-864-11	SHORT CHIP	0		
R2130	1-216-809-11	METAL CHIP	100	5%	1/10W	R3050	1-216-864-11	SHORT CHIP	0		
R2131	1-216-809-11	METAL CHIP	100	5%	1/10W	R3051	1-216-097-11	RES-CHIP	100K	5%	1/10W
R2133	1-216-864-11	SHORT CHIP	0			R3052	1-216-857-11	METAL CHIP	1M	5%	1/10W
R2134	1-216-864-11	SHORT CHIP	0			R3053	1-216-817-11	METAL CHIP	470	5%	1/10W
R2136	1-216-805-11	METAL CHIP	47	5%	1/10W	R3054	1-216-809-11	METAL CHIP	100	5%	1/10W
R2150	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	R3055	1-216-805-11	METAL CHIP	47	5%	1/10W
R2151	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	R3057	1-216-805-11	METAL CHIP	47	5%	1/10W
R2152	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	R3058	1-216-864-11	SHORT CHIP	0		
R2155	1-216-833-11	METAL CHIP	10K	5%	1/10W	R3059	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2156	1-216-833-11	METAL CHIP	10K	5%	1/10W	R3060	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2157	1-216-833-11	METAL CHIP	10K	5%	1/10W	R3061	1-216-864-11	SHORT CHIP	0		
R2158	1-216-833-11	METAL CHIP	10K	5%	1/10W	R3063	1-216-821-11	METAL CHIP	1K	5%	1/10W
R2159	1-216-833-11	METAL CHIP	10K	5%	1/10W	R3064	1-216-821-11	METAL CHIP	1K	5%	1/10W
R2160	1-216-833-11	METAL CHIP	10K	5%	1/10W	R3065	1-216-809-11	METAL CHIP	100	5%	1/10W
R2161	1-216-864-11	SHORT CHIP	0			R3066	1-216-809-11	METAL CHIP	100	5%	1/10W
R2162	1-216-864-11	SHORT CHIP	0			R3067	1-216-809-11	METAL CHIP	100	5%	1/10W
R2167	1-216-864-11	SHORT CHIP	0			R3068	1-216-809-11	METAL CHIP	100	5%	1/10W
R2168	1-216-815-11	METAL CHIP	330	5%	1/10W	R3069	1-216-809-11	METAL CHIP	100	5%	1/10W
R2176	1-216-864-11	SHORT CHIP	0			R3070	1-216-809-11	METAL CHIP	100	5%	1/10W
R2177	1-216-864-11	SHORT CHIP	0			R3071	1-216-809-11	METAL CHIP	100	5%	1/10W
R2178	1-216-821-11	METAL CHIP	1K	5%	1/10W	R3072	1-216-809-11	METAL CHIP	100	5%	1/10W
R2179	1-216-809-11	METAL CHIP	100	5%	1/10W	R3073	1-216-809-11	METAL CHIP	100	5%	1/10W
R2180	1-216-833-11	METAL CHIP	10K	5%	1/10W	R3074	1-216-809-11	METAL CHIP	100	5%	1/10W

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
R3075	1-216-809-11	METAL CHIP	100	5%	1/10W	R3303	1-216-864-11	SHORT CHIP	0		
R3076	1-216-809-11	METAL CHIP	100	5%	1/10W	R3304	1-216-864-11	SHORT CHIP	0		
R3077	1-216-809-11	METAL CHIP	100	5%	1/10W	R3307	1-216-835-11	METAL CHIP	15K	5%	1/10W
R3078	1-216-809-11	METAL CHIP	100	5%	1/10W	R3315	1-216-864-11	SHORT CHIP	0		
R3079	1-216-809-11	METAL CHIP	100	5%	1/10W	R3316	1-216-864-11	SHORT CHIP	0		
R3080	1-216-845-11	METAL CHIP	100K	5%	1/10W	R3325	1-216-845-11	METAL CHIP	100K	5%	1/10W
R3085	1-216-839-11	METAL CHIP	33K	5%	1/10W	R3326	1-216-845-11	METAL CHIP	100K	5%	1/10W
R3086	1-216-839-11	METAL CHIP	33K	5%	1/10W	R3327	1-216-845-11	METAL CHIP	100K	5%	1/10W
R3087	1-216-833-11	METAL CHIP	10K	5%	1/10W	R3401	1-216-809-11	METAL CHIP	100	5%	1/10W
R3088	1-216-833-11	METAL CHIP	10K	5%	1/10W						(DZ370/DZ777)
R3089	1-216-833-11	METAL CHIP	10K	5%	1/10W	R3402	1-216-809-11	METAL CHIP	100	5%	1/10W
R3090	1-216-833-11	METAL CHIP	10K	5%	1/10W						(DZ370/DZ777)
R3091	1-216-837-11	METAL CHIP	22K	5%	1/10W	R3403	1-216-864-11	SHORT CHIP	0		
R3092	1-216-837-11	METAL CHIP	22K	5%	1/10W	R3404	1-216-864-11	SHORT CHIP	0		
R3093	1-216-837-11	METAL CHIP	22K	5%	1/10W	R3407	1-216-835-11	METAL CHIP	15K	5%	1/10W
R3094	1-216-837-11	METAL CHIP	22K	5%	1/10W	R3415	1-216-864-11	SHORT CHIP	0		
R3095	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	R3416	1-216-864-11	SHORT CHIP	0		
R3096	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R3425	1-216-845-11	METAL CHIP	100K	5%	1/10W
R3097	1-216-809-11	METAL CHIP	100	5%	1/10W	R3426	1-216-845-11	METAL CHIP	100K	5%	1/10W
R3098	1-216-839-11	METAL CHIP	33K	5%	1/10W	R3427	1-216-845-11	METAL CHIP	100K	5%	1/10W
R3099	1-216-839-11	METAL CHIP	33K	5%	1/10W	R3501	1-216-809-11	METAL CHIP	100	5%	1/10W
R3101	1-216-809-11	METAL CHIP	100	5%	1/10W	R3502	1-216-809-11	METAL CHIP	100	5%	1/10W
R3102	1-216-809-11	METAL CHIP	100	5%	1/10W	R3503	1-216-864-11	SHORT CHIP	0		(DZ370/DZ777)
R3103	1-216-864-11	SHORT CHIP	0			R3504	1-216-864-11	SHORT CHIP	0		(DZ370/DZ777)
R3104	1-216-864-11	SHORT CHIP	0			R3507	1-216-835-11	METAL CHIP	15K	5%	1/10W
R3107	1-216-835-11	METAL CHIP	15K	5%	1/10W						(DZ370/DZ777)
R3115	1-216-864-11	SHORT CHIP	0			R3515	1-216-864-11	SHORT CHIP	0		(DZ370/DZ777)
R3116	1-216-864-11	SHORT CHIP	0			R3516	1-216-864-11	SHORT CHIP	0		(DZ370/DZ777)
R3125	1-216-845-11	METAL CHIP	100K	5%	1/10W	R3551	1-216-845-11	METAL CHIP	100K	5%	1/10W
R3126	1-216-845-11	METAL CHIP	100K	5%	1/10W	R3552	1-216-837-11	METAL CHIP	22K	5%	1/10W
R3127	1-216-845-11	METAL CHIP	100K	5%	1/10W	R3553	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3151	1-216-809-11	METAL CHIP	100	5%	1/10W	R3554	1-216-845-11	METAL CHIP	100K	5%	1/10W
R3152	1-216-809-11	METAL CHIP	100	5%	1/10W	R3555	1-216-864-11	SHORT CHIP	0		
R3153	1-216-864-11	SHORT CHIP	0			R3556	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R3154	1-216-864-11	SHORT CHIP	0			R3558	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3157	1-216-835-11	METAL CHIP	15K	5%	1/10W	R3559	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3165	1-216-864-11	SHORT CHIP	0			R3560	1-216-864-11	SHORT CHIP	0		
R3166	1-216-864-11	SHORT CHIP	0			R3561	1-216-841-11	METAL CHIP	47K	5%	1/10W
R3175	1-216-845-11	METAL CHIP	100K	5%	1/10W	R3562	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3176	1-216-845-11	METAL CHIP	100K	5%	1/10W	R3563	1-216-845-11	METAL CHIP	100K	5%	1/10W
R3177	1-216-845-11	METAL CHIP	100K	5%	1/10W	R3901	1-216-296-11	SHORT CHIP	0		
R3201	1-216-809-11	METAL CHIP	100	5%	1/10W	R3902	1-216-296-11	SHORT CHIP	0		
R3202	1-216-809-11	METAL CHIP	100	5%	1/10W	R3905	1-216-296-11	SHORT CHIP	0		
R3203	1-216-864-11	SHORT CHIP	0			R3906	1-216-296-11	SHORT CHIP	0		
R3204	1-216-864-11	SHORT CHIP	0			R3907	1-216-864-11	SHORT CHIP	0		
R3207	1-216-835-11	METAL CHIP	15K	5%	1/10W	R3911	1-216-864-11	SHORT CHIP	0		
R3215	1-216-864-11	SHORT CHIP	0			R3912	1-216-864-11	SHORT CHIP	0		
R3216	1-216-864-11	SHORT CHIP	0			R3913	1-216-864-11	SHORT CHIP	0		
R3225	1-216-845-11	METAL CHIP	100K	5%	1/10W	R3914	1-216-864-11	SHORT CHIP	0		
R3226	1-216-845-11	METAL CHIP	100K	5%	1/10W	R3917	1-216-864-11	SHORT CHIP	0		
R3227	1-216-845-11	METAL CHIP	100K	5%	1/10W	R3918	1-216-864-11	SHORT CHIP	0		
R3251	1-216-809-11	METAL CHIP	100	5%	1/10W	R3919	1-216-864-11	SHORT CHIP	0		
R3252	1-216-809-11	METAL CHIP	100	5%	1/10W	R3920	1-216-864-11	SHORT CHIP	0		(DZ370/DZ777)
R3253	1-216-864-11	SHORT CHIP	0			R3921	1-216-864-11	SHORT CHIP	0		(DZ370/DZ777)
R3254	1-216-864-11	SHORT CHIP	0			R4501	1-216-801-11	METAL CHIP	22	5%	1/10W
R3257	1-216-835-11	METAL CHIP	15K	5%	1/10W	R4502	1-216-801-11	METAL CHIP	22	5%	1/10W
R3265	1-216-864-11	SHORT CHIP	0			R4510	1-216-805-11	METAL CHIP	47	5%	1/10W
R3266	1-216-864-11	SHORT CHIP	0			R4511	1-216-803-11	METAL CHIP	33	5%	1/10W
R3275	1-216-845-11	METAL CHIP	100K	5%	1/10W	R4512	1-216-805-11	METAL CHIP	47	5%	1/10W
R3276	1-216-845-11	METAL CHIP	100K	5%	1/10W	R4513	1-216-805-11	METAL CHIP	47	5%	1/10W
R3277	1-216-845-11	METAL CHIP	100K	5%	1/10W	R4514	1-216-805-11	METAL CHIP	47	5%	1/10W
R3301	1-216-809-11	METAL CHIP	100	5%	1/10W	R4515	1-216-805-11	METAL CHIP	47	5%	1/10W
R3302	1-216-809-11	METAL CHIP	100	5%	1/10W	R4516	1-216-805-11	METAL CHIP	47	5%	1/10W

HCD-DZ370/DZ560/DZ570/DZ660/DZ777

Ver. 1.1

MAIN

MS-203

POWER

Ref. No.	Part No.	Description	Remark			
R4518	1-216-864-11	SHORT CHIP	0			
R4716	1-216-864-11	SHORT CHIP	0			(DZ370/DZ570/DZ777)
R4717	1-216-864-11	SHORT CHIP	0			(DZ370/DZ570/DZ777)
R4718	1-216-864-11	SHORT CHIP	0			
R4719	1-216-864-11	SHORT CHIP	0			
R4721	1-216-864-11	SHORT CHIP	0			
R4805	1-216-801-11	METAL CHIP	22	5%	1/10W	
R9918	1-216-821-11	METAL CHIP	1K	5%	1/10W	
R9920	1-216-864-11	SHORT CHIP	0			
R9922	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R9924	1-216-821-11	METAL CHIP	1K	5%	1/10W	
R9928	1-216-837-11	METAL CHIP	22K	5%	1/10W	
R9929	1-216-837-11	METAL CHIP	22K	5%	1/10W	
R9934	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R9935	1-216-864-11	SHORT CHIP	0			
R9941	1-216-838-11	METAL CHIP	27K	5%	1/10W	
R9945	1-216-813-11	METAL CHIP	220	5%	1/10W	
< NETWORK RESISTOR >						
RB1103	1-234-400-21	CONDUCTOR, NETWORK 0X4 (1005)				
RB1104	1-234-400-21	CONDUCTOR, NETWORK 0X4 (1005)				
RB1105	1-234-944-21	RES, NETWORK 47X4 (1005)				
RB1106	1-234-944-21	RES, NETWORK 47X4 (1005)				
RB1107	1-234-944-21	RES, NETWORK 47X4 (1005)				
RB1108	1-234-944-21	RES, NETWORK 47X4 (1005)				
RB1109	1-234-400-21	CONDUCTOR, NETWORK 0X4 (1005)				
RB1110	1-234-400-21	CONDUCTOR, NETWORK 0X4 (1005)				
RB1111	1-234-400-21	CONDUCTOR, NETWORK 0X4 (1005)				
RB1112	1-234-400-21	CONDUCTOR, NETWORK 0X4 (1005)				
RB1113	1-234-400-21	CONDUCTOR, NETWORK 0X4 (1005)				
RB1114	1-234-400-21	CONDUCTOR, NETWORK 0X4 (1005)				
RB1115	1-234-400-21	CONDUCTOR, NETWORK 0X4 (1005)				
< TERMINAL BOARD >						
TB3901	1-780-453-11	TERMINAL BOARD (SPEAKER) 2P (SPEAKER (CENTER,SUBWOOFER))				
< VIBRATOR >						
X501	1-795-058-21	VIBRATOR, CERAMIC (5MHz)				
X701	1-795-692-11	QUARTZ CRYSTAL UNIT (12.288MHz)				
X1101	1-795-630-11	VIBRATOR, CRYSTAL (27MHz)				
X3051	1-795-660-21	QUARTZ CRYSTAL UNIT (49.1MHz)				

MS-203 BOARD						

< CONNECTOR >						
CN001	1-815-412-11	CONNECTOR, FFC/FPC 5P				
< SWITCH >						
S001	1-786-693-11	SWITCH, DETECTION (CHUCK/TRAY DETECT)				

Ref. No.	Part No.	Description	Remark			
A-1382-402-A		POWER BOARD, COMPLETE (AEP,UK)				
A-1392-694-A		POWER BOARD, COMPLETE (E3,E12,E15,AUS,KR)				
A-1392-696-A		POWER BOARD, COMPLETE (TW)				
A-1452-054-A		POWER BOARD, COMPLETE (MX)				
A-1452-056-A		POWER BOARD, COMPLETE (E32,PX)				

1-533-217-41		HOLDER, FUSE				
7-685-646-79		SCREW +BVTP 3X8 TYPE2 IT-3				
7-685-647-79		SCREW +BVTP 3X10 TYPE2 IT-3				
< CAPACITOR >						
△ C901	1-165-529-11	MYLAR	0.22uF	10%	275V	
△ C902	1-165-529-11	MYLAR	0.22uF	10%	275V	
△ C903	1-112-330-11	ELECT(BLOCK)	1000uF	20%	200V (TW)	
△ C903	1-112-331-11	ELECT(BLOCK)	1000uF	20%	250V (MX)	
△ C903	1-112-333-11	ELECT(BLOCK)	330uF	20%	450V (EXCEPT AEP,UK,MX,TW)	
△ C903	1-114-346-11	ELECT(BLOCK)	330uF	20%	400V (AEP,UK)	
△ C905	1-112-334-11	FILM	0.01uF	5%	400V (MX,TW)	
△ C905	1-112-335-11	FILM	0.0033uF	5%	400V (EXCEPT MX,TW)	
△ C906	1-117-815-11	FILM	0.001uF	3%	1.5KV (EXCEPT MX,TW)	
C907	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V (EXCEPT MX,TW)	
C907	1-162-965-11	CERAMIC CHIP	0.0015uF	10%	50V (MX,TW)	
C908	1-104-962-11	ELECT	47uF	20%	35V	
C909	1-162-960-11	CERAMIC CHIP	220PF	10%	50V	
C910	1-107-906-11	ELECT	10uF	20%	50V (MX,TW)	
C910	1-107-907-11	ELECT	22uF	20%	50V (EXCEPT E32,MX,PX,TW)	
C910	1-126-967-11	ELECT	47uF	20%	50V (E32,PX)	
C911	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V	
C912	1-126-947-11	ELECT	47uF	20%	35V	
△ C913	1-112-866-51	CERAMIC	100PF	10%	250V	
C916	1-100-566-11	CERAMIC CHIP	0.1uF	10%	25V	
△ C918	1-112-887-51	CERAMIC	0.01uF	20%	250V	
△ C920	1-112-887-51	CERAMIC	0.01uF	20%	250V	
△ C921	1-117-220-81	CERAMIC	150PF	5%	2KV	
C922	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	
C923	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V	
△ C924	1-112-335-11	FILM	0.0033uF	5%	400V	
△ C925	1-107-974-81	CERAMIC	47PF	5%	2KV	
△ C926	1-128-560-11	ELECT	22uF	20%	100V	
C927	1-128-947-31	ELECT	3300uF	20%	10V	
C928	1-137-947-21	ELECT	2700uF	20%	16V	
C929	1-128-954-11	ELECT	1000uF	20%	25V	
△ C930	1-112-866-51	CERAMIC	100PF	10%	250V	
C932	1-100-924-21	ELECT	2200uF	20%	35V	
C933	1-100-924-21	ELECT	2200uF	20%	35V	
C934	1-112-831-11	ELECT	2200uF	20%	35V	
C935	1-163-021-11	CERAMIC CHIP	0.01uF	10%	50V	
C936	1-163-021-11	CERAMIC CHIP	0.01uF	10%	50V	
C937	1-100-756-11	CERAMIC CHIP	0.047uF		50V	
△ C938	1-112-869-51	CERAMIC	470PF	10%	250V	
C939	1-136-165-00	FILM	0.1uF	5%	50V	

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
C940	1-128-950-31	ELECT	1000uF 20% 16V	D947	6-501-412-01	DIODE SF5S6	
C942	1-126-941-11	ELECT	470uF 20% 25V	D948	6-501-817-01	DIODE MA2J1110GLS0	
C943	1-126-934-11	ELECT	220uF 20% 16V	D949	6-501-817-01	DIODE MA2J1110GLS0	
C945	1-126-935-11	ELECT	470uF 20% 16V	DZ901	6-501-782-01	DIODE MAZ8180GMLS0	
C948	1-126-925-11	ELECT	470uF 20% 10V	DZ902	6-502-231-01	DIODE MAZ8220GLLS0	
C950	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	DZ903	6-501-768-01	DIODE MAZ8120GMLS0	
C951	1-100-566-11	CERAMIC CHIP	0.1uF 10% 25V	DZ904	6-501-734-01	DIODE MAZ8056GMLS0	
△ C963	1-112-869-51	CERAMIC	470PF 10% 250V	DZ915	6-501-760-01	DIODE MAZ8100GMLS0	
△ C963	1-112-871-51	CERAMIC	0.0022uF 20% 250V (EXCEPT MX,TW)	DZ932	6-501-734-01	DIODE MAZ8056GMLS0	
△ C964	1-112-869-51	CERAMIC	470PF 10% 250V (MX,TW) (EXCEPT MX,TW)	DZ953	6-501-713-01	DIODE MAZ8033GOLS0	
△ C964	1-112-871-51	CERAMIC	0.0022uF 20% 250V (MX,TW)	< GROUND TERMINAL BOARD >			
C969	1-100-566-11	CERAMIC CHIP	0.1uF 10% 25V	EB902	1-537-770-21	TERMINAL BOARD, GROUND	
C970	1-100-566-11	CERAMIC CHIP	0.1uF 10% 25V	EB904	1-537-770-21	TERMINAL BOARD, GROUND	
C971	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	EB907	1-537-770-21	TERMINAL BOARD, GROUND	
C975	1-100-566-11	CERAMIC CHIP	0.1uF 10% 25V	< FUSE >			
C976	1-126-933-11	ELECT	100uF 20% 16V	△ F945	1-576-794-11	FUSE, MICRO (1608) 2A	
△ C980	1-117-828-11	FILM	3300PF 3% 1.5KV (MX,TW)	< RESISTOR >			
C983	1-104-760-11	CERAMIC CHIP	0.047uF 10% 50V	△ FR929	1-246-373-11	FUSIBLE 1 10% 1/2W F	
C984	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	< IC >			
C987	1-100-566-11	CERAMIC CHIP	0.1uF 10% 25V	IC901	6-707-741-01	IC STR-F6138-LF1352 (MX,TW)	
C990	1-100-566-11	CERAMIC CHIP	0.1uF 10% 25V	IC901	6-707-742-01	IC STR-F6168-LF1352 (EXCEPT MX,TW)	
C991	1-100-566-11	CERAMIC CHIP	0.1uF 10% 25V	IC921	6-711-790-01	IC MR4020-7103	
C992	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	IC922	6-707-743-01	IC TA76L431S(TPE6,Q)	
C993	1-100-566-11	CERAMIC CHIP	0.1uF 10% 25V	IC931	8-759-648-34	IC TA76431AS(TPE6)	
△ C994	1-112-869-51	CERAMIC	470PF 10% 250V (E32,PX)	IC941	6-705-308-01	IC SI-3010KM-TL	
C995	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	< COIL >			
C996	1-165-989-11	CERAMIC CHIP	10uF 10% 6.3V	L931	1-457-438-11	COIL, CHOKE 5.6uH	
C997	1-115-339-11	CERAMIC CHIP	0.1uF 10% 50V	L944	1-414-398-11	INDUCTOR 10uH	
< CONNECTOR >				L945	1-414-398-11	INDUCTOR 10uH	
CN901	1-564-321-00	PIN, CONNECTOR (3.96mm PITCH) 2P		L947	1-414-398-11	INDUCTOR 10uH	
CN904	1-785-102-11	PIN, CONNECTOR (3.96mm PITCH) 4P		L948	1-414-398-11	INDUCTOR 10uH	
* CN906	1-564-715-11	PIN, CONNECTOR (SMALL TYPE) 13P		L953	1-414-398-11	INDUCTOR 10uH	
CN908	1-564-505-11	PLUG, CONNECTOR 2P		L954	1-457-578-11	COIL, CHOKE 10uH	
< DIODE >				L956	1-457-578-11	COIL, CHOKE 10uH	
D901	8-719-082-57	DIODE D5SBA60F01		< LINE FILTER >			
D902	8-719-063-74	DIODE D1NL20U-TR2		△ LF901	1-457-054-21	COIL, LINE FILTER (EXCEPT E32,MX,PX,TW)	
△ D903	6-500-241-01	DIODE SARS03		△ LF901	1-457-449-11	COIL, LINE FILTER (E32,MX,PX,TW)	
D905	8-719-063-74	DIODE D1NL20U-TR2		△ LF902	1-457-054-21	COIL, LINE FILTER (EXCEPT E32,MX,PX,TW)	
D906	6-501-817-01	DIODE MA2J1110GLS0		△ LF902	1-457-449-11	COIL, LINE FILTER (E32,MX,PX,TW)	
D907	6-501-817-01	DIODE MA2J1110GLS0		< PHOTO COUPLER >			
D908	6-501-817-01	DIODE MA2J1110GLS0		△ PC901	6-600-438-01	PHOTO COUPLER TLP421F(D4-GRJ)	
D909	6-501-817-01	DIODE MA2J1110GLS0		△ PC902	6-600-438-01	PHOTO COUPLER TLP421F(D4-GRJ)	
D910	6-501-817-01	DIODE MA2J1110GLS0		△ PC903	6-600-276-01	PHOTO COUPLER PS2561AL1-1-V-V	
D911	8-719-510-12	DIODE D10SC4M		△ PC904	6-600-276-01	PHOTO COUPLER PS2561AL1-1-V-V	
D912	8-719-510-41	DIODE D10SC9M		< THERMISTOR (POSITIVE) >			
D913	6-500-241-01	DIODE SARS03		△ PS954	1-802-595-11	THERMISTOR, POSITIVE MF-R250	
D914	6-501-817-01	DIODE MA2J1110GLS0		△ PS956	1-802-596-11	THERMISTOR, POSITIVE MF-R300	
D916	6-501-412-01	DIODE SF5S6		< TRANSISTOR >			
D921	6-502-234-01	DIODE EG01CLF-F7		Q901	8-729-201-53	TRANSISTOR 2SA1015-GR	
D922	6-501-817-01	DIODE MA2J1110GLS0		Q921	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
D923	6-501-817-01	DIODE MA2J1110GLS0		Q922	6-550-702-01	TRANSISTOR 2SC3243-TP-E	
D924	6-501-817-01	DIODE MA2J1110GLS0					
D931	6-501-849-01	DIODE FMX-22SL					
D941	6-501-817-01	DIODE MA2J1110GLS0					

HCD-DZ370/DZ560/DZ570/DZ660/DZ777

Ver. 1.1

POWER P-SW S-AIR-CON

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
Q930	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF			R941	1-218-895-11	METAL CHIP	100K	0.5%	1/10W
Q931	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF			R942	1-218-871-11	METAL CHIP	10K	0.5%	1/10W
Q932	8-729-038-28	TRANSISTOR	RT1N441C-TP-1			R945	1-216-837-11	METAL CHIP	22K	5%	1/10W
Q943	8-729-038-28	TRANSISTOR	RT1N441C-TP-1			R946	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
Q945	6-550-718-01	TRANSISTOR	RSR025N03TL			R949	1-216-809-11	METAL CHIP	100	5%	1/10W
Q947	8-729-038-28	TRANSISTOR	RT1N441C-TP-1			R951	1-218-847-11	METAL CHIP	1K	0.5%	1/10W
Q949	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF			R952	1-216-821-11	METAL CHIP	1K	5%	1/10W
Q950	8-729-038-28	TRANSISTOR	RT1N441C-TP-1			R954	1-218-861-11	METAL CHIP	3.9K	0.5%	1/10W
< RESISTOR >						R955	1-216-821-11	METAL CHIP	1K	5%	1/10W
△ R901	1-219-759-11	METAL	1M	5%	1/2W F	R956	1-216-817-11	METAL CHIP	470	5%	1/10W
△ R901	1-240-938-11	METAL	1.5M	5%	1/2W F	R957	1-216-841-11	METAL CHIP	47K	5%	1/10W
△ R903	1-215-926-00	METAL OXIDE	33K	5%	3W F	R958	1-216-821-11	METAL CHIP	1K	5%	1/10W
△ R903	1-215-929-11	METAL OXIDE	100K	5%	3W F	R959	1-218-871-11	METAL CHIP	10K	0.5%	1/10W
△ R904	1-215-926-00	METAL OXIDE	33K	5%	3W F	R960	1-216-817-11	METAL CHIP	470	5%	1/10W
△ R904	1-215-929-11	METAL OXIDE	100K	5%	3W F	R963	1-218-839-11	METAL CHIP	470	0.5%	1/10W
R905	1-216-797-11	METAL CHIP	10	5%	1/10W	R965	1-218-863-11	METAL CHIP	4.7K	0.5%	1/10W
R906	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	R966	1-216-821-11	METAL CHIP	1K	5%	1/10W
R907	1-216-833-11	METAL CHIP	10K	5%	1/10W	R967	1-216-821-11	METAL CHIP	1K	5%	1/10W
R908	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R972	1-218-871-11	METAL CHIP	10K	0.5%	1/10W
R909	1-216-845-11	METAL CHIP	100K	5%	1/10W	R974	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
R910	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R975	1-218-895-11	METAL CHIP	100K	0.5%	1/10W
R911	1-216-813-11	METAL CHIP	220	5%	1/10W	R976	1-218-903-11	METAL CHIP	220K	0.5%	1/10W
△ R912	1-216-361-61	METAL OXIDE	0.22	5%	2W F	R978	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
△ R912	1-216-363-00	METAL OXIDE	0.33	5%	2W F	R992	1-216-793-11	METAL CHIP	4.7	5%	1/10W
△ R913	1-216-361-61	METAL OXIDE	0.22	5%	2W F	R993	1-216-833-11	METAL CHIP	10K	5%	1/10W
△ R914	1-220-891-11	METAL	0.1	10%	5W F	R994	1-216-851-11	METAL CHIP	330K	5%	1/10W
△ R914	1-243-669-11	METAL	0.05	5%	5W F	R995	1-216-845-11	METAL CHIP	100K	5%	1/10W
△ R916	1-215-929-11	METAL OXIDE	100K	5%	3W F	R998	1-218-855-11	METAL CHIP	2.2K	0.5%	1/10W
R917	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R999	1-218-871-11	METAL CHIP	10K	0.5%	1/10W
R919	1-216-837-11	METAL CHIP	22K	5%	1/10W	< TRANSFORMER >					
R920	1-216-821-11	METAL CHIP	1K	5%	1/10W	△ T901	1-443-649-11	TRANSFORMER, DC-DC CONVERTER (MX,TW)			
R921	1-216-833-11	METAL CHIP	10K	5%	1/10W	△ T901	1-443-874-11	TRANSFORMER, DC-DC CONVERTER			
△ R922	1-244-317-71	METAL	0.18	5%	2W F			(EXCEPT MX,TW)			
R923	1-218-879-11	METAL CHIP	22K	0.5%	1/10W	△ T903	1-445-320-11	TRANSFORMER, DC-DC CONVERTER			
R924	1-216-837-11	METAL CHIP	22K	5%	1/10W	< THERMISTOR >					
R925	1-216-797-11	METAL CHIP	10	5%	1/10W	△ TH901	1-805-841-21	THERMISTOR, NTC 6.0 (E32,MX,PX,TW)			
R926	1-218-895-11	METAL CHIP	100K	0.5%	1/10W	△ TH901	1-805-842-21	THERMISTOR, NTC 6.0 (EXCEPT E32,MX,PX,TW)			
R927	1-216-837-11	METAL CHIP	22K	5%	1/10W	< VARISTOR >					
R928	1-216-845-11	METAL CHIP	100K	5%	1/10W	△ VDR901	1-805-482-11	VARISTOR			
R930	1-216-817-11	METAL CHIP	470	5%	1/10W	*****					
R931	1-218-847-11	METAL CHIP	1K	0.5%	1/10W	P-SW BOARD					
R932	1-218-879-11	METAL CHIP	22K	0.5%	1/10W	*****					
R933	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	< CAPACITOR >					
R934	1-216-821-11	METAL CHIP	1K	5%	1/10W	C170	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
R935	1-216-821-11	METAL CHIP	1K	5%	1/10W	< SWITCH >					
R936	1-216-853-11	METAL CHIP	470K	5%	1/10W	S108	1-762-875-21	SWITCH, KEYBOARD (I/⏏)			
R937	1-218-871-11	METAL CHIP	10K	0.5%	1/10W	*****					
R938	1-218-847-11	METAL CHIP	1K	0.5%	1/10W	A-1438-875-A	S-AIR-CON BOARD, COMPLETE				
R939	1-218-855-11	METAL CHIP	2.2K	0.5%	1/10W	*****					
R940	1-218-871-11	METAL CHIP	10K	0.5%	1/10W	< CONNECTOR >					
						* CN110	1-564-720-11	PIN, CONNECTOR (SMALL TYPE) 4P			
						* CN111	1-564-517-11	PLUG, CONNECTOR 2P			
						CN112	1-779-554-21	CONNECTOR, FFC (LIF(NON-ZIF)) 17P			

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
CN113	1-821-744-11	CONNECTOR, CARD EDGE 30P (EZW-T100)				MISCELLANEOUS *****	
		< TRANSISTOR >					
Q120	8-729-038-28	TRANSISTOR RT1N441C-TP-1		4	1-827-720-11	WIRE (FLAT TYPE) (11 CORE) (DZ560/DZ660)	
Q121	6-550-363-01	TRANSISTOR 2SB1690KT146		4	1-828-955-11	WIRE (FLAT TYPE) (9 CORE) (DZ370/DZ570/DZ777)	
		< RESISTOR >		△ 5	1-769-079-61	CORD, POWER (KR)	
R193	1-216-817-11	METAL CHIP 470 5% 1/10W		△ 5	1-827-597-42	CORD, POWER (TW)	
R194	1-216-817-11	METAL CHIP 470 5% 1/10W		△ 5	1-834-965-11	CORD, POWER (MX)	
R195	1-216-841-11	METAL CHIP 47K 5% 1/10W		△ 5	1-834-966-21	CORD, POWER (AEP,E3,E12,E15,E32,PX)	
R196	1-216-817-11	METAL CHIP 470 5% 1/10W		△ 5	1-834-967-21	CORD, POWER (AUS)	
R197	1-216-833-11	METAL CHIP 10K 5% 1/10W		△ 5	1-835-078-21	CORD, POWER (UK)	
				11	1-828-350-11	WIRE (FLAT TYPE) (17 CORE)	
R198	1-216-833-11	METAL CHIP 10K 5% 1/10W		△ 12	1-569-008-22	ADAPTOR, CONVERSION 2P (E15,E32,PX)	
R199	1-216-833-11	METAL CHIP 10K 5% 1/10W		63	1-828-307-11	WIRE (FLAT TYPE) (9 CORE)	
R200	1-216-833-11	METAL CHIP 10K 5% 1/10W		64	1-828-363-11	WIRE (FLAT TYPE) (19 CORE)	
*****				106	1-828-293-11	WIRE (FLAT TYPE) (5 CORE)	
		SPEAKER BOARD		107	1-828-349-11	WIRE (FLAT TYPE) (17 CORE) (DZ370/DZ570/DZ777)	
		*****		107	1-828-359-11	WIRE (FLAT TYPE) (19 CORE) (DZ560/DZ660)	
		< CAPACITOR >		108	1-828-347-11	WIRE (FLAT TYPE) (17 CORE) (DZ370/DZ570/DZ777)	
C173	1-163-021-11	CERAMIC CHIP 0.01uF 10% 50V (EXCEPT E12,E32,MX,PX)		108	1-828-357-11	WIRE (FLAT TYPE) (19 CORE) (DZ560/DZ660)	
C174	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V		114	1-828-287-11	WIRE (FLAT TYPE) (5 CORE)	
C175	1-163-021-11	CERAMIC CHIP 0.01uF 10% 50V (EXCEPT E12,E32,MX,PX)		△ 157	8-820-321-05	OPTICAL PICK-UP KHM-313CAA/C2RP	
C176	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V		158	1-828-773-51	WIRE (FLAT TYPE) (24 CORE)	
C177	1-163-021-11	CERAMIC CHIP 0.01uF 10% 50V (EXCEPT E12,E32,MX,PX)		△ F901	1-533-311-12	FUSE, GLASS CYLINDRICAL (DIA. 5) (8A/125V) (MX,TW)	
C178	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V		△ F901	1-576-233-51	FUSE (H.B.C.) (T6.3AL/250V) (EXCEPT E32,MX,PX,TW)	
C179	1-163-021-11	CERAMIC CHIP 0.01uF 10% 50V (EXCEPT E12,E32,MX,PX)		△ F901	1-576-300-51	FUSE (H.B.C.) (T8AL/250V) (E32,PX)	
C180	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V		FAN3001	1-787-331-11	FAN, D.C.	
C181	1-163-021-11	CERAMIC CHIP 0.01uF 10% 50V (EXCEPT E12,E32,MX,PX)		TU401	1-693-759-11	TUNER UNIT (FM/AM) (ANTENNA) (AEP,UK)	
C182	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V		TU401	1-693-760-11	TUNER UNIT (FM/AM) (ANTENNA) (KR)	
C183	1-163-021-11	CERAMIC CHIP 0.01uF 10% 50V (EXCEPT E12,E32,MX,PX)		TU401	1-693-761-11	TUNER UNIT (FM/AM) (ANTENNA) (EXCEPT AEP,UK,KR)	
C184	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V					
C185	1-163-021-11	CERAMIC CHIP 0.01uF 10% 50V (EXCEPT E12,E32,MX,PX)					
C186	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V					
C187	1-163-021-11	CERAMIC CHIP 0.01uF 10% 50V (EXCEPT E12,E32,MX,PX)					
C188	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V					
		< CONNECTOR >					
* CN114	1-564-523-11	PLUG, CONNECTOR 8P					
		< TERMINAL BOARD >					
TB100	1-780-454-11	TERMINAL BOARD (SPEAKER) 4P (SPEAKER (FRONT R,FRONT L, SUR R,SUR L))					

REVISION HISTORY

Checking the version allows you to jump to the revised page.

Also, clicking the version at the top of the revised page allows you to jump to the next revised page.

[illegible]