

# MLX90805 Intelligent Triac Controller

## Features and Benefits

- Soft Start" Eliminates Current Surges
- Integrated Design Eliminates External Components
- Drives Virtually Any Resistive or Inductive Load
- Built-in Thermal Protection
- Digital Design For Stable Triac Control
- Immune to Lifetime and Thermal Drift
- Low Power Consumption
- **50Hz** or 60Hz operation customizable by mask programming

# Applications


- AC Light Dimmer
- □ Soft-Start AC Motor Controller
- Variable-Speed AC Motor Controller

## **Ordering Information**

Part No. MLX90805 MLX90805 Temperature Suffix C (0°C to 70°C) C (0°C to 70°C) Package Code AA (PDIP-8) DC (SOIC-8) Option Code\* CA CA

\* See Option Code Table for details

# 1. Functional Diagram

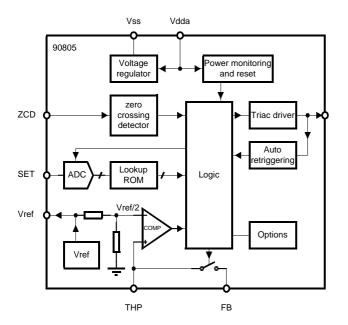

# 2. Description

The MLX90805 is a power control IC ideally suited for control of any resistive or inductive load regulated by a triac.

The chip was designed primarily for starting and speed control of AC motors, but will work equally well with any Inductive or resistive load such as Incandescent lights.

The chip's primary purpose is to provide a "soft start" for a motor, preventing current inrush. The triac is controlled by a linear "ramp" from minimum to maximum power. Start rate can be varied from 0.5 sec. to 3 sec, by changing the option bits.

The secondary function of the MLX90805 is proper ignition of the triac for inductive and resistive loads, while keeping the triac's current consumption to a minimum.

Added features include a frequency locked loop for stable ignition point.



# TABLE OF CONTENTS

FE/	ATURES AND BENEFITS1
API	PLICATIONS1
OR	DERING INFORMATION1
1.	FUNCTIONAL DIAGRAM1
2.	DESCRIPTION1
3.	ABSOLUTE MAXIMUM RATINGS
4.	MLX90805 ELECTRICAL SPECIFICATIONS
5.	MLX90805 SPECIFIC SPECIFICATIONS
6.	GENERAL DESCRIPTION
7.	DIGITAL FEATURES
8.	PINOUT DESCRIPTION
9.	APPLICATION INFORMATION9
9 9 9 9	1.SOFT START ONLY
10.	RELIABILITY INFORMATION
11.	ESD PRECAUTIONS
12.	PACKAGE INFORMATION
13.	DISCLAIMER



# 3. Absolute Maximum Ratings

Supply Voltage, V <sub>DDA</sub> (overvoltage)	18V
Supply Voltage, VDDA (operating)	15V
Supply Current, Idda	10mA
Maximum chip temperature	150°C
ESD Sensitivity (AEC Q100 002)	2kV

Exceeding the absolute maximum ratings may cause permanent damage. Exposure to absolute maximum-rated conditions for extended periods may affect device reliability.

# 4. MLX90805 Electrical Specifications

DC Operating Parameters  $T_A = 0^{\circ}C$  to  $85^{\circ}C$ ,  $V_{DDA} = 13V$  to 18V (unless otherwise specified)

Parameter	Symbol	Test Conditions	Min	Тур	Мах	Units
Ambient temperature	Tamb		0		85	°C
Maximum chip temperature	Tch				150	°C
Thermal resistance	Rth	DIP8 or SOP8 package		110		°C/W
Maximum allowed source supply current	IDD <sub>Am</sub>	Drivers off, all the current flows in the chip			5	mA

## 5. MLX90805 Specific Specifications

#### **Power Supply**

The MLX90805 ground pin (VSS) must be connected by external series resistors and a rectifier diode to the AC line. An internal zener function limits the voltage at VDDA to approximately 15V. For proper operation a decoupling capacitor must be connected between VDDA and VSS.

Parameter	Symbol	Test Conditions	Min	Тур	Мах	Units
Voltage applied at the supply pin	VDDA	IDDA = 5mA	14	15	16.5	V
Reference Voltage	VDD	IREF = 1.2mA	4.6	5.0	5.4	V
Current consumption	IDDA	VDDA = 14V. Drivers off.	0.6	0.9	1.2	mA

## **Power On Reset**

This block ensures a correct start of the digital part.

The reset signal goes up for VDD > Vdporh and down for VDD < Vdporl.

Parameter	Symbol	Test Conditions	Min	Тур	Мах	Units
High level threshold	Vdporh			2.5		V
Low level threshold	Vdporl			2.0		V
Hysteresis	Vdphyst			0.5		V



#### Analog Power-On Reset

This block tracks the voltage applied at VDDA. The triac firing is permitted if VDDA > Vaporh and is stopped when VDDA < Vaporl.

Parameter	Symbol	Test Conditions	Min	Тур	Мах	Units
High level threshold	Vaporh		12	13	14	V
Low level threshold	Vaporl		9	10	11	V
Hysteresis	Vaphyst		2	3	4	V

#### Zero Cross Detector

This detector contains two comparators with hysteresis. The first comparator has its reference at VDDA. The reference of the second one is VDDA-1V.

Parameter	Symbol	Test Conditions	Min	Тур	Мах	Units
High level threshold 1	Vzc1h		VDDA +0.1	VDDA +0.25	VDDA +0.4	V
Low level threshold 1	Vzc1I		VDDA -0.1	VDDA -0.25	VDDA -0.4	V
High level threshold 2	Vzc2h		VDDA -1.5	VDDA -2.1	VDDA -2.7	V
Low level threshold 2	Vzc2l		VDDA -2.0	VDDA -2.6	VDDA -3.2	V
External resistor	Rzc	Vline = 230VAC typ		470		kΩ

## **Triac (Ignition) Driver**

This driver operates as a switch to fire the triac ON. An external switch is needed to imitate the triac gate current (aprox.  $150\Omega$ ).

Parameter	Symbol	Test Conditions	Min	Тур	Мах	Units
Triac gate current	ITRG	VDDA > Vaporh			90	mA

## ADC

This is a 4-bit ADC.

Parameter	Symbol	Test Conditions	Min	Тур	Мах	Units
Resolution				4		bits
Reference voltage	VREF		4.6	5	5.4	V



# 6. General Description

#### Voltage Regulator

The chip is supplied from the AC line voltage, by a half wave rectifier. The voltage at pin VDDA is limited to ~ 15.5V. The digital part and some of the peripheral blocks are supplied by internally generated VDD ~ 5V.

#### Analog Power on Reset

This block tracks the voltage at VDDA, and permits generation of firing pulses for the triac only if VDDA >  $\sim$ 13V. It is considered otherwise that the motor is not properly supplied by the mains.

#### Oscillator

There is an on chip oscillator. All timing constraints inside the chip are derived from this clock.

#### FLL

A frequency locked loop circuit is implemented to obtain a clock frequency from a current controlled oscillator, by using the mains frequency as a reference. A successive approximation algorithm is used at start up to minimize the time for the oscillator adjustment.

#### Reference Voltage

This voltage is used to supply the external potentiometer for the definition of different speed settings.

## ADC

The analog signal from the potentiometer, which defines the speed setting, is transferred into digital by a 4-bit ADC. The reference for the converter is the voltage used to supply the potentiometer.

#### ROM

The digital words from the ADC act as the address of a ROM table in which the different firing angles are programmed. This means that 16 different firing angles can be selected.

#### Zero Cross

This block detects the moments when mains

voltage crosses zero level. An accurate detection allows good synchronization, so firing pulses driving the triac can be generated at the right moment.

#### Logic

This block performs all control functions to realize time synchronization, smooth soft start, and proper triac firing, so that motor runs at a defined speed.

#### **Triac Driver**

This output is able to drive a triac through an external resistor RT (typically RT is 150). It defines the triac gate current and operates as a switch.

#### Auto Retriggering

This block tracks if the triac is on after each firing pulse. If the triac is off 20us after a firing pulse, a new pulse is generated.

#### **Thermal Protection**

The chip is able to supply an external protection circuitry, typically an NTC resistor with reference resistor, to track the ambient temperature. If the voltage at THP equals Vref/2 the protection is activated and the chip sets the firing angle defined by the value in ROM address 1. A resistor connected to pin FB can introduce hysteresis in the detection level.

## Options

This block defines different modes of the chip operation.



# 7. Digital Features

## Debounce of ADC

The result from the potentiometer reading must not jump from one position to the other, therefore a special debouncing is designed. The debounce circuit compares the current value from the ADC with the previous one. The new value is accepted only if the absolute difference between the new and the previous value is greater then 1 LSB.

#### Power Settings (ROM table)

The ADC output data is applied after debouncing at the address bus of the ROM and the corresponding power settings are available at its data output SETP[9:0]. The content of the ROM can be defined freely: it does not need to be linearly or continuous. When the potentiometer setting is changed from one position to the other, the phase angle is moved to the new position via the soft start procedure, avoiding abrupt changes.

For programming the different speed settings in the ROM table, following formula can be used, given ti (in msec) is the delay from the previous zero crossing to the moment of ignition:

ROMi[9:0] = ti \* 2 \* Fmains - 10

f.e.: for a phase angle of 50%, ti = 5msec for a 50Hz mains, and thus:

ROMi[9:0] = 5 \* 2 \* 50 - 10 = 490

#### Note:

The value should not be negative: very small values can not be programmed.

#### Soft Start

The soft start is initiated after the supply voltage has been built up. This behavior guarantees a gentle start-up for the motor and automatically ensures the optimum run-up time. The motor is fired initially with a very small phase angle, i.e. a delay time very close to half the mains period. The phase angle is than increasing up to the phase angle defined by the potentiometer setting. The rate of increase is defined by the option ATN[4:0]. This option defines the time to increase the phase angle from minimum to maximum. If the phase angle, selected by the potentiometer, is not the maximum phase angle then the soft start run-up time is decreased proportionally.

## Firing

The soft start circuit generates a predefined set of values for the ignition angle IGN. These values are

compared with the value of a down counter, which is clocked by DCLK = 100kHz (the resolution is 10 us) and is cleared at beginning of every half period of mains. When the counter value becomes equal to IGN the firing circuit produces an ignition pulse GATE with duration 20us, 40us, 80us or 320us. This duration can be chosen with option DUTS[1:0]. The retriggering circuit checks whether the triac is ON, if not additional firing pulses are generated every 20us (with respect to the end of the previous firing pulse) until firing of the triac.

#### **Thermal Protection**

An external circuitry supplied by VREF defines the voltage at pin THP. This voltage is proportional to Tamb. It is tracked by an internal comparator referred to VREF/2. The tracking process is sampled. When the switch is ON (see block diagram), the chip checks if Tamb is greater than a predefined value. If yes, the motor is driven to operate at the speed defined at the first ROM address. During the time when the switch is OFF, the chip checks what kind of mode is defined by the external elements: 2-wire or 3wire potentiometer connection. A reconnection of the elements used for thermal protection is needed only to define the active mode of operation.

The temperature for which thermal protection becomes active or not is defined by the external elements, keeping in mind that comparator is referred to VREF/2.

In the case when thermal protection is not used, pin THP should be connected to pin FB, which is connected either to Vss or to Vref, depending on the mode.

2-wire mode, if V(FB) = VREF 3-wire mode, if V(FB) = VSS

## Options

The following options are available:

## **Firing angle definition**

The firing angles, and corresponding motor speeds, can be defined in ROMi[9:0]. This is the ROM table, which is addressed by the ADC reading the potentiometer setting. The ROM contains 16 words of 10 bits. For programming the different speed settings in the ROM table, following formula can be used, given *ti* (in msec) is the delay from the previous zero crossing to the moment of ignition:



ROMi[9:0] = ti \* 2 \* Fmains - 10

With: Fmains = frequency of the mains (in Hz) **Note:** 

The value should not be negative: very small values can not be programmed.

The content of the ROM can be defined freely: it does not need to be linear or continuous. However for a proper soft start generation under all conditions, the value with minimum firing angle (thus maximum speed) must be in the highest ROM address.

#### Maximum phase angle

Independent of the phase angle definitions in the ROM table, a maximum phase angle can be defined. This is the phase angle that will be applied immediately after the power on sequence, and is therefore the first phase angle in the soft start sequence.

This maximum phase angle is defined in MIN[9:0] with the formula:

*MIN*[9:0] = *Tini* \* 2 \* *Fmains* - 10 With:

*Tini* = the initial phase angle (in msec)

*Fmains* = frequency of the mains (in Hz)

Default value:

Tini = 7 msec and Fmains = 50Hz, thus MIN[9:0] is 690.

## Soft start time duration

There are 5 bits ATN[4:0] used to define the duration of the soft start time. The bits can be calculated with following formula:

Ts = ((Tini - Tmin) \* ATTN \* 800) / FmainsWith:

Ts = the duration of the soft start (in msec.)

Tini = the initial phase angle defined by MIN[9:0] (in msec)

Tmin = the phase angle corresponding to the value in the highest ROM address (in msec).

ATTN = bin2dec(ATN[4:0]+1), a value between 2 and 32.

Default value:

Tini = 8msec, Tmin = 1.84 msec, ATTN = 32,thus Ts = 3.15 sec.

#### Firing pulse duration

The duration of the firing pulses can be defined by the bits DUTS[1:0] and is equal to DUT/(1000 \* Fmains).

The value of DUT is defined in the following table:

DUTS1	DUTS0	DUT
0	0	16
0	1	4
1	0	2
1	1	1

The default value is 20 usec (for Fmains = 50Hz).

#### **Enable Retriggering**

With bit RTRIG set to 1, triac retriggering is enabled. The retriggering circuit checks whether the triac is ON, if not additional firing pulses are generated every 20us (with respect to the end of the previous firing pulse) until firing of the triac. With bit RTRIG set to 0, triac retriggering is disabled. For each triac firing two pulses are generated with a delay of 20 usec (with respect to the end of the previous firing pulse).

The default value is triggering enabled.

#### **Retriggering Mask**

With the option MINA[3:0] it is possible to define a zone at the end of each half cycle of the mains voltage, where it is impossible to generate retriggering pulses. This has two purposes:

With some (non-inductive) loads the current can become quite small at the end of each half cycle. This can eventually activate the retriggering circuit, which will unnecessarily generate additional pulses thus increasing the current consumption.

When generating a retriggering pulse just before the zero crossing, this pulse could overlap to the next half period. With some (non-inductive) loads this can lead to false triggering at full power and must be avoided.

The bits MINA[3:0] are defined according to the following formula:

*Tmina* \* 2 \* *Fmains* = *MINA*[3:0] \* 64

With:

Tmina = the phase angle from which retriggering is prohibited (in msec)

*Fmains* = frequency of the mains (in Hz) Default value:

MINA[3:0] =  $1101_{(2)} = 13_{(10)}$  and Fmain = 50Hz, this means that retriggering is prohibited at 8.32ms.



## Soft start only Function regulator

See page 9


#### **2-wire or 3-wire potentiometer connection.** See pages 10 and 11

# 8. Pinout Description

Pin	Name	Туре	Description
1	SET	Input	Potentiometer input
2	THP	Input	Thermal protection
3	FB	Input	Feed back to create hysteresis for thermal protection
4	ZC	Input	Zero cross input
5	TRG	Output	Triac driver output
6	VSS	Supply	Ground
7	VDDA	Supply	Supply, high level
8	VREF	Output	Reference voltage




# 9. Application Information

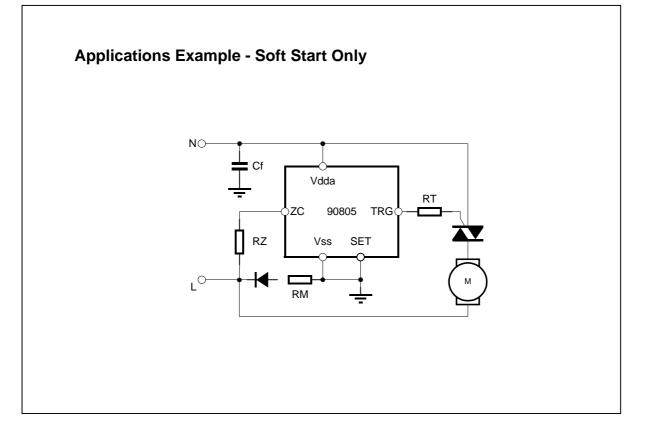

## 9.1. Soft Start Only

The chip is used to perform smooth soft start of an electrical motor. It detects when the mains voltage is applied and generates firing pulses for the triac. The motor starts running, and the maximum speed (motor operating at full power) is reached after a predefined time. This application is defined by fixing V(SET) = VSS. This means, after soft start generation, always the maximum speed (corresponding to the highest ROM address) is selected.



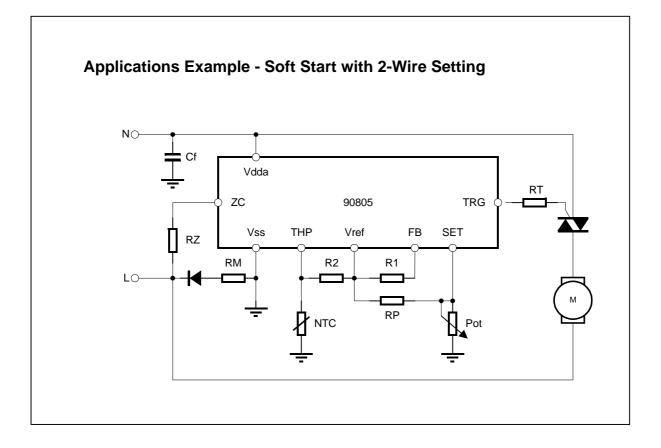

## 9.2. Soft Start With 2-Wire Setting

The speed control is performed in addition to the soft start in this application. A potentiometer in 2-wire connection is used to define different speed settings. An additional resistor RP with value equal to the potentiometer is used to keep the ADC input to be ratiometric. In this case, the input signal for the ADC varies between 0 and VREF/2.

The minimum speed corresponds to a potentiometer set to its maximum value. Maximum speed corresponds to a potentiometer set to its minimum value (I.e. Rpot = 0). When the mains voltage is applied to the system, the motor starts running at a speed defined by the potentiometer, as soon as the soft start time has finished.

The disadvantage of the 2-wire application is that, at minimum speed setting, the tolerance on the absolute value of the potentiometer defines the tolerance of the voltage at the SET input, resulting in a less accurate selection of the minimum speed setting. This can be avoided when using the 3-wire application.


The voltage at SET is transferred to a 4-bit value to address a ROM table in which the different phase angles are defined with a 10-bit resolution.

The 2-wire mode is selected by connecting VFB to VREF (eventually via a resistor).

Note:

R1, R2 and NTC are only needed for thermal protection, and can be left out otherwise



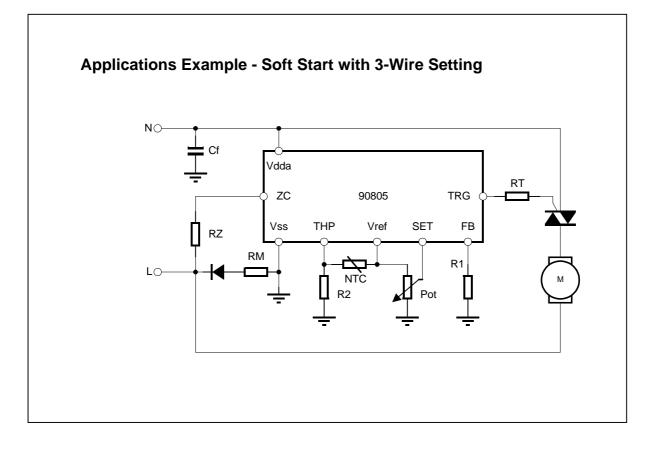

## 9.3. Soft Start With 3-Wire Setting

The speed control is performed in addition to the soft start in this application. A potentiometer in 3-wire connection is used to define different speed settings. The input signal for the ADC varies between 0 and VREF.

The minimum speed corresponds to a maximum voltage at SET. Maximum speed corresponds to a minimum voltage at SET. When the mains voltage is applied to the system, the motor starts running at a speed defined by the potentiometer, as soon as the soft start time has finished.

The voltage at SET is transferred to a 4-bit value to address a ROM table in which the different phase angles are defined with a 10-bit resolution.

The 3-wire mode is selected by connecting VFB to VSS (eventually via a resistor).

#### Note:


R1, R2 and NTC are only needed for thermal protection, and can be left out otherwise




#### 9.4. Performance of Soft Start Mechanism.

The plots are a measurement of motor current (signal A1) and speed (signal A2) during startup for a particular motor.

In the first plot we have a soft start of approx. 3 seconds.

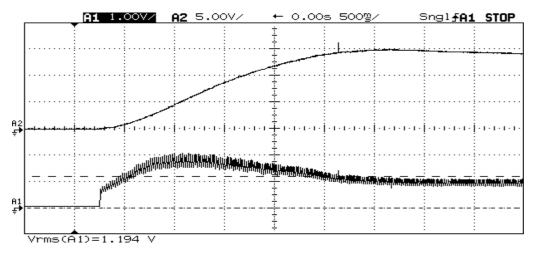

In the second plot we directly connect the same motor to the line voltage:

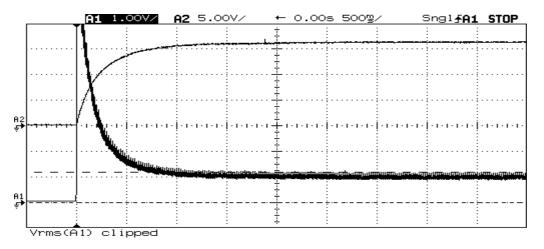

## 9.5. Additional Application Information

#### MLX90805 kitpart

The MLX90805 kitpart is an eeprom version of MLX90805 in which all options can be programmed via a standard SPI interface. The kitpart is assembled in cerdip14 in such a way that it is pin compatible with the 8-pin MLX90805 production version.

Following additional information is available for the MLX90805:

# Application note: a basic phase angle speed controller

This document describes in detail how to make an application with the MLX90805

#### MLX90805 Demo Board

This document describes the features and possibilities of the MLX90805 demo board, and how it can be ordered.

#### MLXSPI programming users guide

This is the user guide to the MLXSPI programmer, which can be used to program all options into the MLX90805 kitparts. It describes both hardware and software of the MLXSPI programmer.



## 9.6. Option Code Table

The table below lists all option values for the available option codes.

OPTION	CA
Line Frequency	50 Hz
Retrigerring	On
Soft start duration	2867 ms
Max Delay time	7.00 ms
Disable retrrigrering point	8.32 ms
Pulse Duration	40 us
ROM[0] Ignition angle 0*	5.90 ms
ROM[1] Ignition angle 1	5.67 ms
ROM[2] Ignition angle 2	5.44 ms
ROM[3] Ignition angle 3	5.22 ms
ROM[4] Ignition angle 4	5.00 ms
ROM[5] Ignition angle 5	4.77 ms
ROM[6] Ignition angle 6	4.56 ms
ROM[7] Ignition angle 7	4.34 ms
ROM[8] Ignition angle 8	4.11 ms
ROM[9] Ignition angle 9	3.87 ms
ROM[10] Ignition angle 10	3.62 ms
ROM[11] Ignition angle 11	3.35 ms
ROM[12] Ignition angle 12	3.05 ms
ROM[13] Ignition angle 13	2.73 ms
ROM[14] Ignition angle 14	2.31 ms
ROM[15] Ignition angle 15	1.12 ms

<sup>\*</sup> The ignition angle is given in msec from the zero crossing to the moment of ignition.



## 10. Reliability Information

Melexis devices are classified and qualified regarding suitability for infrared, vapor phase and wave soldering with usual (63/37 SnPb-) solder (melting point at 183degC). The following test methods are applied:

#### IPC/JEDEC J-STD-020A (issue April 1999)

Moisture/Reflow Sensitivity Classification For Nonhermetic Solid State Surface Mount Devices CECC00802 (issue 1994) Standard Method For The Specification of Surface Mounting Components (SMDs) of Assessed Quality MIL 883 Method 2003 / JEDEC-STD-22 Test Method B102 Solderability

For all soldering technologies deviating from above mentioned standard conditions (regarding peak temperature, temperature gradient, temperature profile etc) additional classification and qualification tests have to be agreed upon with Melexis.

The application of Wave Soldering for SMD's is allowed only after consulting Melexis regarding assurance of adhesive strength between device and board.

For more information on manufacturability/solderability see quality page at our website: <a href="http://www.melexis.com/">http://www.melexis.com/</a>


## 11. ESD Precautions

Electronic semiconductor products are sensitive to Electro Static Discharge (ESD). Always observe Electro Static Discharge control procedures whenever handling semiconductor products.




# 12. Package Information

## AA (PDIP-8) Package Dimensions

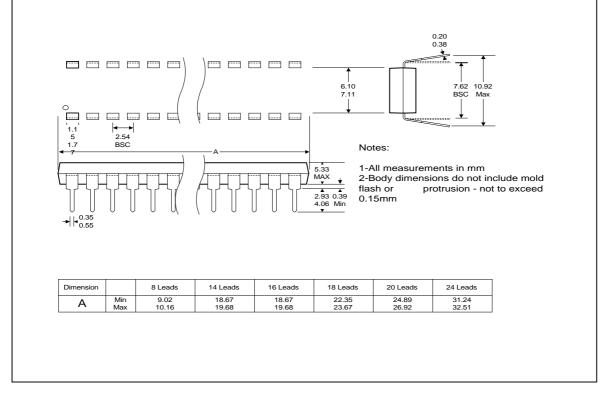

## DC (SOIC-8) Package Dimensions

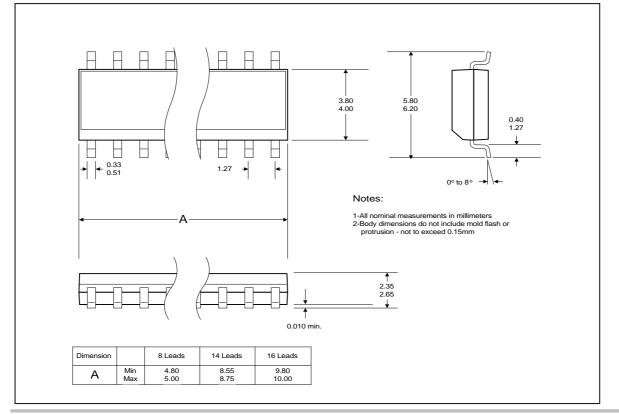



# 13. Disclaimer

Devices sold by Melexis are covered by the warranty and patent indemnification provisions appearing in its Term of Sale. Melexis makes no warranty, express, statutory, implied, or by description regarding the information set forth herein or regarding the freedom of the described devices from patent infringement. Melexis reserves the right to change specifications and prices at any time and without notice. Therefore, prior to designing this product into a system, it is necessary to check with Melexis for current information. This product is intended for use in normal commercial applications. Applications requiring extended temperature range, unusual environmental requirements, or high reliability applications, such as military, medical life-support or life-sustaining equipment are specifically not recommended without additional processing by Melexis for each application.

The information furnished by Melexis is believed to be correct and accurate. However, Melexis shall not be liable to recipient or any third party for any damages, including but not limited to personal injury, property damage, loss of profits, loss of use, interrupt of business or indirect, special incidental or consequential damages, of any kind, in connection with or arising out of the furnishing, performance or use of the technical data herein. No obligation or liability to recipient or any third party shall arise or flow out of Melexis' rendering of technical or other services.

© 2002 Melexis NV. All rights reserved.

For the latest version of this document, go to our website at: **WWW.Melexis.com** 

Or for additional information contact Melexis Direct:

Europe and Japan: Phone: +32 13 67 04 95 E-mail: sales\_europe@melexis.com All other locations: Phone: +1 603 223 2362 E-mail: sales\_usa@melexis.com

QS9000, VDA6.1 and ISO14001 Certified