ASSP For Power Supply Applications BIPOLAR

Switching Regulator Controller

(Supporting External Synchronization)

MB3789

■ DESCRIPTION

The MB3789 is a PWM (pulse width modulation) switching regulator controller supporting an external sync signal. The MB3789 incorporates two error amplifiers which can be used respectively for voltage control and current control, allowing the IC to serve as a DC/DC converter with current regulating functions.

The MB3789 is the ideal IC for supplying power to the back-lighting fluorescent tube for a liquid crystal display (LCD) device such as a camera-integrated VTR.

DataShe

■ FEATURES

DataSheet4U.com

- Wide range of operating power supply voltages: 3 V to 18 V
- Low current consumption: 1.5 mA (Typ.)
- Wide input voltage range of error amplifier: −0.2 V to Vcc − 1.8 V
- · Built-in two error amplifier
- Oscillator capable of operating with an external sync signal
- · Built-in timer latch short protection circuit
- Variable dead time provides control over total operating range
- Output supporting a power MOSFET
- 16-pin SSOP package mountable at high density

■ PACKAGE

(FPT-16P-M05)


16-pin Plastic SSOP

www.DataSheet4U.com

DataSheet4L

MB3789

■ PIN ASSIGNMENT

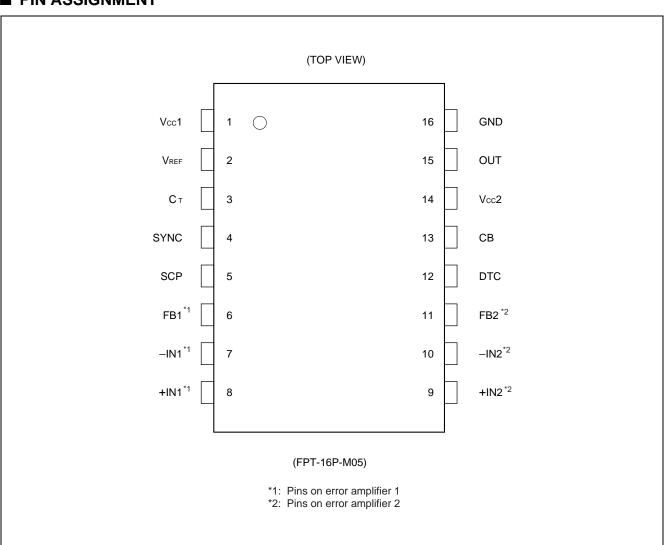

et4U.com

DataShe

DataSheet4U.com www.DataSheet4U.com


■ PIN DESCRIPTION

Pin no.		Pin symbol	I/O	Function		
7 –IN1		–IN1	I	Error amplifier 1 inverting input pin		
	8	+IN1	I	Error amplifier 1 noninverting input pin		
	6	FB1	0	Error amplifier 1 output pin		
-	10	-IN2	I	Error amplifier 2 inverting input pin		
uni	9	+IN2	I	Error amplifier 2 noninverting input pin		
ntrol	11	FB2	0	Error amplifier 2 output pin		
I/O control unit	13	СВ	_	Output bootstrap pin. Connect a capacitor between the CB and OUT pins to bootstrap the output transistor.		
	5	SCP	_	Capacitor connection pin for short-circuit protection circuit		
	12	DTC	I	Dead time control pin		
	15	OUT	0	Totem-pole output pin		
oth waveform oscillator	3	Ст	_	Sawtooth waveform frequency setting capacitor/resistor connection pin		
Sawtooth waveform oscillator	4	SYNC	I	External sync signal input pin		
ylc	1	Vcc1	_	Reference power supply, control circuit power-supply pin		
Power-supply circuit	14	Vcc2	_	Output circuit power-supply pin		
ver-	2	Vref	0	Reference voltage output pin		
Pov	16	GND	_	Ground pin		

et4U.com

DataShe

■ BLOCK DIAGRAM

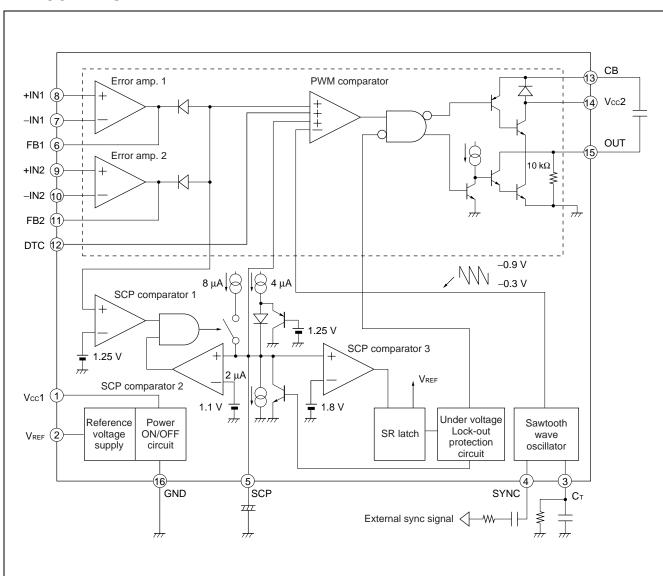

DataShe

DataSheet4U.com

et4U.com

■ FUNCTIONAL DESCRIPTION

1. Switching Regulator Functions

(1) Reference voltage generator

The reference voltage generator uses the voltage supplied from the power supply pin (pin 1) to generate a temperature-compensated, reference voltage (about 2.50 V) as the reference supply voltage for the IC's internal circuitry.

The reference voltage can be output, up to 50 μA, to an external device through the VREF pin (pin 2).

This regulated reference voltage can be used as the reference voltage for the switching regulator and also used for setting the dead time.

(2) Sawtooth waveform oscillator

With a timing capacitor and a timing resistor connected to the C_T pin (pin 3), the sawtooth waveform oscillator generates a sawtooth wave which remains stable even with supply voltage variations or temperature changes. The sawtooth wave is input to the PWM comparator. The amplitude of oscillating waveform is 0.3 V to 0.9 V.

In addition, the oscillator can be used for external synchronization, where it generates a sawtooth waveform synchronous to the input signal from the SYNC pin (pin 4).

(3) Error amplifiers

The error amplifiers detect the output voltage from the switching regulator and outputs the PWM control signal. Since they support a wide range of in-phase input voltages from -0.2 V to "Vcc - 1.8 V", they can be set easily from an external power supply.

An arbitrary loop gain can be set by connecting a feedback resistor and capacitor from the error amplifier output pin to the inverting input pin, enabling stable phase compensation to the system.

The MB3789 can make a current-regulated DC/DC converter using the two internal error amplifiers respectively for voltage control and current control.

(4) PWM comparator

The PWM comparator is a voltage comparator with one inverting input and three noninverting inputs, serving as a voltage-pulse width converter for controlling the output duty depending on the input voltage.

The PWM comparator turns on the output transistor during the interval in which the sawtooth wave voltage level is lower than the voltage levels at all of the error amplifier output pins, the SCP pin (pin 5), and at the DTC pin (pin 12).

(5) Output circuit

The output circuit is a power MOSFET driven, output circuit in a totem-pole configuration. It can drive the gate voltage up to near the supply voltage with a bootstrap capacitor connected between the OUT pin (pin 15) and CB pin (pin 13). (See "■ SETTING THE BOOTSTRAP CAPACITOR (CBS).")

2. Protection Functions

(1) Timer-latch short-circuit protection circuit

SCP comparator 1 detects the output voltage levels of error amplifiers 1 and 2. When the output voltage level of either (or both) of the two error amplifiers reaches 1.25 V, the timer circuit is actuated to start charging the external protection-enable capacitor connected to the SCP pin (pin 5).

If the error amplifier output is not restored to the normal voltage level before the capacitor voltage reaches 1.8 V, the latch circuit is actuated to turn off the output transistor while making the dead time 100%.

To reset the actuated protection circuit, turn the power supply on back. (See "■ SETTING THE SOFT START/ SHORT-CIRCUIT DETECTION TIME.")

DataShe

ataSheet4U.com

MB3789

(2) Low input voltage malfunction preventive circuit

The transient state or a momentary decrease in supply voltage, which occurs when the power supply is turned on, may cause errors in the control IC, resulting in breakdown or degradation of the system. The low input voltage malfunction preventive circuit detects the internal reference voltage level according to the supply voltage level and, if the input voltage is low, turn off the output transistor and maintains the SCP pin (pin 5) at 0 V while making the dead time 100%.

The circuit restores voltage supply when the supply voltage reaches its threshold voltage.

et4U.com

DataShee

DataSheet4U.com

DataSheet4U.com www.DataSheet4U.com

■ ABSOLUTE MAXIMUM RATINGS

 $(Ta = +25^{\circ}C)$

Parameter	Symbol	Condition	Ra	l lmi4	
Parameter	Symbol	Condition	Min.	Max.	Unit
Power supply voltage	Vcc	_	_	20	V
Power dissipation	PD	Ta ≦ +25°C	_	440*	mW
Operating temperature	Тор	_	-30	+85	°C
Storage temperature	Tstg	_	– 55	+125	°C

^{*:} When mounted on a 10 cm-square double-side epoxy board.

WARNING: Semiconductor devices can be permanently damaged by application of stress (voltage, current, temperature, etc.) in excess of absolute maximum ratings. Do not exceed these ratings.

■ RECOMMENDED OPERATING CONDITIONS

 $(Ta = +25^{\circ}C)$

Parameter	Symbol	Condition		Unit			
Farameter	Syllibol	Condition	Min.	Тур.	Max.	Oilit	
Power supply voltage	Vcc1	_	3.0	5.0	18	V	
Fower supply voltage	Vcc2		_	6.0	18	V	
Reference voltage output current	lor	DataSheet4U.com	-50	-30	_	μΑ	
Error amp. input voltage	Vı	_	-0.2	_	Vcc – 1.8	V	
Output current	lo+	CB = 4700 pF, t≦2 μs	-70	-40	_	mA	
Output current	lo-	CB = 4700 pF, t≦2 μs	_	40	70	mA	
Timing resistance	R⊤	_	10	39	200	kΩ	
Timing capacitance	Ст	_	470	1000	6800	pF	
Oscillation frequency	fosc	_	1	20	200	kHz	
Operating temperature	Тор	_	-30	+25	+85	°C	

et4U.com

WARNING: The recommended operating conditions are required in order to ensure the normal operation of the semiconductor device. All of the device's electrical characteristics are warranted when the device is operated within these ranges.

Always use semiconductor devices within their recommended operating condition ranges. Operation outside these ranges may adversely affect reliability and could result in device failure.

No warranty is made with respect to uses, operating conditions, or combinations not represented on the data sheet. Users considering application outside the listed conditions are advised to contact their FUJITSU representatives beforehand.

■ ELECTRICAL CHARACTERISTICS

 $(Vcc1 = 5 V, Vcc2 = 6 V, Ta = +25^{\circ}C)$

Parameter		Symbol	Condition	Value			Unit
			Condition	Min.	Тур.	Max.	Unit
Reference	Output voltage	Vref	$Ior = 0 \mu A$	2.400	2.500	2.600	V
	Output voltage temperature variation	ΔVREF/VREF	Ta = -30° C to $+85^{\circ}$ C*	_	0.2	2	%
voltage block	Input stability	Line	Vcc = 3.0 V to 18 V	_	1	10	mV
	Load stability	Load	$I_{OR} = 0 \mu A \text{ to } -50 \mu A$	_	2	10	mV
	Short output current	los	Vref = 0 V	-700	-450	-300	μΑ
Under	Threshold voltage	V _{TH}	_	_	2.15	2.62	V
voltage lockout	Threshold voltage	VTL	_	1.62	1.90	_	V
protection	Hysteresis width	VHYS	_	80	250	_	mV
circuit	Reset voltage (Vcc)	VR	_	1.0	1.4	_	V
	Charge current	Існв	Vscp 0.9 V	-2.8	-2.0	-1.2	μΑ
Soft start block	Threshold voltage	Vто	Duty cycle = 0%	0.2	0.3	0.4	V
DIOOR		V _{T100}	Duty cycle = 100%	0.8	0.9	1.0	V
	Threshold voltage	V _{TH}	_	1.70	1.80	1.90	V
Short circuit detection	Input standby voltage	Vsтв	ataSheet4U.com	1.15	1.25	1.35	mV
block	Input latch voltage	Vı	_	_	50	100	mV
	Input source current	lı	Vscp = 1.5 V	-8.4	-6.0	-3.6	μΑ
	Oscillator frequency	fosc	$C_T = 1000 \text{ pF},$ $R_T = 39 \text{ k}\Omega$	17	20	23	kHz
Triangular waveform oscillator block	Frequency voltage variation	$\Delta extsf{f}_{ extsf{dv}}$	Vcc = 3 V to 18 V	_	1	10	%
	Frequency temperature variation	Δ f/f dT	Ta = -30° C to $+85^{\circ}$ C*	_	3	_	%
	Synchronous pin input current	Isync	V _{THSY} = 5 V	0.9	1.3	2.2	mA
	Synchronous pin threshold voltage	V _{THSY}	_	0.65	0.75	0.85	V

*: Standard design value

(Continued)

DataShe

DataSheet4U.com www.DataSheet4U.com

(Continued)

 $(Vcc1 = 5 V, Vcc2 = 6 V, Ta = +25^{\circ}C)$


Parameter		Symbol	Condition		Value		
				Min.	Тур.	Max.	Unit
	Input offset voltage	Vio	V _{FB} = 0.6 V	_	_	10	mV
	Input offset current	lıo	V _{FB} = 0.6 V	_	_	100	nA
	Input bias current	lв	V _{FB} = 0.6 V	-200	-30	_	nA
	Common mode input voltage range	V _{СМ}	_	-0.2	_	Vcc - 0.8	V
	Common mode rejection ratio	CMRR	_	60	100	_	dB
Error amplifier	Voltage gain	Av	_	60	100	_	dB
ampillo	Frequency bandwidth	BW	$Av = 0 dB^*$	_	800	_	kHz
	Maximum output voltage range	V _{OM+}	_	V _{REF} – 0.3	2.4	_	V
		V _{OM} -	_	_	0.05	0.3	V
	Output sink current	I _{OM+}	V _{FB} = 0.6 V	30	60	_	μΑ
	Output source current	Іом-	V _{FB} = 0.6 V	_	-2	-0.6	mA
	Threshold voltage	V _{T0}	Duty cycle = 0%	0.2	0.3	0.4	V
Dead time		V _{T100}	Duty cycle = 100%	0.8	0.9	1.0	V
control block	ON duty cycle	Dtr □	Vot 4.2m	45	55	65	%
	Input bias current	lbdt	_	-500	-100	_	nA
	Threshold voltage	V _{T0}	Duty cycle = 0%	0.2	0.3	0.4	V
PWM		V _{T100}	Duty cycle = 100%	0.8	0.9	1.0	V
comparator block	Input sink current	I _{IN+}	_	30	60	_	μΑ
	Input source current	I _{IN} -	_	_	-2	-0.6	mA
Output block	Output voltage	Vон	CL = 2000 pF, CB = 4700 pF	5.5	6.0	_	V
		Vol	CL = 2000 pF, CB = 4700 pF	_	1.1	1.4	V
_	Power supply	Icc1	_	_	1.15	1.65	mA
General	current when output off	Icc2	_	_	350	500	μΑ

^{*:} Standard design value

DataShe

DataSheet4U.com www.DataSheet4U.com

■ TYPICAL CHARACTERISTICS

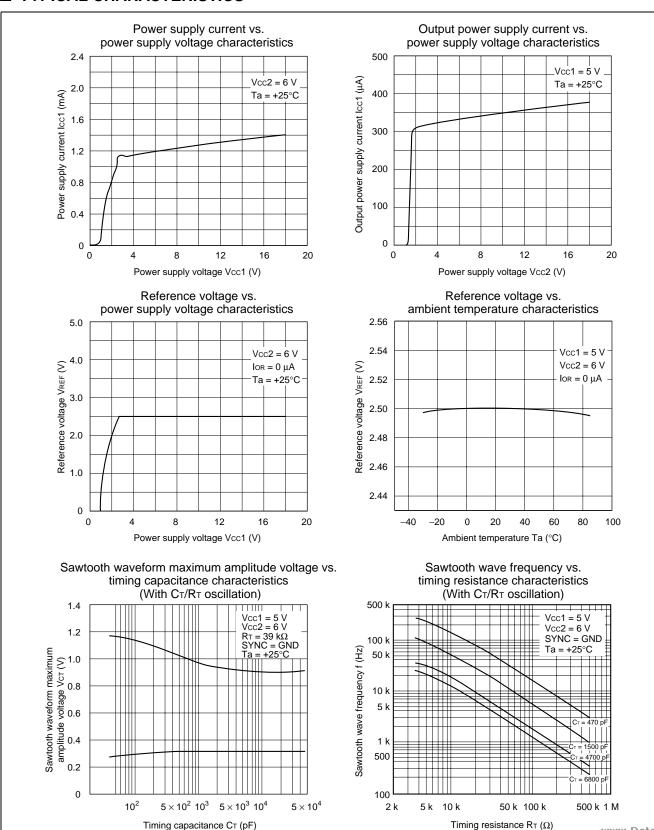


(Continued)

www.Data\$heet4U.com

DataShe

10

DataSheet4U

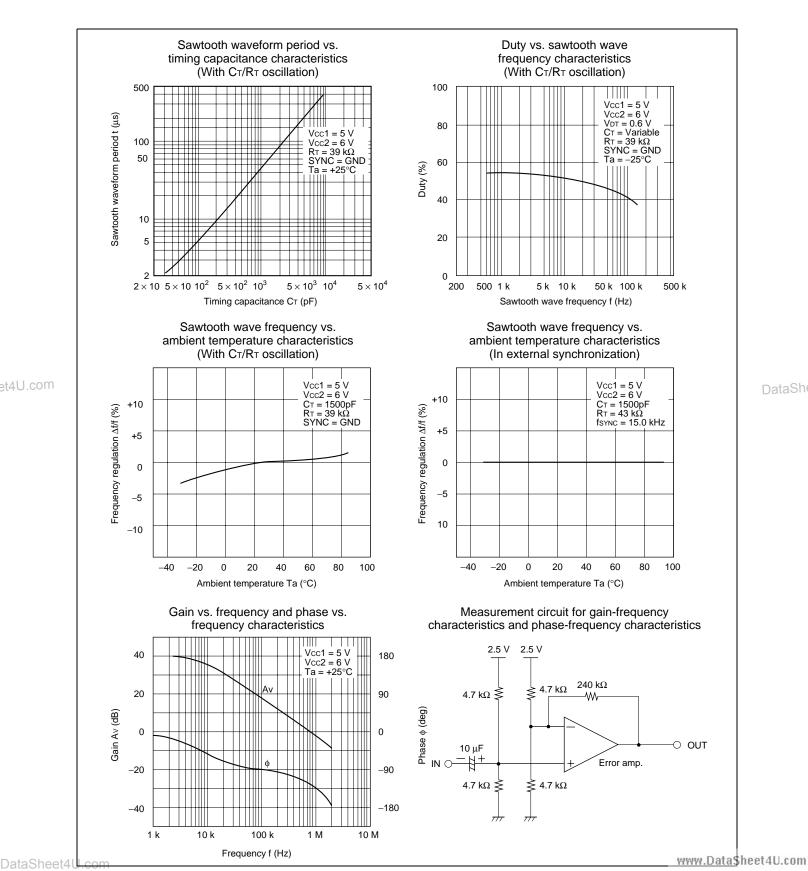



(Continued)


DataShe

MB3789


(Continued)

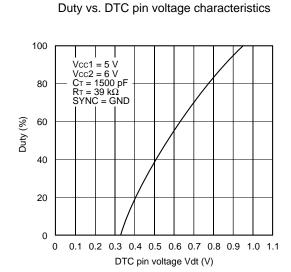



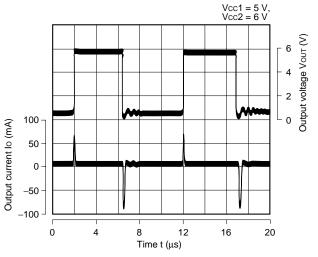

Power comsumption vs. ambient temperature characteristics

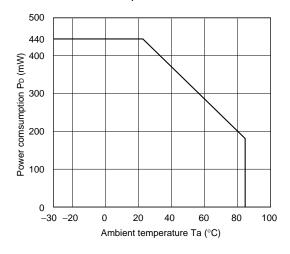


DataShe

DataSheet4U.com

et4U.com


■ SETTING THE OUTPUT VOLTAGE

Set the output voltage by connecting the input pins (+IN, -IN) and output pin (FB) of error amplifiers 1 and 2 as shown in Figures 1 and 2.

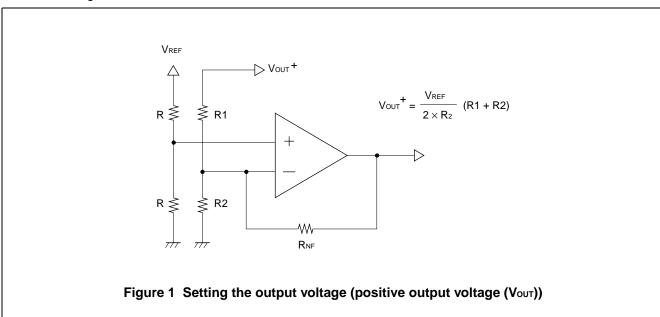

et4U.com

DataShe

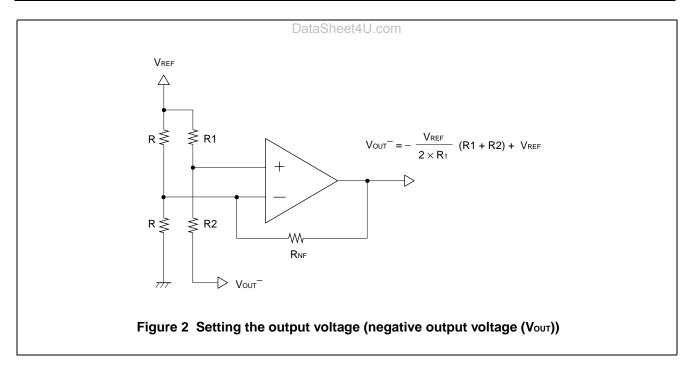


DataSheet4U.com

■ CONNECTION FOR OUTPUT CONTROL WITH ONE ERROR AMPLIFIER

The MB3789 can make up a system using only one of the two error amplifiers. In this case, connect the +IN and -IN pins of the unused error amplifier to the V_{REF} and GND pins, respectively, and leave the FB pin open.


When $V_{CC} - 1.8 \text{ V} < V_{REF}$, divide the V_{REF} voltage using a resistor and apply the voltage to the +IN pin.

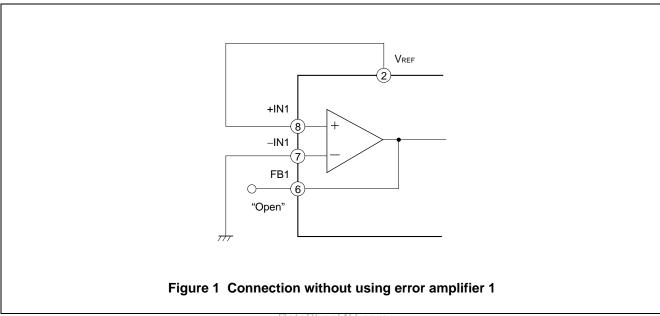

et4U.com

DataShe

DataSheet4U.com

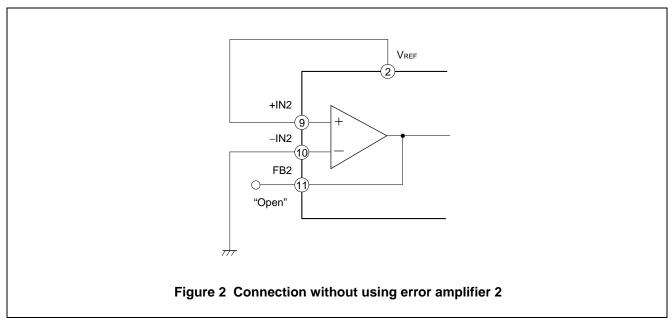


DataSheet4U.com

■ CONNECTING THE SAWTOOTH WAVEFORM OSCILLATOR

1. Connection for internal oscillation

For internal oscillation, connect the frequency setting capacitor (C_T) and resistor (R_T) to the C_T pin (pin 3) and leave the SYNC pin (pin 4) open or connect it to GND.

The oscillation frequency can be set with the C_T and R_T constants.

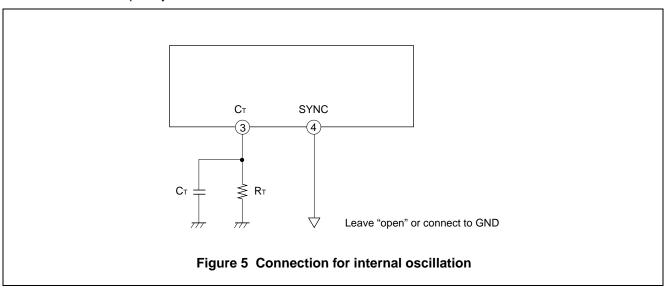

t4U.com


DataShe

DataSheet4U.com

2. Connection for external synchronous oscillation

For external synchronous oscillation, connect the frequency setting capacitor (C_T) and resistor (R_T) to the C_T pin (pin 3) and connect the external sync signal to the SYNC pin (pin 4).

In this case, select the C_T and R_T conditions so that the oscillation frequency is 5% to 10% lower than the frequency of the external sync signal excluding the setting error of the oscillation frequency.

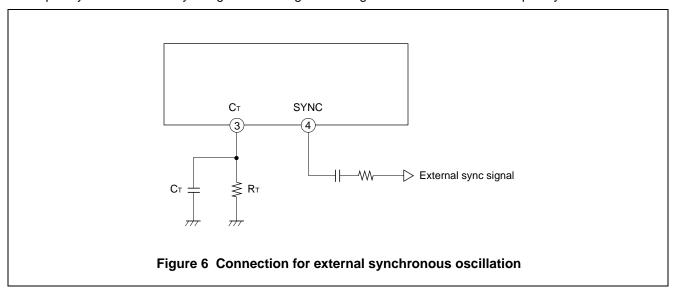

DataSheet4U.com

■ SETTING THE DEAD TIME

When the device is set for step-up inverting output based on the flyback method, the output transistor is fixed to a full-ON state (ON duty = 100%) when the power supply is turned on. To prevent this problem, you may determine the voltage at the DTC pin (pin 12) from the VREF voltage so you can set the output transistor's dead time (maximum ON-duty period) as shown in Figure 7 below.

1. Setting the dead time


When setting the dead time, use resistors as shown in Figure 7 to connect the V_{REF} and DTC pins to GND. When the voltage at the DTC pin (pin 12) is lower than the sawtooth wave output voltage from the oscillator, the output transistor is turned off.

To set the dead time, see "Duty vs. DTC pin voltage" (in "■ STANDARD CHARACTERISTIC CURVES").

$$V_{dt} = \frac{R2}{R1 + R2} \times V_{REF}$$

2. Connection without setting the dead time

If you do not set the dead time, connect the VREF and DTC pins as shown in Figure 8.

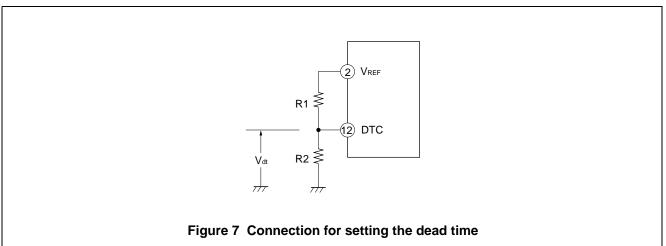

2 VREF
12 DTC

Figure 8 Connection without setting the dead time


et4U.com

DataShe

DataSheet4U.com www.DataSheet4U.com


■ SETTING THE SOFT START/SHORT-CIRCUIT DETECTION TIME

Connecting capacitor CPE to the SCP pin (pin 5) as shown in Figure 9 enables a soft start and short-circuit protection.

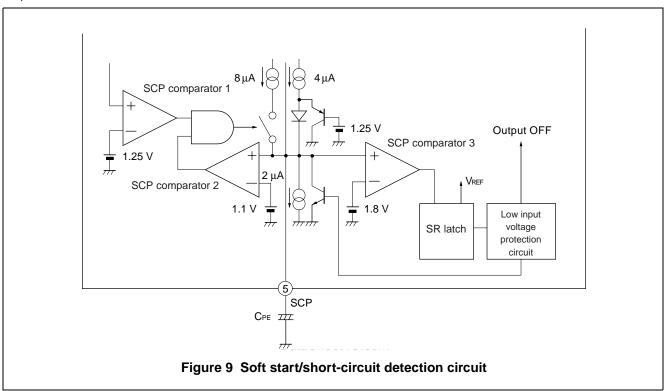

et4U.com

DataShe

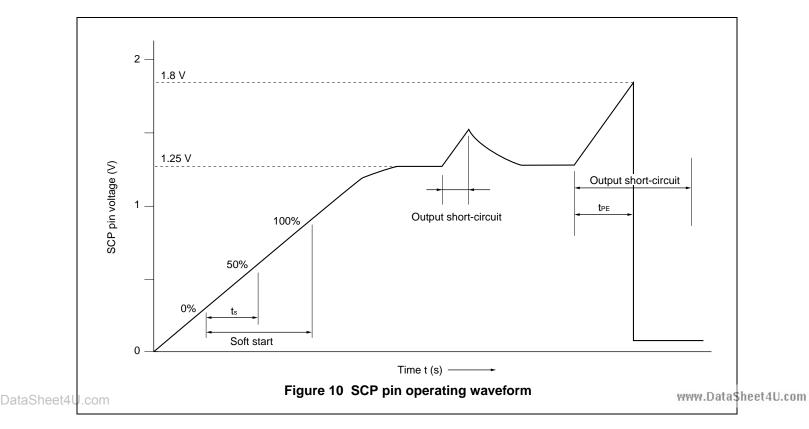

17

1. Soft Start

To prevent surge currents when the IC is turned on, you can set a soft start by connecting capacitor CPE to the SCP pin (pin 5).

• Softstart time(ts): Time required up to duty cycle \simeq 50% with output on ts (s) \simeq 0.15 \times C_{PE} (μ F)

2. Protection from short circuit

SCP comparator 1 always compares the output voltage levels at error amplifiers 1 and 2 with the 1.25 V reference voltage.

When the load conditions for the switching regulator are stable, the outputs from error amplifiers 1 and 2 do not vary and thus short-circuit protection control remains balanced. In this case, the SCP pin (pin 5) is held at the soft start end voltage (about 1.25 V).

If the load conditions change rapidly and the output voltage of error amplifier 1 or 2 reaches 1.25 V, for example, because of a short-circuit of a load, capacitor C_{PE} is charged further. When capacitor C_{PE} is charged up to about 1.8 V, the SR latch is set and the output drive transistor is turned off. At this time, the dead time is set to 100%, capacitor C_{PE} is discharged, and the SCP pin becomes ≈ 50 mV.

• Short-circuit detection time (tpe) $t_{PE} \ (s) \simeq 0.09 \times C_{PE} \ (\mu F)$

3. Connection without using short-circuit protection

Add a clamp circuit as shown in Figure 11 so that the clamp voltage (V_{CRP}) falls within the following range when a short-circuit is detected: 1.0 V < V_{CRP} < 1.7 $V_{aSheet4U.com}$

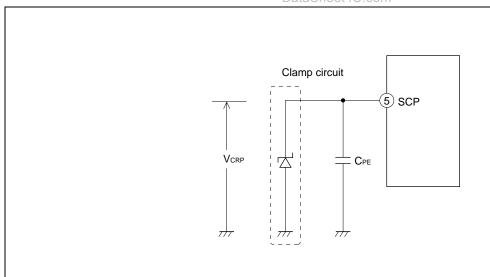


Figure 11 Connection without using short-circuit protection

DataShe


ataSheet4U.com

■ SETTING THE BOOTSTRAP CAPACITOR

When a bootstrap capacitor is connected, it raises the output-ON voltage (at the OUT pin (pin 15) when the external MOS FET is turned "ON") to the \simeq Vcc2 level. It can therefore drive the MOS FET at a higher threshold voltage (Vth).

1. Connecting the bootstrap capacitor

Connect the bootstrap capacitor between the CB pin (pin 13) and OUT pin (pin 15).

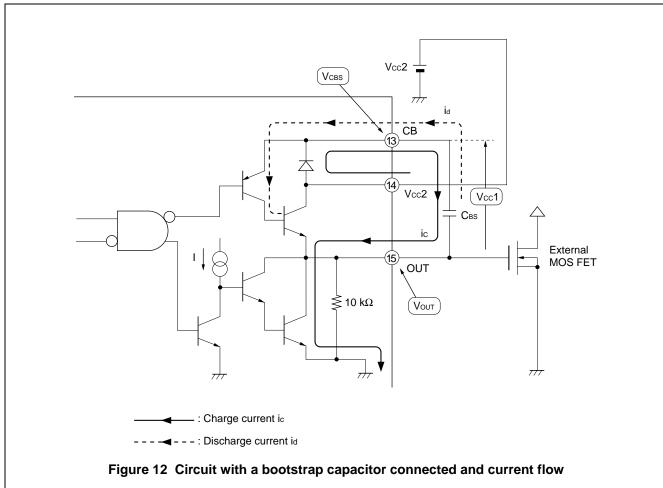

• Calculation of bootstrap capacitance

$$C_{\text{BS}} \geqq \frac{500 \times 10^6}{\text{V}_{\text{CC}}2 - 2.6} \times \text{toN (max) [pF]}$$


ton (max): Maximum ON duty time

DataShe

DataSheet4U.com

2. Connection with no bootstrap capacitor

Connect the CB pin (pin 13) and Vcc2 pin (pin 14) as shown in Figure 13.

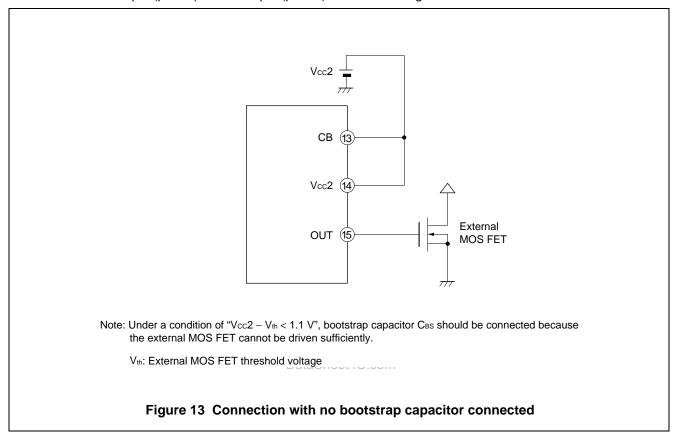


DataShe

3. Operation of the Bootstrap Capacitor

When voltage V_{OUT} at the OUT pin (pin 15) is "L" level, the voltages (V_{C1}) at both ends of the bootstrap capacitor C_{BS} is charged up to the V_{CC}2 voltage level by charge current (ic).

When V_{OUT} changes from "L" level to "H" level, the CB pin (pin 13) voltage V_{CBS} rises to $\approx 2 \times V_{\text{CC}}2$ and V_{OUT} reaches almost the $V_{\text{CC}}2$ level.

The charge accumulated at C_{BS} at this time is released by discharge current i_d (output unit supply current). See Figure 12 for circuit operation.

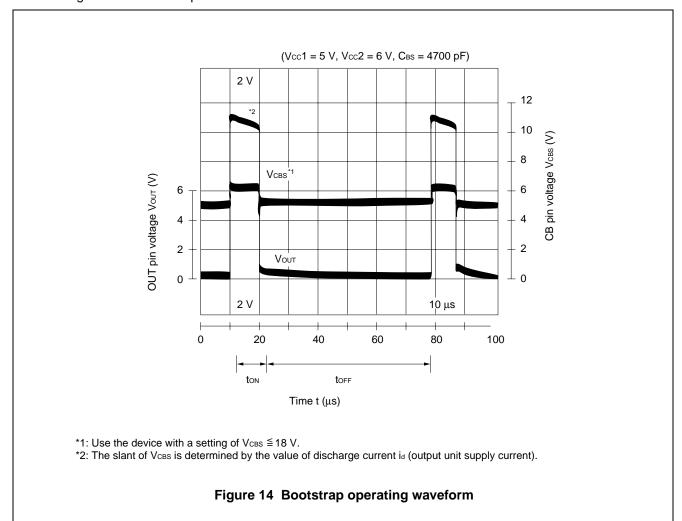


et4U.com

DataShe

■ EQUIVALENT SERIES RESISTANCE OF SMOOTHING CAPACITOR AND SYSTEM STABILITY


The equivalent series resistance (ESR) value of a smoothing capacitor for the DC/DC converter largely affects the loop phase characteristic.


Depending on the ESR value, the phase characteristic causes the ideal capacitor in a high-frequency domain advance the loop phase (as shown in Figures 16 and 17) and thus the system is improved in stability. In contrast, using a smoothing capacitor with low ESR lowers system stability. Use meticulous care when a semiconductor electrolytic capacitor with low ESR (such as an OS capacitor) or a tantalum capacitor is used. (The next page gives an example of reduction in phase margin when an OS capacitor is used.)

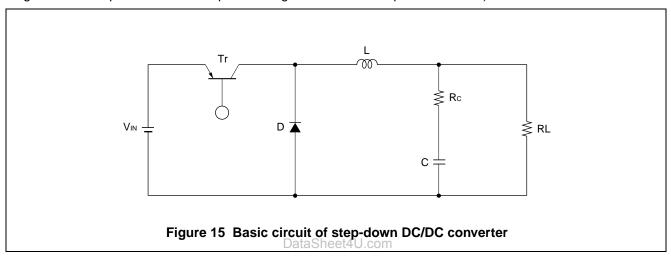

et4U.com

DataShe

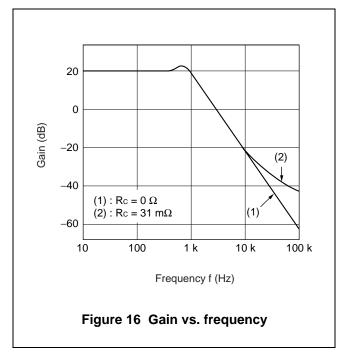

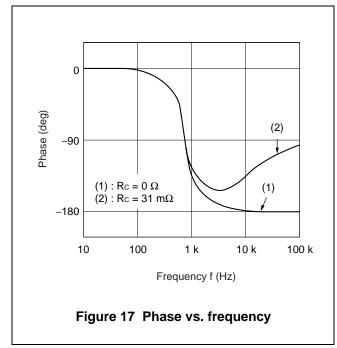


www.DataSheet4U.com

DataSheet4U.com


(Reference data)

Changing the smoothing capacitor from an aluminum electrolytic capacitor (Rc \simeq 1.0 Ω) to a low-ESR semiconductor electrolytic capacitor (OS capacitor: Rc \simeq 0.2 Ω) halves the phase margin. (See Figures 19 and 20.)

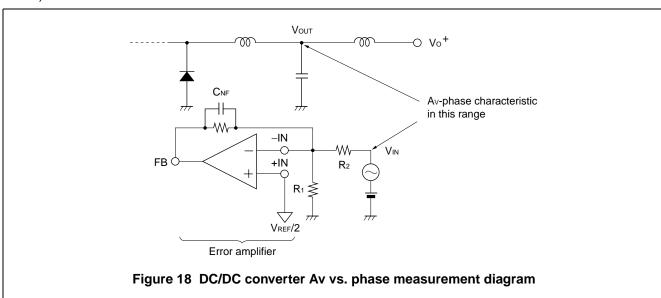


et4U.com

DataShe

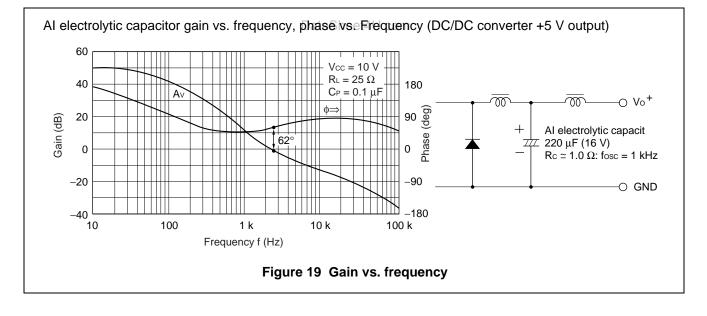

DataSheet4U.com www.DataSheet4U.com

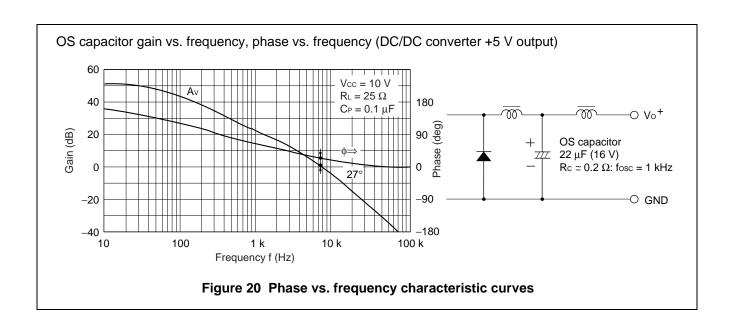


et4U.com DataSher

DataSheet4U.com

DataSheet4U.com www.DataSheet4U.com

■ APPLICATION EXAMPLE

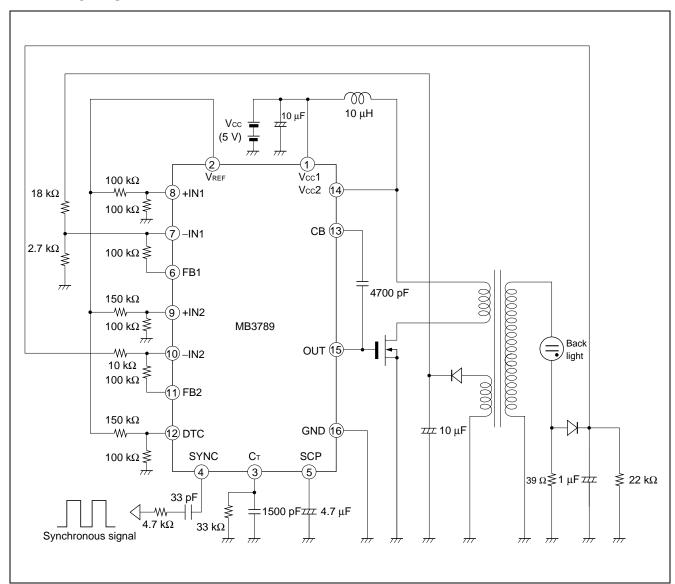

DataShe

DataSheet4U.com

et4U.com

■ USAGE PRECAUTIONS

1. Do not input voltages greater than the maximum rating.

Inputting voltages greater than the maximum rating may damage the device.

2. Always use the device under recommended operating conditions.

If a voltage greater than the maximum value is input to the device, its electrical characteristics may not be guaranteed. Similarly, inputting a voltage below the minimum value may cause device operation to become unstable.

3. For grounding the printed circuit board, use as wide ground lines as possible to prevent high-frequency noise.

Because the device uses high frequencies, it tends to generate high-frequency noise.

- 4. Take the following measures for protection against static charge:
 - For containing semiconductor devices, use an antistatic or conductive container.
 - When storing or transporting device-mounted circuit boards, use a conductive bag or container.
 - Ground the workbenches, tools, and measuring equipment to earth.
 - Make sure that operators wear wrist straps or other appropriate fittings grounded to earth via a resistance of 250 k to 1 M Ω placed in series between the human body and earth.


t4U.com

■ ORDERING INFORMATION

DataShe

Part number	Data Package .com	Remarks
MB3789PFV	16-pin Plastic SSOP (FPT-16P-M05)	

■ PACKAGE DIMENSION

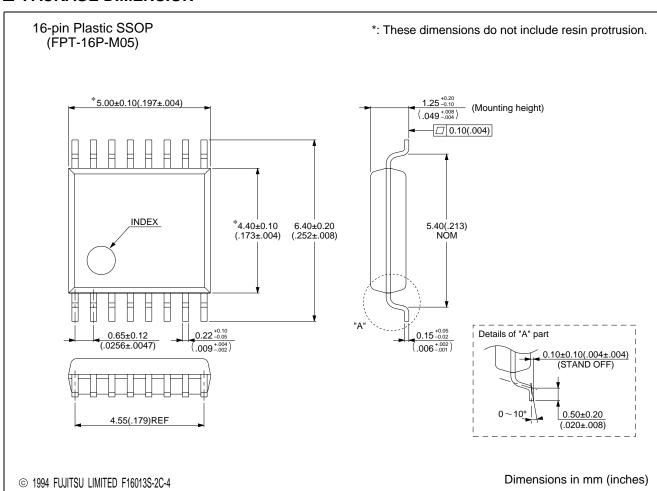

DataShe

www.DataSheet4U.com

FUJITSU LIMITED

For further information please contact:

Japan

FUJITSU LIMITED Corporate Global Business Support Division Electronic Devices KAWASAKI PLANT, 4-1-1, Kamikodanaka

Nakahara-ku, Kawasaki-shi Kanagawa 211-8588, Japan

Tel: 81(44) 754-3763 Fax: 81(44) 754-3329

http://www.fujitsu.co.jp/

North and South America

FUJITSU MICROELECTRONICS, INC. Semiconductor Division 3545 North First Street San Jose, CA 95134-1804, USA

Tel: (408) 922-9000 Fax: (408) 922-9179

Customer Response Center Mon. - Fri.: 7 am - 5 pm (PST)

Tel: (800) 866-8608 Fax: (408) 922-9179

http://www.fujitsumicro.com/

Europe

FUJITSU MIKROELEKTRONIK GmbH Am Siebenstein 6-10 D-63303 Dreieich-Buchschlag Germany

Tel: (06103) 690-0 Fax: (06103) 690-122

http://www.fujitsu-ede.com/

Asia Pacific

FUJITSU MICROELECTRONICS ASIA PTE LTD #05-08, 151 Lorong Chuan New Tech Park Singapore 556741

Tel: (65) 281-0770 Fax: (65) 281-0220

http://www.fmap.com.sg/

F9906

DataSheet4U.c@rFUJITSU LIMITED Printed in Japan

All Rights Reserved.

DataSheet4

The contents of this document are subject to change without notice. Customers are advised to consult with FUJITSU sales representatives before ordering.

The information and circuit diagrams in this document are presented as examples of semiconductor device applications, and are not intended to be incorporated in devices for actual use. Also, FUJITSU is unable to assume responsibility for infringement of any patent rights or other rights of third parties arising from the use of this information or circuit diagrams.

FUJITSU semiconductor devices are intended for use in standard applications (computers, office automation and other office equipment, industrial, communications, and measurement equipment, personal or household devices, etc.). CAUTION:

Customers considering the use of our products in special applications where failure or abnormal operation may directly affect human lives or cause physical injury or property damage, or where extremely high levels of reliability are demanded (such as aerospace systems, atomic energy controls, sea floor repeaters, vehicle operating controls, medical devices for life support, etc.) are requested to consult with FUJITSU sales representatives before such use. The company will not be responsible for damages arising from such use without prior approval.

Any semiconductor devices have an inherent chance of failure. You must protect against injury, damage or loss from such failures by incorporating safety design measures into your facility and equipment such as redundancy, fire protection, and prevention of over-current levels and other abnormal operating conditions.

If any products described in this document represent goods or technologies subject to certain restrictions on export under the Foreign Exchange and Foreign Trade Law of Japan, the prior authorization by Japanese government will be required for export of those products from Japan.