

DESCRIPTION


The DS1314 Nonvolatile Controller with Battery Monitor is a CMOS circuit which solves the application problem of converting CMOS RAM into nonvolatile memory. Incoming power is monitored for an out-of-tolerance condition. When a condition is detected, chip enable is inhibited to accomplish write protection and the battery is switched on to supply the RAM with uninterrupted power. Special circuitry uses a low-leakage CMOS process which affords precise voltage detection at extremely low battery consumption.

In addition to battery-backup support, the DS1314 performs the important function of monitoring the remaining capacity of lithium battery and providing a warning before the battery reaches end-of-life. Because the open-circuit voltage of a lithium backup battery remains relatively constant over the majority of its life, accurate battery monitoring requires loaded-battery voltage measurement. The DS1314 performs such measurement by periodically comparing the voltage of the battery as it supports an internal resistive load with a carefully selected reference voltage. If the battery voltage falls below the reference voltage under such conditions, the battery will soon reach end-of-life. As a result, the Battery Warning pin is activated to signal the need for battery replacement.

FEATURES

- Converts CMOS SRAM into nonvolatile memory
- Unconditionally write-protects SRAM when Vcc is out of tolerance
- Automatically switches to battery backup supply when Vcc power failure occurs
- Monitors voltage of a lithium cell and provides advanced warning of impending battery failure
- Signals low-battery condition on active low Battery Warning output signal
- Automatic Vcc power-fail detection for 3.0V or 3.3V power supplies
- Space-saving 8-pin DIP and SOIC packages
- Optional 16-pin SOIC and 20-pin TSSOP versions reset processor when power failure occurs and hold processor in reset during system power-up
- Industrial temperature range of -40 to +85

PIN ASSIGNMENT

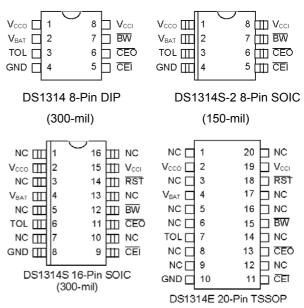

PIN DESCRIPTION

V _{CC1}	-Power Supply Input
V _{CCO}	-SRAM Power Supply Output
V _{BA} T	-Backup Battery Input
CEI	-Chip Enable Input
CEO	-Chip Enable Output
TOL	-Vcc Tolerance Select
BW	-Battery Warning Output
	(Open Drain)
RST	-Reset Output (Open Drain)
GND	-Ground
NC	-No Connection



MEMORY BACKUP

The DS1314 performs all the circuit functions required to provide battery-backup for an SRAM. First, the device provides a switch to direct power from the battery or the system power supply (V_{CCI}). Whenever V_{CCI} is less than the switch point V_{SW} and V_{CCI} is less than the battery voltage V_{BAT} , the battery is switched in to provide backup power to the SRAM. This switch has voltage drop of less than 0.2 volts.

Second, the DS1314 handles power failure detection and SRAM write protection. V_{CCI} is constantly monitored, and when the supply goes out of tolerance, a precision comparator detects power failure and inhibits chip enable output (CEO) in order to write-protect the SRAM. This is accomplished by holding \overline{CEO} to within 0.2 volts of V_{CCO} when V_{CCI} is out of tolerance. If \overline{CEI} is (active) low at the time that power failure is detected, the \overline{CEO} signal is kept low until \overline{CEI} is brought high again. Once \overline{CEI} is brought high, \overline{CEO} is taken high and held high until after V_{CCI} has returned to its nominal voltage level. If \overline{CEI} is not brought high by 1.5µs after power failure is detected, \overline{CEO} is forced high at that time. This specific scheme for delaying write protection for up to 1.5µs guarantees that any memory access in progress when power failure occurs will complete properly. Power failure detection occurs at 3.0V nominal (3.3V supply) when the TOL pin is wired to GND or at 2.7V nominal (3.0V supply) when TOL is connected to V_{CCO} .

BATTERY VOLTAGE MONITORING

The DS1314 automatically performs periodic battery voltage monitoring at a factory-programmed time interval of 24 hours. Such monitoring begins within t_{REC} after V_{CCI} rises above V_{CCTP} , and is suspended when power failure occurs.

After each 24-hour period (t_{BTCN}) has elapsed, the DS 1314 connects V_{BAT} to an internal 1.2 M Ω test resistor (R_{INT}) for one second (t_{BTPW}). During this one second, if V_{BAT} falls below the factory programmed battery voltage trip point (V_{BTP}), the battery warning output \overline{BW} is asserted. While \overline{BW} is active battery testing will be performed with period t_{BTCW} to detect battery removal and replacement. Once asserted, \overline{BW} remains active until the battery is physically removed and replaced by a fresh cell. The battery is still re-tested after each Vcc power-up, however, even if \overline{BW} was active on power-down. If the battery is found to be higher than V_{BTP} during such testing, \overline{BW} is deasserted and regular 24-hour testing resumes. \overline{BW} has an open-drain output driver.

Battery replacement following \overline{BW} activation is normally done with V_{CCI} nominal so that SRAM data is not lost. During battery replacement, the minimum time duration between old battery detachment and new battery attachment (t_{BDBA}) must be met or \overline{BW} will not deactivate following attachment of the new battery. Should \overline{BW} not deactivate for this reason, the new battery can be detached for t_{BDBA} and then reattached to clear \overline{BW} .

NOTE: The DS1314 cannot constantly monitor an attached battery because such monitoring would drastically reduce the life of the battery. As a result, the DS1314 only tests the battery for one second out of every 24 hours and does not monitor the battery in any way between tests. If a good battery (one that has not been previously flagged with \overline{BW}) is removed between battery tests, the DS1314 may not immediately sense the removal and may not activate \overline{BW} until the next scheduled battery test. If a battery is then reattached to the DS1314, the battery may not be tested until the next scheduled test.

NOTE: Battery monitoring is only a useful technique when testing can be done regularly over the entire life of a lithium battery. Because the DS1314 only performs battery monitoring when Vcc is nominal, systems which are powered-down for excessively long periods can completely drain their lithium cells without receiving any advanced warning. To prevent such an occurrence, systems using the DS1314 battery monitoring feature should be powered-up periodically (at least once every few months) in order to perform battery testing. Furthermore, anytime \overline{BW} is activated on the first battery test after a power-up, data integrity should be checked via checksum or other technique.



POWER MONITORING


DS1314S and DS1314E varieties have an additional reset pin. These varieties detect out-of-tolerance power supply conditions and warn a processor-based system of impending power failure. When V_{CCI} falls below the trip point level defined by the TOL pin (V_{CCTP}), the V_{CCI} comparator activates the reset signal \overline{RST} . Reset occurs at 3.0V nominal (3.3V supply) when the TOL pin is connected to GND or at 2.7V nominal (3.0V supply) when TOL is connected to V_{CCO} .

RST also serves as a power-on reset during power-up. After V_{CCI} exceeds V_{CCTP}, RST will be held active for 200 ms nominal (t_{RPU}). This reset period is sufficiently long to prevent system operation during power-on transients and to allow t_{REC} to expire. RST has an open-drain output driver.

FRESHNESS SEAL MODE

When the battery is first attached to the DS1314 without Vcc power applied, the device does not immediately provide battery-backup power on Vcco. Only after V_{CCI} exceeds V_{CCTP} and later falls below both Vsw and V_{BAT} will the DS1314 leave Freshness Seal Mode and provide battery-backup power. This mode allows a battery to be attached during manufacturing but not used until after the system has been activated for the first time. As a result, no battery energy is drained during storage and shipping.

FUNCTIONAL BLOCK DIAGRAM Figure 1

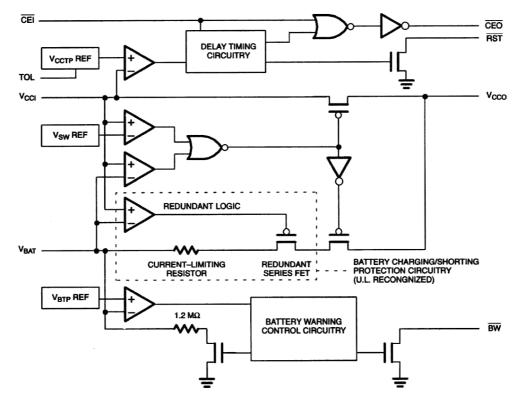



ABSOLUTE MAXIMUM RATINGS *

Voltage on Any Pin Relative to Ground Operating Temperature Storage Temperature Soldering Temperature -0.5V to +70V -40 to +85 -55 to +125 260 for 10 seconds

*This is a stress rating only and functional operation of the device at these or any other conditions above those indicated in the operation sections of this specification is not implied. Exposure to absolute maximum rating conditions for extended periods of time may affect reliability.

RECOMMENDED DC OPERATING CONDITIONS) to +85)	
PARAMETER	SYMBOL	MIN	TYP	MAX	UNITS	NOTES
Supply Voltage TOL=GND	V _{CCI}	3.0	3.3	3.6	V	1
Supply Voltage TOL=Vcco	V _{CCI}	2.7	3.0	3.3	V	1
Battery Supply Voltage	V _{BAT}	2.0		6.0	V	1
Logic 1 Input	V _{IH}	2.0		V _{CCI} +0.3	V	1,12
Logic 0 Input	V _{IL}	-0.3		+0.8	V	1,12

DC ELECTRICAL CHARACTERISTICS (-40 to +85 ; V_{CCI}=≥V_{CCTP})

PARAMETER	SYMBOL	MIN	TYP	MAX	UNITS	NOTES
Operating Current (TTL inputs)	I _{CC1}		50	200	μA	2
Operating Current (CMOS inputs)	I _{CC2}		30	100	μA	2,5
RAM Supply Current	V _{CC1}			80	mA	3
(V _{CCO} ≥V _{CCI} -0.2V)						
RAM Supply Current	I _{CCO1}			140	mA	4
(V _{CCO} ≥V _{CCI} -0.3V)						
Vcc Trip Point (TOL=GND)	VCCTP	2.8	2.9	3.0	V	1
Vcc Trip Point (TOL=Vcco)	V _{CCTP}	2.5	2.6	2.7	V	1
V _{BAT} Trip Point	V _{BTP}	2.5	2.6	2.7	V	1
Vcc/V _{BAT} Switch Point	Vsw	2.6	2.7	2.8	V	1
(TOL =GND)						
Vcc/V _{BAT} Switch Point	V _{SW}	2.4	2.5	2.6	V	1
(TOL=V _{CCO})						
Output Current @ 2.2V	I _{OH}	-1			mA	7,10
Output Current @ 2.2V	I _{OL}			4	mA	7,10
Input Leakage	IIL	-1.0		+1.0	μA	
Output Leakage	I _{LO}	-1.0		+1.0	μA	
Battery Monitoring Test Load	RINT	0.8	1.2	1.5	MΩ	

DC ELECTRICAL CHARACTERISTICS (-40 to +85 ; $V_{CCI} < V_{BAT}$; $V_{CCI} < V_{SW}$)

PARAMETER	SYMBOL	MIN	ТҮР	MAX	UNITS	NOTES
Battery Current	I _{BAT}			100	nA	2
Battery-Backup Current	I _{CCO2}			500	μA	6
Supply Voltage	V _{CCO}	V _{BAT-0.2}			V	1
CEO Output	V _{OHL}	V _{BAT-0.2}			V	1,8



CAPACITANCE				(t _A =25)	
PARAMETER	SYMBOL	MIN	ТҮР	MAX	UNITS	NOTES
Input Capacitance (CEI, TOL)	C _{IN}			7	pF	
Output Capacitance	C _{OUT}			7	pF	
$(\overline{\text{CEI}}, \overline{\text{BW}}, \overline{\text{RST}})$						


AC ELECTRICAL CHARACTERISTICS	(-40 to +85 ; V _{CCI} ≥V _{CCTP})						
PARAMETER	SYMBOL	MIN	TYP	MAX	UNITS	NOTES	
CEI to CEO Propagation Delay	t _{PD}		12	20	ns		
CE Pulse Width	t _{CE}			1.5	μs	11	
Vcc Valid to End of	t _{REC}		12	125	ms	9	
Write Protection							
Vcc Valid to CEI Inactive	t _{PU}			2	ms		
Vcc Valid to RST Inactive	t _{RPU}	150	200	350	ms	10	
Vcc Valid to BW Valid	t _{BPU}			1	s	10	

AC ELECTRICAL CHARACTERISTICS			(-40	to +85 ; V _{C0}	_{CI} <v<sub>CCTP)</v<sub>	
PARAMETER	SYMBOL	MIN	ТҮР	MAX	UNITS	NOTES
Vcc Slew Rate	t _F	150			μs	
Vcc Fail Detect to RST Active	t _{RPD}		5	15	μs	10
Vcc Slew Rate	t _R	150			μs	

AC ELECTRICAL CHARACTERISTICS					(-40 to +85 ; V _{CCI} ≥V _{CCTP})			
PARAMETER	SYMBOL	MIN	ТҮР	MAX	UNITS	NOTES		
Battery Test to BW Active	t _{BW}			5	S	10		
Battery Test Cycle-Normal	t _{BTCN}		24		hr			
Battery Test Cycle-Warning	t _{BTCW}		5		s			
Battery Test Pulse Width	t _{BTPW}			1	s			
Battery Detach to Battery Attach	t _{BDBA}	7			S			
Battery Attach to BW Inactive	t _{BABW}			1	S	10		



TIMING DIAGRAM: POWER-UP

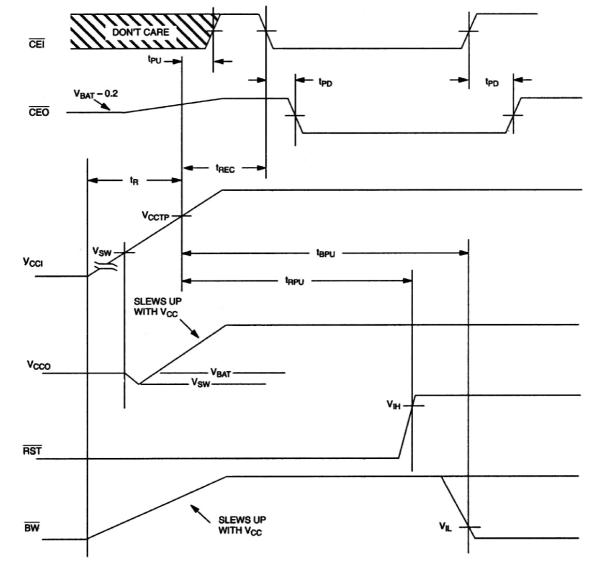


NOTE:

If V_{BAT} < V_{SW} , V_{CCO} will begin to slew with V_{CCI} when V_{CCI} = V_{BAT} .



TIMMING DIAGRAM: POWER-DOWN

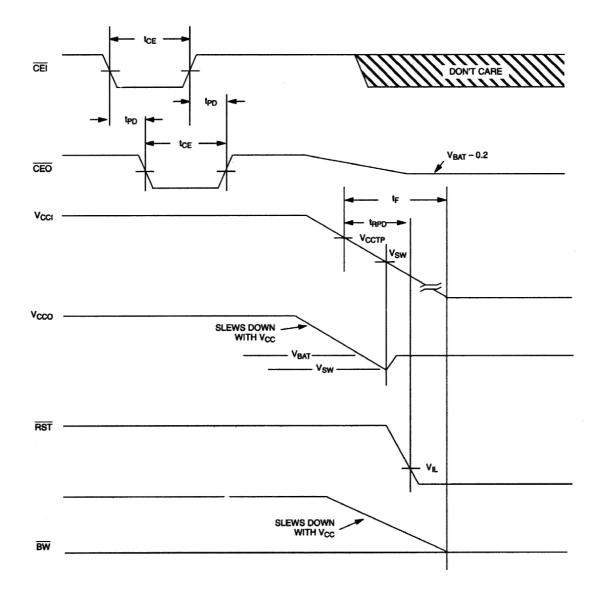


NOTE:

If V_{BAT}<V_{SW}, V_{CCO} will slew down with V_{CCI} until V_{CCI}=V_{BAT}.




TIMING DIAGRAM: BATTERY WARNING DETECTION

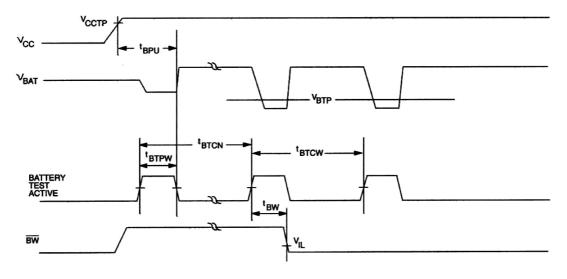

NOTE:

t_{BW} is measured from the expiration of the internal timer to the activation of the battery warning output BW.

TIMING DIAGRAM: BATTERY REPLACEMENT

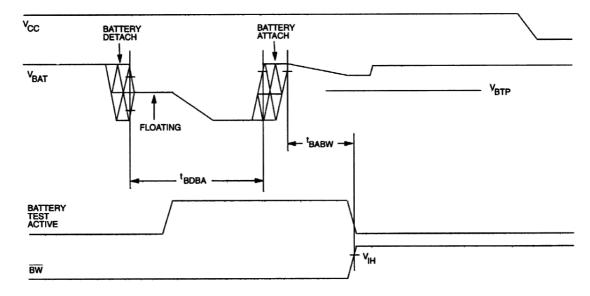

NOTES:

- 1. All voltages referenced to ground.
- 2. Measured with outputs open circuited.
- 3. I_{CCO1} is the maximum average load which the DS1314 can supply to attached memories at $V_{CCO} \ge V_{CCI} 0.2V$.
- 4. I_{CCO1} is the maximum average load which the DS1314 can supply to attached memories at $V_{CCO} \ge V_{CCI} 0.3V$.
- 5. All inputs within 0.3V of ground or V_{CCI}.
- 6. I_{CCO2} is the maximum average load current which the DS1314 can supply to the memories in the battery-backup mode.
- 7. Measured with a load as shown in Figure 2.
- 8. Chip Enable Output CEO can only sustain leakage current in the battery-backup mode.



- 9. CEO will be held high for a time equal to t_{REC} after V_{CCI} crosses V_{CCTP} on power-up.
- 10. \overline{BW} and \overline{RST} are open drain outputs and as such cannot source current. External pull-up resistors should be connected to these pins for proper operation. Both \overline{BW} and \overline{RST} can sink 10 mA.
- 10. t_{CE} maximum must be met to ensure data integrity on power-down.
- 11. In battery-backup mode, inputs must never be below ground or above V_{CCO} .


DS TEST CONDITIONS

Outputs Open All voltages are referenced to ground

AC TEST CONDITIONS

Output Load: See below Input Pulse Levels: 0-3.0V Timing Measurement Reference Levels Input:1.5V Output:1.5V Input pulse Rise and Fall Times: 5ns

OUTPUT LOAD Figure 2

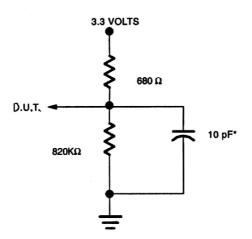

***INCLUDING SCOPE AND JIG CAPACITANCE**



DATA SHEET REVISION SUMMARY

The following represent the key differences between 12/16/96 and 06/12/97 version of the DS1314 data sheet. Please review this summary carefully.

- 1. Changed V_{BAT} max to 6V.
- 2. Changed V_{CCTP} values to 2.8-3.0V (TOL=GND) and 2.5-2.7V (TOL=Vcc).
- 3. Changed t_{BABW} from 7s to 1s max.
- 4. Changed block diagram to show U L compliance.

The following represent the key differences between 06/12/97 and 08/29/97 version of the DS1314 data sheet. Please review this summary carefully.

- 1. Changed AC test conditions.
- 2. Changed t_{PD} to 20 max &12typ.

The following represent the key differences between 08/29/97 and 12/16/97 version of the DS1314 data sheet. Please review this summary carefully.

- Changed V_{CCI} mins from 3.05V to 3.0V (TOL=GND) and from 275V to 2.7V (TOL=V_{CCD}) (this should have been done on 06/12/97 revision but was overlooked).
- 2. Specified input capacitance as being only for \overline{CEI} , TOL and Output Capacitance as being only for \overline{CEO} , \overline{BW} and \overline{RST} . This is not a change but rather clarification.
- 3. Removed "preliminary" from title bar.