

MOBILE SDRAM

256Mb: x16 MOBILE SDRAM

MT48LC16LFFG, MT48LC16M16LFBG, MT48V16MLFFG, MT48V16M16LFBG, MT48H16M16LFFG, MT48H16M16LFBG 4 Meg x 16 x 4 banks

For the latest data sheet revisions, please refer to the Micron Website: www.micron.com/dramds

FEATURES

- Temperature Compensated Self Refresh (TCSR)
- Fully synchronous; all signals registered on positive edge of system clock
- Internal pipelined operation; column address can be changed every clock cycle
- Internal banks for hiding row access/precharge
- Programmable burst lengths: 1, 2, 4, 8, or full page
- Auto Precharge, includes CONCURRENT AUTO PRECHARGE and Auto Refresh Modes
- Self Refresh Mode
- 64ms, 8,192-cycle refresh
- LVTTL-compatible inputs and outputs
- Low voltage power supply
- Deep Power Down
- Partial Array Self Refresh power-saving mode

OPTIONS MARKING

• Vdd/VddQ	
3.3V/3.3V	LC
2.5V/2.5V-1.8V	V
1.8V/1.8V	Η
Configurations	
16 Meg x 16 (4 Meg x 16 x 4 banks)	16M16
 Plastic Packages – OCPL 	
54-pinTSOP (400 mil) ¹	TG
54-pinTSOP (400 mil) Lead-Free ¹	Р
54-ball VFBGA (8mm x 14mm) ²	FG
54-ball VFBGA (8mm x 14mm) Lead-Free ²	BG
• Timing (Cycle Time)	
8.0ns @ CL = 3 (125 MHz)	-8
10ns @ CL = 3 (100 MHz)	-10
Operating Temperature	
Commercial (0°C to + 70°C)	None
Industrial (-40°C to + 85°C)	IT

NOTE: 1. Contact Factory for availability.

2. Due to space limitations, FBGA-packaged components have an abbreviated part mark that is different from the part number. See our Web site for more information on abbreviated component marks.

BALL ASSIGNMENT (Top View) 54-Ball VFBGA 1 2 3 4 5 6 7 8 9 Vss DQ15 VssQ А VDDQ DQ0 Vdd (DQ14 (DQ13) в VDDQ VssQ DQ2 DQ1 (DQ11) (DQ12) (VddQ) c VssQ DQ4 DQ3 D (DQ10) DQ9 VDDQ VssQ DQ6 DQ5 Е DQ8 NC Vss Vdd LDQN DQ7 СК CKE CAS RAS F UDO WE A11 A9 BAO A12 BA1 G CS\ A7 A6 A0 A1 н A10 A5 Δ3 Δ2 Vss Δ4 VDD 16 Meg x 16 4 Meg x 16 x 4 banks Configuration **Refresh** Count 8K Row Addressing 8K (A0-A12) 4 (BA0, BA1) Bank Addressing

KEY TIMING PARAMETERS

SPEED	CLOCK	AC	CESS TIN	SETUP	HOLD	
GRADE	FREQUENCY	CL=1*	CL=2*	CL=3*	TIME	TIME
-8	125 MHz	-	-	7ns	2.5ns	1.0ns
-10	100 MHz	I	-	7ns	2.5ns	1.0ns
-8	100 MHz	-	8ns	-	2.5ns	1.0ns
-10	83 MHz	-	8ns	-	2.5ns	1.0ns
-8	50 MHz	19ns	-	-	2.5ns	1.0ns
-10	40 MHz	22ns	_	-	2.5ns	1.0ns

*CL = CAS (READ) latency

Column Addressing

www.DataSheet4U.com

512 (A0-A8)


256Mb: x16 Mobile SDRAM MobileRamY26L_B.p65-Pub.04/03

©2003 Micron Technology, Inc. All rights reserved





PIN ASSIGNMENT (Top View) 54-Pin TSOP

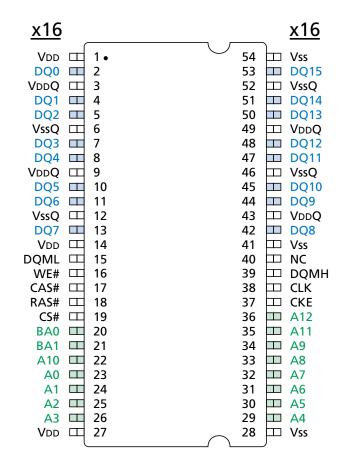

Micron



256Mb	SDRAM	PART N	UMBERS
-------	--------------	--------	--------

PART NUMBER ¹	Vdd/VddQ	ARCHITECTURE	PACKAGE
MT48LC16M16LFFG-10	3.3V / 3.3V	16 Meg x 16	54-BALL VFBGA
MT48LC16M16LFFG-8	3.3V / 3.3V	16 Meg x 16	54-BALL VFBGA
MT48V16M16LFFG-10	2.5V / 1.8V	16 Meg x 16	54-BALL VFBGA
MT48V16M16LFFG-8	2.5V / 1.8V	16 Meg x 16	54-BALL VFBGA
MT48H16M16LFFG-10	1.8V / 1.8V	16 Meg x 16	54-BALL VFBGA
MT48H16M16LFFG-8	1.8V / 1.8V	16 Meg x 16	54-BALL VFBGA
MT48LC16M16LFTG-10	3.3V / 3.3V	16 Meg x 16	54-PIN TSOP
MT48LC16M16LFTG-8	3.3V / 3.3V	16 Meg x 16	54-PIN TSOP
MT48V16M16LFTG-10	2.5V / 1.8V	16 Meg x 16	54-PIN TSOP
MT48V16M16LFTG-8	2.5V / 1.8V	16 Meg x 16	54-PIN TSOP
MT48H16M16LFTG-10	1.8V / 1.8V	16 Meg x 16	54-PIN TSOP
MT48H16M16LFTG-8	1.8V / 1.8V	16 Meg x 16	54-PIN TSOP

Note: 1. Lead-Free packaging partnumbers: Replace the FG with BG for VFBGA and replace the TG code with P for TSOP.

GENERAL DESCRIPTION

The 256Mb SDRAM is a high-speed CMOS, dynamic random-access memory containing 268,435,456 bits. It is internally configured as a quad-bank DRAM with a synchronous interface (all signals are registered on the positive edge of the clock signal, CLK). Each of the x16's 67,108,864-bit banks is organized as 8,192 rows by 512 columns by 16 bits.

Read and write accesses to the SDRAM are burst oriented; accesses start at a selected location and continue for a programmed number of locations in a programmed sequence. Accesses begin with the registration of an ACTIVE command, which is then followed by a READ or WRITE command. The address bits registered coincident with the ACTIVE command are used to select the bank and row to be accessed (BA0, BA1 select the bank; A0–A12 select the row). The address bits registered coincident with the READ or WRITE command are used to select the starting column location for the burst access.

The SDRAM provides for programmable READ or WRITE burst lengths of 1, 2, 4, or 8 locations, or the full page, with a burst terminate option. An auto precharge function may be enabled to provide a self-timed row precharge that is initiated at the end of the burst sequence. The 256Mb SDRAM uses an internal pipelined architecture to achieve high-speed operation. This architecture is compatible with the 2n rule of prefetch architectures, but it also allows the column address to be changed on every clock cycle to achieve a highspeed, fully random access. Precharging one bank while accessing one of the other three banks will hide the precharge cycles and provide seamless, highspeed, random-access operation.

The 256Mb SDRAM is designed to operate in 3.3V or 2.5V or 1.8V memory systems. An auto refresh mode is provided, along with a power-saving, power-down mode. All inputs and outputs are LVTTL-compatible.

SDRAMs offer substantial advances in DRAM operating performance, including the ability to synchronously burst data at a high data rate with automatic column-address generation, the ability to interleave between internal banks to hide precharge time and the capability to randomly change column addresses on each clock cycle during a burst access.



TABLE OF CONTENTS

Functional Block Diagram – 16 Meg x 16	5
54-Ball FBGA Pin Description	6
54-Pin TSOP Pin Description	7
Functional Description	8
Initialization	8
Register Definition	8
	0 8
Mode Register Burst Length	0 8
Burst Type	9
CAS Latency	10
Operating Mode	10
Write Burst Mode	10
Extended Mode Register	11
Temperature Compensated Self Refresh.	11
Partial Array Self Refresh	12
Deep Power Down	12
Driver Strength	12
Commands	12
Truth Table 1 (Commands and DQM Operation)	13
Command Inhibit	14
No Operation (NOP)	14
Load mode register	14
Active	14
Read	14
Write	14
Precharge	14
Auto Precharge	14
Auto Refresh	14
Self Refresh	15
Operation	16
Bank/Row Activation	16
Reads	17
Writes	23
Precharge	25
Power-Down	25
Deep Power-Down	26
Clock Suspend	26
Burst Read/Single Write	27
Darot Road, ongro Willo minimum	<i>–</i> •

256Mb: x16 MOBILE SDRAM


Concurrent Auto Precharge	28
Truth Table 2 (CKE)	30
Truth Table 3 (Current State, Same Bank)	31
Truth Table 4 (Current State, Different Bank)	32
Absolute Maximum Ratings	35
DC Electrical Characteristics	
and Operating Conditions	35
Capacitance	36
AC Electrical Characteristics (Timing Table)	37
IDD Specifications and Conditions	39
•	33
Timing Waveforms	
Initialize and Load mode register	41
Power-Down Mode	42
Clock Suspend Mode	43
Auto Refresh Mode	44
Self Refresh Mode	45
Reads	
Read – Without Auto Precharge	46
Read – With Auto Precharge	47
Single Read – Without Auto Precharge	48
Single Read – With Auto Precharge	49
Alternating Bank Read Accesses	50
Read – Full-Page Burst	51
Read – DQM Operation	52
Writes	
Write – Without Auto Precharge	53
Write – With Auto Precharge	54
Single Write - Without Auto Precharge	55
Single Write - Without Auto Precharge	56
Alternating Bank Write Accesses	57
Write – Full-Page Burst	58
Write – DQM Operation	59
Package Dimensions	
54-pin TSOP	60
54-pin FBGA	61





FUNCTIONAL BLOCK DIAGRAM

16 Meg x 16 SDRAM

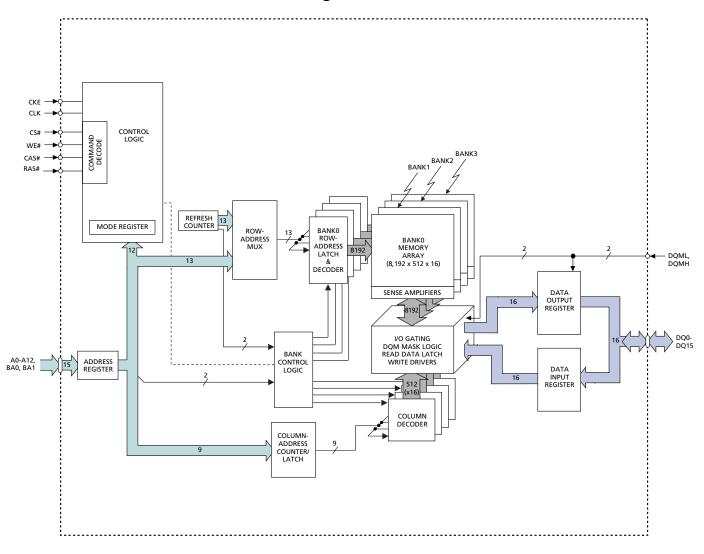





BALL DESCRIPTIONS

54-BALL FBGA	SYMBOL	TYPE	DESCRIPTION
F2	CLK	Input	Clock: CLK is driven by the system clock. All SDRAM input signals are sampled on the positive edge of CLK. CLK also increments the internal burst counter and controls the output registers.
F3	CKE	Input	Clock Enable: CKE activates (HIGH) and deactivates (LOW) the CLK signal. Deactivating the clock provides PRECHARGE POWER-DOWN and SELF REFRESH operation (all banks idle), ACTIVE POWER-DOWN (row active in any bank) or CLOCK SUSPEND operation (burst/access in progress). CKE is synchronous except after the device enters power-down and self refresh modes, where CKE becomes asynchronous until after exiting the same mode. The input buffers, including CLK, are disabled during power-down and self refresh modes, providing low standby power. CKE may be tied HIGH.
G9	CS#	Input	Chip Select: CS# enables (registered LOW) and disables (registered HIGH) the command decoder. All commands are masked when CS# is registered HIGH. CS# provides for external bank selection on systems with multiple banks. CS# is considered part of the command code.
F7, F8, F9	CAS#, RAS#, WE#	Input	Command Inputs: CAS#, RAS#, and WE# (along with CS#) define the command being entered.
E8, F1	LDQM, UDQM	Input	Input/Output Mask: DQM is sampled HIGH and is an input mask signal for write accesses and an output enable signal for read accesses. Input data is masked during a WRITE cycle. The output buffers are placed in a High-Z state (two-clock latency) when during a READ cycle. LDQM corresponds to DQ0–DQ7, UDQM corresponds to DQ8–DQ15. LDQM and UDQM are considered same state when referenced as DQM.
G7, G8	BA0, BA1	Input	Bank Address Input(s): BA0 and BA1 define to which bank the ACTIVE, READ, WRITE or PRECHARGE command is being applied. These pins also provide the op-code during a LOAD MODE REGISTER command
H7, H8, J8, J7, J3, J2, H3, H2, H1, G3, H9, G2,G1	A0-A12	Input	Address Inputs: A0–A12 are sampled during the ACTIVE command (row- address A0–A12) and READ/WRITE command (column-address A0–A8; with A10 defining auto precharge) to select one location out of the memory array in the respective bank. A10 is sampled during a PRECHARGE command to determine if all banks are to be precharged (A10 HIGH) or bank selected by BA0, BA1 (LOW). The address inputs also provide the op-code during a LOAD MODE REGISTER command.
A8, B9, B8, C9, C8, D9, D8, E9, E1, D2, D1, C2, C1, B2, B1, A2	DQ0-DQ15	I/O	Data Input/Output: Data bus
E2,	NC	-	No Connect: This pin should be left unconnected.
A7, B3, C7, D3	VddQ	Supply	DQ Power: Provide isolated power to DQs for improved noise immunity.
A3, B7, C3, D7,	VssQ	Supply	DQ Ground: Provide isolated ground to DQs for improved noise immunity.
A9, E7, J9	Vdd	Supply	Power Supply: Voltage dependant on option.
A1, E3, J1	Vss	Supply	Ground.





PIN DESCRIPTIONS

54-PIN TSOP	SYMBOL	ТҮРЕ	DESCRIPTION
38	CLK	Input	Clock: CLK is driven by the system clock. All SDRAM input signals are sampled on the positive edge of CLK. CLK also increments the internal burst counter and controls the output registers.
37	CKE	Input	Clock Enable: CKE activates (HIGH) and deactivates (LOW) the CLK signal. Deactivating the clock provides PRECHARGE POWER-DOWN and SELF REFRESH operation (all banks idle), ACTIVE POWER-DOWN (row active in any bank) or CLOCK SUSPEND operation (burst/access in progress). CKE is synchronous except after the device enters power- down and self refresh modes, where CKE becomes asynchronous until after exiting the same mode. The input buffers, including CLK, are disabled during power-down and self refresh modes, providing low standby power. CKE may be tied HIGH.
19	CS#	Input	Chip Select: CS# enables (registered LOW) and disables (registered HIGH) the command decoder. All commands are masked when CS# is registered HIGH. CS# provides for external bank selection on systems with multiple banks. CS# is considered part of the command code.
16, 17, 18	WE#, CAS#, RAS#	Input	Command Inputs: WE#, CAS#, and RAS# (along with CS#) define the command being entered.
15, 39	x16: DQML, DQMU	Input	Input/Output Mask: DQM is an input mask signal for write accesses and an output enable signal for read accesses. Input data is masked when DQM is sampled HIGH during a WRITE cycle. The output buffers are placed in a High-Z state (two-clock latency) when DQM is sampled HIGH during a READ cycle. On the x16, DQML corresponds to DQ0- DQ7 and DQMH corresponds to DQ8-DQ15. DQML and DQMH are considered same state when referenced as DQM.
20, 21	BAO, BA1	Input	Bank Address Inputs: BA0 and BA1 define to which bank the ACTIVE, READ, WRITE or PRECHARGE command is being applied.
23-26, 29-34, 22, 35, 36	A0-A12	Input	Address Inputs: A0-A12 are sampled during the ACTIVE command (row-address A0-A12) and READ/WRITE command (column-address A0-A8 [x16]; with A10 defining auto precharge) to select one location out of the memory array in the respective bank. A10 is sampled during a PRECHARGE command to determine if all banks are to be precharged (A10 [HIGH]) or bank selected by (A10 [LOW]). The address inputs also provide the op-code during a LOAD MODE REGISTER command.
2, 4, 5, 7, 8, 10, 11, 13, 42, 44, 45, 47, 48, 50, 51, 53	DQ0-DQ15	x16: I/O	Data Input/Output: Data bus for x16
40	NC	_	No Connect: This pin should be left unconnected.
3, 9, 43, 49	VddQ	Supply	DQ Power: Isolated DQ power to the die for improved noise immunity.
6, 12, 46, 52	VssQ	Supply	DQ Ground: Isolated DQ ground to the die for improved noise immunity.
1, 14, 27	Vdd	Supply	Power Supply: Voltage dependant on option.
28, 41, 54	Vss	Supply	Ground.

256Mb: x16

MOBILE SDRAM



FUNCTIONAL DESCRIPTION

In general, the 256Mb SDRAMs (4 Meg x 16 x 4 banks) are quad-bank DRAMs that operate at 3.3V or 2.5V or 1.8V and include a synchronous interface (all signals are registered on the positive edge of the clock signal, CLK). Each of the x16's 67,108,864-bit banks is organized as 8,192 rows by 512 columns by 16 bits.

Read and write accesses to the SDRAM are burst oriented; accesses start at a selected location and continue for a programmed number of locations in a programmed sequence. Accesses begin with the registration of an ACTIVE command, which is then followed by a READ or WRITE command. The address bits registered coincident with the ACTIVE command are used to select the bank and row to be accessed (BA0 and BA1 select the bank, A0–A12 select the row). The address bits (x16: A0–A8) registered coincident with the READ or WRITE command are used to select the starting column location for the burst access.

Prior to normal operation, the SDRAM must be initialized. The following sections provide detailed information covering device initialization, register definition, command descriptions and device operation.

Initialization

SDRAMs must be powered up and initialized in a predefined manner. Operational procedures other than those specified may result in undefined operation. Once power is applied to VDD and VDDQ (simultaneously) and the clock is stable (stable clock is defined as a signal cycling within timing constraints specified for the clock pin), the SDRAM requires a 100µs delay prior to issuing any command other than a COMMAND INHIBIT or NOP. CKE must be held high during the entire initialization period until the PRECHARGE command has been issued. Starting at some point during this 100µs period and continuing at least through the end of this period, COMMAND IN-HIBIT or NOP commands should be applied.

Once the 100µs delay has been satisfied with at least one COMMAND INHIBIT or NOP command having been applied, a PRECHARGE command should be applied. All banks must then be precharged, thereby placing the device in the all banks idle state.

Once in the idle state, two AUTO REFRESH cycles must be performed. After the AUTO REFRESH cycles are complete, the SDRAM is ready for mode register programming. Because the mode register will power up in an unknown state, it should be loaded prior to applying any operational command.

REGISTER DEFINITION

Mode Register

The mode register is used to define the specific mode of operation of the SDRAM. This definition includes the selection of a burst length, a burst type, a CAS latency, an operating mode and a write burst mode, as shown in Figure 1. The mode register is programmed via the LOAD MODE REGISTER command and will retain the stored information until it is programmed again or the device loses power.

Mode register bits M0–M2 specify the burst length, M3 specifies the type of burst (sequential or interleaved), M4–M6 specify the CAS latency, M7 and M8 specify the operating mode, M9 specifies the write burst mode, and M10, M11, and M12 should be set to zero. M13and M14 should be set to zero to prevent extended mode register.

The mode register must be loaded when all banks are idle, and the controller must wait the specified time before initiating the subsequent operation. Violating either of these requirements will result in unspecified operation.

Burst Length

Read and write accesses to the SDRAM are burst oriented, with the burst length being programmable, as shown in Figure 1. The burst length determines the maximum number of column locations that can be accessed for a given READ or WRITE command. Burst lengths of 1, 2, 4 or 8 locations are available for both the sequential and the interleaved burst types, and a fullpage burst is available for the sequential type. The full-page burst is used in conjunction with the BURST TERMINATE command to generate arbitrary burst lengths.

Reserved states should not be used, as unknown operation or incompatibility with future versions may result.

When a READ or WRITE command is issued, a block of columns equal to the burst length is effectively selected. All accesses for that burst take place within this block, meaning that the burst will wrap within the block if a boundary is reached. The block is uniquely selected by A1–A8 (x16) when the burst length is set to two; by A2–A8 (x16) when the burst length is set to four; and by A3–A8 (x16) when the burst length is set to eight. The remaining (least significant) address bit(s) is (are) used to select the starting location within the block. Full-page bursts wrap within the page if the boundary is reached.

256Mb: x16

MOBILE SDRAM



Burst Type

Accesses within a given burst may be programmed to be either sequential or interleaved; this is referred to as the burst type and is selected via bit M3.

The ordering of accesses within a burst is determined by the burst length, the burst type and the starting column address, as shown in Table 1.

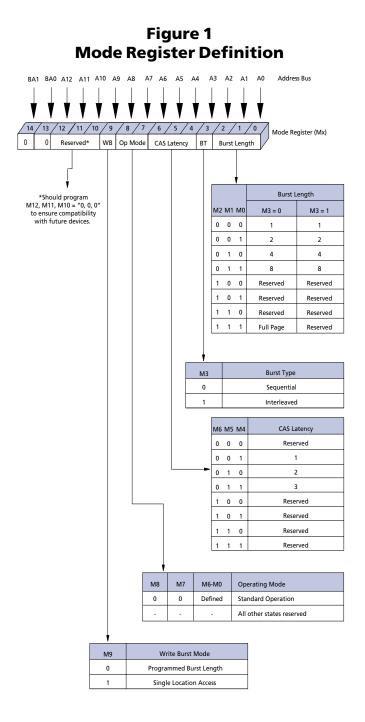


Table 1 Burst Definition

Burst	Starti	ng Co	olumn	Order of Access	es Within a Burst
Length	Address			Type = Sequential	Type = Interleaved
			A0		
2			0	0-1	0-1
2			1	1-0	1-0
		A1	A0		
		0	0	0-1-2-3	0-1-2-3
4		0	1	1-2-3-0	1-0-3-2
-		1	0	2-3-0-1	2-3-0-1
		1	1	3-0-1-2	3-2-1-0
	A2	A1	A0		
	0	0	0	0-1-2-3-4-5-6-7	0-1-2-3-4-5-6-7
	0	0	1	1-2-3-4-5-6-7-0	1-0-3-2-5-4-7-6
	0	1	0	2-3-4-5-6-7-0-1	2-3-0-1-6-7-4-5
8	0	1	1	3-4-5-6-7-0-1-2	3-2-1-0-7-6-5-4
	1	0	0	4-5-6-7-0-1-2-3	4-5-6-7-0-1-2-3
	1	0	1	5-6-7-0-1-2-3-4	5-4-7-6-1-0-3-2
	1	1	0	6-7-0-1-2-3-4-5	6-7-4-5-2-3-0-1
	1	1	1	7-0-1-2-3-4-5-6	7-6-5-4-3-2-1-0
Full	n	= A0	-8	Cn, Cn + 1, Cn + 2	
Page		- 70	0	Cn + 3, Cn + 4	Not Supported
(y)	(100	ation	0.11	Cn - 1,	Nocoupported
(y)	(location 0-y)		ю-у)	Gn	

NOTE: 1. For full-page accesses: y = 512 (x16)

- 2. For a burst length of two, A1-A8 (x16) select the block-of-two burst; A0 selects the starting column within the block.
- 3. For a burst length of four, A2-A8 (x16) select the block-of-four burst; A0-A1 select the starting column within the block.
- 4. For a burst length of eight, A3-A8 (x16) select the block-of-eight burst; A0-A2 select the starting column within the block.
- 5. For a full-page burst, the full row is selected and A0-A8 (x16) select the starting column.
- 6. Whenever a boundary of the block is reached within a given sequence above, the following access wraps within the block.
- 7. For a burst length of one, A0-A8 (x16) select the unique column to be accessed, and mode register bit M3 is ignored.




CAS Latency

The CAS latency is the delay, in clock cycles, between the registration of a READ command and the availability of the first piece of output data. The latency can be set to two or three clocks.

If a READ command is registered at clock edge n, and the latency is m clocks, the data will be available by clock edge n + m. The DQs will start driving as a result of the clock edge one cycle earlier (n + m - 1), and provided that the relevant access times are met, the data will be valid by clock edge n + m. For example, assuming that the clock cycle time is such that all relevant access times are met, if a READ command is registered at T0 and the latency is programmed to two clocks, the DQs will start driving after T1 and the data will be valid by T2, as shown in Figure 2. Table 2 below indicates the operating frequencies at which each CAS latency setting can be used.

Figure 2 CAS Latency

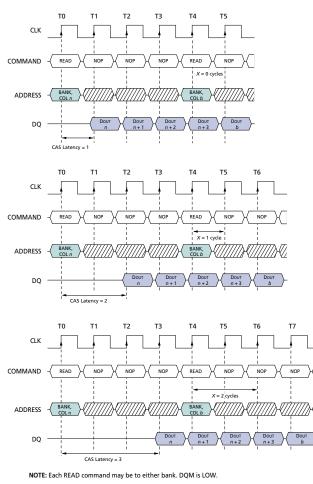

DON'T CARE

256Mb: x16 MOBILE SDRAM

Reserved states should not be used as unknown operation or incompatibility with future versions may result.

Operating Mode

The normal operating mode is selected by setting M7 and M8 to zero; the other combinations of values for M7 and M8 are reserved for future use and/or test modes. The programmed burst length applies to both READ and WRITE bursts.

Test modes and reserved states should not be used because unknown operation or incompatibility with future versions may result.


Write Burst Mode

When M9 = 0, the burst length programmed via M0-M2 applies to both READ and WRITE bursts; when M9 = 1, the programmed burst length applies to READ bursts, but write accesses are single-location (nonburst) accesses.

Table 2 CAS Latency

	ALLOWABLE OPERATING FREQUENCY (MHz)							
SPEED	CASCASCASLATENCY = 1LATENCY = 2LATENCY							
- 8	≤ 50	≤ 100	≤ 125					
- 10	≤ 4 0							



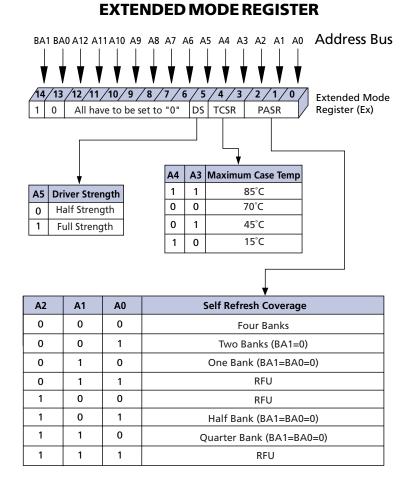

NOTE: 1. E14 and E13 (BA1 and BA0) must be "1, 0" to select the Extended Mode Register (vs. the base Mode Register).

EXTENDED MODE REGISTER

The Extended Mode Register controls the functions beyond those controlled by the Mode Register. These additional functions are special features of the Mobile device. They include Temperature Compensated Self Refresh (TCSR), Partial Array Self Refresh (PASR) and Driver Strength.

The Extended Mode Register is programmed via the Mode Register Set command (BA1=1,BA0=0) and retains the stored information until it is programmed again or the device loses power.

The Extended Mode Register must be programmed with M6 through M12 set to "0." The Extended Mode Register must be loaded when all banks are idle and no bursts are in progress, and the controller must wait the specified time before initiating any subsequent operation. Violating these requirements results in unspecified operation.

TEMPERATURE COMPENSATED SELF REFRESH

Temperature Compensated Self Refresh allows the controller to program the Refresh interval during SELF REFRESH mode, according to the case temperature of the mobile device. This allows great power savings during SELF REFRESH during most operating temperature ranges.

Every cell in the DRAM requires refreshing due to the capacitor losing its charge over time. The refresh rate is dependent on temperature. At higher temperatures a capacitor loses charge quicker than at lower temperatures, requiring the cells to be refreshed more often. Historically, during Self Refresh, the refresh rate has been set to accommodate the worst case, or highest temperature range expected.

256Mb: x16

MOBILE SDRAM



Thus, during ambiant temperatures, the power consumed during refresh was unnecessarily high, because the refresh rate was set to accommodate the higher temperatures. Setting M4 and M3, allow the DRAM to accomodate more specific temperature regions during SELF REFRESH. There are four temperature settings, which will vary the SELF REFRESH current according to the selected temperature. This selectable refresh rate will save power when the DRAM is operating at normal temperatures.

PARTIAL ARRAY SELF REFRESH

For further power savings during SELF REFRESH, the PASR feature allows the controller to select the amount of memory that will be refreshed during SELF REFRESH. The refresh options are four banks, two banks (0 and 1), one bank (0), half bank (0 with internal row address A12=0), and quarter bank (0 with internal row address A12=0 and A11=0). WRITE and READ commands can still occur during standard operation, but only the selected banks will be refreshed during SELF REFRESH. Data in banks that are disabled will be lost.

DEEP POWER DOWN

Deep Power Down is an operating mode to achieve maximum power reduction by eliminating the power of the whole memory array of the devices. Data will not be retained once the device enters Deep Power Down Mode.

This mode is entered by having all banks idle then / CS and /WE held low with /RAS and /CAS held high at the rising edge of the clock, while CKE is low. This mode is exited by asserting CKE high.

DRIVER STRENGTH

Extended mode register bit A5 must be used to set the DQ output drive strength. Full drive strength is suitable for systems in which the SDRAM component is placed on a module. Half drive strength is recommended for point-to-point or other applications with reduced output loading.

The half-strength can be used for point-to-point applications. Point-to-point systems are usually lightly loaded with a memory controller accessing one to eight SDRAM components on the memory bus with module stubs between these devices. Driver strength chosen should be load dependent. The lighter the load, the less driver strength that is needed for the outputs.



Commands

Truth Table 1 provides a quick reference of available commands. This is followed by a written description of each command. Three additional Truth Tables appear following the Operation section; these tables provide current state/next state information.

TRUTH TABLE 1 – COMMANDS AND DQM OPERATION

(Notes: 1)

NAME (FUNCTION)	CS#	RAS#	CAS#	WE#	DQM	ADDR	DQs	NOTES
COMMAND INHIBIT (NOP)	Н	Х	Х	Х	X	Х	Х	
NO OPERATION (NOP)	L	н	н	н	x	Х	Х	
ACTIVE (Select bank and activate row)	L	L	н	Н	X	Bank/Row	Х	3
READ (Select bank and column, and start READ burst) L	н	L	Н	L/H ⁸	Bank/Col	Х	4
WRITE (Select bank and column, and start WRITE bur	st) L	н	L	L	L/H ⁸	Bank/Col	Valid	4
DEEP POWER DOWN	L	н	н	L	X	Х	Х	9
PRECHARGE (Deactivate row in bank or banks)	L	L	Н	L	X	Code	Х	5
AUTO REFRESH or SELF REFRESH (Enter self refresh mode)	L	L	L	Н	X	X	Х	6, 7
LOAD MODE REGISTER	L	L	L	L	Х	Op-Code	Х	2
Write Enable/Output Enable	-	-	_	_	L	_	Active	8
Write Inhibit/Output High-Z	_	-	_	-	н	_	High-Z	8

NOTE: 1. CKE is HIGH for all commands shown except SELF REFRESH.

2. A0-A11 define the op-code written to the mode register, and A12 should be driven LOW.

3. A0-A12 provide row address, and BA0, BA1 determine which bank is made active.

- 4. A0-A8 (x16) provide column address; A10 HIGH enables the auto precharge feature (nonpersistent), while A10 LOW disables the auto precharge feature; BA0, BA1 determine which bank is being read from or written to.
- 5. A10 LOW: BA0, BA1 determine the bank being precharged. A10 HIGH: All banks precharged and BA0, BA1 are "Don't Care."
- 6. This command is AUTO REFRESH if CKE is HIGH, SELF REFRESH if CKE is LOW.
- 7. Internal refresh counter controls row addressing; all inputs and I/Os are "Don't Care" except for CKE.

8. Activates or deactivates the DQs during WRITEs (zero-clock delay) and READs (two-clock delay).

9. Standard SDRAM parts assign this command sequence as Burst Terminate. For Mobile SDRAM parts, the Burst Terminate command is assigned to the Deep Power Down function.



COMMAND INHIBIT

The COMMAND INHIBIT function prevents new commands from being executed by the SDRAM, regardless of whether the CLK signal is enabled. The SDRAM is effectively deselected. Operations already in progress are not affected.

NO OPERATION (NOP)

The NO OPERATION (NOP) command is used to perform a NOP to an SDRAM which is selected (CS# is LOW). This prevents unwanted commands from being registered during idle or wait states. Operations already in progress are not affected.

LOAD MODE REGISTER

The mode register is loaded via inputs A0-A12 (A13 and A14 should be driven LOW to prevent Extended Mode Register.) See mode register heading in the Register Definition section. The LOAD MODE REGISTER command can only be issued when all banks are idle, and a subsequent executable command cannot be issued until ^tMRD is met.

ACTIVE

The ACTIVE command is used to open (or activate) a row in a particular bank for a subsequent access. The value on the BA0, BA1 inputs selects the bank, and the address provided on inputs A0-A12 selects the row. This row remains active (or open) for accesses until a PRECHARGE command is issued to that bank. A PRECHARGE command must be issued before opening a different row in the same bank.

READ

The READ command is used to initiate a burst read access to an active row. The value on the BA0, BA1 inputs selects the bank, and the address provided on inputs A0-A8 (x16) selects the starting column location. The value on input A10 determines whether or not auto precharge is used. If auto precharge is selected, the row being accessed will be precharged at the end of the READ burst; if auto precharge is not selected, the row will remain open for subsequent accesses. Read data appears on the DQs subject to the logic level on the DQM inputs two clocks earlier. If a given DQM signal was registered HIGH, the corresponding DQs will be High-Z two clocks later; if the DQM signal was registered LOW, the DQs will provide valid data.

WRITE

The WRITE command is used to initiate a burst write access to an active row. The value on the BA0, BA1 inputs selects the bank, and the address provided on

256Mb: x16 MOBILE SDRAM

inputs A0-A8 (x16) selects the starting column location. The value on input A10 determines whether or not auto precharge is used. If auto precharge is selected, the row being accessed will be precharged at the end of the WRITE burst; if auto precharge is not selected, the row will remain open for subsequent accesses. Input data appearing on the DQs is written to the memory array subject to the DQM input logic level appearing coincident with the data. If a given DQM signal is registered LOW, the corresponding data will be written to memory; if the DQM signal is registered HIGH, the corresponding data inputs will be ignored, and a WRITE will not be executed to that byte/column location.

PRECHARGE

The PRECHARGE command is used to deactivate the open row in a particular bank or the open row in all banks. The bank(s) will be available for a subsequent row access a specified time (^tRP) after the PRECHARGE command is issued. Input A10 determines whether one or all banks are to be precharged, and in the case where only one bank is to be precharged, inputs BA0, BA1 select the bank. Otherwise BA0, BA1 are treated as "Don't Care." Once a bank has been precharged, it is in the idle state and must be activated prior to any READ or WRITE commands being issued to that bank.

AUTO PRECHARGE

Auto precharge is a feature which performs the same individual-bank PRECHARGE function described above, without requiring an explicit command. This is accomplished by using A10 to enable auto precharge in conjunction with a specific READ or WRITE command. A PRECHARGE of the bank/row that is addressed with the READ or WRITE command is automatically performed upon completion of the READ or WRITE burst, except in the full-page burst mode, where AUTO PRECHARGE does not apply. Auto precharge is nonpersistent in that it is either enabled or disabled for each individual READ or WRITE command.

Auto precharge ensures that the precharge is initiated at the earliest valid stage within a burst. The user must not issue another command to the same bank until the precharge time (^tRP) is completed. This is determined as if an explicit PRECHARGE command was issued at the earliest possible time, as described for each burst type in the Operation section of this data sheet.

AUTO REFRESH

AUTO REFRESH is used during normal operation of the SDRAM and is analogous to CAS#-BEFORE-RAS# (CBR) REFRESH in conventional DRAMs. This



command is nonpersistent, so it must be issued each time a refresh is required. All active banks must be precharged prior to issuing an AUTO REFRESH command. The AUTO REFRESH command should not be issued until the minimum ^tRP has been met after the PRECHARGE command as shown in the operations section.

The addressing is generated by the internal refresh controller. This makes the address bits "Don't Care" during an AUTO REFRESH command. The 256Mb SDRAM requires 8,192 AUTO REFRESH cycles every 64ms (^tREF), regardless of width option. Providing a distributed AUTO REFRESH command every 7.81µs will meet the refresh requirement and ensure that each row is refreshed. Alternatively, 8,192 AUTO REFRESH commands can be issued in a burst at the minimum cycle rate (^tRC), once every 64ms.

SELF REFRESH

The SELF REFRESH command can be used to retain data in the SDRAM, even if the rest of the system is powered down. When in the self refresh mode, the SDRAM retains data without external clocking.

256Mb: x16 MOBILE SDRAM

The SELF REFRESH command is initiated like an AUTO REFRESH command except CKE is disabled (LOW). Once the SELF REFRESH command is registered, all the inputs to the SDRAM become "Don't Care" with the exception of CKE, which must remain LOW.

Once self refresh mode is engaged, the SDRAM provides its own internal clocking, causing it to perform its own AUTO REFRESH cycles. The SDRAM must remain in self refresh mode for a minimum period equal to ^tRAS and may remain in self refresh mode for an indefinite period beyond that.

The procedure for exiting self refresh requires a sequence of commands. First, CLK must be stable (stable clock is defined as a signal cycling within timing constraints specified for the clock pin) prior to CKE going back HIGH. Once CKE is HIGH, the SDRAM must have NOP commands issued (a minimum of two clocks) for ^tXSR because time is required for the completion of any internal refresh in progress.

Upon exiting the self refresh mode, AUTO REFRESH commands must be issued every 7.81µs or less as both SELF REFRESH and AUTO REFRESH utilize the row refresh counter.



Operation BANK/ROW ACTIVATION

Before any READ or WRITE commands can be issued to a bank within the SDRAM, a row in that bank must be "opened." This is accomplished via the AC-TIVE command, which selects both the bank and the row to be activated (see Figure 3).


After opening a row (issuing an ACTIVE command), a READ or WRITE command may be issued to that row, subject to the ^tRCD specification. ^tRCD (MIN) should be divided by the clock period and rounded up to the next whole number to determine the earliest clock edge after the ACTIVE command on which a READ or WRITE command can be entered. For example, a ^tRCD specification of 20ns with a 125 MHz clock (8ns period) results in 2.5 clocks, rounded to 3. This is reflected in Figure 4, which covers any case where $2 < {^tRCD (MIN)/{^tCK} \le 3}$. (The same procedure is used to convert other specification limits from time units to clock cycles.)

A subsequent ACTIVE command to a different row in the same bank can only be issued after the previous active row has been "closed" (precharged). The minimum time interval between successive ACTIVE commands to the same bank is defined by ${}^{\rm t}{\rm RC}$.


A subsequent ACTIVE command to another bank can be issued while the first bank is being accessed, which results in a reduction of total row-access overhead. The minimum time interval between successive ACTIVE commands to different banks is defined by ^tRRD.

256Mb: x16 MOBILE SDRAM

Figure 3 Activating a Specific Row in a Specific Bank

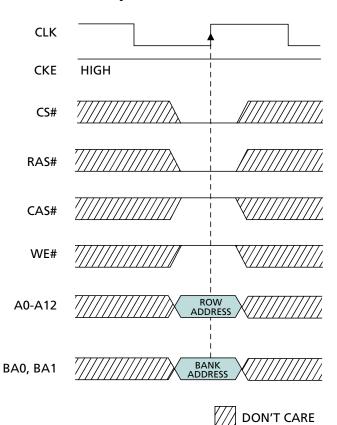



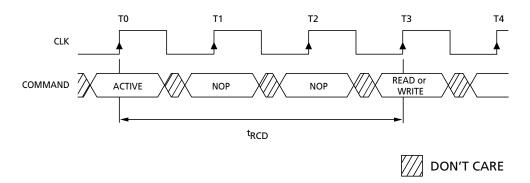



READs

READ bursts are initiated with a READ command, as shown in Figure 5.

The starting column and bank addresses are provided with the READ command, and auto precharge is either enabled or disabled for that burst access. If auto precharge is enabled, the row being accessed is precharged at the completion of the burst. For the generic READ commands used in the following illustrations, auto precharge is disabled.

During READ bursts, the valid data-out element from the starting column address will be available following the CAS latency after the READ command. Each subsequent data-out element will be valid by the next positive clock edge. Figure 6 shows general timing for each possible CAS latency setting.

PRELIMINARY

256Mb: x16 MOBILE SDRAM

Upon completion of a burst, assuming no other commands have been initiated, the DQs will go High-Z. A full-page burst will continue until terminated. (At the end of the page, it will wrap to the start address and continue.)

Data from any READ burst may be truncated with a subsequent READ command, and data from a fixed-length READ burst may be immediately followed by data from a READ command. In either case, a continuous flow of data can be maintained. The first data element from the new burst follows either the last element of a completed burst or the last desired data element of a longer burst that is being truncated. The new READ command should be issued x cycles before the clock edge at which the last desired data element is valid, where x equals the CAS latency minus one.


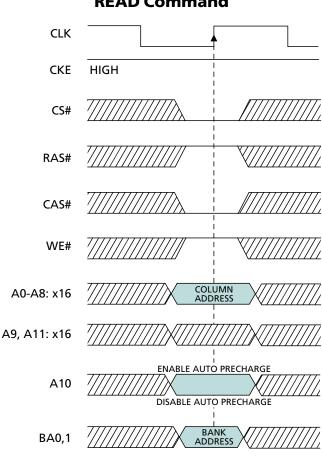


Figure 5 READ Command


Figure 6 CAS Latency



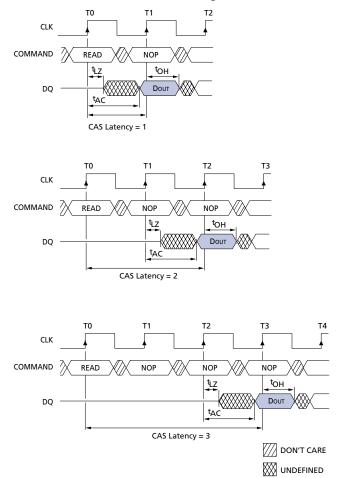

This is shown in Figure 7 for CAS latencies of two and three; data element n + 3 is either the last of a burst of four or the last desired of a longer burst. The 256Mb SDRAM uses a pipelined architecture and therefore does not require the 2n rule associated with a prefetch


architecture. A READ command can be initiated on any clock cycle following a previous READ command. Fullspeed random read accesses can be performed to the same bank, as shown in Figure 8, or each subsequent READ may be performed to a different bank.

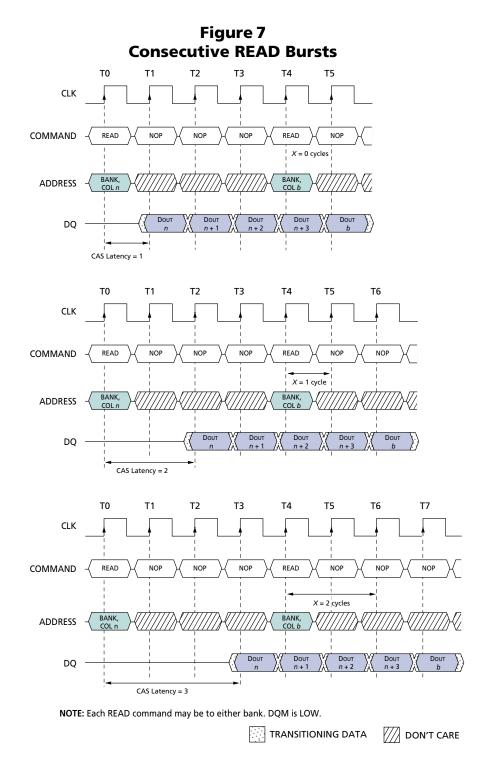



256Mb: x16 MOBILE SDRAM

Figure 8 Random READ Accesses

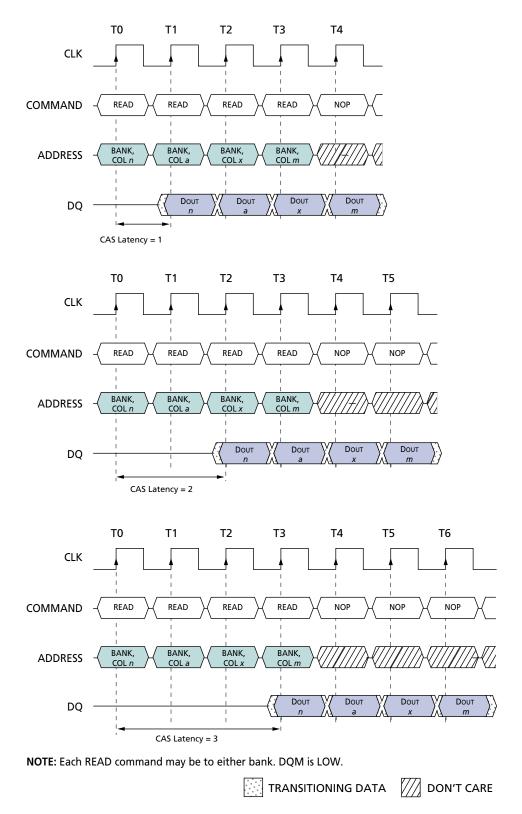




Data from any READ burst may be truncated with a subsequent WRITE command, and data from a fixed-length READ burst may be immediately followed by data from a WRITE command (subject to bus turn-around limitations). The WRITE burst may be initiated on the clock edge immediately following the last (or last desired) data element from the READ burst, provided that I/O contention can be avoided. In a given system design, there may be a possibility that the device driving the input data will go Low-Z before the SDRAM DQs go High-Z. In this case, at least a single-cycle delay should occur between the last read data and the WRITE command.

The DQM input is used to avoid I/O contention, as shown in Figures 9 and 10. The DQM signal must be asserted (HIGH) at least two clocks prior to the WRITE command (DQM latency is two clocks for output

256Mb: x16 MOBILE SDRAM


buffers) to suppress data-out from the READ. Once the WRITE command is registered, the DQs will go High-Z (or remain High-Z), regardless of the state of the DQM signal; provided the DQM was active on the clock just prior to the WRITE command that truncated the READ command. If not, the second WRITE will be an invalid WRITE. For example, if DQM was LOW during T4 in Figure 10, then the WRITEs at T5 and T7 would be valid, while the WRITE at T6 would be invalid.

The DQM signal must be de-asserted prior to the WRITE command (DQM latency is zero clocks for input buffers) to ensure that the written data is not masked. Figure 9 shows the case where the clock frequency allows for bus contention to be avoided without adding a NOP cycle, and Figure 10 shows the case where the additional NOP is needed.

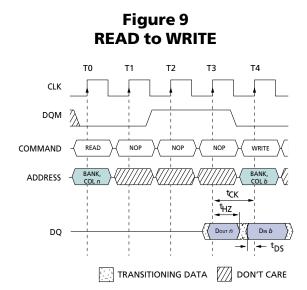

NOTE: A CAS latency of three is used for illustration. The READ command may be to any bank, and the WRITE command may be to any bank. If a burst of one is used, then DQM is not required.

Figure 10 READ to WRITE With Extra Clock Cycle

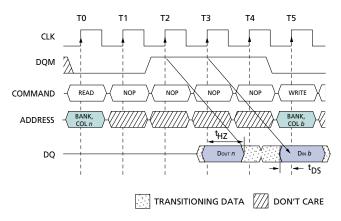

NOTE: A CAS latency of three is used for illustration. The READ command may be to any bank, and the WRITE command may be to any bank.

256Mb: x16 Mobile SDRAM MobileRamY26L_B.p65 – Pub. 04/03



A fixed-length READ burst may be followed by, or truncated with, a PRECHARGE command to the same bank (provided that auto precharge was not activated), and a full-page burst may be truncated with a PRECHARGE command to the same bank. The PRECHARGE command should be issued x cycles before the clock edge at which the last desired data element is valid, where x equals the CAS latency minus one. This is shown in Figure 11 for each possible CAS latency; data element n + 3 is either the last of a burst of 256Mb: x16 MOBILE SDRAM

four or the last desired of a longer burst. Following the PRECHARGE command, a subsequent command to the same bank cannot be issued until ^tRP is met. Note that part of the row precharge time is hidden during the access of the last data element(s).

In the case of a fixed-length burst being executed to completion, a PRECHARGE command issued at the optimum time (as described above) provides the same operation that would result from the same fixed-length burst with auto precharge. The disadvantage of the

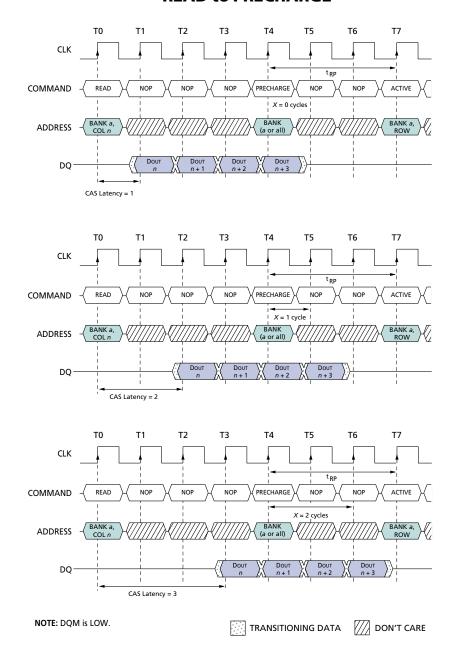


Figure 11 READ to PRECHARGE

256Mb: x16

MOBILE SDRAM



PRECHARGE command is that it requires that the command and address buses be available at the appropriate time to issue the command; the advantage of the PRECHARGE command is that it can be used to truncate fixed-length or full-page bursts.

Full-page READ bursts can be truncated with the BURST TERMINATE command, and fixed-length READ bursts may be truncated with a BURST TERMINATE command, provided that auto precharge was not activated. The BURST TERMINATE command should be issued x cycles before the clock edge at which the last desired data element is valid, where x equals the CAS latency minus one. This is shown in Figure 12 for each possible CAS latency; data element n + 3 is the last desired data element of a longer burst.

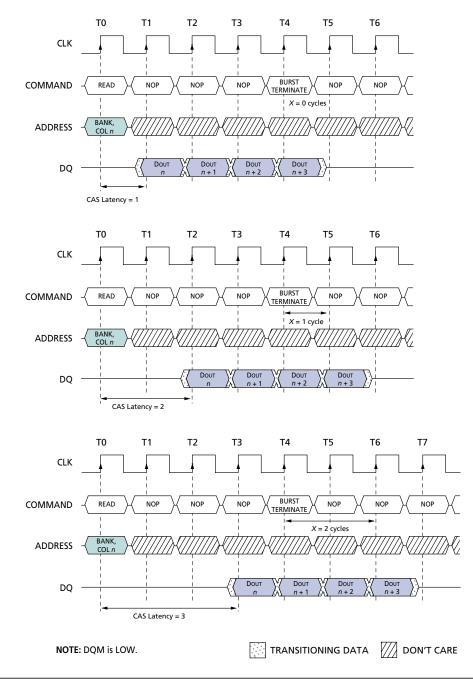


Figure 12 Terminating a READ Burst

256Mb: x16

MOBILE SDRAM



WRITEs

WRITE bursts are initiated with a WRITE command, as shown in Figure 13.

The starting column and bank addresses are provided with the WRITE command, and auto precharge is either enabled or disabled for that access. If auto precharge is enabled, the row being accessed is precharged at the completion of the burst. For the generic WRITE commands used in the following illustrations, auto precharge is disabled.

During WRITE bursts, the first valid data-in element will be registered coincident with the WRITE command. Subsequent data elements will be registered on each successive positive clock edge. Upon completion of a fixed-length burst, assuming no other commands have been initiated, the DQs will remain High-Z and any additional input data will be ignored (see Figure 14). A full-page burst will continue until terminated. (At the end of the page, it will wrap to the start address and continue.)

Data for any WRITE burst may be truncated with a subsequent WRITE command, and data for a fixed-length WRITE burst may be immediately followed by data for a WRITE command. The new WRITE command can be issued on any clock following the previous WRITE command, and the data provided coincident with the new command applies to the new command. An ex-

Figure 13

ample is shown in Figure 15. Data n + 1 is either the last of a burst of two or the last desired of a longer burst. The 256Mb SDRAM uses a pipelined architecture and therefore does not require the 2n rule associated with a prefetch architecture. A WRITE command can be initiated on any clock cycle following a previous WRITE command. Full-speed random write accesses within a page can be performed to the same bank, as shown in Figure 16, or each subsequent WRITE may be performed to a different bank.

Figure 14 WRITE Burst


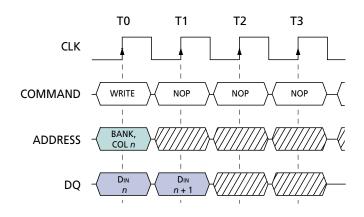


Figure 15 WRITE to WRITE




256Mb: x16 Mobile SDRAM MobileRamY26L_B.p65 – Pub. 04/03

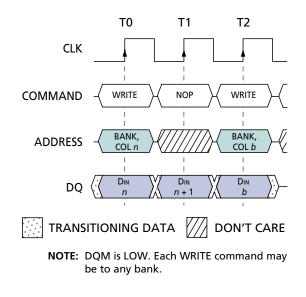

Data for any WRITE burst may be truncated with a subsequent READ command, and data for a fixed-length WRITE burst may be immediately followed by a READ command. Once the READ command is registered, the data inputs will be ignored, and WRITEs will not be executed. An example is shown in Figure 17. Data n + 1 is either the last of a burst of two or the last desired of a longer burst.


Data for a fixed-length WRITE burst may be followed by, or truncated with, a PRECHARGE command to the same bank (provided that auto precharge was not activated), and a full-page WRITE burst may be truncated with a PRECHARGE command to the same bank. The PRECHARGE command should be issued ^tWR after the clock edge at which the last desired input data element is registered. The auto precharge mode

Figure 16

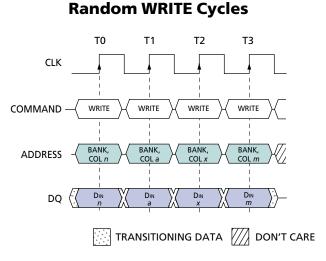

NOTE: Each WRITE command may be to any bank. DQM is LOW.

Figure 17

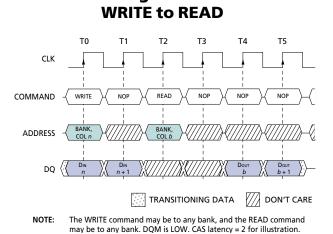


256Mb: x16 MOBILE SDRAM

requires a ^tWR of at least one clock plus time, regardless of frequency. In addition, when truncating a WRITE burst, the DQM signal must be used to mask input data for the clock edge prior to, and the clock edge coincident with, the PRECHARGE command. An example is shown in Figure 18. Data n + 1 is either the last of a burst of two or the last desired of a longer burst. Following the PRECHARGE command, a subsequent command to the same bank cannot be issued until ^tRP is met. The precharge can be issued coincident with the first coincident clock edge (T2 in Figure 18) on an A1 Version and with the second clock on an A2 Version (Figure 18.)

In the case of a fixed-length burst being executed to completion, a PRECHARGE command issued at the optimum time (as described above) provides the same operation that would result from the same fixed-length burst with auto precharge. The disadvantage of the PRECHARGE command is that it requires that the command and address buses be available at the appropriate time to issue the command; the advantage of the PRECHARGE command is that it can be used to truncate fixed-length or full-page bursts.

Figure 18 WRITE to PRECHARGE

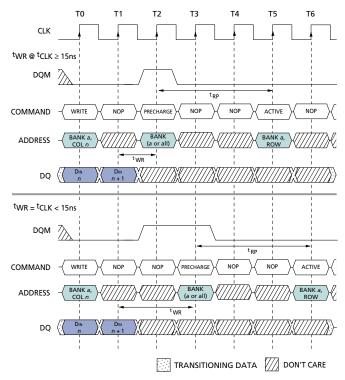

NOTE: DQM could remain LOW in this example if the WRITE burst is a fixed length of two.

256Mb: x16 Mobile SDRAM MobileRamY26L_B.p65 – Pub. 04/03



Fixed-length or full-page WRITE bursts can be truncated with the BURST TERMINATE command. When truncating a WRITE burst, the input data applied coincident with the BURST TERMINATE command will be ignored. The last data written (provided that DQM is LOW at that time) will be the input data applied one clock previous to the BURST TERMINATE command. This is shown in Figure 19, where data n is the last desired data element of a longer burst.

Figure 19 Terminating a WRITE Burst


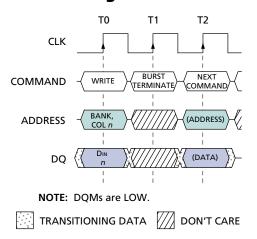


Figure 20 PRECHARGE Command

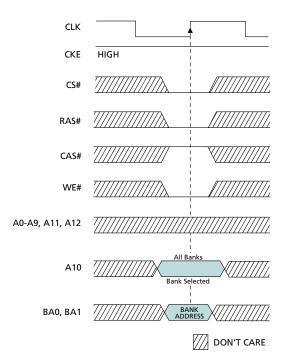

256Mb: x16 MOBILE SDRAM

PRECHARGE


The PRECHARGE command (see Figure 20) is used to deactivate the open row in a particular bank or the open row in all banks. The bank(s) will be available for a subsequent row access some specified time (^tRP) after the PRECHARGE command is issued. Input A10 determines whether one or all banks are to be precharged, and in the case where only one bank is to be precharged, inputs BA0, BA1 select the bank. When all banks are to be precharged, inputs BA0, BA1 are treated as "Don't Care." Once a bank has been precharged, it is in the idle state and must be activated prior to any READ or WRITE commands being issued to that bank.

POWER-DOWN

Power-down occurs if CKE is registered LOW coincident with a NOP or COMMAND INHIBIT when no accesses are in progress. If power-down occurs when all banks are idle, this mode is referred to as precharge power-down; if power-down occurs when there is a row active in any bank, this mode is referred to as active power-down. Entering power-down deactivates the input and output buffers, excluding CKE, for maximum power savings while in standby. CKE must be held low during power down. The device may not remain in the power-down state longer than the refresh period (64ms) since no refresh operations are performed in this mode.

The power-down state is exited by registering a NOP or COMMAND INHIBIT and CKE HIGH at the desired clock edge (meeting ^tCKS). See Figure 21.



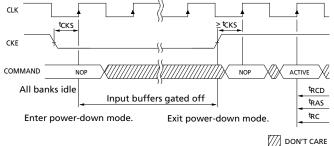

256Mb: x16



DEEP POWER-DOWN

Deep Power Down mode is a maximum power savings feature achieved by shutting off the power to the entire memory array of the device. Data will not be retained once Deep Power Down mode is executed. Deep Power Down mode is entered by having all banks idle then /CS and /WE held low with /RAS and /CAS high at the rising edge of the clock, while CKE is low. CKE must be held low during Deep Power Down.

In order to exit Deep Power Down mode, CKE must be asserted high. After exiting, the following sequence is needed in order to enter a new command. Maintain NOP input conditions for a minimum of 200us. Issue PRECHARGE commands for all banks. Issue eight or more AUTOREFRESH commands. Issue a MODE REG-ISTER set command to initialize mode register. Issue a EXTENDED MODE REGISTER set command to initialize the extended mode register. See Figure 21A.

MOBILE SDRAM

CLOCK SUSPEND

The clock suspend mode occurs when a column access/burst is in progress and CKE is registered LOW. In the clock suspend mode, the internal clock is deactivated, "freezing" the synchronous logic.

For each positive clock edge on which CKE is sampled LOW, the next internal positive clock edge is suspended. Any command or data present on the input pins at the time of a suspended internal clock edge is ignored; any data present on the DQ pins remains driven; and burst counters are not incremented, as long as the clock is suspended. (See examples in Figures 22 and 23.)

Clock suspend mode is exited by registering CKE HIGH; the internal clock and related operation will resume on the subsequent positive clock edge.


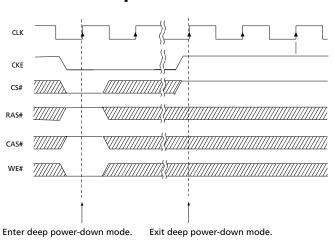


Figure 21A Deep Power-Down

Figure 22 Clock Suspend During WRITE Burst




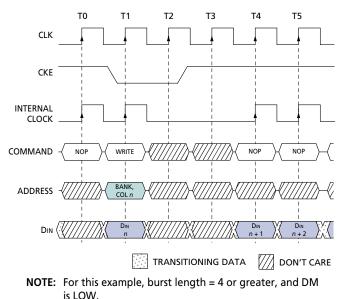

BURST READ/SINGLE WRITE

The burst read/single write mode is entered by programming the write burst mode bit (M9) in the mode register to a logic 1. In this mode, all WRITE commands result in the access of a single column location (burst of one), regardless of the programmed burst length. READ commands access columns according to the programmed burst length and sequence, just as in the normal mode of operation (M9 = 0).

256Mb: x16 MOBILE SDRAM

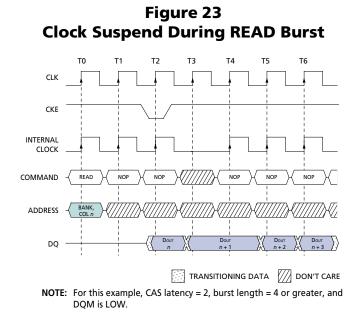



CONCURRENT AUTO PRECHARGE

An access command (READ or WRITE) to another bank while an access command with auto precharge enabled is executing is not allowed by SDRAMs, unless the SDRAM supports CONCURRENT AUTO PRECHARGE. Micron SDRAMs support CONCURRENT AUTO PRECHARGE. Four cases where CONCURRENT AUTO PRECHARGE occurs are defined below.

READ with Auto Precharge

1. Interrupted by a READ (with or without auto precharge): A READ to bank *m* will interrupt a READ



on bank *n*, CAS latency later. The PRECHARGE to bank *n* will begin when the READ to bank *m* is registered (Figure 24).

2. Interrupted by a WRITE (with or without auto precharge): A WRITE to bank *m* will interrupt a READ on bank *n* when registered. DQM should be used two clocks prior to the WRITE command to prevent bus contention. The PRECHARGE to bank *n* will begin when the WRITE to bank *m* is registered (Figure 25).

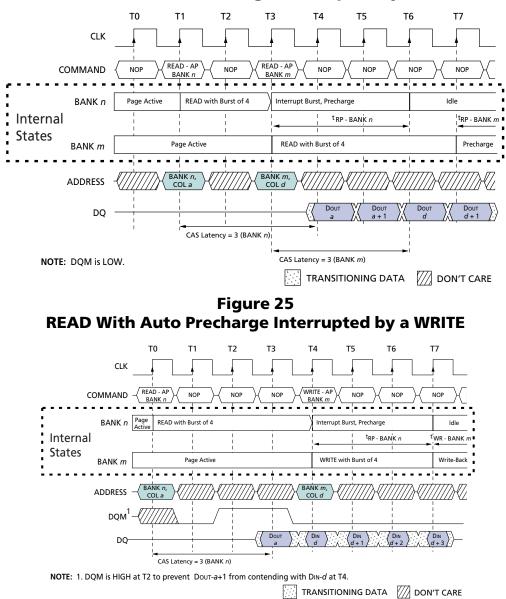


Figure 24 READ With Auto Precharge Interrupted by a READ



WRITE with Auto Precharge

- 3. Interrupted by a READ (with or without auto precharge): A READ to bank m will interrupt a WRITE on bank n when registered, with the data-out appearing CAS latency later. The PRECHARGE to bank n will begin after ^tWR is met, where ^tWR begins when the READ to bank m is registered. The last valid WRITE to bank n will be data-in registered one clock prior to the READ to bank m (Figure 26).
- 4. Interrupted by a WRITE (with or without auto precharge): A WRITE to bank m will interrupt a WRITE on bank n when registered. The PRECHARGE to bank n will begin after ^tWR is met, where ^tWR begins when the WRITE to bank m is registered. The last valid data WRITE to bank n will be data registered one clock prior to a WRITE to bank m (Figure 27).


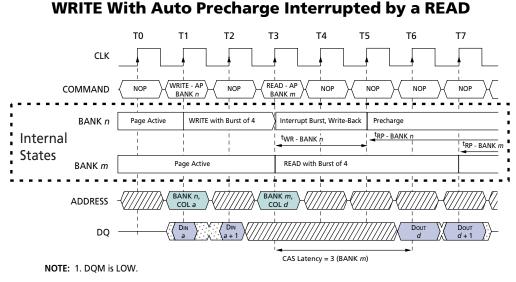


Figure 26

TRANSITIONING DATA DON'T CARE

Figure 27 WRITE With Auto Precharge Interrupted by a WRITE



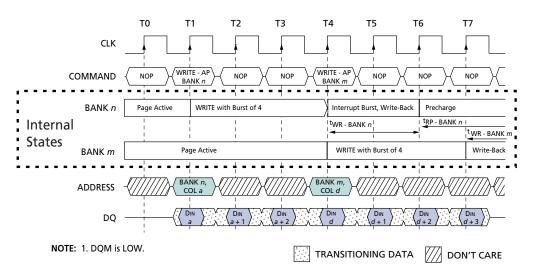

TRUTH TABLE 2 – CKE

(Notes: 1-4)

CKE _{n-1}	CKEn	CURRENT STATE	COMMAND _n	ACTIONn	NOTES
L	L	Power-Down	Х	Maintain Power-Down	
		Self Refresh	Х	Maintain Self Refresh	
		Clock Suspend	Х	Maintain Clock Suspend	
L	Н	Power-Down	COMMAND INHIBIT or NOP	Exit Power-Down	5
		Deep Power-Down	х	Exit Deep Power-Down	8
		Self Refresh	COMMAND INHIBIT or NOP	Exit Self Refresh	6
		Clock Suspend	Х	Exit Clock Suspend	7
н	L	All Banks Idle	COMMAND INHIBIT or NOP	Power-Down Entry	
		All Banks Idle	DEEP POWER DOWN	Deep Power-Down Entry	8
		All Banks Idle	AUTO REFRESH	Self Refresh Entry	
		Reading or Writing	VALID	Clock Suspend Entry	
Н	Н		See Truth Table 3		

NOTE: 1. CKE_n is the logic state of CKE at clock edge *n*; CKE_{n-1} was the state of CKE at the previous clock edge.

- 2. Current state is the state of the SDRAM immediately prior to clock edge n.
- 3. COMMAND_n is the command registered at clock edge *n*, and ACTION_n is a result of COMMAND_n.
- 4. All states and sequences not shown are illegal or reserved.
- 5. Exiting power-down at clock edge n will put the device in the all banks idle state in time for clock edge n + 1 (provided that ^tCKS is met).
- 6. Exiting self refresh at clock edge *n* will put the device in the all banks idle state once ^tXSR is met. COMMAND INHIBIT or NOP commands should be issued on any clock edges occurring during the ^tXSR period. A minimum of two NOP commands must be provided during ^tXSR period.
- 7. After exiting clock suspend at clock edge n, the device will resume operation and recognize the next command at clock edge n + 1.
- 8. Deep Power-Down is a power savings feature of this Mobile SDRAM device. This command is Burst Terminate on traditional SDRAM components. For Mobile SDRAM devices, this command sequence is assigned to Deep Power Down.



256Mb: x16 MOBILE SDRAM

TRUTH TABLE 3 – CURRENT STATE BANK n, COMMAND TO BANK n

(Notes: 1-6; notes appear below and on next page)

CURRENT STATE	CS#	RAS#	CAS#	WE#	COMMAND (ACTION)	NOTES
Any	Н	Х	X	Х	COMMAND INHIBIT (NOP/Continue previous operation)	
	L	н	Н	Н	NO OPERATION (NOP/Continue previous operation)	
	L	L	н	Н	ACTIVE (Select and activate row)	
Idle	L	L	L	Н	AUTO REFRESH	7
	L	L	L	L	LOAD MODE REGISTER	7
	L	L	н	L	PRECHARGE	11
	L	н	L	Н	READ (Select column and start READ burst)	10
Row Active	L	н	L	L	WRITE (Select column and start WRITE burst)	10
	L	L	н	L	PRECHARGE (Deactivate row in bank or banks)	8
Read	L	н	L	Н	READ (Select column and start new READ burst)	10
(Auto	L	н	L	L	WRITE (Select column and start WRITE burst)	10
Precharge	L	L	н	L	PRECHARGE (Truncate READ burst, start PRECHARGE)	8
Disabled)	L	н	н	L	DEEP POWER DOWN	9
Write	L	н	L	Н	READ (Select column and start READ burst)	10
(Auto	L	н	L	L	WRITE (Select column and start new WRITE burst)	10
Precharge	L	L	Н	L	PRECHARGE (Truncate WRITE burst, start PRECHARGE)	8
Disabled)	L	н	н	L	DEEP POWER DOWN	9

NOTE: 1. This table applies when CKE_{n-1} was HIGH and CKE_n is HIGH (see Truth Table 2) and after ^tXSR has been met (if the previous state was self refresh).

This table is bank-specific, except where noted, i.e., the current state is for a specific bank and the commands shown are those allowed to be issued to that bank when in that state. Exceptions are covered in the notes below.
 Current state definitions:

- 3. Current state definitions:
 - Idle: The bank has been precharged, and tRP has been met.
 - Row Active: A row in the bank has been activated, and ^tRCD has been met. No data bursts/accesses and no register accesses are in progress.
 - Read: A READ burst has been initiated, with auto precharge disabled, and has not yet terminated or been terminated.

Write: A WRITE burst has been initiated, with auto precharge disabled, and has not yet terminated or been terminated.

4. The following states must not be interrupted by a command issued to the same bank. COMMAND INHIBIT or NOP commands, or allowable commands to the other bank should be issued on any clock edge occurring during these states. Allowable commands to the other bank are determined by its current state and Truth Table 3, and according to Truth Table 4.

Precharging:	Starts with registration of a PRECHARGE command and ends when 'RP is met. Once 'RP is met,
	the bank will be in the idle state.
Row Activating:	Starts with registration of an ACTIVE command and ends when ^t RCD is met. Once ^t RCD is met,
	the bank will be in the row active state.
Read w/Auto	
Precharge Enabled:	Starts with registration of a READ command with auto precharge enabled and ends when ^t RP
	has been met. Once 'RP is met, the bank will be in the idle state.
Write w/Auto	
Precharge Enabled:	Starts with registration of a WRITE command with auto precharge enabled and ends when tRP
	has been met. Once 'RP is met, the bank will be in the idle state.





NOTE (continued):

5. The following states must not be interrupted by any executable command; COMMAND INHIBIT or NOP commands must be applied on each positive clock edge during these states.

Refreshing: Starts with registration of an AUTO REFRESH command and ends when traction of the RC is met, the SDRAM will be in the all banks idle state.

Accessing Mode	
Register:	Starts with registration of a LOAD MODE REGISTER command and ends when ^t MRD has been
	met. Once ^t MRD is met, the SDRAM will be in the all banks idle state.
Precharging All:	Starts with registration of a PRECHARGE ALL command and ends when 'RP is met. Once 'RP is
	met, all banks will be in the idle state.
ator and roquancer	not shown are illegal or reserved

- 6. All states and sequences not shown are illegal or reserved.
- 7. Not bank-specific; requires that all banks are idle.
- 8. May or may not be bank-specific; if all banks are to be precharged, all must be in a valid state for precharging.
- 9. Deep Power-Down is a power savings feature of this Mobile SDRAM device. This command is Burst Terminate on traditional SDRAM components. For Mobile SDRAM devices, this command sequence is assigned to Deep Power Down.
- READs or WRITEs listed in the Command (Action) column include READs or WRITEs with auto precharge enabled and READs or WRITEs with auto precharge disabled.
- 11. Does not affect the state of the bank and acts as a NOP to that bank.



256Mb: x16 MOBILE SDRAM

TRUTH TABLE 4 – CURRENT STATE BANK n, COMMAND TO BANK m

(Notes: 1-6; notes appear on next page)

CURRENT STATE	CS#	RAS#	CAS#	WE#	COMMAND (ACTION)	NOTES
Any	Н	Х	Х	Х	COMMAND INHIBIT (NOP/Continue previous operation)	
	L	н	Н	Н	NO OPERATION (NOP/Continue previous operation)	
Idle	Х	Х	Х	Х	Any Command Otherwise Allowed to Bank m	
Row	L	L	Н	н	ACTIVE (Select and activate row)	
Activating,	L	н	L	Н	READ (Select column and start READ burst)	7
Active, or	L	н	L	L	WRITE (Select column and start WRITE burst)	7
Precharging	L	L	Н	L	PRECHARGE	
Read	L	L	Н	Н	ACTIVE (Select and activate row)	
(Auto	L	Н	L	Н	READ (Select column and start new READ burst)	7, 10
Precharge	L	н	L	L	WRITE (Select column and start WRITE burst)	7, 11
Disabled)	L	L	Н	L	PRECHARGE	9
Write	L	L	Н	Н	ACTIVE (Select and activate row)	
(Auto	L	н	L	Н	READ (Select column and start READ burst)	7, 12
Precharge	L	н	L	L	WRITE (Select column and start new WRITE burst)	7, 13
Disabled)	L	L	Н	L	PRECHARGE	9
Read	L	L	Н	Н	ACTIVE (Select and activate row)	
(With Auto	L	н	L	н	READ (Select column and start new READ burst)	7, 8, 14
Precharge)	L	н	L	L	WRITE (Select column and start WRITE burst)	7, 8, 15
	L	L	Н	L	PRECHARGE	9
Write	L	L	Н	Н	ACTIVE (Select and activate row)	
(With Auto	L	Н	L	Н	READ (Select column and start READ burst)	7, 8, 16
Precharge)	L	н	L	L	WRITE (Select column and start new WRITE burst)	7, 8, 17
	L	L	Н	L	PRECHARGE	9

NOTE: 1. This table applies when CKE_{n-1} was HIGH and CKE_n is HIGH (see Truth Table 2) and after ^tXSR has been met (if the previous state was self refresh).

- 2. This table describes alternate bank operation, except where noted; i.e., the current state is for bank *n* and the commands shown are those allowed to be issued to bank *m* (assuming that bank *m* is in such a state that the given command is allowable). Exceptions are covered in the notes below.
- 3. Current state definitions:

	The bank has been precharged, and ^t RP has been met. A row in the bank has been activated, and ^t RCD has been met. No data bursts/accesses and no register accesses are in progress.
Read:	A READ burst has been initiated, with auto precharge disabled, and has not yet terminated or been terminated.
Write:	A WRITE burst has been initiated, with auto precharge disabled, and has not yet terminated or been terminated.
Read w/Auto	
Precharge Enabled:	Starts with registration of a READ command with auto precharge enabled, and ends when ^t RP has been met. Once ^t RP is met, the bank will be in the idle state.
Write w/Auto	
Precharge Enabled:	Starts with registration of a WRITE command with auto precharge enabled, and ends when 'RP has been met. Once 'RP is met, the bank will be in the idle state.



NOTE: (continued)

- 4. AUTO REFRESH, SELF REFRESH and LOAD MODE REGISTER commands may only be issued when all banks are idle.
- 5. A BURST TERMINATE command cannot be issued to another bank; it applies to the bank represented by the current state only.
- 6. All states and sequences not shown are illegal or reserved.
- 7. READs or WRITEs to bank *m* listed in the Command (Action) column include READs or WRITEs with auto precharge enabled and READs or WRITEs with auto precharge disabled.
- 8. CONCURRENT AUTO PRECHARGE: Bank n will initiate the auto precharge command when its burst has been interrupted by bank m's burst.
- 9. Burst in bank *n* continues as initiated.
- 10. For a READ without auto precharge interrupted by a READ (with or without auto precharge), the READ to bank *m* will interrupt the READ on bank n, CAS latency later (Figure 7).
- 11. For a READ without auto precharge interrupted by a WRITE (with or without auto precharge), the WRITE to bank *m* will interrupt the READ on bank *n* when registered (Figures 9 and 10). DQM should be used one clock prior to the WRITE command to prevent bus contention.
- 12. For a WRITE without auto precharge interrupted by a READ (with or without auto precharge), the READ to bank *m* will interrupt the WRITE on bank *n* when registered (Figure 17), with the data-out appearing CAS latency later. The last valid WRITE to bank *n* will be data-in registered one clock prior to the READ to bank *m*.
- 13. For a WRITE without auto precharge interrupted by a WRITE (with or without auto precharge), the WRITE to bank *m* will interrupt the WRITE on bank *n* when registered (Figure 15). The last valid WRITE to bank *n* will be data-in registered one clock prior to the READ to bank *m*.
- 14. For a READ with auto precharge interrupted by a READ (with or without auto precharge), the READ to bank *m* will interrupt the READ on bank n, CAS latency later. The PRECHARGE to bank *n* will begin when the READ to bank *m* is registered (Figure 24).
- 15. For a READ with auto precharge interrupted by a WRITE (with or without auto precharge), the WRITE to bank *m* will interrupt the READ on bank *n* when registered. DQM should be used two clocks prior to the WRITE command to prevent bus contention. The PRECHARGE to bank *n* will begin when the WRITE to bank *m* is registered (Figure 25).
- 16. For a WRITE with auto precharge interrupted by a READ (with or without auto precharge), the READ to bank *m* will interrupt the WRITE on bank *n* when registered, with the data-out appearing CAS latency later. The PRECHARGE to bank *n* will begin after 'WR is met, where 'WR begins when the READ to bank *m* is registered. The last valid WRITE to bank *n* will be data-in registered one clock prior to the READ to bank *m* (Figure 26).
- 17. For a WRITE with auto precharge interrupted by a WRITE (with or without auto precharge), the WRITE to bank *m* will interrupt the WRITE on bank *n* when registered. The PRECHARGE to bank *n* will begin after 'WR is met, where 'WR begins when the WRITE to bank *m* is registered. The last valid WRITE to bank *n* will be data registered one clock prior to the WRITE to bank *m* (Figure 27).

256Mb: x16

MOBILE SDRAM



ABSOLUTE MAXIMUM RATINGS*

Voltage on VDD/VDDQ Supply
Relative to Vss(3.3V)1V to +4.6V
Relative to Vss(2.5V)0.5V to +3.6V
Relative to Vss(1.8V)0.35V to +2.8V
Voltage on Inputs, NC or I/O Pins
Relative to Vss(3.3V)1V to +4.6V
Relative to Vss(2.5V)0.5V to +3.6V
Relative to Vss(1.8V)0.35V to +2.8V
Operating Temperature,
T_A (commercial) 0°C to +70°C
T_A^{-1} (industrial; IT parts)40°C to +85°C
Storage Temperature (plastic)55°C to +150°C
Power Dissipation 1 W

*Stresses greater than those listed under "Absolute Maximum Ratings" may cause permanent damage to the device. This is a stress rating only, and functional operation of the device at these or any other conditions above those indicated in the operational sections of this specification is not implied. Exposure to absolute maximum rating conditions for extended periods may affect reliability.

DC ELECTRICAL CHARACTERISTICS AND OPERATING CONDITIONS - LC version

(Notes: 1, 5, 6; notes appear on page 40; $VDD/VDDQ = 3.3 \pm 0.3V$)

PARAMETER/CONDITION	SYMBOL	MIN	MAX	UNITS	NOTES
SUPPLY VOLTAGE	Vdd	3	3.6	V	
I/O SUPPLY VOLTAGE	Vddq	3	3.6	V	
INPUT HIGH VOLTAGE: Logic 1; All inputs	Vін	2	VDDQ + 0.3	V	22
INPUT LOW VOLTAGE: Logic 0; All inputs	VIL	-0.3	0.8	V	22
DATA OUTPUT HIGH VOLTAGE: Logic 1; All inputs	Vон	2.4	-	V	
DATA OUTPUT LOW VOLTAGE: LOGIC 0; All inputs	Vol	-	0.4	V	
INPUT LEAKAGE CURRENT:	lı	-5	5	μA	
Any input $0V \le V_{IN} \le V_{DD}$ (All other pins not under test = 0V)					
OUTPUT LEAKAGE CURRENT: DQs are disabled; $0V \le V_{\text{OUT}} \le V_{\text{DD}}Q$	loz	-5	5	μA	

DC ELECTRICAL CHARACTERISTICS AND OPERATING CONDITIONS - V version

(Notes: 1, 5, 6; notes appear on page 40; $V_{DD} = +2.5V \pm 0.2V$ $V_{DD}Q = +2.5V \pm 0.2V$ or $V_{DD}Q = +1.8V \pm 0.15V$)

PARAMETER/CONDITION	SYMBOL	MIN	MAX	UNITS	NOTES
SUPPLY VOLTAGE	Vdd	2.3	2.7	V	
I/O SUPPLY VOLTAGE	Vddq	1.65	2.7	V	
INPUT HIGH VOLTAGE: Logic 1; All inputs	Vін	0.8 * VddQ	VddQ + 0.3	V	22
INPUT LOW VOLTAGE: Logic 0; All inputs	VIL	-0.3	0.3	V	22
DATA OUTPUT HIGH VOLTAGE: Logic 1; All inputs	Vон	VddQ - 0.2	_	V	
DATA OUTPUT LOW VOLTAGE: LOGIC 0; All inputs	Vol	_	0.2	V	
INPUT LEAKAGE CURRENT:	h	-5	5	μA	
Any input $0V \le V_{IN} \le V_{DD}$ (All other pins not under test = 0V)					
OUTPUT LEAKAGE CURRENT: DQs are disabled; $0V \leq V_{\text{OUT}} \leq V_{\text{DD}}Q$	loz	-5	5	μA	



DC ELECTRICAL CHARACTERISTICS AND OPERATING CONDITIONS - H version

(Notes: 1, 5, 6; notes appear on page 40; VDD = 1.8 \pm 0.15V, VDDQ = +1.8V \pm 0.15V)

PARAMETER/CONDITION	SYMBOL	MIN	MAX	UNITS	NOTES
SUPPLY VOLTAGE	Vdd	1.65	1.95	V	
I/O SUPPLY VOLTAGE	VDDQ	1.65	1.95	V	
INPUT HIGH VOLTAGE: Logic 1; All inputs	Vін	0.8*VddQ	VddQ + 0.3	V	22
INPUT LOW VOLTAGE: Logic 0; All inputs	VIL	-0.3	0.3	V	22
DATA OUTPUT HIGH VOLTAGE: Logic 1; All inputs	Vон	VDDQ -0.2	_	V	
DATA OUTPUT LOW VOLTAGE: LOGIC 0; All inputs	Vol	_	0.2	V	
INPUT LEAKAGE CURRENT:	h	-5	5	μA	
Any input $0V \le V_{IN} \le V_{DD}$ (All other pins not under test = 0V)					
OUTPUT LEAKAGE CURRENT: DQs are disabled; $0V \le V_{DDQ}$	loz	-5	5	μA	

CAPACITANCE – FBGA

(Note: 2; notes appear on page 40)

PARAMETER	SYMBOL	MIN	MAX	UNITS	NOTES
Input Capacitance: CLK	Cı1	1.5	4.0	рF	29
Input Capacitance: All other input-only pins	Cı2	1.5	4.0	рF	30
Input/Output Capacitance: DQs	Сю	3.0	6.0	рF	31

CAPACITANCE – TSOP

(Note: 2; notes appear on page 40)

PARAMETER	SYMBOL	MIN	ΜΑΧ	UNITS	NOTES
Input Capacitance: CLK	Cı1	2.5	4.0	рF	29
Input Capacitance: All other input-only pins	Cı2	2.5	4.0	рF	30
Input/Output Capacitance: DQs	Сю	4.0	6.0	рF	31



ELECTRICAL CHARACTERISTICS AND RECOMMENDED AC OPERATING CONDITIONS

(Notes: 5, 6, 8, 9, 11; notes appear on page 40)

ACCHARACTERISTICS			-	8	-1	10		
PARAMETER		SYMBOL	MIN	MAX	MIN	MAX	UNITS	NOTES
Access time from CLK (pos. edge)	CL = 3	^t AC(3)		7		7	ns	27
	CL = 2	^t AC(2)		8		8	ns	
	CL = 1	^t AC(1)		19		22	ns	
Address hold time	•	^t AH	1		1		ns	
Address setup time		^t AS	2.5		2.5		ns	
CLK high-level width		^t CH	3		3		ns	
CLK low-level width		^t CL	3		3		ns	
Clock cycle time	CL = 3	^t CK(3)	8		10		ns	23
	CL = 2	^t CK(2)	10		12		ns	23
	CL = 1	^t CK(1)	20		25		ns	
CKE hold time	•	^t CKH	1		1		ns	
CKE setup time		^t CKS	2.5		2.5		ns	
CS#, RAS#, CAS#, WE#, DQM hold time		^t CMH	1		1		ns	
CS#, RAS#, CAS#, WE#, DQM setup time		^t CMS	2.5		2.5		ns	
Data-in hold time		^t DH	1		1		ns	
Data-in setup time		^t DS	2.5		2.5		ns	
Data-out high-impedance time	CL = 3	^t HZ(3)		7		7	ns	10
	CL = 2	^t HZ(2)		8		8	ns	10
	CL = 1	^t HZ(1)		19		22	ns	
Data-out low-impedance time	·	^t LZ	1		1		ns	
Data-out hold time (load)		^t OH	2.5		2.5		ns	
Data-out hold time (no load)		^t OH _N	1.8		1.8		ns	28
ACTIVE to PRECHARGE command		^t RAS	48	120,000	50	120,000	ns	
ACTIVE to ACTIVE command period		^t RC	80		100		ns	28E
ACTIVE to READ or WRITE delay		^t RCD	20		20		ns	
Refresh period (8, 192 rows)		^t REF		64		64	ms	
AUTO REFRESH period		^t RFC	80		100		ns	28E
PRECHARGE cmd period		^t RP	20		20		ns	
ACTIVE bank a to bank b command		^t RRD	20		20		ns	
Transition time		^t T	0.5	1.2	0.5	1.2	ns	7
WRITE recovery time		^t WR	1CLK+		1CLK+		ns	24
			7ns		5ns			28E
			15		15			25
Exit SELF REFRESH to ACTIVE command		^t XSR	80		100		ns	28E



AC FUNCTIONAL CHARACTERISTICS

(Notes: 5, 6, 7, 8, 9, 11; notes appear on page 40)

PARAMETER	SYMBOL	-8	-10	UNITS	NOTES	
READ/WRITE command to READ/WRITE command	^t CCD	1	1	^t CK	17	
CKE to clock disable or power-down entry mode		^t CKED	1	1	^t CK	14
CKE to clock enable or power-down exit setup mode		^t PED	1	1	^t CK	14
DQM to input data delay		^t DQD	0	0	^t CK	17
DQM to data mask during WRITEs		^t DQM	0	0	^t CK	17
DQM to data high-impedance during READs		^t DQZ	2	2	^t CK	17
WRITE command to input data delay	^t DWD	0	0	^t CK	17	
Data-in to ACTIVE command	^t DAL	5	5	^t CK	15, 21	
Data-in to PRECHARGE command		^t DPL	2	2	^t CK	16, 21
Last data-in to burst STOP command		^t BDL	1	1	^t CK	17
Last data-in to new READ/WRITE command		^t CDL	1	1	^t CK	17
Last data-in to PRECHARGE command		^t RDL	2	2	^t CK	16, 21
LOAD MODE REGISTER command to ACTIVE or REFRESH command	^t MRD	2	2	^t CK	26	
Data-out to high-impedance from PRECHARGE command	CL = 3	^t ROH(3)	3	3	^t CK	17
	CL = 2	^t ROH(2)	2	2	^t CK	17
	CL = 1	^t ROH(1)	1	1	^t CK	17



IDD SPECIFICATIONS AND CONDITIONS

(Notes: 1, 5, 6, 11, 13; notes appear on page 40; $VDD/VDDQ = 3.3 \pm 0.3V$; $VDD = 2.5V \pm 0.2V$ $VDDQ = 2.5V \pm 0.2V$ or $VDDQ = 1.8V \pm 0.2V$)

	M	AX				
PARAMETER/CONDITION	SYMBOL	-8	-10	UNITS	NOTES	
OPERATING CURRENT: Active Mode; Burst = 2; READ or WRITE; ${}^{t}RC = {}^{t}RC$ (MIN)		ldd1	75	70	mA	3, 18, 19, 32
STANDBY CURRENT: Power-Down Mode; All banks idle; CKE = LOW		Idd2	500	500	μA	32
STANDBY CURRENT: Active Mode; CKE = HIGH; CS# = HIGH; All banks active after ^t RCD met; No accesses in progress		Idd3	25	25	mA	3, 12, 19, 32
OPERATING CURRENT: Burst Mode; Continuous b READ or WRITE; All banks active	urst;	Idd4	105	95	mA	3, 18, 19, 32
AUTO REFRESH CURRENT CKE = HIGH; CS# = HIGH	^t RFC = ^t RFC (MIN)	Idd5	165	155	mA	3, 12, 18, 19,
	^t RFC = 7.8µs	Idd6	2.5	2.5	mA	32, 33
DEEP POWER DOWN	•	Idd8	10	10	μA	34

IDD7 - SELF REFRESH CURRENT OPTIONS (Temperature Compensated Self Refresh)

(Notes: 1, 6, 11, 13; notes appear on page 40) $VDD/VDDQ = 3.3 \pm 0.3V$ or $VDD/VDDQ = 2.5V \pm 0.2V$ or $VDD/VDDQ = 1.8V \pm 0.15V$)

Temperature Compensated Self Refresh Parameter/Condition	Max Temperature	-8	-10	UNITS	NOTES
Self Refresh Current: CKE < 0.2V	85°C	750	750	μA	4
	45°C	500	500	μA	4


256Mb: x16

MOBILE SDRAM



NOTES

- 1. All voltages referenced to Vss.
- 2. This parameter is sampled; f = 1 MHz, $T_J = 25$ °C; 0.9V bias, 200mV swing, VDD = +2.5V, VDDQ = +2.5V.
- 3. IDD is dependent on output loading and cycle rates. Specified values are obtained with minimum cycle time and the outputs open.
- 4. Enables on-chip refresh and address counters.
- 5. The minimum specifications are used only to indicate cycle time at which proper operation over the full temperature range ($0^{\circ}C \le T_A \le +70^{\circ}C$ and $-40^{\circ}C \le T_A \le +85^{\circ}C$ for IT parts) is ensured.
- 6. An initial pause of 100µs is required after powerup, followed by two AUTO REFRESH commands, before proper device operation is ensured. (VDD and VDDQ must be powered up simultaneously. Vss and VssQ must be at same potential.) The two AUTO REFRESH command wake-ups should be repeated any time the ^tREF refresh requirement is exceeded.
- 7. AC characteristics assume ${}^{t}T = 1ns$.
- 8. In addition to meeting the transition rate specification, the clock and CKE must transit between VIH and VIL (or between VIL and VIH) in a monotonic manner.
- 9. Outputs measured at 0.9V with equivalent load:



- 10. ^tHZ defines the time at which the output achieves the open circuit condition; it is not a reference to VOH or VOL. The last valid data element will meet ^tOH before going High-Z.
- 11. AC timing and IDD tests have VIL = 0.0V and VIH 1.65V, with timing referenced to VIH/2 crossover point. If the input transition time is longer than 1 ns, then the timing is referenced at VIL (MAX) and VIH (MIN) and no longer at the VIH/2 crossover point.
- 12. Other input signals are allowed to transition no more than once every two clocks and are otherwise at valid VIH or VIL levels.
- 13. IDD specifications are tested after the device is properly initialized.
- 14. Timing actually specified by ^tCKS; clock(s) specified as a reference only at minimum cycle rate.
- 15. Timing actually specified by ^tWR plus ^tRP; clock(s) specified as a reference only at minimum cycle rate.
- 16. Timing actually specified by ^tWR.


17. Required clocks are specified by JEDEC function-

- ality and are not dependent on any timing parameter.
- 18. The IDD current will increase or decrease proportionally according to the amount of frequency alteration for the test condition.
- 19. Address transitions average one transition every two clocks.
- 20. CLK must be toggled a minimum of two times during this period.
- 21. Based on ${}^{t}CK = 8ns$ for -8, ${}^{t}CK = 10ns$ for -10.
- 22. VIH overshoot: VIH (MAX) = VDDQ + 2V for a pulse width \leq 3ns, and the pulse width cannot be greater than one third of the cycle rate. VIL undershoot: VIL (MIN) = -2V for a pulse width \leq 1/3 ^tCK.
- 23. The clock frequency must remain constant (stable clock is defined as a signal cycling within timing constraints specified for the clock pin) during access or precharge states (READ, WRITE, including ^tWR, and PRECHARGE commands). CKE may be used to reduce the data rate.
- 24. Auto precharge mode only. The precharge timing budget (^tRP) begins 7ns after the first clock delay, after the last WRITE is executed.
- 25. Precharge mode only.
- 26. JEDEC and PC100 specify three clocks.
- 27. ^tAC for -8 at CL = 3 with no load is 5.4ns and is guaranteed by design.
- 28. Parameter guaranteed by design.
 - A. Maximum capacitance can be 3.0 pF but not desired.
 - B. Maximum capacitance can be 5.0pF but not desired.
 - C. Maximum capacitance can be 3.3pF but not desired.
 - D. Target values listed with alternative values in parentheses.
 - E. ^tRFC must be less than or equal to ^tRC+1CLK ^tXSR must be less than or equal to ^tRC+1CLK
 - F. For full I/V relationships see IBIS model.
- 29. PC100 specifies a maximum of 4pF.
- 30. PC100 specifies a maximum of 5pF.
- 31. PC100 specifies a maximum of 6.5pF.
- 32. For -8, CL = 2 and ^tCK = 10ns; for -10, CL = 3 and ^tCK = 10ns.
- 33. CKE is HIGH during refresh command period ^tRFC (MIN) else CKE is LOW. The IDD6 limit is actually a nominal value and does not result in a fail value.
- 34. Measured at nominal value at 70°C.



256Mb: x16 MOBILE SDRAM

INITIALIZE AND LOAD MODE REGISTER

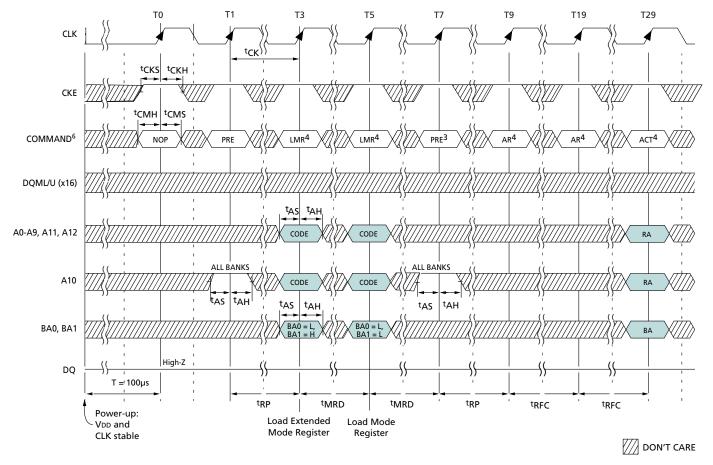

NOTE: 1. The two AUTO REFRESH commands at T9 and T19 may be applied before either LOAD MODE REGISTER (LMR) command.

2. PRE = PRECHARGE command, LMR = LOAD MODE REGISTER command, AR = AUTO REFRESH command, ACT = ACTIVE command, RA = Row Address, BA = Bank Address

3. Optional refresh command.

4. The Load Mode Register for both MR/EMR and 2 Auto Refresh commands can be in any order. However, all must occur prior to an Active command.


5. Device timing is -10 with 100MHz clock.

	-	-8		-10	
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t AH	1		1		ns
^t AS	2.5		2.5		ns
^t CH	3		3		ns
^t CL	3		3		ns
^t CK (3)	8		10		ns
^t CK (2)	10		12		ns
^t CK (1)	20		25		ns

	-	-8		-10	
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t CKH	1		1		ns
^t CKS	2.5		2.5		ns
^t CMH	1		1		ns
^t CMS	2.5		2.5		ns
^t MRD ³	2		2		^t CK
^t RFC	80		100		ns
^t RP	20		20		ns



POWER-DOWN MODE¹

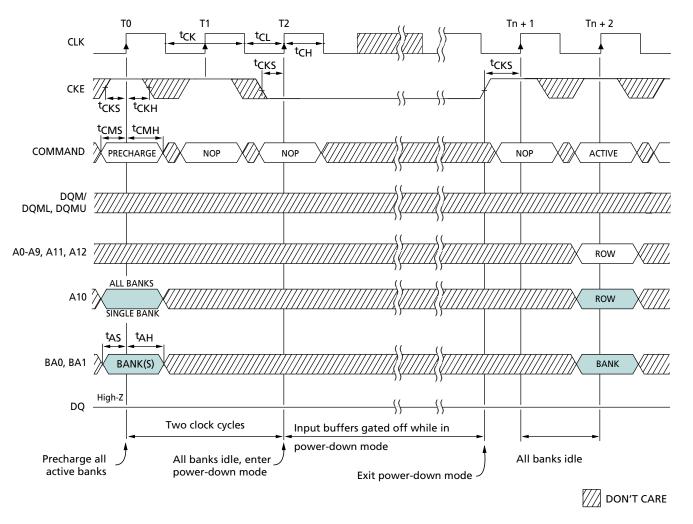

NOTE: 1. Violating refresh requirements during power-down may result in a loss of data.


TIMING PARAMETERS

	-8		-1		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t AH	1		1		ns
^t AS	2.5		2.5		ns
^t CH	3		3		ns
^t CL	3		3		ns
^t CK (3)	8		10		ns
^t CK (2)	10		12		ns

	-8		-1		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t CK (1)	20		25		ns
^t CKH	1		1		ns
^t CKS	2.5		2.5		ns
^t CMH	1		1		ns
^t CMS	2.5		2.5		ns



256Mb: x16 MOBILE SDRAM

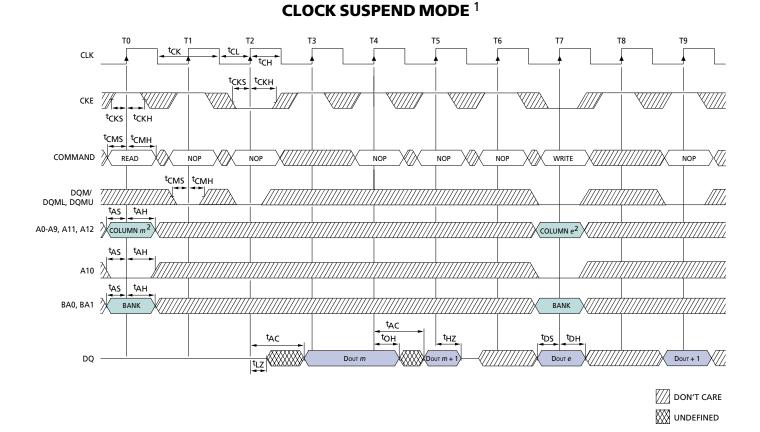


NOTE: 1. For this example, the burst length = 2, the CAS latency = 3, and auto precharge is disabled. 2. x16: A9, A11 and A12 = "Don't Care"

TIMING PARAMETERS

	-8		-10		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t AC (3)		7		7	ns
^t AC (2)		8		8	ns
^t AC (1)		19		22	ns
^t AH	1		1		ns
^t AS	2.5		2.5		ns
^t CH	3		3		ns
^t CL	3		3		ns
^t CK (3)	8		10		ns
^t CK (2)	10		12		ns
^t CK (1)	20		25		ns

	-	-8		-10	
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t CKH	1		1		ns
^t CKS	2.5		2.5		ns
^t CMH	1		1		ns
^t CMS	2.5		2.5		ns
^t DH	1		1		ns
^t DS	2.5		2.5		ns
^t HZ (3)		7		7	ns
^t HZ (2)		8		8	ns
^t HZ (1)		19		22	ns
ťLΖ	1		1		ns
tOH	2.5		2.5		ns



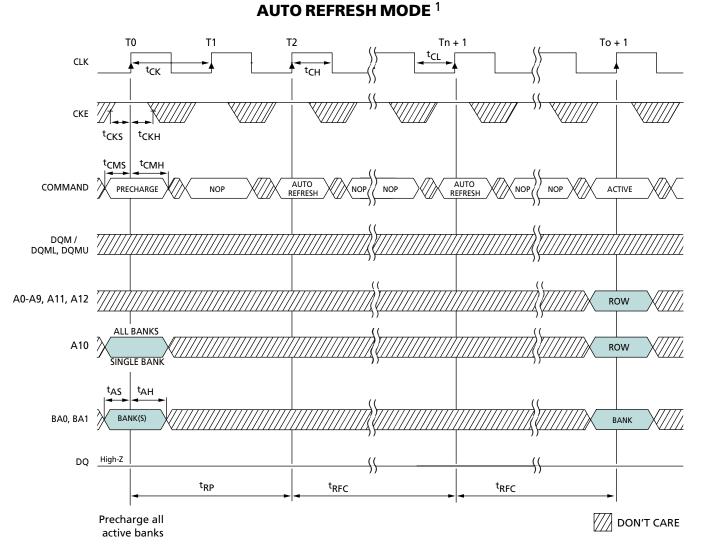




TIMING PARAMETERS

	-8		-1		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t AH	1		1		ns
^t AS	2.5		2.5		ns
^t CH	3		3		ns
^t CL	3		3		ns
^t CK (3)	8		10		ns
^t CK (2)	10		12		ns

-10 -8 MIN MAX MIN UNITS SYMBOL* MAX ^tCK (1) 20 25 ns ^tCKH 1 1 ns ^tCKS 2.5 2.5 ns ^tCMH 1 1 ns ^tCMS 2.5 2.5 ns ^tRFC 80 100 ns ^tRP 20 20 ns



SELF REFRESH MODE

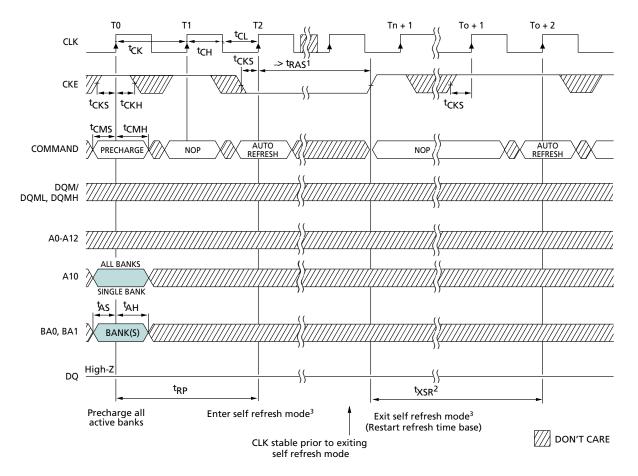

- NOTE: 1. No maximum time limit for Self Refresh mode. 'RAS(MAX) applies to non-Self Refresh mode.
 - 2. ^tXSR requires minimum of two clocks regardless of frequency and timing.
 - 3. As a general rule, any time Self Refresh is exited, the DRAM may not re-enter the Self Refresh Mode until all rows have been refreshed via the Auto Refresh command at the distributed refresh rate, ^tREF, or faster. However, the following exception is allowed. Self Refresh mode may be re-entered any time after exiting, provided all of the following conditions are met:
 - a. The DRAM had been in the Self Refresh Mode for a minimum of 64ms prior to exiting.
 - b. ^tXSR is not violated.
 - c. At least two Auto Refresh commands are performed during each 7.81µs interval while the DRAM remains out of Self Refresh mode.


	-	8	-10		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t AH	1		1		ns
^t AS	2.5		2.5		ns
^t CH	3		3		ns
^t CL	3		3		ns
^t CK (3)	8		10		ns
^t CK (2)	10		12		ns
^t CK (1)	20		25		ns

TIMING	PARAMETERS

	-	-8 -10			
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t CKH	1		1		ns
^t CKS	2.5		2.5		ns
^t CMH	1		1		ns
^t CMS	2.5		2.5		ns
^t RAS	48	120,000	50	120,000	ns
^t RP	20		20		ns
^t XSR	80		100		ns



256Mb: x16 MOBILE SDRAM

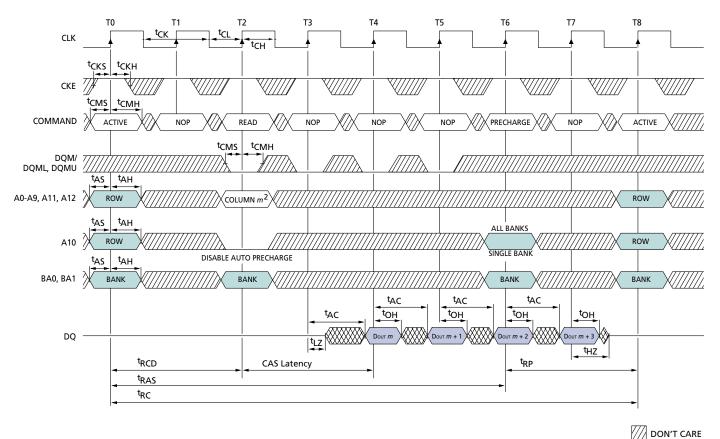

READ – WITHOUT AUTO PRECHARGE¹

- **NOTE:** 1. For this example, the burst length = 4, the CAS latency = 2, and the READ burst is followed by a "manual" PRECHARGE.
 - 2. x16: A9, A11 and A12 = "Don't Care"

TIMING PARAMETERS


	-8		-10		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t AC (3)		7		7	ns
^t AC (2)		8		8	ns
^t AC (1)		19		22	ns
^t AH	1		1		ns
^t AS	2.5		2.5		ns
^t CH	3		3		ns
^t CL	3		3		ns
^t CK (3)	8		10		ns
^t CK (2)	10		12		ns
^t CK (1)	20		25		ns
^t СКН	1		1		ns
^t CKS	2.5		2.5		ns

	-	-8		-10	
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t CMH	1		1		ns
^t CMS	2.5		2.5		ns
^t HZ (3)		7		7	ns
^t HZ (2)		8		8	ns
^t HZ (1)		19		22	ns
^t LZ	1		1		ns
^t OH	2.5		2.5		ns
^t RAS	48	120,000	50	120,000	ns
^t RC	80		100		ns
^t RCD	20		20		ns
^t RP	20		20		ns



256Mb: x16 MOBILE SDRAM

READ – WITH AUTO PRECHARGE¹

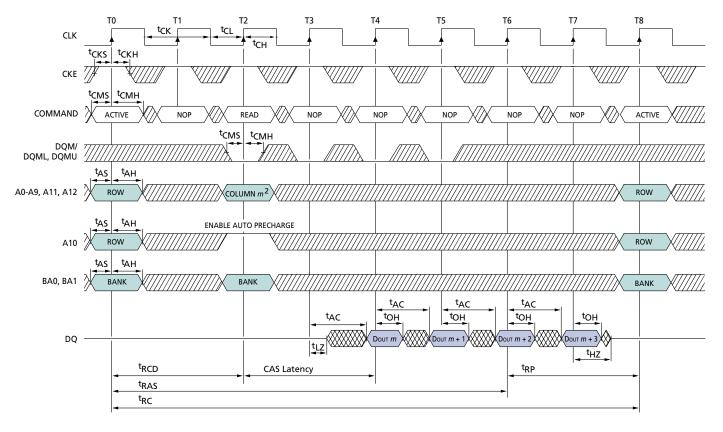

DON'T CARE

NOTE: 1. For this example, the burst length = 4, and the CAS latency = 2. 2. x16: A9, A11 and A12 = "Don't Care."

TIMING PARAMETERS

	-8		-10		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t AC (3)		7		7	ns
^t AC (2)		8		8	ns
^t AC (1)		19		22	ns
^t AH	1		1		ns
^t AS	2.5		2.5		ns
^t CH	3		3		ns
^t CL	3		3		ns
^t CK (3)	8		10		ns
^t CK (2)	10		12		ns
^t CK (1)	20		25		ns
^t СКН	1		1		ns
^t CKS	2.5		2.5		ns


	-	-8 -10		-10	
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t CMH	1		1		ns
^t CMS	2.5		2.5		ns
^t HZ (3)		7		7	ns
^t HZ (2)		8		8	ns
^t HZ (1)		19		22	ns
^t LZ	1		1		ns
^t OH	2.5		2.5		ns
^t RAS	48	120,000	50	120,000	ns
^t RC	80		70		ns
^t RCD	20		20		ns
^t RP	20		20		ns

*CAS latency indicated in parentheses.

47



256Mb: x16 MOBILE SDRAM

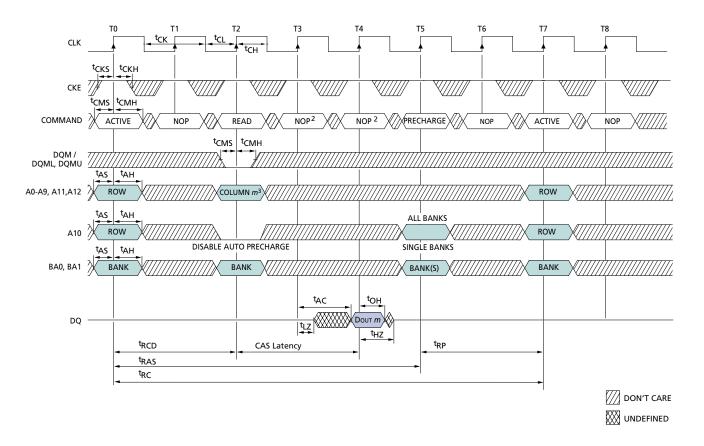

SINGLE READ – WITHOUT AUTO PRECHARGE¹

- **NOTE:** 1. For this example, the burst length = 1, the CAS latency = 2, and the READ burst is followed by a "manual" PRECHARGE.
 - 2. PRECHARGE command not allowed else 'RAS would be violated.
 - 3. x16: A9, A11 and A12 = "Don't Care"


TIMING PARAMETERS

	-8		-10		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t AC (3)		7		7	ns
^t AC (2)		8		8	ns
^t AC (1)		19		22	ns
^t AH	1		1		ns
^t AS	2.5		2.5		ns
^t CH	3		3		ns
^t CL	3		3		ns
^t CK (3)	8		10		ns
^t CK (2)	10		12		ns
^t CK (1)	20		25		ns
^t СКН	1		1		ns
^t CKS	2.5		2.5		ns

	-	-8 -10		-10	
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t CMH	1		1		ns
^t CMS	2.5		2.5		ns
^t HZ (3)		7		7	ns
^t HZ (2)		8		8	ns
^t HZ (1)		19		22	ns
^t LZ	1		1		ns
^t OH	2.5		2.5		ns
^t RAS	48	120,000	50	120,000	ns
^t RC	80		100		ns
^t RCD	20		20		ns
^t RP	20		20		ns



256Mb: x16 MOBILE SDRAM

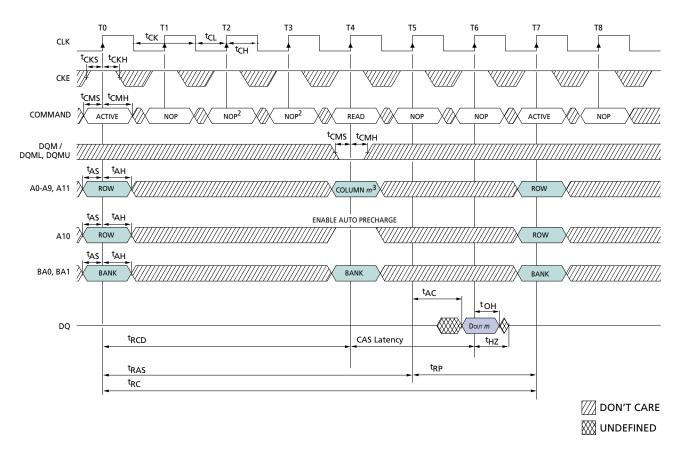

SINGLE READ – WITH AUTO PRECHARGE ¹

NOTE: 1. For this example, the burst length = 1, and the CAS latency = 2.

2. READ command not allowed else 'RAS would be violated since AUTO PRECHARGE is enabled.

3. x16: A9, A11 and A12 = "Don't Care"

TIMING PARAMETERS


	-8		-10		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t AC (3)		7		7	ns
^t AC (2)		8		8	ns
^t AC (1)		19		22	ns
^t AH	1		1		ns
^t AS	2.5		2.5		ns
^t CH	3		3		ns
^t CL	3		3		ns
^t CK (3)	8		10		ns
^t CK (2)	10		12		ns
^t CK (1)	20		25		ns
^t СКН	1		1		ns
^t CKS	2.5		2.5		ns

	-	8	-10		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t CMH	1		1		ns
^t CMS	2.5		2.5		ns
^t HZ (3)		7		7	ns
^t HZ (2)		8		8	ns
^t HZ (1)		19		22	ns
^t LZ	1		1		ns
^t OH	2.5		2.5		ns
^t RAS	48	120,000	50	120,000	ns
^t RC	80		100		ns
^t RCD	20		20		ns
^t RP	20		20		ns



256Mb: x16 MOBILE SDRAM

ALTERNATING BANK READ ACCESSES¹

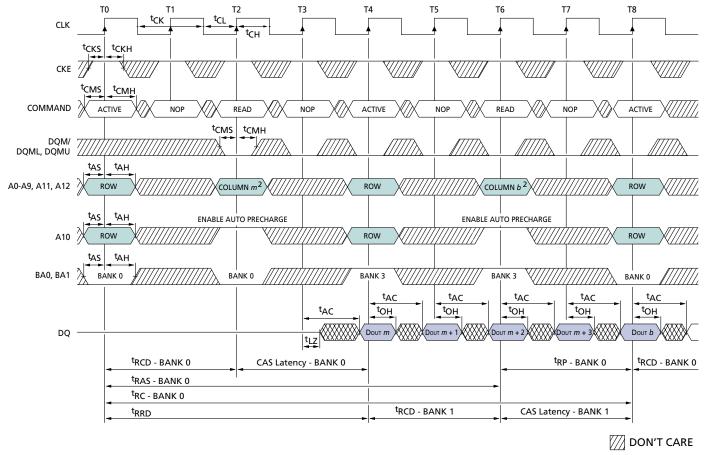

NOTE: 1. For this example, the burst length = 4, and the CAS latency = 2. 2. x16: A9, A11 and A12 = "Don't Care"

TIMING PARAMETERS


	-8		-10		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t AC (3)		7		7	ns
^t AC (2)		8		8	ns
^t AC (1)		19		22	ns
^t AH	1		1		ns
^t AS	2.5		2.5		ns
^t CH	3		3		ns
^t CL	3		3		ns
^t CK (3)	8		10		ns
^t CK (2)	10		12		ns
^t CK (1)	20		25		ns
^t CKH	1		1		ns

	-8		-10		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t CKS	2.5		2.5		ns
^t CMH	1		1		ns
^t CMS	2.5		2.5		ns
^t LZ	1		1		ns
^t OH	2.5		2.5		ns
^t RAS	48	120,000	50	120,000	ns
^t RC	80		100		ns
^t RCD	20		20		ns
^t RP	20		20		ns
^t RRD	20		20		ns

256Mb: x16

MOBILE SDRAM



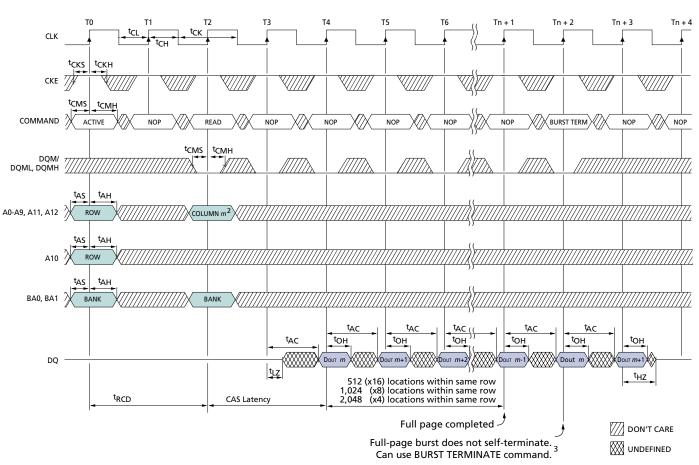

READ – FULL-PAGE BURST¹

- **NOTE:** 1. For this example, the CAS latency = 2.
 - 2. x16: A9, A11 and A12 = "Don't Care"
 - 3. Page left open; no ^tRP.


TIMING PARAMETERS

	-8		-10		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t AC (3)		7		7	ns
^t AC (2)		8		8	ns
^t AC (1)		19		22	ns
^t AH	1		1		ns
^t AS	2.5		2.5		ns
^t CH	3		3		ns
^t CL	3		3		ns
^t CK (3)	8		10		ns
^t CK (2)	10		12		ns
^t CK (1)	20		25		ns

	-8		-10		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t CKH	1		1		ns
^t CKS	2.5		2.5		ns
^t CMH	1		1		ns
^t CMS	2.5		2.5		ns
^t HZ (3)		7		7	ns
^t HZ (2)		8		8	ns
^t HZ (1)		19		22	ns
^t LZ	1		1		ns
^t OH	2.5		2.5		ns
^t RCD	20		20		ns



256Mb: x16 MOBILE SDRAM

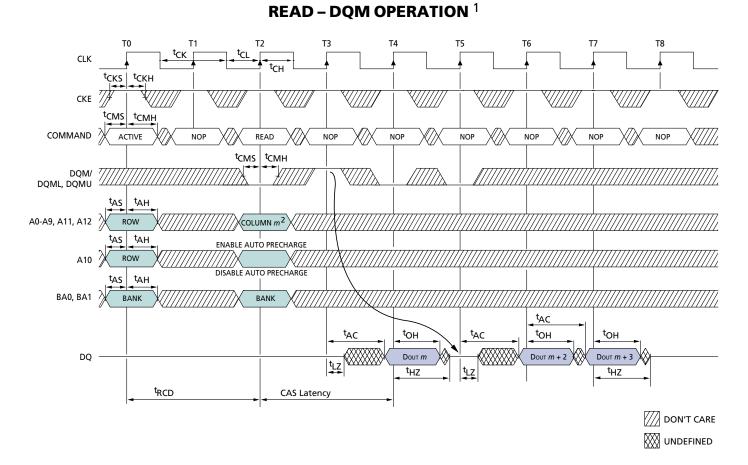

NOTE: 1. For this example, the burst length = 4, and the CAS latency = 2. 2. x16: A9, A11 and A12 = "Don't Care"


TIMING PARAMETERS

	-8		-10		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t AC (3)		7		7	ns
^t AC (2)		8		8	ns
^t AC (1)		19		22	ns
^t AH	1		1		ns
^t AS	2.5		2.5		ns
^t CH	3		3		ns
^t CL	3		3		ns
^t CK (3)	8		10		ns
^t CK (2)	10		12		ns
^t CK (1)	20		25		ns

	-8		-10		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t CKH	1		1		ns
^t CKS	2.5		2.5		ns
^t CMH	1		1		ns
^t CMS	2.5		2.5		ns
^t HZ (3)		7		7	ns
^t HZ (2)		8		8	ns
^t HZ (1)		19		22	ns
tLZ	1		1		ns
tOH	2.5		2.5		ns
^t RCD	20		20		ns



256Mb: x16 MOBILE SDRAM

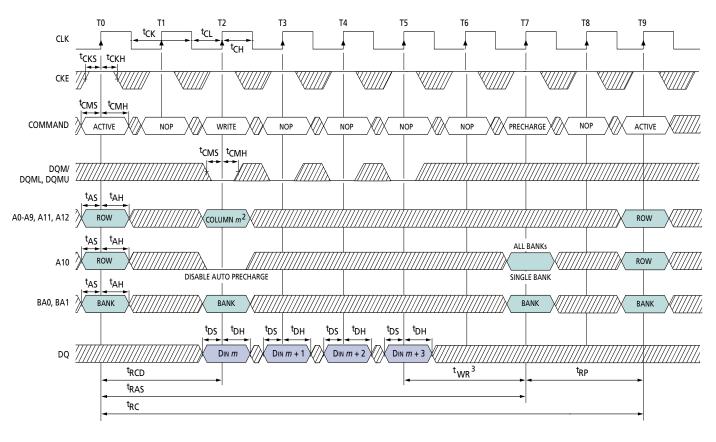

WRITE - WITHOUT AUTO PRECHARGE¹

DON'T CARE

- **NOTE:** 1. For this example, the burst length = 4, and the WRITE burst is followed by a "manual" PRECHARGE. 2. x16: A9, A11 and A12 = "Don't Care"
 - 3. 14ns to 15ns is required between $\langle D | N m \rangle$ and the PRECHARGE command, regardless of frequency.


TIMING PARAMETERS

	-8		-10		
SYMBOL*	MAX	MIN	MAX	UNITS	
^t AH	1		1		ns
^t AS	2.5		2.5		ns
^t CH	3		3		ns
^t CL	3		3		ns
^t CK (3)	8		10		ns
^t CK (2)	10		12		ns
^t CK (1)	20		25		ns
^t CKH	1		1		ns
^t CKS	2.5		2.5		ns

	-8		-10		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t CMH	1		1		ns
^t CMS	2.5		2.5		ns
^t DH	1		1		ns
^t DS	2.5		2.5		ns
^t RAS	48	120,000	50	120,000	ns
^t RC	80		100		ns
^t RCD	20		20		ns
^t RP	20		20		ns
tWR	15		15		ns



256Mb: x16 MOBILE SDRAM

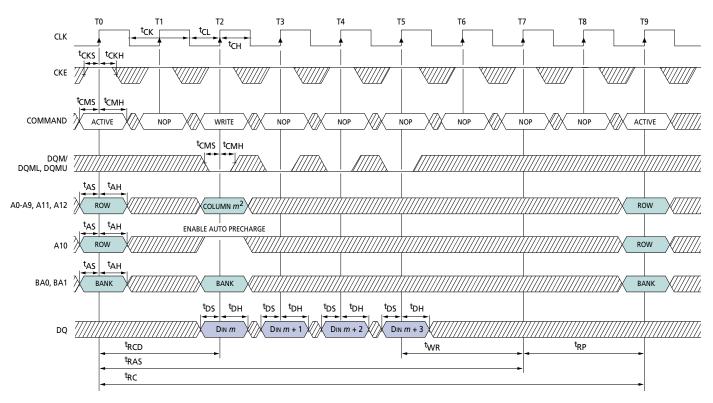

WRITE – WITH AUTO PRECHARGE¹

DON'T CARE

NOTE: 1. For this example, the burst length = 4. 2. x16: A9, A11 and A12 = "Don't Care"


TIMING PARAMETERS

	-8		-10		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t AH	1		1		ns
^t AS	2.5		2.5		ns
^t CH	3		3		ns
^t CL	3		3		ns
^t CK (3)	8		10		ns
^t CK (2)	10		12		ns
^t CK (1)	20		25		ns
^t СКН	1		1		ns
^t CKS	2.5		2.5		ns
^t CMH	1		1		ns

	-8		-10		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t CMS	2.5		2.5		ns
^t DH	1		1		ns
^t DS	2.5		2.5		ns
^t RAS	48	120,000	50	120,000	ns
^t RC	80		100		ns
^t RCD	20		20		ns
^t RP	20		20		ns
^t WR	1 CLK +		1 CLK +		-
	7ns		5ns		



256Mb: x16 MOBILE SDRAM

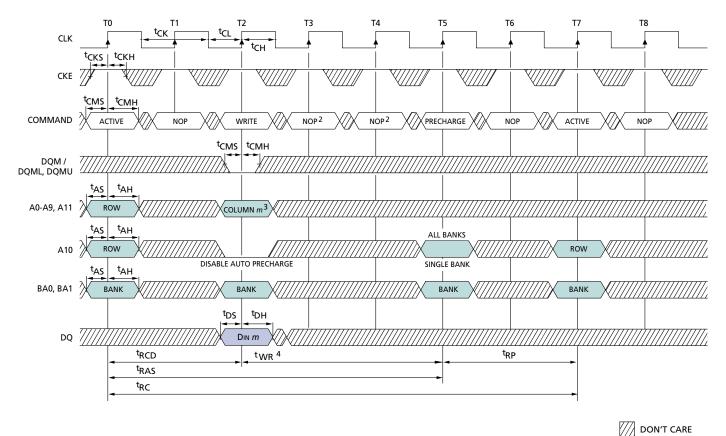

SINGLE WRITE – WITHOUT AUTO PRECHARGE¹

NOTE: 1. For this example, the burst length = 1, and the WRITE burst is followed by a "manual" PRECHARGE.

- 2. PRECHARGE command not allowed else tRAS would be violated.
 - 3. x16: A9, A11 and A12 = "Don't Care"
 - 4. 14ns to 15ns is required between <DIN m> and the PRECHARGE command, regardless of frequency. With a single write "WR has been increased to meet minimum "RAS requirement.

TIMING PARAMETERS

	-8		-10		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t AH	1		1		ns
^t AS	2.5		2.5		ns
^t CH	3		3		ns
^t CL	3		3		ns
^t CK (3)	8		10		ns
^t CK (2)	10		12		ns
^t CK (1)	20		25		ns
^t CKH	1		1		ns
^t CKS	2.5		2.5		ns

	-8		-10		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t CMH	1		1		ns
^t CMS	2.5		2.5		ns
^t DH	1		1		ns
^t DS	2.5		2.5		ns
^t RAS	48	120,000	50	120,000	ns
^t RC	80		100		ns
^t RCD	20		20		ns
^t RP	20		20		ns
tWR	15		15		ns

256Mb: x16

MOBILE SDRAM



CK

ске 🎢

2

COMMAND

DQM/ DQML, DQMU

A0-A9, A11, A12

^M9

t_{AS}

t∆s

t_{AS}

A10 〉

SINGLE WRITE – WITH AUTO PRECHARGE¹ Т3 Т4 Т5 Т6 T7 Т9 T0 T2 Τ8 T1 tск ^tCL tсн ^tCKS ^tCKH €смн ACTIVE NOP² NOP² WRITE NOP NOP² NOP NOP NOP ACTIVE ^tCMS ^tCMH t_{AH} ROW ROW ENABLE AUTO PRECHARGE tA⊢ ROW ROW t_{АН}

BAO, BA1 BANK BANK BANK t_{DS} ^tDH DQ 7/// DIN m ^tRCD ^tWR⁴ t_{RP} ^tRAS

DON'T CARE

NOTE: 1. For this example, the burst length = 1.

^tRC

- 2. WRITE command not allowed else tRAS would be violated.
- 3. x16: A9, A11 and A12 = "Don't Care"
- 4. Requires one clock plus time (5ns to 7ns) with auto precharge or 14ns to 15ns with PRECHARGE.


TIMING PARAMETERS

	-8		-10		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t AH	1		1		ns
^t AS	2.5		2.5		ns
^t CH	3		3		ns
^t CL	3		3		ns
^t CK (3)	8		10		ns
^t CK (2)	10		12		ns
^t CK (1)	20		25		ns
^t СКН	1		1		ns
^t CKS	2.5		2.5		ns
^t CMH	1		1		ns

	-8		-10		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t CMS	2.5		2.5		ns
^t DH	1		1		ns
^t DS	2.5		2.5		ns
^t RAS	48	120,000	50	120,000	ns
^t RC	80		100		ns
^t RCD	20		20		ns
^t RP	20		20		ns
tWR	1 CLK +		1 CLK +		-
	7ns		5ns		



256Mb: x16 MOBILE SDRAM

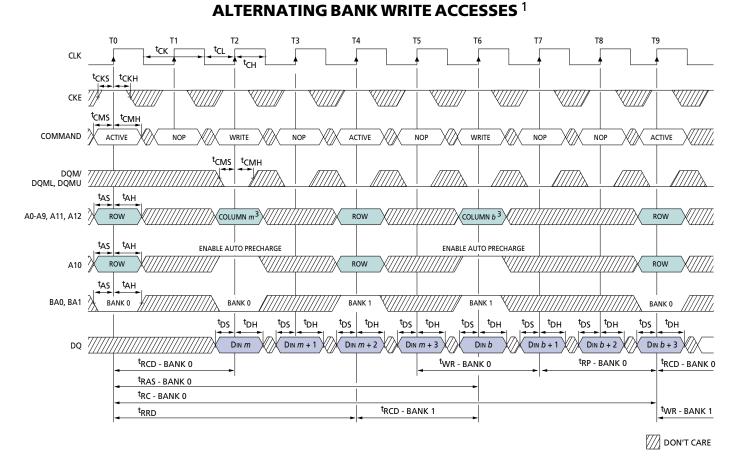

- **NOTE:** 1. For this example, the burst length = 4.
 - 2. Requires one clock plus time (5ns or 7ns) with auto precharge or 14ns to 15ns with PRECHARGE.
 - 3. x16: A9, A11 and A12 = "Don't Care"


TIMING PARAMETERS

	-8		-10		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t AH	1		1		ns
^t AS	2.5		2.5		ns
^t CH	3		3		ns
^t CL	3		3		ns
^t CK (3)	8		10		ns
^t CK (2)	10		12		ns
^t CK (1)	20		25		ns
^t CKH	1		1		ns
^t CKS	2.5		2.5		ns
^t CMH	1		1		ns

	-	-8		-10	
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t CMS	2.5		2.5		ns
^t DH	1		1		ns
^t DS	2.5		2.5		ns
^t RAS	48	120,000	50	120,000	ns
^t RC	80		100		ns
^t RCD	20		20		ns
^t RP	20		20		ns
^t RRD	20		20		ns
^t WR	1 CLK +		1 CLK +		-
	7ns		5ns		



256Mb: x16 MOBILE SDRAM

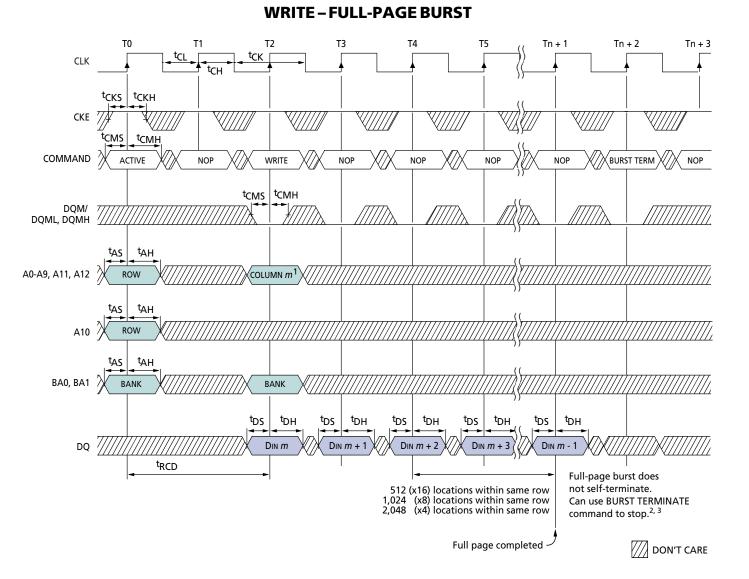

- **NOTE:** 1. x16: A9, A11 and A12 = "Don't Care"
 - 2. WR must be satisfied prior to PRECHARGE command.
 - 3. Page left open; no ^tRP.


TIMING PARAMETERS

	-8		-10		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t AH	1		1		ns
^t AS	2.5		2.5		ns
^t CH	3		3		ns
^t CL	3		3		ns
^t CK (3)	8		10		ns
^t CK (2)	10		12		ns
^t CK (1)	20		25		ns

	-	-8		-10	
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t CKH	1		1		ns
^t CKS	2.5		2.5		ns
^t CMH	1		1		ns
^t CMS	2.5		2.5		ns
^t DH	1		1		ns
^t DS	2.5		2.5		ns
^t RCD	20		20		ns





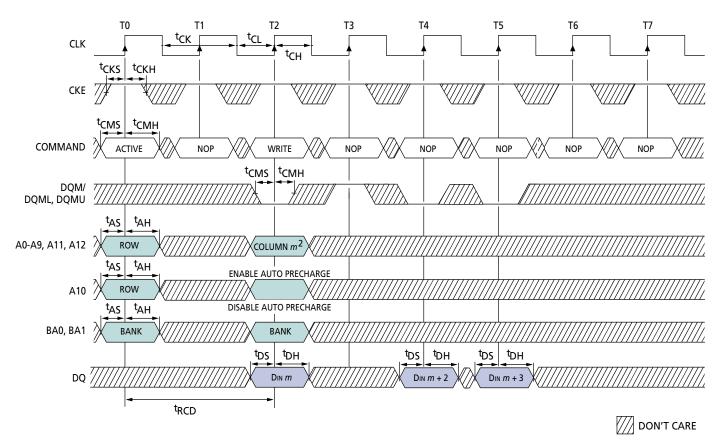

NOTE: 1. For this example, the burst length = 4. 2. x16: A9, A11 and A12 = "Don't Care"

TIMING PARAMETERS


	-	-8		-10	
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t AH	1		1		ns
^t AS	2.5		2.5		ns
^t CH	3		3		ns
^t CL	3		3		ns
^t CK (3)	8		10		ns
^t CK (2)	10		12		ns
^t CK (1)	20		25		ns

	-8		-10		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t CKH	1		1		ns
^t CKS	2.5		2.5		ns
^t CMH	1		1		ns
^t CMS	2.5		2.5		ns
^t DH	1		1		ns
^t DS	2.5		2.5		ns
^t RCD	20		20		ns





54-PIN PLASTIC TSOP (400 mil)

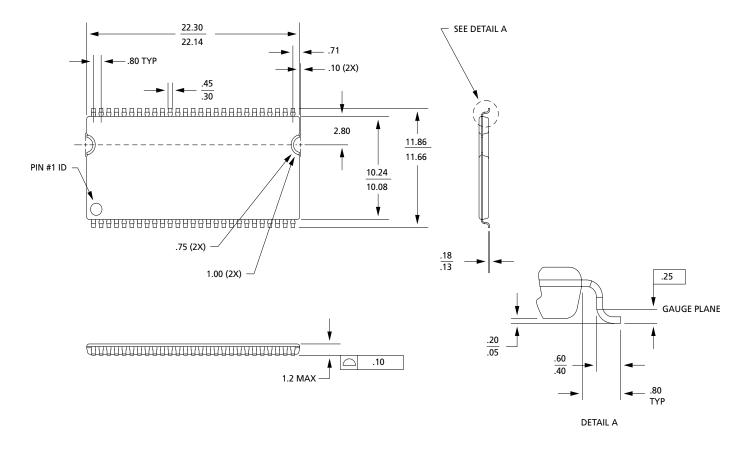


NOTE: 1. All dimensions in millimeters or typical where noted.

2. Package width and length do not include mold protrusion; allowable mold protrusion is 0.25mm per side.



VFBGA "FG" PACKAGE 54-pin, 8mm x 14mm

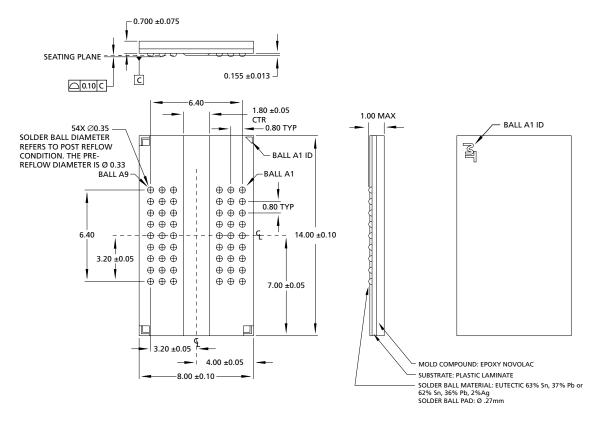

(Bottom View)

NOTE: 1. All dimensions are in millimeters.

Data Sheet Designation

Preliminary: This data sheet contains initial characterization limits that are subject to change upon full characterization of production devices.



8000 S. Federal Way, P.O. Box 6, Boise, ID 83707-0006, Tel: 208-368-3900 E-mail: prodmktg@micron.com, Internet: http://www.micron.com, Customer Comment Line: 800-932-4992 Micron, the M logo, and the Micron logo are trademarks and/or service marks of Micron Technology, Inc. All other trademarks are the property of their respective owners.