TENTATIVE TOSHIBA MOS DIGITAL INTEGRATED CIRCUIT SILICON GATE CMOS

16 GBIT (4G × 8 BIT) CMOS NAND E<sup>2</sup>PROM (Multi-Level-Cell)

## **DESCRIPTION**

The TC58NVG4D2 is a single 3.3 V 16 Gbit (18,367,119,360 bits) NAND Electrically Erasable and Programmable Read-Only Memory (NAND  $E^2PROM$ ) organized as (8192 + 448) bytes  $\times$  128 pages  $\times$  2076 blocks.

The device has two 8640-byte static registers which allow program and read data to be transferred between the register and the memory cell array in 8640-byte increments. The Erase operation is implemented in a single block unit (1 Mbytes  $\pm$  56 Kbytes: 8640 bytes  $\pm$  128 pages).

The TC58NVG4D2 is a serial-type memory device which utilizes the I/O pins for both address and data input/output as well as for command inputs. The Erase and Program operations are automatically executed making the device most suitable for applications such as solid-state file storage, voice recording, image file memory for still cameras and other systems which require high-density non-volatile memory data storage.

#### **FEATURES**

Organization

TC58NVG4D2F

 $Memory \ cell \ array \quad \ 8640 \times 259.5K \times 8$ 

 $\begin{array}{lll} \text{Register} & 8640 \times 8 \\ \text{Page size} & 8640 \text{ bytes} \\ \text{Block size} & (1M + 56 \text{ K}) \text{ bytes} \end{array}$ 

Modes

Read, Reset, Auto Page Program, Auto Block Erase, Status Read, Page Copy, Multi Page Program, Multi Block Erase, Multi Page Copy, Multi Page Read

• Mode control

Serial input/output

Command control

· Number of valid blocks

Min 1968 blocks Max 2076 blocks

Power supply

 $V_{CC} = 2.7 \text{ V to } 3.6 \text{ V}$ 

• Access time

Cell array to register  $250 \mu s$  max Serial Read Cycle 25 ns min

• Program/Erase time

Auto Page Program
Auto Block Erase
1600 

µs/page typ.
4 ms/block typ.

Operating current


Read (25 ns cycle)
Program (avg.)
Erase (avg.)
Standby
TBD (50 mA max.)
TBD (50 mA max.)
TBD (50 mA max.)

Package

(Weight: TBD g typ.)

• FOR RELIABILITY GUIDANCE, PLEASE REFER TO THE APPLICATION NOTES AND COMMENTS (17). 24 bit ECC for each 1024 bytes is required.


# **PIN ASSIGNMENT (TOP VIEW)**

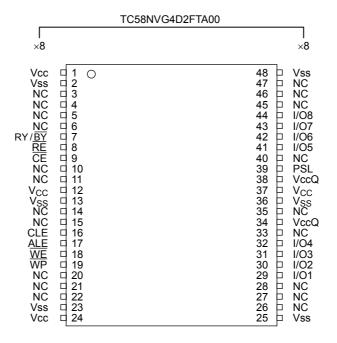

# **PIN NAMES**

I/O1 ~ I/O8	I/O port
CE	Chip enable
WE	Write enable
RE	Read enable
CLE	Command latch enable
ALE	Address latch enable
PSL	Power on select
WP	Write protect
RY/BY	Ready/Busy
V <sub>CC</sub>	Power supply
V <sub>CCQ</sub>	I/O port powe supply
V <sub>SS</sub>	Ground
N.C	No connection

# **BLOCK DIAGRAM**

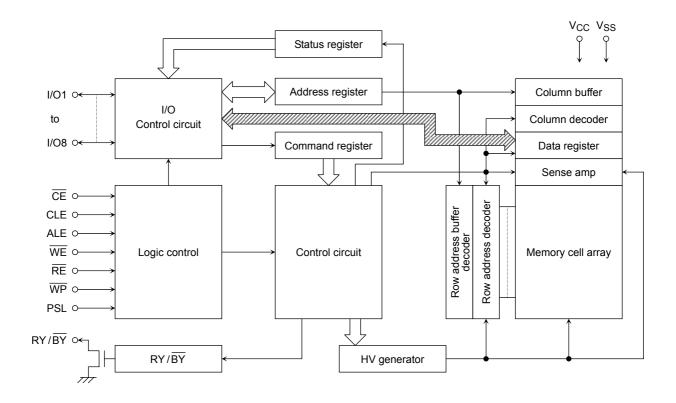

## **ABSOLUTE MAXIMUM RATINGS**

SYMBOL	RATING	VALUE	UNIT
V <sub>CC</sub>	Power Supply Voltage	-0.6 to 4.6	V
$V_{IN}$	Input Voltage	-0.6 to 4.6	V
V <sub>I/O</sub>	Input /Output Voltage	$-0.6~V$ to $V_{CC}+0.3~V~(\leq 4.6~V)$	V
$P_{D}$	Power Dissipation	0.3	W
T <sub>SOLDER</sub>	Soldering Temperature (10 s)	260	°C
T <sub>STG</sub>	Storage Temperature	-55 to 150	°C
T <sub>OPR</sub>	Operating Temperature	0 to 70	°C

## **CAPACITANCE** \*(Ta = 25°C, f = 1 MHz)

SYMB0L	PARAMETER	CONDITION	MIN	MAX	UNIT
C <sub>IN</sub>	Input	$V_{IN} = 0 V$	_	10	pF
C <sub>OUT</sub>	Output	V <sub>OUT</sub> = 0 V	_	10	pF

<sup>\*</sup> This parameter is periodically sampled and is not tested for every device.

## **VALID BLOCKS**

SYMBOL	PARAMETER	MIN	TYP.	MAX	UNIT
$N_{VB}$	Number of Valid Blocks	1968	_	2076	Blocks

NOTE: The device occasionally contains unusable blocks. Refer to Application Note (13) toward the end of this document.

The first block (Block 0) is guaranteed to be a valid block at the time of shipment.

The specification for the minimum number of valid blocks is applicable over the device lifetime.

### RECOMMENDED DC OPERATING CONDITIONS

SYMBOL	PAI	MIN	TYP.	MAX	UNIT	
V <sub>CC</sub>	Power Supply Voltage	2.7 V	_	3.6 V	٧	
VIH	High Level input Voltage	$2.7 \text{ V} \le \text{V}_{CC} \le 3.6 \text{ V}$	0.8 x Vcc	_	V <sub>CC</sub> + 0.3	V
VIL	Low Level Input Voltage	$2.7 \text{ V} \le \text{V}_{CC} \le 3.6 \text{ V}$	-0.3*	_	0.2 x Vcc	V

<sup>\* -2</sup> V (pulse width lower than 20 ns)

# DC CHARACTERISTICS (Ta = 0 to 70 , V<sub>CC</sub> = 2.7 V to 3.6 V)

SYMBOL	PARAMETER	CONDITION	MIN	TYP.	MAX	UNIT
I <sub>IL</sub>	Input Leakage Current	V <sub>IN</sub> = 0 V to V <sub>CC</sub>	_	_	±10	μА
I <sub>LO</sub>	Output Leakage Current	V <sub>OUT</sub> = 0 V to V <sub>CC</sub>		_	±10	μА
		PSL = GND or NU		_	TBD	
I <sub>CCO0*</sub>	Power On Reset Current	PSL = V <sub>CC</sub> , FFh command input after Power On	_	_	TBD	mA
I <sub>CCO1</sub>	Serial Read Current	$\overline{CE} = V_{IL}$ , $I_{OUT} = 0$ mA, tcycle = 30 ns	_	_	TBD	mA
I <sub>CCO2</sub>	Programming Current	_	_	_	TBD	mA
I <sub>CCO3</sub>	Erasing Current	_	_	_	TBD	mA
Iccs	Standby Current	$\overline{\text{CE}} = V_{\text{CC}} - 0.2 \text{ V}, \ \overline{\text{WP}} = 0 \text{ V/V}_{\text{CC}},$ $PSL = 0 \text{ V/V}_{\text{CC}}/\text{NU}$	_	_	100	μА
V <sub>OH</sub>	High Level Output Voltage	$I_{OH} = -0.4 \text{ mA } (2.7 \text{ V} \le V_{CC} \le 3.6 \text{ V})$	2.4	_	_	V
V <sub>OL</sub>	Low Level Output Voltage	$I_{OL} = 2.1 \text{ mA } (2.7 \text{ V} \le V_{CC} \le 3.6 \text{ V})$	_	_	0.4	V
I <sub>OL</sub> (RY/ <del>BY</del> )	Output current of RY/BY pin	$V_{OL} = 0.4 \text{ V } (2.7 \text{ V} \le V_{CC} \le 3.6 \text{ V})$		8	_	mA

<sup>\*</sup> Refer to application note (2) for detail

<sup>\*</sup> The number of valid blocks includes extended blocks.

# **AC CHARACTERISTICS AND RECOMMENDED OPERATING CONDITIONS**

 $(Ta = 0 \text{ to } 70 \text{ , } V_{CC} = 2.7 \text{ V to } 3.6 \text{ V})$ 

SYMBOL	PARAMETER	MIN	MAX	UNIT
t <sub>CLS</sub>	CLE Setup Time	0	_	ns
t <sub>CLS2</sub>	CLE Setup Time	30	_	ns
t <sub>CLH</sub>	CLE Hold Time	5	_	ns
t <sub>CS</sub>	CE Setup Time	8	_	ns
t <sub>CS2</sub>	CE Setup Time	20	_	ns
tcH	CE Hold Time	5	_	ns
t <sub>WP</sub>	Write Pulse Width	12	_	ns
t <sub>ALS</sub>	ALE Setup Time	0	_	ns
t <sub>ALH</sub>	ALE Hold Time	5	_	ns
t <sub>DS</sub>	Data Setup Time	10	_	ns
t <sub>DH</sub>	Data Hold Time	5	_	ns
t <sub>WC</sub>	Write Cycle Time	25	_	ns
t <sub>WH</sub>	WE High Hold Time	10	_	ns
t <sub>WHW</sub> *	WE High Hold Time from final address to first data	120	_	ns
t <sub>WW</sub>	WP High to WE Low	100	_	ns
t <sub>RR</sub>	Ready to RE Falling Edge	20	_	ns
t <sub>RW</sub>	Ready to WE Falling Edge	20	_	ns
t <sub>RP</sub>	Read Pulse Width	12	_	ns
t <sub>RC</sub>	Read Cycle Time	25	_	ns
t <sub>REA</sub>	RE Access Time	_	20	ns
t <sub>CR</sub>	CE Low to RE Low	10	_	ns
t <sub>CLR</sub>	CLE Low to RE Low	10	_	ns
t <sub>AR</sub>	ALE Low to RE Low	10	_	ns
t <sub>RHOH</sub>	Data Output Hold Time from RE High	25	_	ns
t <sub>RLOH</sub>	Data Output Hold Time from RE Low	5	_	ns
t <sub>RHZ</sub>	RE High to Output High Impedance	_	60	ns
t <sub>CHZ</sub>	CE High to Output High Impedance	_	30	ns
t <sub>CLHZ</sub>	CLE High to Output High Impedance	_	30	ns
t <sub>REH</sub>	RE High Hold Time	10	_	ns
t <sub>IR</sub>	Output-High-impedance-to- RE Falling Edge	0	_	ns
t <sub>RHW</sub>	RE High to WE Low	30	_	ns
t <sub>WHC</sub>	WE High to CE Low	30	_	ns
t <sub>WHR1</sub>	WE High to RE Low (Status Read)	180	_	ns
t <sub>WHR2</sub>	WE High to RE Low (Column Address Change in Read)	300	_	ns
t <sub>R</sub>	Memory Cell Array to Starting Address	_	250	μS
t <sub>DCBSYR1</sub>	Data Cache Busy in Read Cache (following 31h and 3Fh)	_	250	μS
t <sub>DCBSYR2</sub>	Data Cache Busy in Page Copy (following 3Ah)	_	255	<u>.</u> μs
t <sub>WB</sub>	WE High to Busy	_	100	ns
t <sub>RST</sub>	Device Reset Time (Ready/Read/Program/Erase)	_	10/10/30/500	μS
1.01		1		r

<sup>\*</sup> tWHW is the time from the  $\overline{WE}$  rising edge of final address cycle to the  $\overline{WE}$  falling edge of first data cycle.

#### **AC TEST CONDITIONS**

PARAMETER	CONDITION			
FANAIVILILIN	$2.7~\text{V} \leq \text{V}_{CC} \leq 3.6~\text{V}$			
Input level	0 V to V <sub>CC</sub>			
Input pulse rise and fall time	3ns			
Input comparison level	V <sub>CC</sub> /2			
Output data comparison level	V <sub>CC</sub> /2			
Output load	C <sub>L</sub> (50 pF) + 1 TTL			

Note: Busy to ready time depends on the pull-up resistor tied to the  $RY/\overline{BY}$  pin. (Refer to Application Note (9) toward the end of this document.)

# PROGRAMMING AND ERASING CHARACTERISTICS (Ta = 0 to 70 , $V_{CC}$ = 2.7 V to 3.6 V)

SYMBOL	PARAMETER	MIN	TYP.	MAX	UNIT	NOTES
t <sub>PROG</sub>	Average Programming Time	_	1600	3000	μS	
t <sub>DCBSYW1</sub>	Data Cache Busy Time in Write Cache (following 11h)	_	_	10	μs	
t <sub>DCBSYW2</sub>	Data Cache Busy Time in Write Cache (following 15h)	_	_	3000	μs	(2)
N	Number of Partial Program Cycles in the Same Page	_	_	_		(1)
t <sub>BERASE</sub>	Block Erasing Time	_	4	10	ms	

<sup>(1)</sup> Refer to Application Note (12) toward the end of this document.


#### **Data Output**

When tREH is long, output buffers are disabled by /RE=High, and the hold time of data output depend on tRHOH (25 ns MIN). On this condition, waveforms look like normal serial read mode. When tREH is short, output buffers are not disabled by /RE=High, and the hold time of data output depend on tRLOH (5ns MIN). On this condition, output buffers are disabled by the rising edge of CLE, ALE, /CE or falling edge of /WE, and waveforms look like Extended Data Output Mode.


<sup>(2)</sup> t<sub>DCBSYW2</sub> depends on the timing between internal programming time and data in time.

# **TIMING DIAGRAMS**


## Latch Timing Diagram for Command/Address/Data

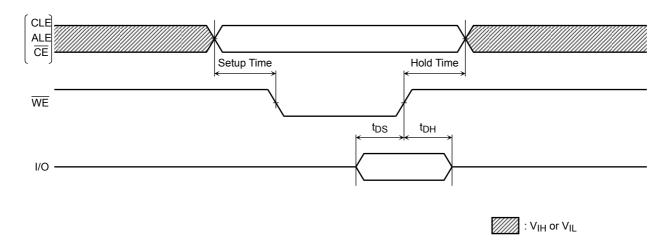

# Command Input Cycle Timing Diagram

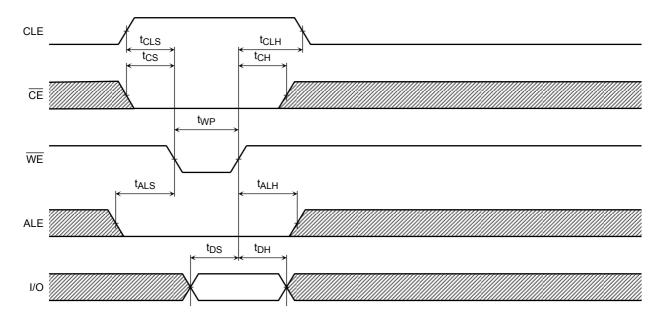


## Address Input Cycle Timing Diagram

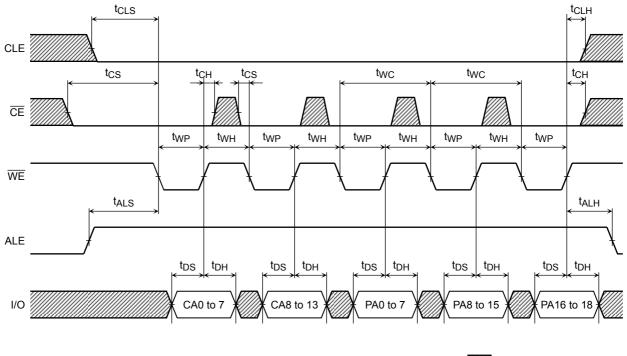


# : V<sub>IH</sub> or V<sub>IL</sub>


# **Data Input Cycle Timing Diagram**

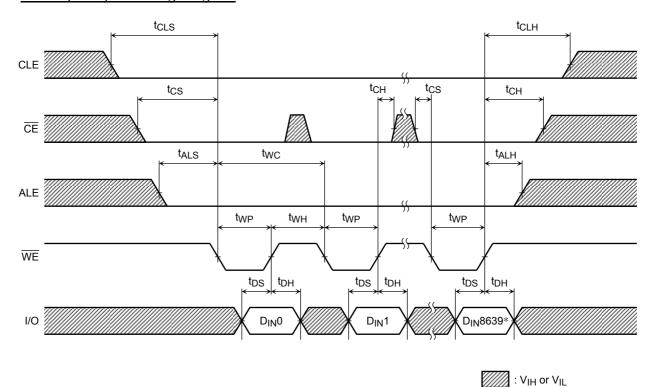

## Serial Read Cycle Timing Diagram

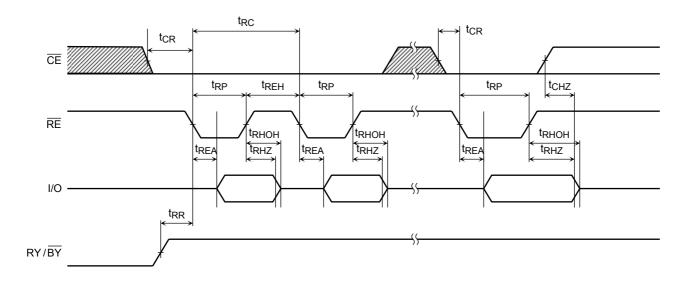


## Status Read Cycle Timing Diagram

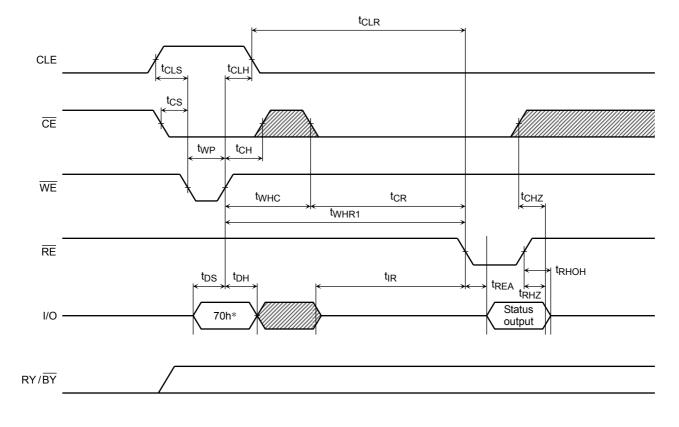


\*: 70h represents the hexadecimal number

: V<sub>IH</sub> or V<sub>IL</sub>


# Read Cycle Timing Diagram

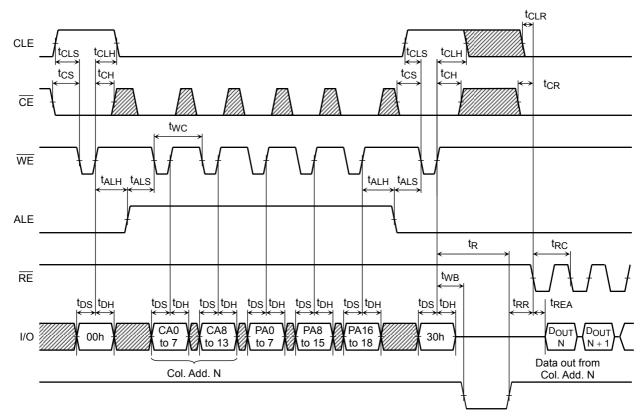


# Read Cycle Timing Diagram: When Interrupted by $\overline{\text{CE}}$

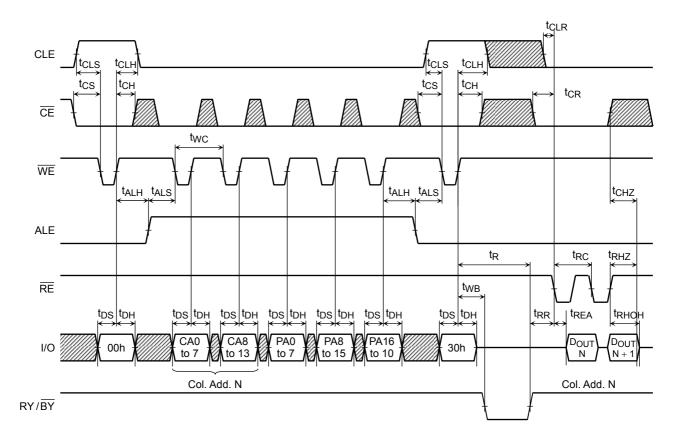

# Read Cycle with Data Cache Timing Diagram (1/2)

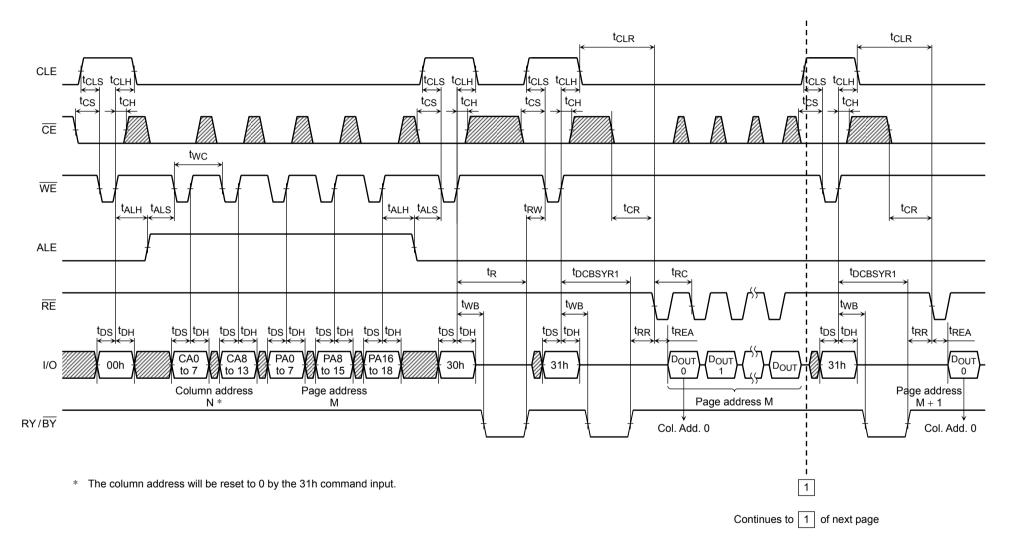


## Read Cycle with Data Cache Timing Diagram (2/2)

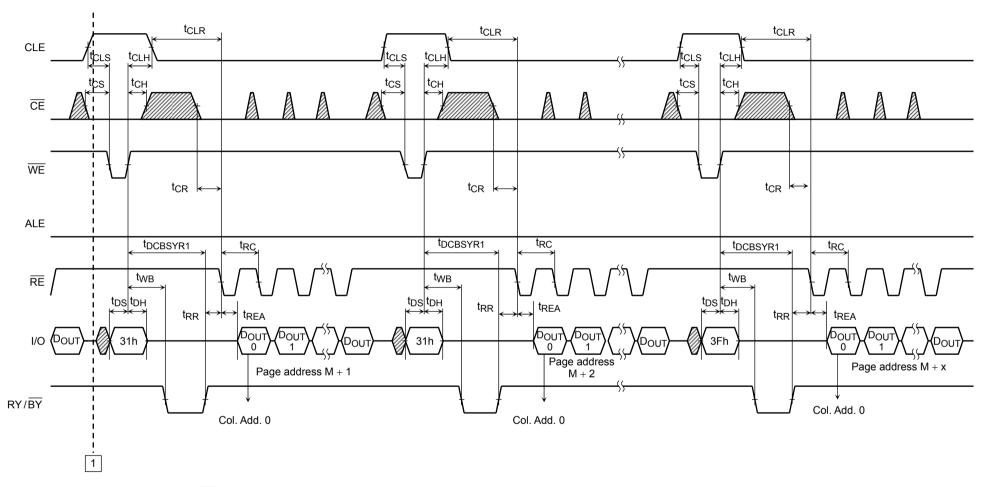

Continues from 1 of last page


(Note) Make sure to terminate the operation with 3Fh command.

## Column Address Change in Read Cycle Timing Diagram (1/2)

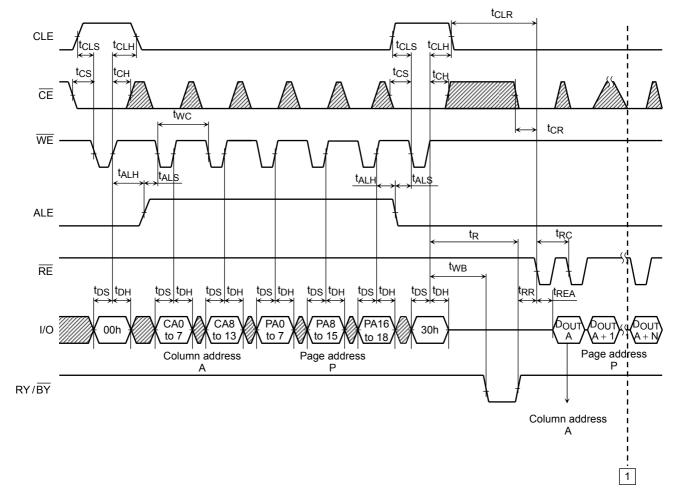


Continues from 1 of next page


## Column Address Change in Read Cycle Timing Diagram (2/2)

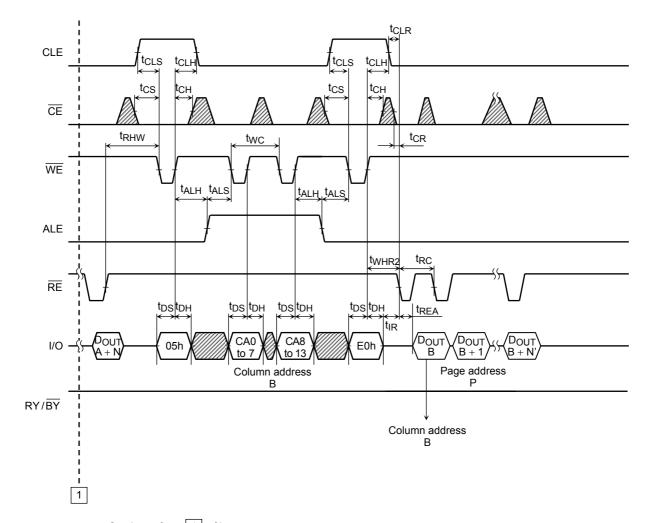

# **Data Output Timing Diagram**

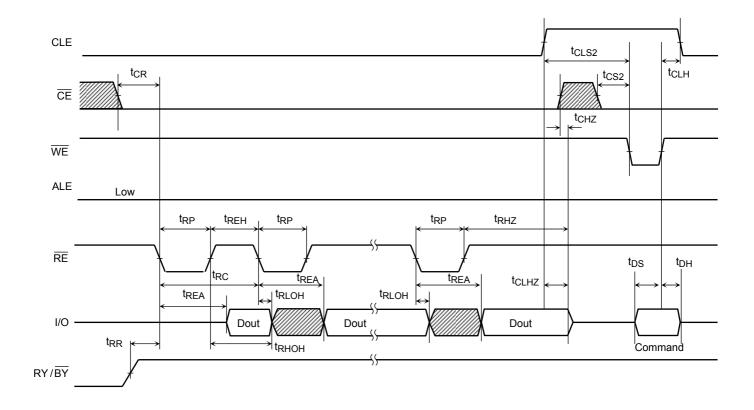

## **Auto-Program Operation Timing Diagram**

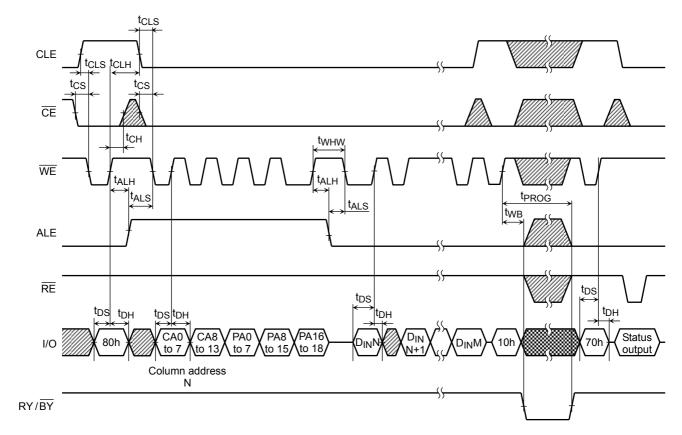


: Do not input data while data is being output.


: V<sub>IH</sub> or V<sub>IL</sub>

\*) M: up to 8639

## Auto-Program Operation with Data Cache Timing Diagram (1/3)

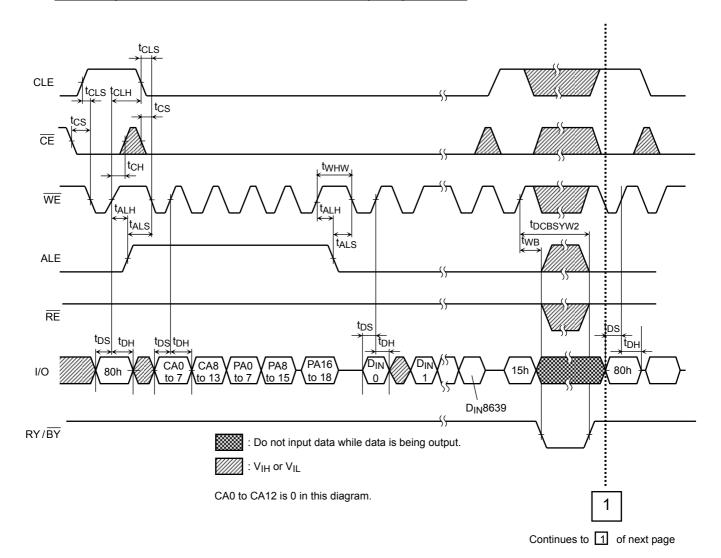

## Auto-Program Operation with Data Cache Timing Diagram (2/3)

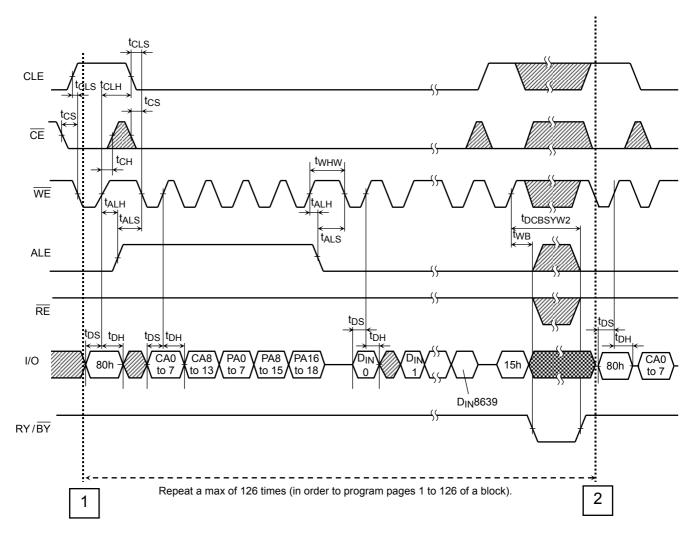


Continued from 1 of last page

: Do not input data while data is being output.

: V<sub>IH</sub> or V<sub>IL</sub>

### Auto-Program Operation with Data Cache Timing Diagram (3/3)

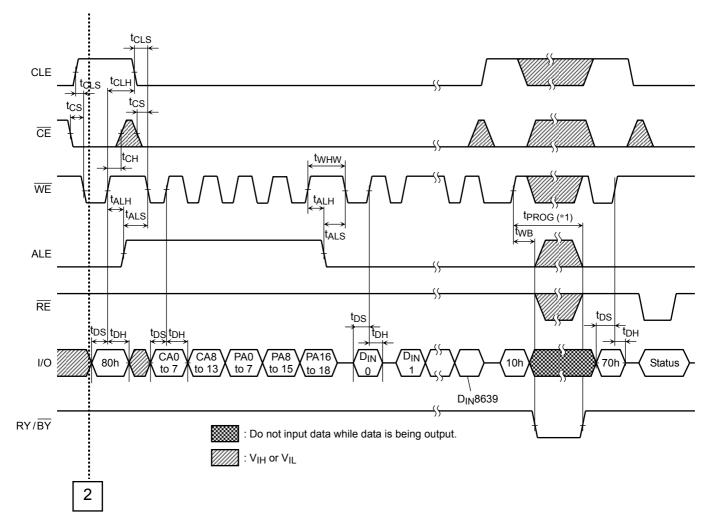


Continued from 2 of last page

(\*1) t<sub>PROG</sub>: Since the last page programming by 10h command is initiated after the previous cache program, the t<sub>PROG</sub> during cache programming is given by the following equation.


 $t_{PROG} = t_{PROG}$  of the last page +  $t_{PROG}$  of the previous page - A A = (command input cycle + address input cycle + data input cycle time of the last page)

If "A" exceeds the  $t_{PROG}$  of previous page,  $t_{PROG}$  of the last page is  $t_{PROG}$  max.

# Multi-Page Program Operation with Data Cache Timing Diagram (1/4)

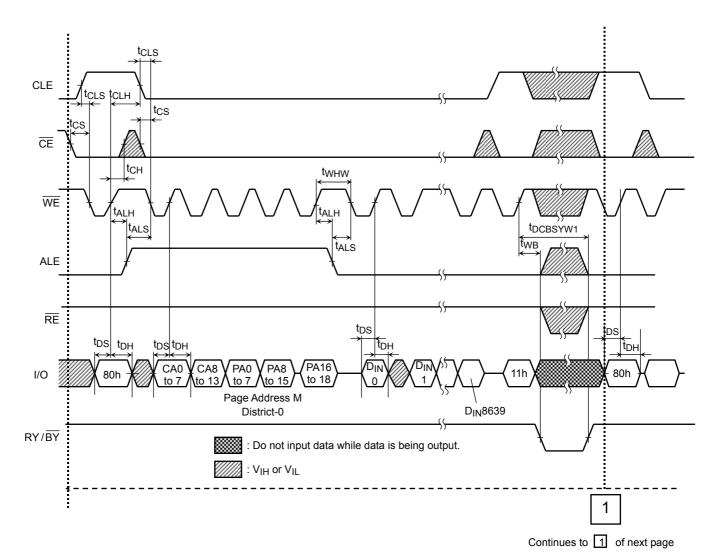

# Multi-Page Program Operation with Data Cache Timing Diagram (2/4)

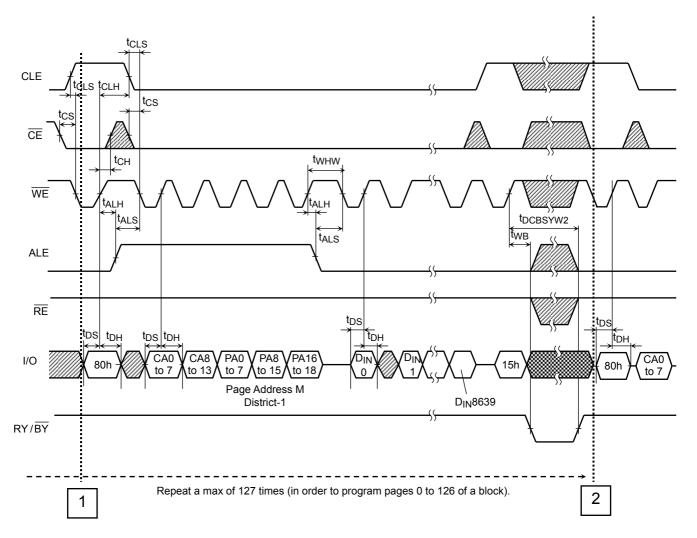


Continued from 1 of last page


: Do not input data while data is being output.

: V<sub>IH</sub> or V<sub>IL</sub>

# Multi-Page Program Operation with Data Cache Timing Diagram (3/4)

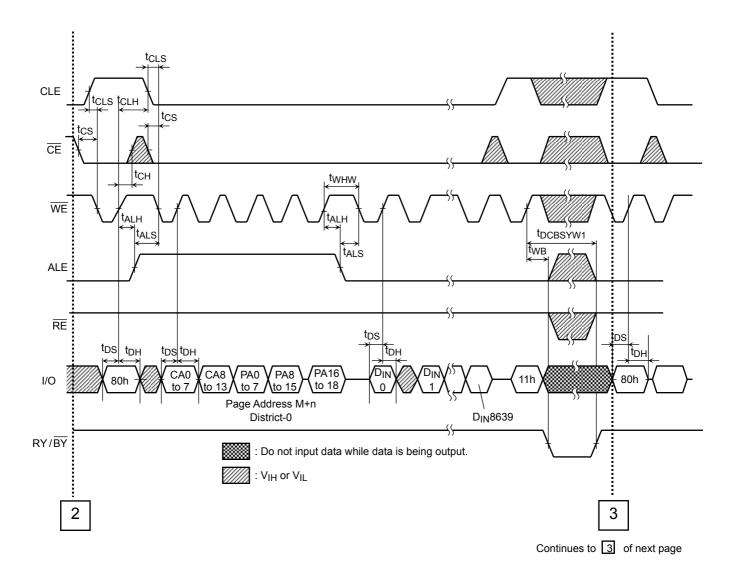

#### Multi-Page Program Operation with Data Cache Timing Diagram (4/4)

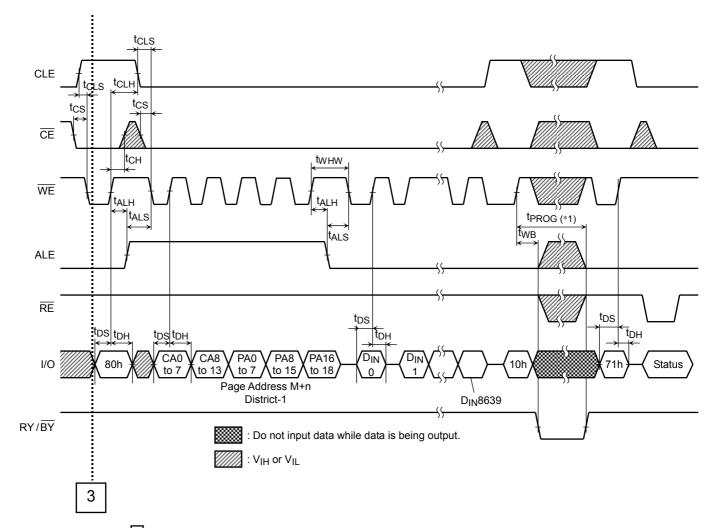

Continued from 3 of last page

(\*1) tpROG: Since the last page programming by 10h command is initiated after the previous cache program, the tpROG during cache programming is given by the following equation.


 $t_{PROG} = t_{PROG}$  of the last page +  $t_{PROG}$  of the previous page - A A = (command input cycle + address input cycle + data input cycle time of the last page)

If "A" exceeds the tPROG of previous page, tPROG of the last page is tPROG max.


(Note) Make sure to terminate the operation with 80h-10h command sequence.

If the operation is terminated by 80h-15h command sequence, monitor I/O 6 (Ready / Busy) by issuing Status Read command (70h) and make sure the previous page program operation is completed. If the page program operation is completed issue FFh reset before next operation.


# Auto Block Erase Timing Diagram

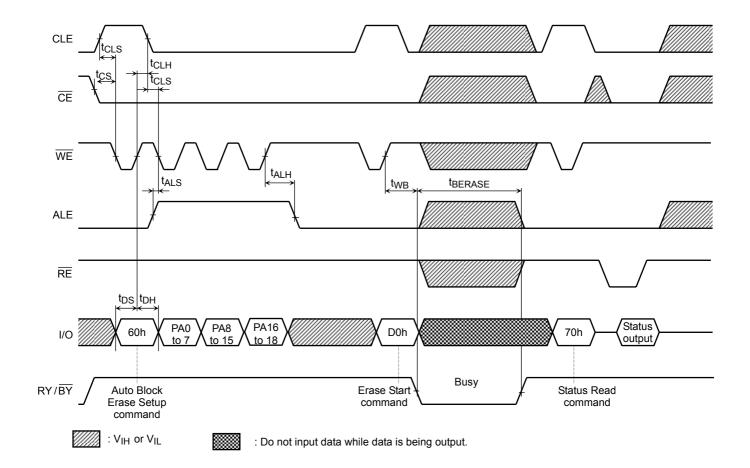

# Multi Block Erase Timing Diagram

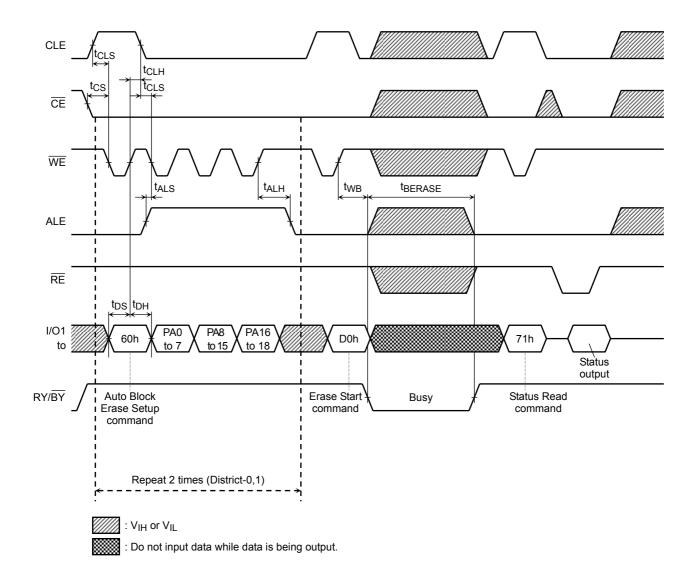

# **ID Read Operation Timing Diagram**

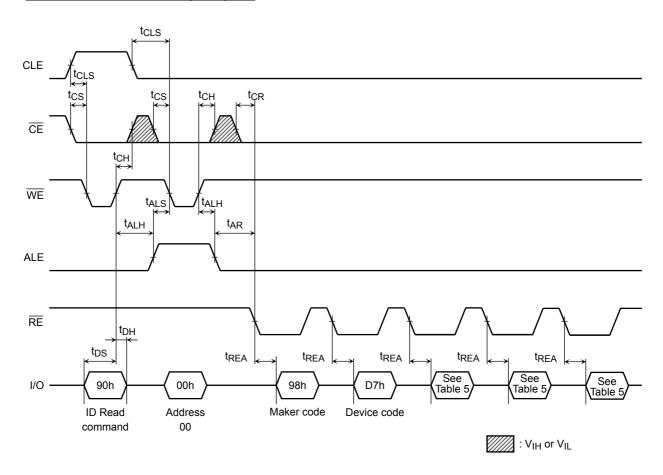

#### PIN FUNCTIONS

The device is a serial access memory which utilizes time-sharing input of address information.

#### Command Latch Enable: CLE

The CLE input signal is used to control loading of the operation mode command into the internal command register. The command is latched into the command register from the I/O port on the rising edge of the  $\overline{WE}$  signal while CLE is High.

#### Address Latch Enable: ALE

The ALE signal is used to control loading address information into the internal address register. Address information is latched into the address register from the I/O port on the rising edge of  $\overline{WE}$  while ALE is High.

## Chip Enable: CE

The device goes into a low-power Standby mode when  $\overline{CE}$  goes High during the device is in Ready state. The  $\overline{CE}$  signal is ignored when device is in Busy state (RY/ $\overline{BY}$  = L), such as during a Program or Erase or Read operation, and will not enter Standby mode even if the  $\overline{CE}$  input goes High.

#### Write Enable: WE

The WE signal is used to control the acquisition of data from the I/O port.

#### Read Enable: RE

The  $\overline{RE}$  signal controls serial data output. Data is available  $t_{REA}$  after the falling edge of  $\overline{RE}$ . The internal column address counter is also incremented (Address = Address + l) on this falling edge.

#### I/O Port: I/O1 to 8

The I/O1 to 8 pins are used as a port for transferring address, command and input/output data to and from the device.

#### Write Protect: WP

The  $\overline{WP}$  signal is used to protect the device from accidental programming or erasing. The internal voltage regulator is reset when  $\overline{WP}$  is Low. This signal is usually used for protecting the data during the power-on/off sequence when input signals are invalid.

### Ready/Busy: RY/BY


The  $RY/\overline{BY}$  output signal is used to indicate the operating condition of the device. The  $RY/\overline{BY}$  signal is in Busy state  $(RY/\overline{BY}=L)$  during the Program, Erase and Read operations and will return to Ready state  $(RY/\overline{BY}=H)$  after completion of the operation. The output buffer for this signal is an open drain and has to be pulled-up to Vcc with an appropriate resister.

## Power on Select: PSL

The PSL signal is used to select whether the device initialization should take place during the device power on or during the first Reset. Please refer to the application note (2) for details.

## Schematic Cell Layout and Address Assignment

The Program operation works on page units while the Erase operation works on block units.

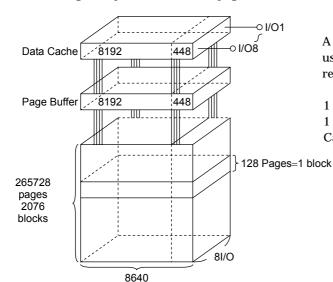

A page consists of 8640 bytes in which 8192 bytes are used for main memory storage and 448 bytes are for redundancy or for other uses.

1 page = 8640 bytes 1 block = 8640 bytes  $\times$  128 pages = (1M + 56K) bytes Capacity = 8640 bytes  $\times$  128pages  $\times$  2076 blocks

Table 1. Addressing


	I/O8	1/07	1/06	I/O5	I/O4	I/O3	I/O2	I/O1
First cycle	CA7	CA6	CA5	CA4	CA3	CA2	CA1	CA0
Second cycle	L	L	CA13	CA12	CA11	CA10	CA9	CA8
Third cycle	PA7	PA6	PA5	PA4	PA3	PA2	PA1	PA0
Fourth cycle	PA15	PA14	PA13	PA12	PA11	PA10	PA9	PA8
Fifth cycle	L	L	L	L	L	PA18	PA17	PA16

CA0 to CA13: Column address PA0 to PA18: Page address

PA7 to PA18: Block address
PA0 to PA6: NAND address in block

## **Extended Blocks Arrangement**

The device has 28 extended blocks to increase valid blocks. Extended blocks can be accessed by the following addressing.

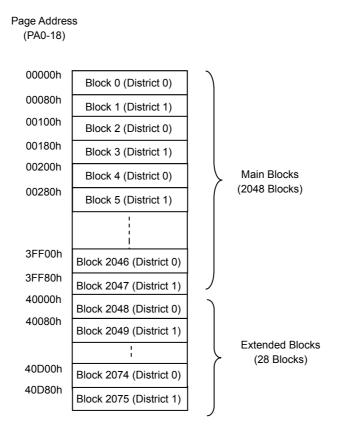

### Operation Mode: Logic and Command Tables

The operation modes such as Program, Erase, Read and Reset are controlled by command operations shown in Table 3. Address input, command input and data input/output are controlled by the CLE, ALE,  $\overline{CE}$ ,  $\overline{WE}$ ,  $\overline{RE}$  and  $\overline{WP}$  signals, as shown in Table 2.

Table 2. Logic Table

	CLE	ALE	CE	WE	RE	₩P *1	PSL*3
Command Input	Н	L	L		Н	*	0V/ V <sub>CC/</sub> NU
Data Input	L	L	L	F	Н	Н	0V/ V <sub>CC/</sub> NU
Address input	L	Н	L	7	Н	*	0V/ V <sub>CC/</sub> NU
Serial Data Output	L	L	L	Н	7	*	0V/ V <sub>CC/</sub> NU
During Program (Busy)	*	*	*	*	*	Н	0V/ V <sub>CC/</sub> NU
During Erase (Busy)	*	*	*	*	*	Н	0V/ V <sub>CC/</sub> NU
During Bood (Busy)	*	*	Н	*	*	*	0V/ V <sub>CC/</sub> NU
During Read (Busy)	*	*	L	H (*2)	H (*2)	*	0V/ V <sub>CC/</sub> NU
Program, Erase Inhibit	*	*	*	*	*	L	0V/ V <sub>CC</sub> / NU
Standby	*	*	Н	*	*	0 V/V <sub>CC</sub>	0V/ V <sub>CC/</sub> NU

H: VIH, L: VIL, \*: VIH or VIL

<sup>\*1:</sup> Refer to Application Note (10) toward the end of this document regarding the WP signal when Program or Erase Inhibit

<sup>\*2:</sup> If  $\overline{\mathsf{CE}}$  is low during read busy,  $\overline{\mathsf{WE}}$  and  $\overline{\mathsf{RE}}$  must be held High to avoid unintended command/address input to the device or read to device. Reset or Status Read command can be input during Read Busy.

<sup>\*3:</sup> PSL must be tied to either 0V or Vcc, or left unconnected (NU).

Table 3. Command table (HEX)

	First Cycle	Second Cycle	Acceptable while Busy
Serial Data Input	80	_	
Read	00	30	
Column Address Change in Serial Data Output	05	E0	
Read with Data Cache	31	_	
Read Start for Last Page in Read Cycle with Data Cache	3F	_	
Auto Page Program	80	10	
Column Address Change in Serial Data Input	85	_	
Auto Program with Data Cache	80	15	
Multi Page Program	80	11	
Read for Page Copy (2)	00	3A	
Auto Program with Data Cache during Page Copy (2)	8C	15	
Auto Program for last page during Page Copy (2)	8C	10	
Auto Block Erase	60	D0	
ID Read	90	_	
Status Read	70	_	0
Status Read for Multi-Page Program or Multi Block Erase	71	_	0
Reset	FF	_	0

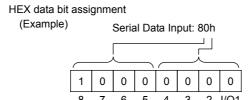


Table 4 shows the operation states for Read mode, when tREH is long.

Table 4. Read mode operation states


	CLE	ALE	CE	WE	RE	I/O1 to I/O8	Power
Output select	L	L	L	Н	L	Data output	Active
Output Deselect	L	L	L	Н	Н	High impedance	Active

H: V<sub>IH</sub>, L: V<sub>IL</sub>


#### **DEVICE OPERATION**

#### Read Mode

Read mode is set when the "00h" and "30h" commands are issued to the Command register. Between the two commands, a start address for the Read mode needs to be issued. Refer to the figures below for the sequence and the block diagram (Refer to the detailed timing chart.).

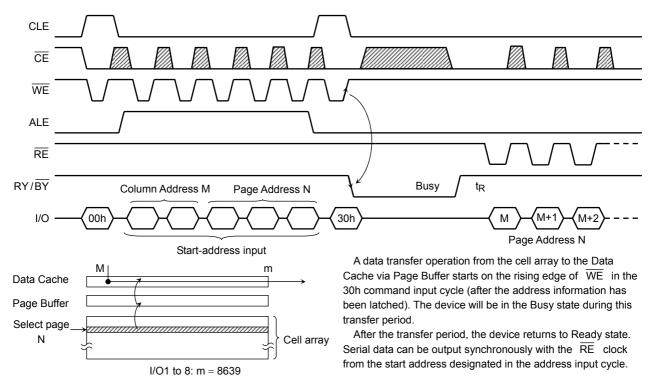

### Random Column Address Change in Read Cycle

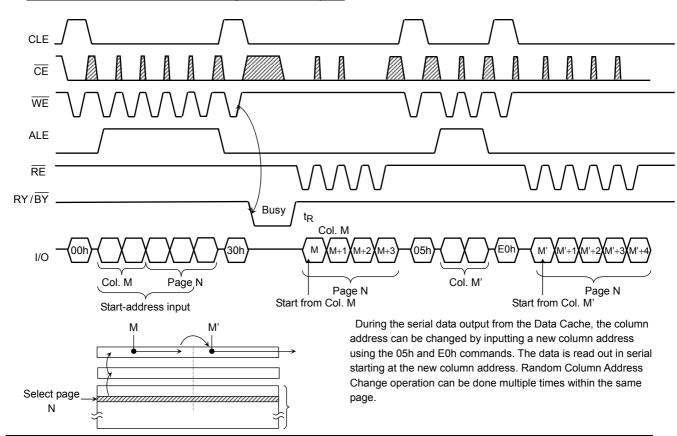

#### Read Operation with Read Cache

The device has a Read operation with Data Cache that enables the high speed read operation shown below. When the block address changes, this sequence has to be started from the beginning. CLE **ALE** RE RY/BY tDCBSYR1 tDCBSYR1 tDCBSYR1 Page N Page Address N + 2 Col. M Page Address N Page Address N + 1 Column 0 Data Cache >Page N Page N + 1 Page N + 2 Page Buffer Page N Page N + 1 Page N + 2 5 3 Page N Page N + 1 Cell Array Page N + 2 31h & RE clock 31h & RE clock 3Fh & RE clock 30h

If the 31h command is issued to the device, the data content of the next page is transferred to the Page Buffer during serial data out from the Data Cache, and therefore the tR (Data transfer from memory cell to data register) will be reduced.

- 1 Normal read. Data is transferred from Page N to Data Cache through Page Buffer. During this time period, the device outputs Busy state for tR max.
- After the Ready/Busy returns to Ready, 31h command is issued and data is transferred to Data Cache from Page Buffer again. This data transfer takes tDCBSYR1 max and the completion of this time period can be detected by Ready/Busy signal.
- 3 Data of Page N + 1 is transferred to Page Buffer from cell while the data of Page N in Data cache can be read out by /RE clock simultaneously.
- The 31h command makes data of Page N + 1 transfer to Data Cache from Page Buffer after the completion of the transfer from cell to Page Buffer. The device outputs Busy state for tDCBSYR1 max..

  This Busy period depends on the combination of the internal data transfer time from cell to Page buffer and the serial data out time.
- 5 Data of Page N + 2 is transferred to Page Buffer from cell while the data of Page N + 1 in Data cache can be read out by /RE clock simultaneously
- The 3Fh command makes the data of Page N + 2 transfer to the Data Cache from the Page Buffer after the completion of the transfer from cell to Page Buffer. The device outputs Busy state for tDCBSYR1 max. This Busy period depends on the combination of the internal data transfer time from cell to Page buffer and the serial data out time.
- 7 Data of Page N + 2 in Data Cache can be read out, but since the 3Fh command does not transfer the data from the memory cell to Page Buffer, the device can accept new command input immediately after the completion of serial data out.


#### Multi Page Read Operation


The device has a Multi Page Read operation and Multi Page Read with Data Cache operation..

#### (1) Multi Page Read without Data Cache

The sequence of command and address input is shown below.

Same page address (PA0 to PA6) within each district has to be selected.

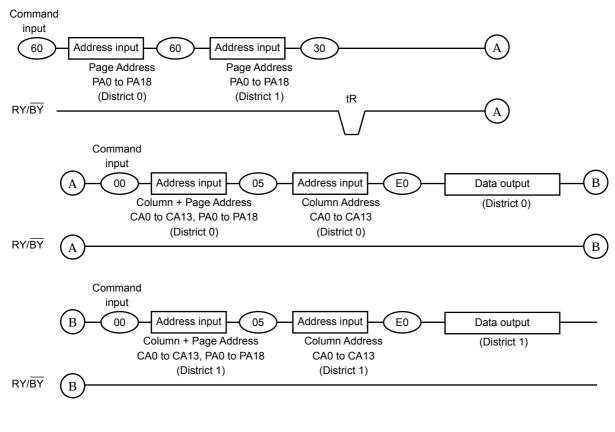

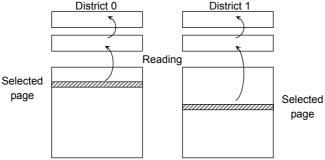

The data transfer operation from the cell array to the Data Cache via Page Buffer starts on the rising edge of  $\overline{WE}$  in the 30h command input cycle (after the 2 Districts address information has been latched). The device will be in the Busy state during this transfer period.


After the transfer period, the device returns to Ready state. Serial data can be output synchronously with the  $\overline{\text{RE}}$  clock from the start address designated in the address input cycle.

#### (2) Multi Page Read with Data Cache

When the block address changes (increments) this sequenced has to be started from the beginning.

The sequence of command and address input is shown below.

Same page address (PA0 to PA6) within each district has to be selected.

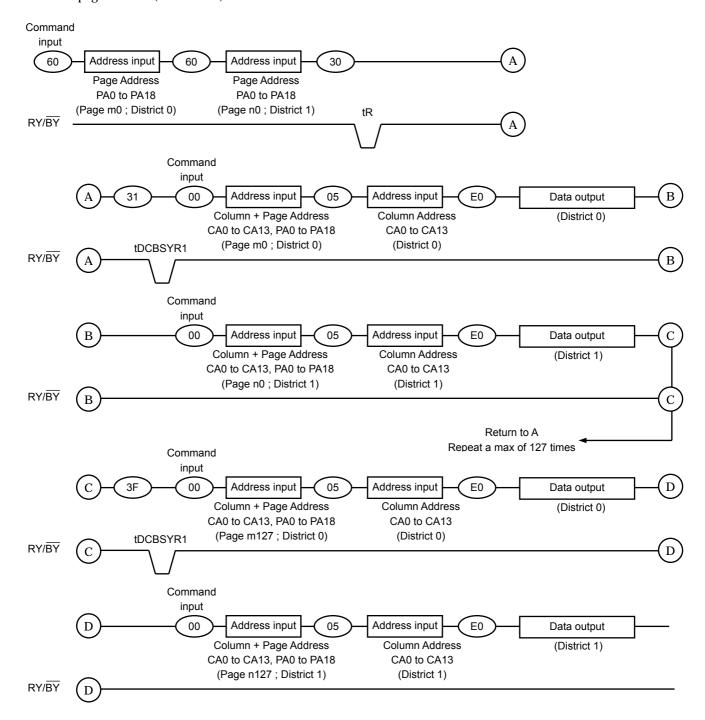

#### (3) Notes

#### (a) Internal addressing in relation with the Districts

To use Multi Page Read operation, the internal addressing should be considered in relation with the District.

- The device consists from 2 Districts.
- Each District consists from 1038 erase blocks.
- The allocation rule is follows.

```
District 0: Block 0, Block 2, Block 4, Block 6,..., Block 2074
District 1: Block 1, Block 3, Block 5, Block 7,..., Block 2075
```

#### (b) Address input restriction for the Multi Page Read operation

There are following restrictions in using Multi Page Read;

#### (Restriction)

Maximum one block should be selected from each District.

Same page address (PA0 to PA6) within two districts has to be selected.

For example;

```
(60) \ [District\ 0,\ Page\ Address\ 0x00000] \quad (60) \ [District\ 1,\ Page\ Address\ 0x00080] \ (30)
```

(60) [District 0, Page Address 0x00001] (60) [District 1, Page Address 0x00081] (30)

#### (Acceptance)

There is no order limitation of the District for the address input.

For example, following operation is accepted;

```
(60) [District 0] (60) [District 1] (30)
```

(60) [District 1] (60) [District 0] (30)


It requires no mutual address relation between the selected blocks from each District.


#### (c) WP signal

Make sure WP is held to High level when Multi Page Read operation is performed

# Auto Page Program Operation

The device carries out an Automatic Page Program operation when it receives a "10h" Program command after the address and data have been input. The sequence of command, address and data input is shown below. (Refer to the detailed timing chart.)

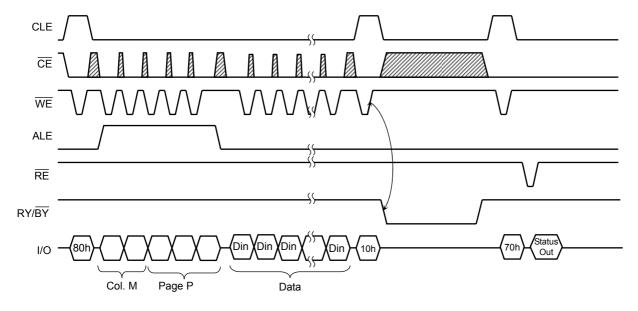

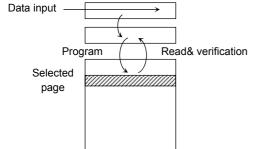


The data is transferred (programmed) from the Data Cache via the Page Buffer to the selected page on the rising edge of  $\overline{\text{WE}}$  following input of the "10h" command. After programming, the programmed data is transferred back to the Page Buffer to be automatically verified by the device. If the programming does not succeed, the Program/Verify operation is repeated by the device until success is achieved or until the maximum loop number set in the device is reached.


### Random Column Address Change in Auto Page Program Operation

The column address can be changed by the 85h command during the data input sequence of the Auto Page Program operation.

Two address input cycles after the 85h command are recognized as a new column address for the data input. After the new data is input to the new column address, the 10h command initiates the actual data program into the selected page automatically. The Random Column Address Change operation can be repeated multiple times within the same page.

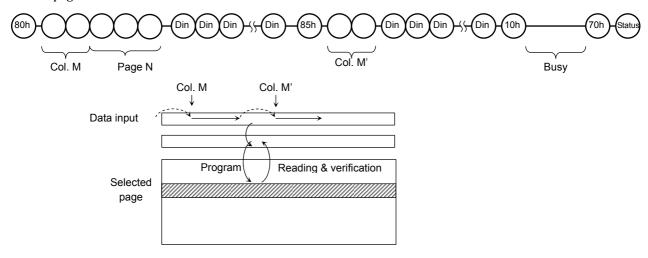


tWHW is the time from the the  $\overline{\text{WE}}$  rising edge of final address cycle to the  $\overline{\text{WE}}$  falling edge of first data cycle.  $\overline{\text{WE}}$  High Hold Time for the final address input after 85h command is also needed more time (tWHW) than tWH.

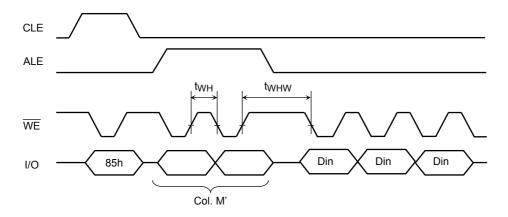

#### Auto Page Program Operation with Data Cache

The device has an Auto Page Program with Data Cache operation enabling the high speed program operation shown below. When the block address changes this sequenced has to be started from the beginning.

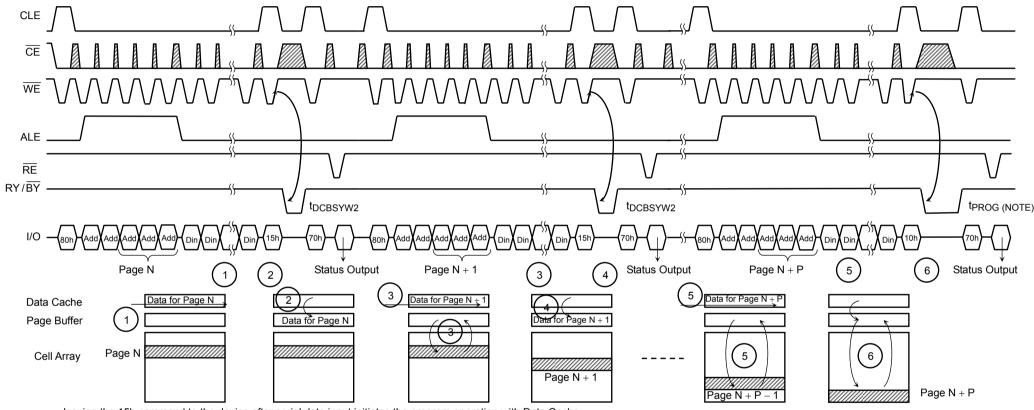

Issuing the 15h command to the device after serial data input initiates the program operation with Data Cache

- 1 Data for Page N is input to Data Cache.
- 2 Data is transferred to the Page Buffer by the 15h command. During the transfer the Ready/Busy outputs Busy State (tDCBSYW2).
- 3 Data is programmed to the selected page while the data for page N + 1 is input to the Data Cache.
- By the 15h command, the data in the Data Cache is transferred to the Page Buffer after the programming of page N is completed. The device output busy state from the 15h command until the Data Cache becomes empty. The duration of this period depends on timing between the internal programming of page N and serial data input for Page N + 1 (t<sub>DCBSYW2</sub>).
- 5 Data for Page N + P is input to the Data Cache while the data of the Page N + P 1 is being programmed.
- The programming with Data Cache is terminated by the 10h command. When the device becomes Ready, it shows that the internal programming of the Page N + P is completed. NOTE: Since the last page programming by the 10h command is initiated after the previous cache program, the tPROG during cache programming is given by the following; tPROG = tPROG for the last page + tPROG of the previous page (command input cycle + address input cycle + data input cycle time of the last page)


Pass/fail status for each page programmed by the Auto Page Programming with Data Cache operation can be detected by the Status Read operation.

- I/O1 : Pass/fail of the current page program operation.
- I/O2 : Pass/fail of the previous page program operation.

The Pass/Fail status on I/O1 and I/O2 are valid under the following conditions.

- Status on I/O1: Page Buffer Ready/Busy is Ready State.
  - The Page Buffer Ready/Busy is output on I/O6 by Status Read operation or  $RY/\overline{BY}$  pin after the 10h command
- Status on I/O2: Data Cache Read/Busy is Ready State.

The Data Cache Ready/Busy is output on I/O7 by Status Read operation or  $RY/\overline{BY}$  pin after the 15h command.

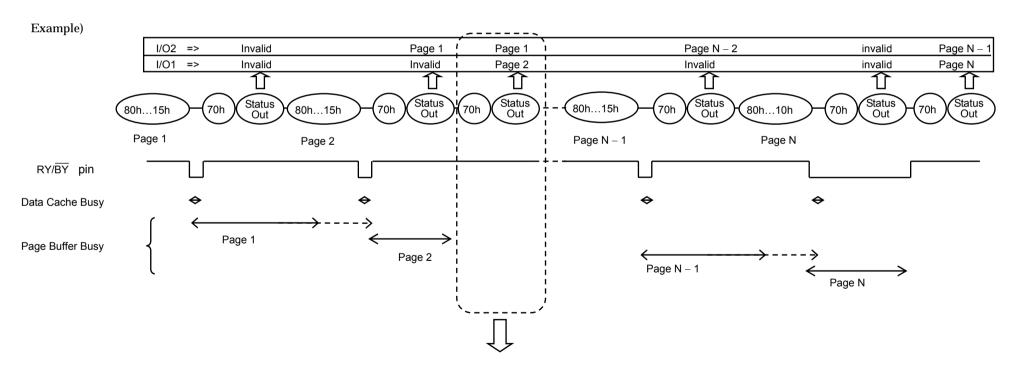


If the Page Buffer Busy returns to Ready before the next 80h command input, and if Status Read is done during this Ready period, the Status Read provides pass/fail for Page 2 on I/O1 and pass/fail result for Page1 on I/O2


### Multi Page Program with Data Cache

The device has a Multi Page Program with Data Cache operation, which enables even higher speed program operation compared to Auto Page Program with Data Cache as shown below. When the block address changes (increments) this sequenced has to be started from the beginning.

The sequence of command, address and data input is shown below. (Refer to the detailed timing chart.)

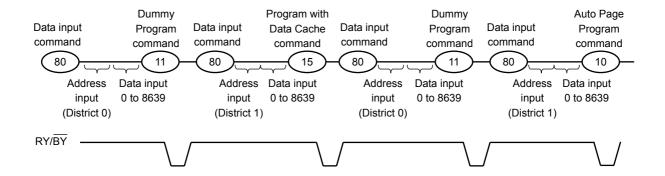


After "15h" or "10h" Program command is input to device, physical programing starts as follows. For details of Auto Program with Data Cache, refer to "Auto Page Program with Data Cache".

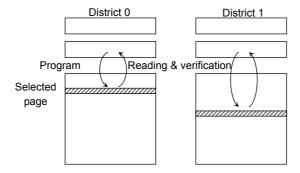


The data is transferred (programmed) from the page buffer to the selected page on the rising edge of -WE following input of the "15h" or "10h" command. After programming, the programmed data is transferred back to the register to be automatically verified by the device. If the programming does not succeed, the Program/Verify operation is repeated by the device until success is achieved or until the maximum loop number set in the device is reached.

Starting the above operation from 1st page of the selected erase blocks, and then repeating the operation total 128 times with incrementing the page address in the blocks, and then input the last page data of the blocks, "10h" command executes final programming. Make sure to terminated with 80h-10h command sequence.

In this full sequence, the command sequence is following.

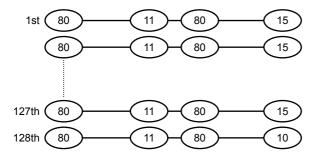

After the "15h" or "10h" command, the results of the above operation is shown through the "71h" Status Read command.

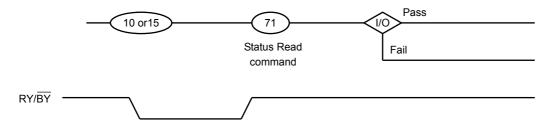

The 71h command Status description is as below.

	STATUS	OUTPUT				
I/O1	Chip Status1 : Pass/Fail	Pass: 0	Fail: 1			
I/O2	District 0 Chip Status1 : Pass/Fail	Pass: 0	Fail: 1			
I/O3	District 1 Chip Status1 : Pass/Fail	Pass: 0	Fail: 1			
I/O4	District 0 Chip Status2 : Pass/Fail	Pass: 0	Fail: 1			
I/O5	District 1 Chip Status2 : Pass/Fail	Pass: 0	Fail: 1			
I/O6	Ready/Busy	Ready: 1	Busy: 0			
I/O7	Data Cache Ready/Busy	Ready: 1	Busy: 0			
I/O8	Write Protect	Protect: 0	Not Protect: 1			

I/O1 describes Pass/Fail condition of district 0 and 1(OR data of I/O2 and I/O3). If one of the districts fails during multi page program operation, it shows "Fail".

I/O2 to 5 shows the Pass/Fail condition of each district. For details on "Chip Status1" and "Chip Status2", refer to section "Status Read".

### Internal addressing in relation with the Districts

To use Multi Page Program operation, the internal addressing should be considered in relation with the District.

- The device consists from 2 Districts.
- Each District consists from 1038 erase blocks.
- The allocation rule is follows.

District 0: Block 0, Block 2, Block 4, Block 6,..., Block 2074 District 1: Block 1, Block 3, Block 5, Block 7,..., Block 2075

### Address input restriction for the Multi Page Program with Data Cache operation

There are following restrictions in using Multi Page Program with Data Cache;

#### (Restriction)

Maximum one block should be selected from each District.

Same page address (PA0 to PA6) within two districts has to be selected.

For example;

(80) [District 0, Page Address 0x00000] (11) (80) [District 1, Page Address 0x00080] (15 or 10) (80) [District 0, Page Address 0x00001] (11) (80) [District 1, Page Address 0x00081] (15 or 10)

#### (Acceptance)

There is no order limitation of the District for the address input.

For example, following operation is accepted;

(80) [District 0] (11) (80) [District 1] (15 or 10)

(80) [District 1] (11) (80) [District 0] (15 or 10)

It requires no mutual address relation between the selected blocks from each District.

### Operating restriction during the Multi Page Program with Data Cache operation

#### (Restriction)


The operation has to be terminated with "10h" command.


Once the operation is started, no commands other than the commands shown in the timing diagram is allowed to be input except for Status Read command and reset command. If FF reset command is input before write operation to page B is complete, it may cause damage to data not only to the programmed page, but also to the adjacent page A. Regardins page A and B, please see below table.

Page A	Page B	Page A	Page B
0	2		
1	4		
3	6		:
5	8	97	100
7	10	99	102
9	12	101	104
11	14	103	106
13	16	105	108
15	18	107	110
17	20	109	112
19	22	111	114
21	24	113	116
23	26	115	118
25	28	117	120
27	30	119	122
		121	124
		123	126
i		125	127

### Page Copy (2)


By using Page Copy (2), data in a page can be copied to another page after the data has been read out. When the block address changes (increments) this sequenced has to be started from the beginning.

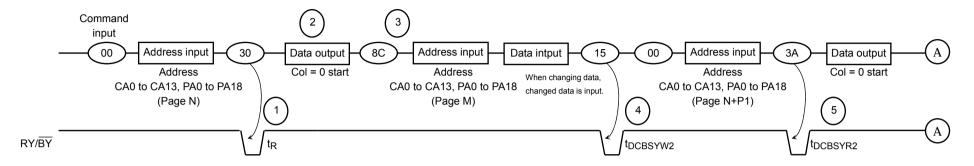


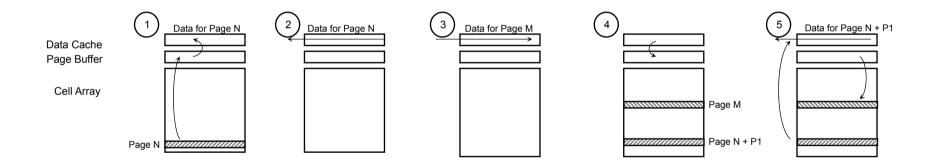


Page Copy (2) operation is as following.


- 1 Data for Page N is transferred to the Data Cache.
- 2 Data for Page N is read out.
- 3 Copy Page address M is input and if the data needs to be changed, changed data is input.
- 4 Data Cache for Page M is transferred to the Page Buffer.
- 5 After the Ready state, Data for Page N + P1 is output from the Data Cache while the data of Page M is being programmed.

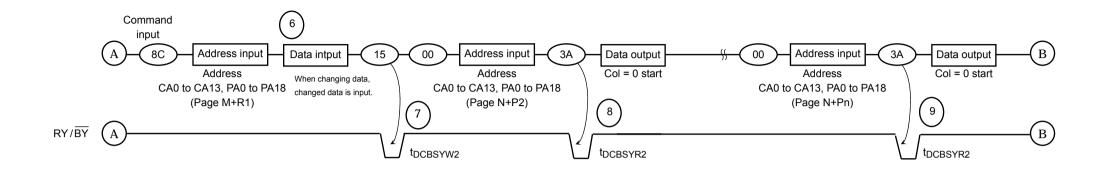

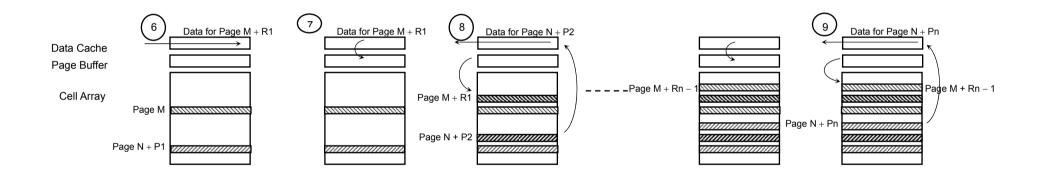

- 6 Copy Page address (M + R1) is input and if the data needs to be changed, changed data is input.
- 7 After programming of page M is completed, Data Cache for Page M + R1 is transferred to the Page Buffer.
- By the 15h command, the data in the Page Buffer is programmed to Page M + R1. Data for Page N + P2 is transferred to the Data cache.
- 9 The data in the Page Buffer is programmed to Page M + Rn 1. Data for Page N + Pn is transferred to the Data Cache.

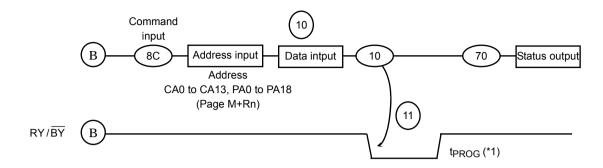

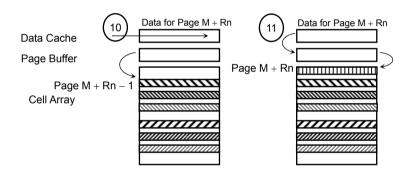

- 10 Copy Page address (M + Rn) is input and if the data needs to be changed, changed data is input.
- 11 By issuing the 10h command, the data in the Page Buffer is programmed to Page M + Rn.
- (\*1) Since the last page programming by the 10h command is initiated after the previous cache program, the tpROG here will be expected as the following, tpROG = tpROG of the last page + tpROG of the previous page (command input cycle + address input cycle + data output/input cycle time of the last page)

NOTE) This operation needs to be executed within each District.


Data input is required only if previous data output needs to be altered.


If the data has to be changed, locate the desired address with the column and page address input after the 8Ch command, and change only the data that needs be changed. If the data does not have to be changed, data input cycles are not required.

Make sure  $\overline{\text{WP}}$  is held to High level when Page Copy (2) operation is performed. Also make sure the Page Copy operation is terminated with 8Ch-10h command sequence

#### Multi Page Copy (2)

By using Multi Page Copy (2), data in two pages can be copied to another pages after the data has been read out. When the each block address changes (increments) this sequenced has to be started from the beginning. Same page address (PA0 to PA6) within two districts has to be selected.

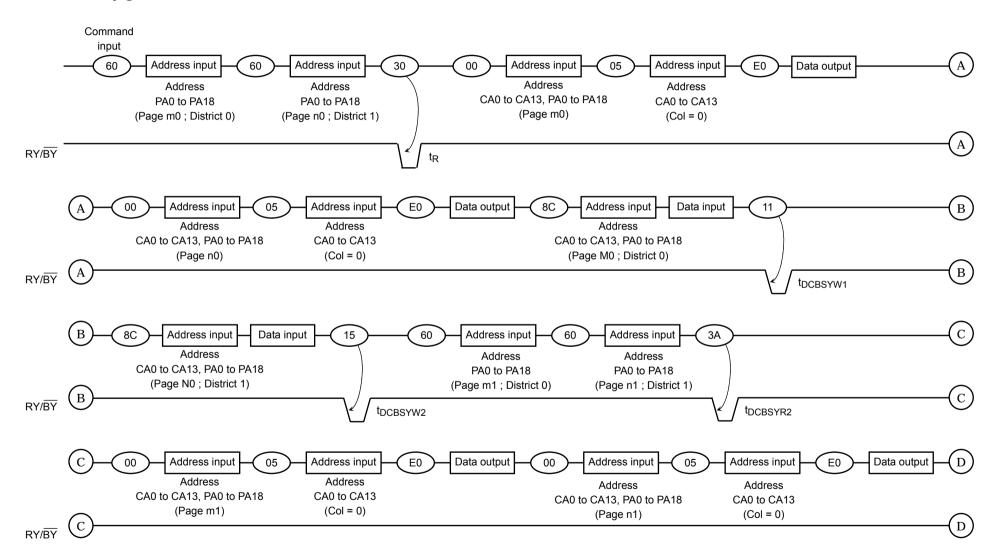

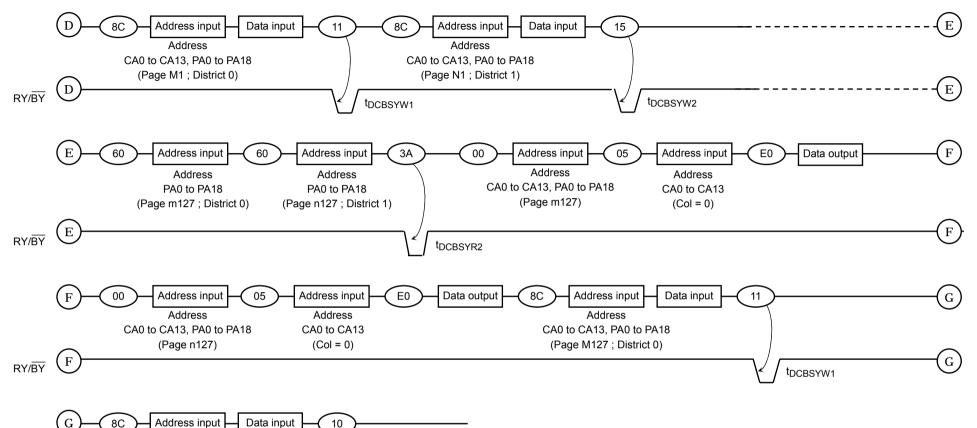

Address
CA0 to CA13, PA0 to PA18
(Page N127 ; District 1)

RY/BY

G

tPROG (\*1)

(\*1) tpROG: Since the last page programming by 10h command is initiated after the previous cache program, the tpROG\* during cache programming is given by the following equation.

tpROG = tpROG of the last page + tpROG of the previous page-A

 $A = (command input cycle + address input cycle + data output/input cycle time of the last page) \\ If "A" exceeds the tpROG of previous page, tpROG of the last page is tpROG max.$ 

Note)

This operation needs to be executed within each District.

Data input is required only if previous data output needs to be altered.


If the data has to be changed, locate the desired address with the column and page address input after the 8Ch command, and change only the data that needs be changed.

If the data does not have to be changed, data input cycles are not required.

Make sure  $\overline{\text{WP}}$  is held to High level when Multi Page Copy (2) operation is performed. Also make sure the Multi Page Copy operation is terminated with 8Ch-10h command sequence


#### **Auto Block Erase**

The Auto Block Erase operation starts on the rising edge of  $\overline{WE}$  after the Erase Start command "D0h" which follows the Erase Setup command "60h". This two-cycle process for Erase operations acts as an extra layer of protection from accidental erasure of data due to external noise. The device automatically executes the Erase and Verify operations.

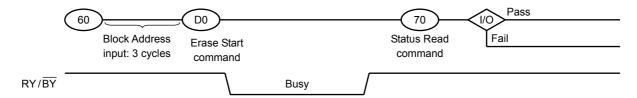

### Multi Block Erase

The Multi Block Erase operation starts by selecting two block addresses before D0h command as in below diagram. The device automatically executes the Erase and Verify operations and the result can be monitored by checking the status by 71h status read command. For details on 71h status read command, refer to section "Multi Page Program with Data Cache".

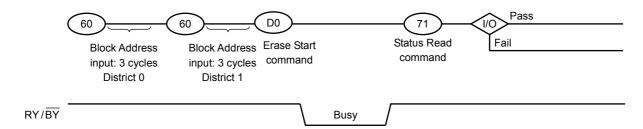

### Internal addressing in relation with the Districts

To use Multi Block Erase operation, the internal addressing should be considered in relation with the District.

- The device consists from 2 Districts.
- Each District consists from 1038 erase blocks.
- The allocation rule is follows.

District 0: Block 0, Block 2, Block 4, Block 6,..., Block 4094, Block 4096, Block 2074 District 1: Block 1, Block 3, Block 5, Block 7,..., Block 4095, Block 4097, Block 2075

#### Address input restriction for the Multi Block Erase

There are following restrictions in using Multi Block Erase

### (Restriction)

Maximum one block should be selected from each District.

For example;

(60) [District 0] (60) [District 1] (D0)

#### (Acceptance)

There is no order limitation of the District for the address input.

For example, following operation is accepted;

(60) [District 1] (60) [District 0] (D0)

It requires no mutual address relation between the selected blocks from each District.

Make sure to terminate the operation with D0h command. If the operation needs to be terminated before D0h command input, input the FFh reset command to terminate the operation.

### **ID** Read

The device contains ID codes which can be used to identify the device type, the manufacturer, and features of the device. The ID codes can be read out under the following timing conditions.

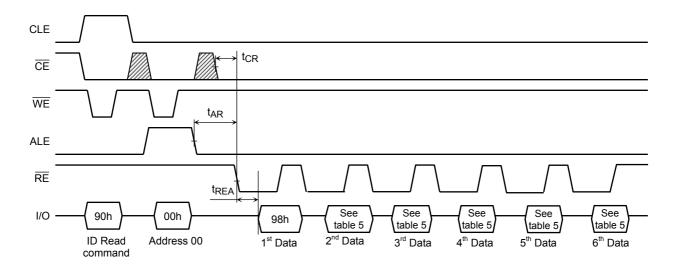


Table 5. Code table

Cycle	Description	I/O7	I/O6	I/O5	I/O4	I/O3	I/O2	I/O1	I/O0	Hex Data
1st Data	Maker Code	1	0	0	1	1	0	0	0	98h
2nd Data	Device Code	1	1	0	1	0	1	0	1	D5h
3rd Data	Chip Number, Cell Type	1	0	0	1	0	1	0	0	94h
4th Data	Page Size, Block Size	0	0	1	1	0	0	1	0	32h
5th Data	Plane Number		1	1	1	0	1	1	0	76h
6th Data	Technology Code	0	1	0	1	0	1	0	1	55h

2nd Data

Description			I/O6	I/O5	I/O4	I/O3	I/O2	I/O1	I/O0	Hex Data
	8 Gbits	1	1	0	1	0	0	1	1	D3h
	16 Gbits	1	1	0	1	0	1	0	1	D5h
Memory Density	32 Gbits	1	1	0	1	0	1	1	1	D7h
per each /CE ( Vcc=3.3V, x8 I/Os )	64 Gbits	1	1	0	1	1	1	1	0	DEh
( VCC-3.3 V, XO 1/OS )	128 Gbits	0	0	1	1	1	0	1	0	3Ah
	256 Gbits	0	0	1	1	1	1	0	0	3Ch

#### 3rd Data

Description			I/O6	I/O5	I/O4	I/O3	I/O2	I/O1	I/O
	1 chip	-	-	-	-	-	-	0	0
Internal Chip Number	2 chip	-	-	-	-	-	-	0	1
per each /CE	4 chip	-	-	-	-	-	-	1	0
	8 chip	-	-	-	-	-	-	1	1
	2 level cell( 1bit / cell )	-	-	-	-	0	0	-	-
Call Time	4 level cell( 2bits / cell )	-	-	-	-	0	1	-	1
Cell Type	8 level cell( 3bits / cell )	-	-	-	-	1	0	-	1
	16 level cell( 4bits / cell )	-	-	-	-	1	1	-	-
Reserved			0	0	1	-	-	-	-

### ID Read

## 4th Data

Descr	Description			I/O5	I/O4	I/O3	I/O2	I/O1	I/O0
	2 KB	-	-	-	-	-	-	0	0
Page Size	4 KB	-	-	-	-	-	-	0	1
(without redundant area)	8 KB	-	-	-	-	-	-	1	0
	Reserved	-	-	-	-	-	-	1	1
	128 KB	0	-	0	0	-	-	-	-
DI LC:	256 KB	0	-	0	1	1	-	-	-
Block Size (without redundant area)	512 KB	0	-	1	0	1	-	-	-
(without redundant area)	1024 KB	0	-	1	1	-	-	-	-
	Reserved	1	-	X	X	_	=	-	-
Reserved		-	0	-	-	0	0	-	-

<sup>\*</sup>X: either 0 or 1

### 5th Data

Description		I/O7	I/O6	I/O5	I/O4	I/O3	I/O2	I/O1	I/O0
	1 Plane	-	-	-	-	0	0	-	-
Number of Plane	2 Plane	-	-	-	-	0	1	-	-
per each /CE	4 Plane	-	-	-	-	1	0	-	-
	8 Plane	-	_	-	-	1	1	-	-
Reserved		0	1	1	1	-	-	1	0

### 6th Data

Description		I/O7	I/O6	I/O5	I/O4	I/O3	I/O2	I/O1	I/O0
	130 nm process	-	-	-	-	-	0	0	0
	90 nm process	-	-	-	-	-	0	0	1
	70 nm process	-	-	-	-	-	0	1	0
To also also est and a	56 nm process	-	-	-	-	-	0	1	1
Technology code	43 nm process	-	-	-	-	-	1	0	0
	32 nm process	-	-	-	-	-	1	0	1
	Reserved	-	-	-	-	-	1	1	0
	Reserved	-	-	-	-	-	1	1	1
Reserved		0	1	0	1	0	_	-	-

### Status Read

The device automatically implements the execution and verification of the Program and Erase operations. The Status Read function is used to monitor the Ready/Busy status of the device, determine the result (pass /fail) of a Program or Erase operation, and determine whether the device is in Protect mode. The device status is output via the I/O port using  $\overline{RE}$  after a "70h" command input. The Status Read can also be used during a Read operation to find out the Ready/Busy status.

The resulting information is outlined in Table 6.

Table 6. Status output table

	Definition	Page Program Block Erase	Cache Program	Read Cache Read
I/O1	Chip Status1 Pass: 0 Fail: 1	Pass/Fail	Pass/Fail	Invalid
I/O2	Chip Status 2 Pass: 0 Fail: 1	Invalid	Pass/Fail	Invalid
I/O3	Not Used	0	0	0
1/04	Not Used	0	0	0
I/O5	Not Used	0	0	0
I/O6	Page Buffer Ready/Busy Ready: 1 Busy: 0	Ready/Busy	Ready/Busy	Ready/Busy
1/07	Data Cache Ready/Busy Ready: 1 Busy: 0	Ready/Busy	Ready/Busy	Ready/Busy
I/O8	Write Protect Not Protected :1 Protected: 0	Write Protect	Write Protect	Write Protect

The Pass/Fail status on I/O1 and I/O2 is only valid during a Program/Erase operation when the device is in the Ready state.

### Chip Status 1:


During a Auto Page Program or Auto Block Erase operation this bit indicates the pass/fail result. During a Auto Page Programming with Data Cache operation, this bit shows the pass/fail results of the current page program operation, and therefore this bit is only valid when I/O6 shows the Ready state.

#### Chip Status 2:

This bit shows the pass/fail result of the previous page program operation during Auto Page Programming with Data Cache. This status is valid when I/O7 shows the Ready State.

The status output on the I/O6 is the same as that of I/O7 if the command input just before the 70h is not 15h or 31h.

An application example with multiple devices is shown in the figure below.

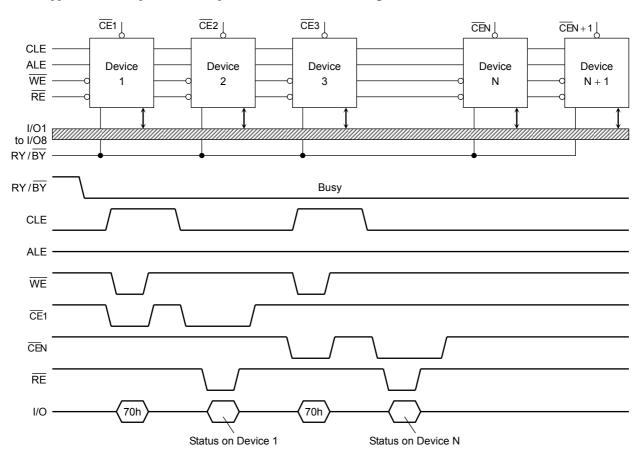

System Design Note: If the  $RY/\overline{BY}$  pin signals from multiple devices are wired together as shown in the diagram, the Status Read function can be used to determine the status of each individual device.


#### Reset

The Reset mode stops all operations. For example, in case of a Program or Erase operation, the internally generated voltage is discharged to 0 volt and the device enters the Wait state.


Reset during a Cache Program/Page Copy may not just stop the most recent page program but it may also stop the previous program to a page depending on when the FF reset is input.

The response to a "FFh" Reset command input during the various device operations is as follows:


#### When a Reset (FFh) command is input during programming

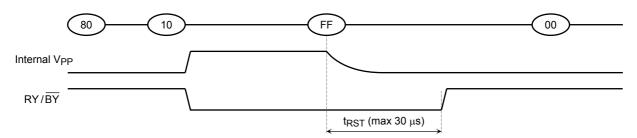


### When a Reset (FFh) command is input during erasing

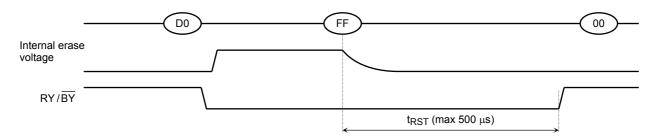


### When a Reset (FFh) command is input during Read operation

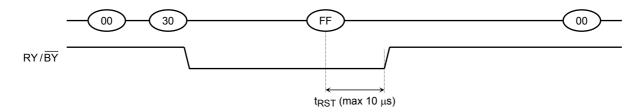


### When a Reset (FFh) command is input during Ready

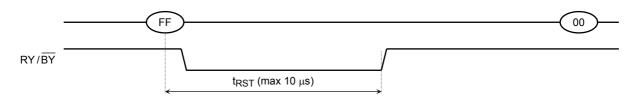

### When a Status Read command (70h) is input after a Reset

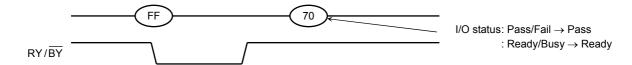

#### When two or more Reset commands are input in succession

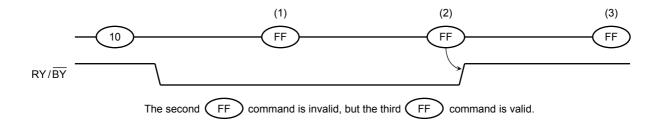


### **APPLICATION NOTES AND COMMENTS**

#### (1) Power-on/off sequence:

The timing sequence shown in the figure below is necessary for the power-on/off sequence.

The device internal initialization starts after the power supply reaches an appropriate level in the power on sequence. During the initialization the device Ready/Busy signal indicates the Busy state as shown in the figure below. In this time period, the acceptable commands are FFh or 70h(71h).

The WP signal is useful for protecting against data corruption at power-on/off.

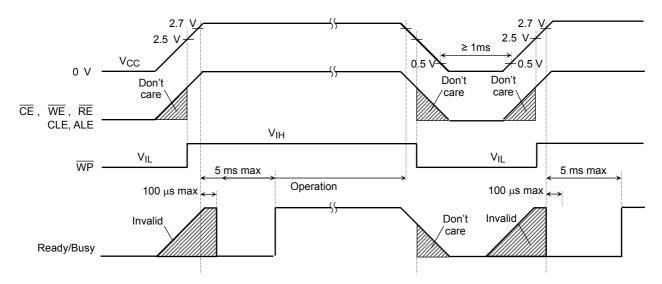

#### (2) Power-on Reset

The device goes into automatic self initialization during power on if PSL is tied either to GND or NU. During the initialization process, the device consumes a maximum current of 30 mA (I $_{\rm CCO0}$ ). If PSL is tied to VCC, the device will not complete its self initialization during power on and will not consume I $_{\rm CCO0}$ , and completes the initialization process with the first Reset command input after power on. During the first FFh reset Busy period, the device consumes a maximum current of 30 mA (I $_{\rm CCO0}$ ). In either case (PSL = GND/NU or V $_{\rm CC}$ ), the following sequence is necessary because some input signals may not be stable at power-on.



#### (3) Prohibition of unspecified commands


The operation commands are listed in Table 3. Input of a command other than those specified in Table 3 is prohibited. Stored data may be corrupted if an unknown command is entered during the command cycle.

### (4) Restriction of commands while in the Busy state


During the Busy state, do not input any command except 70h(71h) and FFh.

### (5) Acceptable commands after Serial Input command "80h"

Once the Serial Input command "80h" has been input, do not input any command other than the Column Address Change in Serial Data Input command "85h", Auto Program command "10h", Multi Page Program command "11h", Auto Program with Data Cache Command "15h", or the Reset command "FFh".

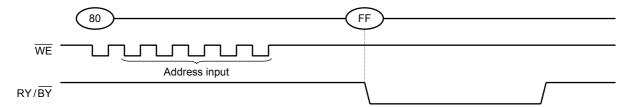



If a command other than "85h", "10h", "11h", "15h" or "FFh" is input, the Program operation is not performed and the device operation is set to the mode which the input command specifies.

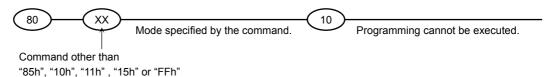


#### (6) Addressing for program operation

Within a block, the pages must be programmed consecutively from the LSB (least significant bit) page of the block to MSB (most significant bit) page of the block. Random page address programming is prohibited.

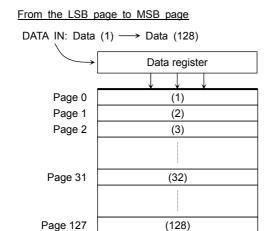

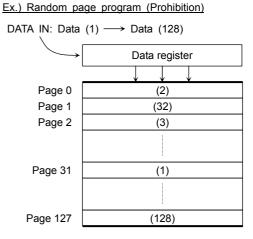


### (7) Status Read during a Read operation

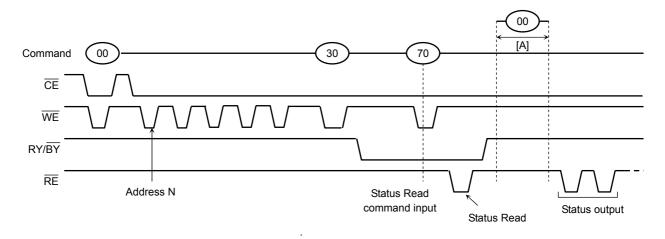


The device status can be read out by inputting the Status Read command "70h" in Read mode. Once the device has been set to Status Read mode by a "70h" command, the device will not return to Read mode unless the Read command "00h" is input during [A]. If the Read command "00h" is input during [A], Status Read mode is reset, and the device returns to Read mode. In this case, data output starts automatically from address N and address input is unnecessary

#### (8) Auto programming failure

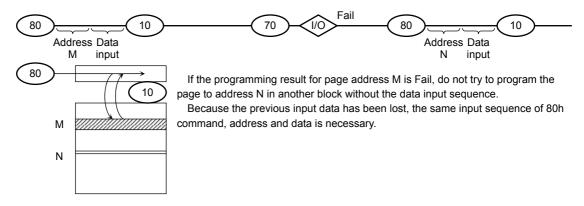

### (9) $RY/\overline{BY}$ : termination for the Ready/Busy pin $(RY/\overline{BY})$


A pull-up resistor needs to be used for termination because the  $RY/\overline{BY}$  buffer consists of an open drain circuit.

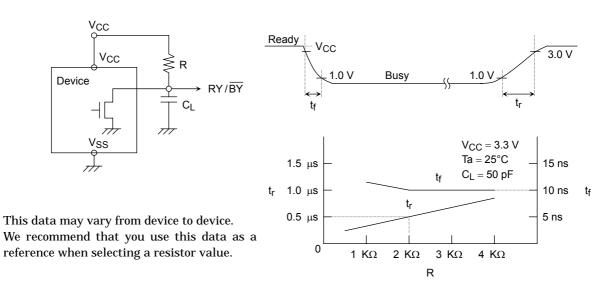


### (10) Note regarding the $\overline{\overline{WP}}$ signal

The Erase and Program operations are automatically reset when  $\overline{WP}$  goes Low. The operations are enabled and disabled as follows:


#### **Enable Programming**

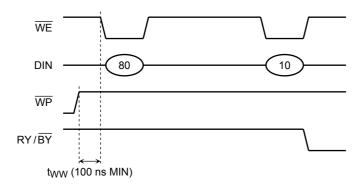


#### **Disable Programming**

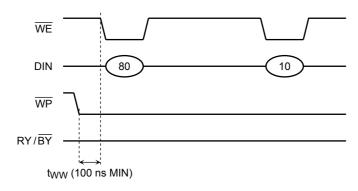

### **Enable Erasing**

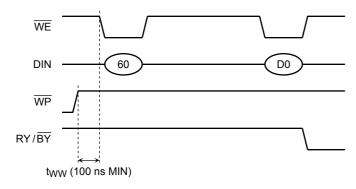


### Disable Erasing

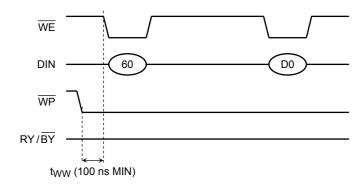

### (11) When six address cycles are input

Although the device may read in a sixth address, it is ignored inside the chip.

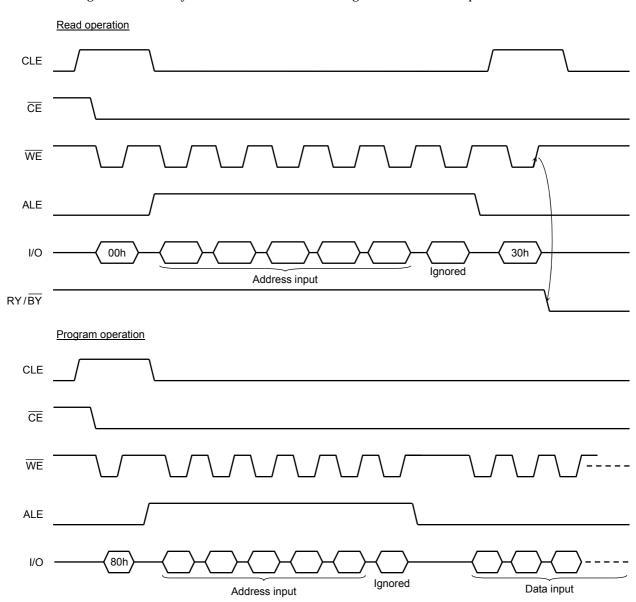


### (12) Several programming cycles on the same page (Partial Page Program)

This device does not support partial page programming.

#### (13) Invalid blocks (bad blocks)

The device occasionally contains unusable blocks. Therefore, the following issues must be recognized:

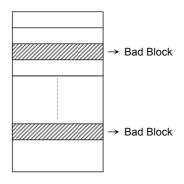

At the time of shipment, the bad block information is marked on each bad block. Please do not perform an erase operation to bad blocks. It may be impossible to recover the bad block information if the information is erased.

Check if the device has any bad blocks after installation into the system. Refer to the test flow for bad block detection. Bad blocks which are detected by the test flow must be managed as unusable blocks by the system.


A bad block does not affect the performance of good blocks because it is isolated from the bit lines by select gates.

The number of valid blocks over the device lifetime is as follows:

	MIN	TYP.	MAX	UNIT
Valid (Good) Block Number	1968	_	2076	Block

### **Bad Block Test Flow**

Regarding invalid blocks, bad block mark is in either the 1st or the last page.

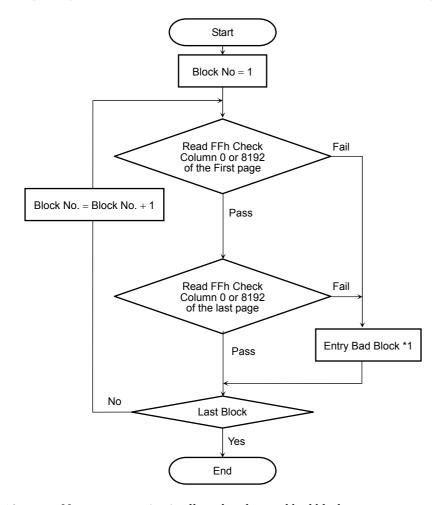

\*1: No erase operation is allowed to detected bad blocks

(14) Failure phenomena for Program and Erase operations


The device may fail during a Program or Erase operation.

The following possible failure modes should be considered when implementing a highly reliable system.

	FAILURE MODE	DETECTION AND COUNTERMEASURE SEQUENCE
Block	Erase Failure	Status Read after Erase → Block Replacement
Page	Programming Failure	Status Read after Program → Block Replacement
Random Bit	Programming Failure "1 to 0"	ECC

- ECC: Error Correction Code. 24 bit correction per 1KBytes is necessary.
- Block Replacement

#### **Program**

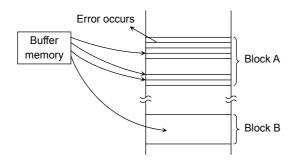

When an error happens in Block A, try to reprogram the data into another Block (Block B) by loading from an external buffer. Then, prevent further system accesses to Block A (by creating a bad block table or by using another appropriate scheme).

#### **Erase**

When an error occurs during an Erase operation, prevent future accesses to this bad block (again by creating a table within the system or by using another appropriate scheme).

- (15) Do not turn off the power before write/erase operation is complete. Avoid using the device when the battery is low. Power shortage and/or power failure before write/erase operation is complete will cause loss of data and/or damage to data.
- (16) If FF reset command is input before completion of write operation to page B, it may cause damage to data not only to the programmed page, but also to the adjacent page A. Regarding page A and B, please see Page 42.

#### (17) Reliability Guidance

This reliability guidance is intended to notify some guidance related to using MLC NAND flash with 24bit ECC for each 1024 bytes. For detailed reliability data, please refer to TOSHIBA's reliability note. Although random bit errors may occur during use, it does not necessarily mean that a block is bad. Generally, a block should be marked as bad when a program status failure or erase status failure is detected. The other failure modes may be recovered by a block erase.

ECC treatment for read data is mandatory due to the following Data Retention and Read Disturb failures.


#### Write/Erase Endurance

Write/Erase endurance failures may occur in a cell, page, or block, and are detected by doing a status read after either an auto program or auto block erase operation. The cumulative bad block count will increase along with the number of write/erase cycles.

#### Data Retention

The data in memory may change after a certain amount of storage time. This is due to charge loss or charge gain. After block erasure and reprogramming, the block may become usable again.

Here is the combined characteristics image of Write/Erase Endurance and Data Retention.

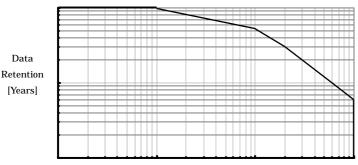


Write/Erase Endurance [Cycles]

### • Read Disturb

A read operation may disturb the data in memory. The data may change due to charge gain. Usually, bit errors occur on other pages in the block, not the page being read. After a large number of read cycles (between block erases), a tiny charge may build up and can cause a cell to be soft programmed to another state. After block erasure and reprogramming, the block may become usable again.

# **Package Dimensions**

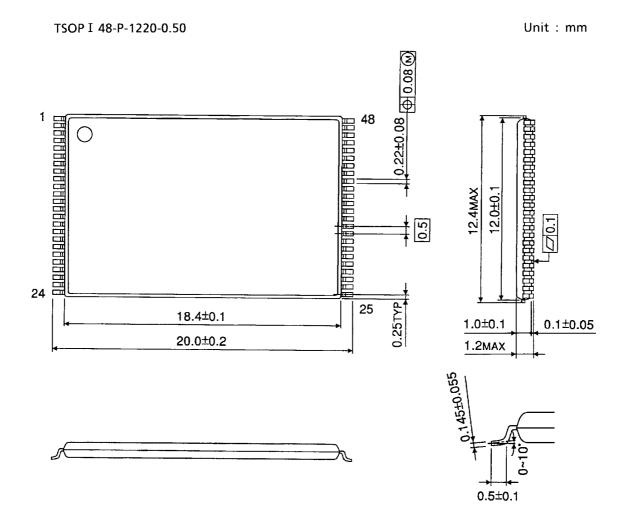

Weight: TBD g (typ.)

# **Revision History**

Date	Rev.	Description
2009-01-15	1.00	Original version
2009-03-25	1.10	To add the extended block( page 1,4,28,29,49,60 ) To separate tWHR timing to tWHR1 and tWHR2( page 5,9,14 ) To change Iccs spec from 50uA to 100uA( page 1, 4 ) To modify power off/on sequence( page 55 )
2009-9-14	1.20	To change the tR(max) spec from 200us to 250us( page 1, 5).  To change the tDCBSYR1(max) spec from 200us to 250us( page 5).  To change the tDCBSYR2(max) spec from 205us to 255us( page 5).  To add Device ID 6th cycle.( page 50, 51)

### **RESTRICTIONS ON PRODUCT USE**

- •Toshiba Corporation, and its subsidiaries and affiliates (collectively "TOSHIBA"), reserve the right to make changes to the information in this document, and related hardware, software and systems (collectively "Product") without notice.
- •This document and any information herein may not be reproduced without prior written permission from TOSHIBA. Even with TOSHIBA's written permission, reproduction is permissible only if reproduction is without alteration/omission.
- •Though TOSHIBA works continually to improve Product's quality and reliability, Product can malfunction or fail. Customers are responsible for complying with safety standards and for providing adequate designs and safeguards for their hardware, software and systems which minimize risk and avoid situations in which a malfunction or failure of Product could cause loss of human life, bodily injury or damage to property, including data loss or corruption. Before creating and producing designs and using, customers must also refer to and comply with (a) the latest versions of all relevant TOSHIBA information, including without limitation, this document, the specifications, the data sheets and application notes for Product and the precautions and conditions set forth in the "TOSHIBA Semiconductor Reliability Handbook" and (b) the instructions for the application that Product will be used with or for. Customers are solely responsible for all aspects of their own product design or applications, including but not limited to (a) determining the appropriateness of the use of this Product in such design or applications; (b) evaluating and determining the applicability of any information contained in this document, or in charts, diagrams, programs, algorithms, sample application circuits, or any other referenced documents; and (c) validating all operating parameters for such designs and applications. TOSHIBA ASSUMES NO LIABILITY FOR CUSTOMERS' PRODUCT DESIGN OR APPLICATIONS.
- •Product is intended for use in general electronics applications (e.g., computers, personal equipment, office equipment, measuring equipment, industrial robots and home electronics appliances) or for specific applications as expressly stated in this document. Product is neither intended nor warranted for use in equipment or systems that require extraordinarily high levels of quality and/or reliability and/or a malfunction or failure of which may cause loss of human life, bodily injury, serious property damage or serious public impact ("Unintended Use"). Unintended Use includes, without limitation, equipment used in nuclear facilities, equipment used in the aerospace industry, medical equipment, equipment used for automobiles, trains, ships and other transportation, traffic signaling equipment, equipment used to control combustions or explosions, safety devices, elevators and escalators, devices related to electric power, and equipment used in finance-related fields. Do not use Product for Unintended Use unless specifically permitted in this document.
- •Do not disassemble, analyze, reverse-engineer, alter, modify, translate or copy Product, whether in whole or in part.
- •Product shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable laws or regulations.
- •The information contained herein is presented only as guidance for Product use. No responsibility is assumed by TOSHIBA for any infringement of patents or any other intellectual property rights of third parties that may result from the use of Product. No license to any intellectual property right is granted by this document, whether express or implied, by estoppel or otherwise.
- \*ABSENT A WRITTEN SIGNED AGREEMENT, EXCEPT AS PROVIDED IN THE RELEVANT TERMS AND CONDITIONS OF SALE FOR PRODUCT, AND TO THE MAXIMUM EXTENT ALLOWABLE BY LAW, TOSHIBA (1) ASSUMES NO LIABILITY WHATSOEVER, INCLUDING WITHOUT LIMITATION, INCLUDING WITHOUT CONSEQUENTIAL, SPECIAL, OR INCIDENTAL DAMAGES OR LOSS, INCLUDING WITHOUT LIMITATION, LOSS OF PROFITS, LOSS OF OPPORTUNITIES, BUSINESS INTERRUPTION AND LOSS OF DATA, AND (2) DISCLAIMS ANY AND ALL EXPRESS OR IMPLIED WARRANTIES AND CONDITIONS RELATED TO SALE, USE OF PRODUCT, OR INFORMATION, INCLUDING WARRANTIES OR CONDITIONS OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, ACCURACY OF INFORMATION, OR NONINFRINGEMENT.
- •Do not use or otherwise make available Product or related software or technology for any military purposes, including without limitation, for the design, development, use, stockpiling or manufacturing of nuclear, chemical, or biological weapons or missile technology products (mass destruction weapons). Product and related software and technology may be controlled under the Japanese Foreign Exchange and Foreign Trade Law and the U.S. Export Administration Regulations. Export and re-export of Product or related software or technology are strictly prohibited except in compliance with all applicable export laws and regulations.
- •Please contact your TOSHIBA sales representative for details as to environmental matters such as the RoHS compatibility of Product. Please use Product in compliance with all applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive. TOSHIBA assumes no liability for damages or losses occurring as a result of noncompliance with applicable laws and regulations.