

MOS INTEGRATED CIRCUIT μ PD72042A, 72042B

LSI DEVICES FOR Inter Equipment Bus™ (IEBus™) PROTOCOL CONTROL

The μ PD72042A and μ PD72042B are microcomputer peripheral LSI devices for IEBus protocol control.

The μ PD72042A and μ PD72042B perform all the processing required for layers 1 and 2 of the IEBus. The devices incorporate large transmission and reception buffers, allowing the microcomputer to perform IEBus operations without interruption. They also contain an IEBus driver and receiver, allowing them to directly connected to the bus directly.

FEATURES

- O Control of layers 1 and 2 of the IEBus protocol
 - · Support of a multi-master scheme
 - · Broadcast function
 - Two communication modes having different transmission speeds can be selected.

	When operating at 6 MHz	When operating at 6.29 MHz
Mode 0	Approx. 3.9 Kbps	Approx. 4.1 Kbps
Mode 1	Approx. 17 Kbps	Approx. 18 Kbps

- O Built-in IEBus driver and receiver
- O Transmission and reception buffers

Transmission buffer : 33 bytes, FIFO

Reception buffer : 40 bytes, FIFO (capable of

holding more than one frame

of reception data.)

O Microcomputer interface

Three-/two-wire serial I/O

• Transfer starting with MSB : μ PD72042A

• Transfer starting with LSB : μ PD72042B

 Program crashes can be detected by means of a watchdog timer.

O Low power consumption (standby mode):

50 μ A (max)

Oscillator frequency (fx): 6 MHz, 6.29 MHz

• frequency accuracy: ±1.5%

○ Operating voltage: 5 V ±10%

ORDERING INFORMATION

Part number	Package	Starting with MSB/LSB
μPD72042AGT	16-pin plastic SOP (375 mil)	MSB
μ PD72042BGT	16-pin plastic SOP (375 mil)	LSB

The information in this document is subject to change without notice.


The mark ★ shows major revised points.



PIN CONFIGURATION (TOP VIEW)

• 16-pin plastic SOP (375 mil)

 μ PD72042AGT μ PD72042BGT

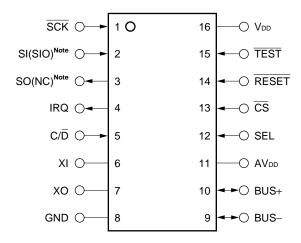

Note Parentheses indicate the state corresponding to two-wire serial I/O mode.

AVDD : Main power supply for IEBus (connected to the VDD pin)

BUS-, BUS+ : IEBus I/O

C/D : Command/data switch input

CS : Chip select input

GND : Ground

IRQ : Interrupt request output

NC : No connection

RESET : Reset input

SCK : Serial clock input

SEL : Serial mode selection

SI : Serial data input

SIO : Serial data I/O


SO : Serial data output

TEST : Test input (connected to the VDD pin)

V_{DD} : Main power supply

XI, XO : System clock

BLOCK DIAGRAM

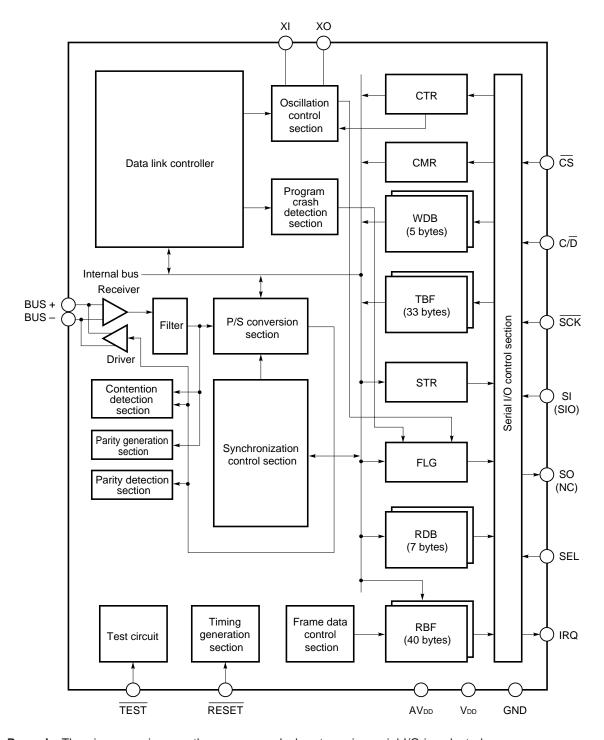

Remark The pin names in parentheses are used when two-wire serial I/O is selected.

CONTENTS

1.	PIN	FUNCTIONS	6
	1.1	PIN FUNCTIONS	6
2.	IEB	us OPERATION	8
	2.1	OVERVIEW	8
	2.2	IEBus COMMUNICATION PROTOCOL	9
		2.2.1 Bus Mastership Determination (Arbitration)	10
		2.2.2 Communication Mode	10
		2.2.3 Communication Address	11
		2.2.4 Broadcast	11
	2.3	TRANSMISSION PROTOCOL	11
	2.4	TRANSMISSION DATA (CONTENTS OF THE DATA FIELD)	
	2.5	BIT FORMAT	21
2	MIC	ROCOMPUTER INTERFACE	22
3.	3.1	TRANSFER METHOD	
	3.1	DATA TRANSFER FORMAT	
	3.2	3.2.1 Three-Wire Data Transfer (SEL = 1)	
		3.2.2 Two-Wire Data Transfer (SEL = 1)	
	3.3	CONNECTION TO A MICROCOMPUTER	
	3.4	STANDBY MODE SETTING AND CANCELLATION	
	3.5	RESET MODE SETTING AND CANCELLATION	
	3.3	RESET MODE SETTING AND CANCELLATION	30
4.	REC	GISTERS	31
5.	EXA	AMPLE TIMINGS FOR COMMUNICATION	61
6.	EXA	AMPLE MICROCOMPUTER PROCESSING FLOW	69
	6.1	COMMUNICATION FLAGS	70
	6.2	MAIN ROUTINE	
	6.3	INTERRUPT ROUTINE	72
	6.4	PROCESSING ROUTINES	74
		6.4.1 μ PD72042A or μ PD72042B Initial Setting Routine	74
		6.4.2 Communication Flag Initialization Routine	74
		6.4.3 Command Processing Routine	75
		6.4.4 Master Communication Processing Routine	75
		6.4.5 Slave Data Transmission Processing Routine	79
		6.4.6 Transmission Processing Routine	82
		6.4.7 Reception Processing Routine	83
7.	ELE	ECTRICAL CHARACTERISTICS	84
8.	PAC	CKAGE DRAWING	88



9.	RECOMM	ENDED SOLDERING CONDITIONS	89
ΑP	PENDIX A	MAIN DIFFERENCES BETWEEN μ PD72042A, μ PD72042B, AND μ PD6708	90
ΑP	PENDIX B	IEBus PROTOCOL ANALYZER	90



1. PIN FUNCTIONS

1.1 PIN FUNCTIONS

Pin No.	PinNote	I/O ^{Note}	Function	I/O format ^{Note}	When reset [for both hardware and software]
1	SCK	Input	Serial clock input pin for CPU interface	CMOS input	Input
2	SI (SIO)	Input (I/O)	Serial data pin for CPU interface. (This pin functions as an input pin when 3-wire serial I/O mode is selected, or as an I/O pin when 2-wire serial I/O mode is selected.)	CMOS input (CMOS I/O)	Input
3	SO (NC)	Output (none)	Serial data output pin for CPU interface. (The pin functions as an output when 3-wire serial I/O mode is selected. When 2-wire serial I/O mode is selected, the pin is left open.)	CMOS output (none)	High-impedance
4	IRQ	Output	Output pin for making an interrupt request to the CPU. When a return code or a program crash is detected, a high-level signal is output on this pin for at least 8 μ s.	CMOS output	Low level
5	C/D	Input	Input pin used to select control mode or data read/write mode. When this pin is driven high, internal register address setting and data read/write are enabled. When the mode changes, the serial clock counter is reset.	CMOS input	Input
6 7	XI XO	-	Pins for connecting a system clock resonator. A 6- or 6.29-MHz crystal or ceramic resonator must be used. The accuracy of the frequency is as follows; Mode 0, 1: ±1.5%	_	When reset by hardware (Oscillation stopped) XI = GND XO = High level When reset by software (Oscillation continued)
8	GND	_	Ground pin	_	_
9 10	BUS- BUS+	I/O	I/O pins connected to the IEBus bus	_	High-impedance
11	AV _{DD}	-	Main power supply pin for the IEBus bus driver/receiver. When used, this pin must be tied to VDD.	-	-
12	SEL	Input	Input pin used to select either 3- or 2-wire serial I/O mode. A high-level signal on this pin selects 3-wire serial I/O mode. A low-level signal on this pin selects 2-wire serial I/O mode.	CMOS input	Input
13	ĊS	Input	Chip select pin. When this pin is driven low, the serial interface is enabled. When this pin is driven high, the SO pin becomes high-impedance, and the serial clock counter is reset.	CMOS input	Input

 $\textbf{Note} \quad \text{Parentheses indicate the state corresponding to two-wire serial I/O mode}.$



Pin No.	Pin	I/O	Function	I/O format	When reset [for both hardware and software]
14	RESET	Input	Serial reset signal input pin. A low input causes a reset. Whenever the power is turned on, a low-level signal must be applied to this pin. During normal operation, a high level is applied.	CMOS input	Input
15	TEST	Input	IC test pin. When used, this pin must be tied to the V _{DD} pin directly.	CMOS input	_
16	V _{DD}	_	Main power supply input pin	_	_

2. IEBus OPERATION

2.1 OVERVIEW

The μ PD72042A and μ PD72042B are CMOS LSI devices for the IEBus interface.

The IEBus is designed to enable the data transmission between devices in a small-scale digital data transmission system.

The μ PD72042A and μ PD72042B are connected to a microcomputer built into a device. A serial interface (\overline{SCK} , SO, and SI pins) is used for connection. The host controller (microcomputer) sets the commands and data needed for data transmission via this serial interface.

When data is transmitted, the host controller sets the data in the μ PD72042A or μ PD72042B via the serial interface. Then, signals are output on the BUS pins (BUS+, BUS-). When data is received from the BUS pins, the host controller can read it via the serial interface.



2.2 IEBus COMMUNICATION PROTOCOL

The IEBus is outlined below.

· Communication method: Half duplex asynchronous communication

· Multi-master method

All units connected to the IEBus can transmit data to every other connected unit.

• Broadcast function (one-unit-to-multiple-units communication)

Group broadcast : Broadcast to a specific group of units

General broadcast : Broadcast to all units

• Two modes, each offering different transmission speeds, can be selected.

	fx = 6 MHz	fx = 6.29 MHz	Maximum number of bytes transmitted (bytes/frame)
Mode 0	Approx. 3.9 Kbps	Approx. 4.1 Kbps	16
Mode 1	Approx. 17 Kbps	Approx. 18 Kbps	32

Access control: Carrier Sense Multiple Access with Collision Detection (CSMA/CD)
 Bus mastership priority is as follows:

- 1) Broadcast takes priority over ordinary communication (one-unit-to-one-unit communication).
- 2 Units having lower master addresses have a higher priority.
- Communication scale

Number of units : 50 max

Cable length : 150 m max (when twisted-pair cable is used <resistance 0.1 Ω /m or less>)

Load capacity : 8000 pF max
 setween BUS- and BUS+>, fx = 6 MHz

7100 pF max <between BUS- and BUS+>, fx = 6.29 MHz

Terminating resistance : 120 Ω

Caution For the μ PD72042A and μ PD72042B, as a protective resistance, connect a 180- Ω resistor in series with the BUS- and BUS+ pins.



2.2.1 Bus Mastership Determination (Arbitration)

Before devices connected to the IEBus can control other devices, they must first acquire the bus. This operation is called arbitration.

When more than one unit starts transmission at the same time, arbitration determines which of those units is allowed to use the bus.

When arbitration results in only one device being granted bus mastership, the following bus mastership priority conditions are used:

Remark Those devices that are defeated in arbitration can automatically enter retransmission mode. (For the μ PD72042A and μ PD72042B, the number of retransmissions can be set by specifying a value between 0 and 7 in the MCR register.)

(1) Priority by communication type

Broadcast (one-unit-to-multiple-units communication) takes priority over ordinary communication (one-unit-to-one-unit communication).

(2) Priority by master address

If the communication type is the same, the smallest master address value has the highest priority.

Example Each master address consists of 12 bits. A unit having master address 000H has the highest priority, while a unit having master address FFFH has the lowest priority.

2.2.2 Communication Mode

The IEBus supports two communication modes, each having a different transmission speed. Table 2-1 lists the transmission speed for each communication mode and the maximum number of bytes transmitted within one communication frame.

Table 2-1 Transmission Speed and Maximum Number of Transmission Bytes in Each Communication Mode

	Maximum number of transmission	Effective transmissio	n speed ^{Note 1} (Kbps)
Communication mode	bytes (bytes/frame)	fx = 6 MHz ^{Note 2}	fx = 6.29 MHz ^{Note 2}
0	16	Approx. 3.9	Approx. 4.1
1	32	Approx. 17	Approx. 18

Notes 1. Effective transmission speed at which the maximum transfer rate is achieved

2. Oscillator frequencies for the μ PD72042A and μ PD72042B

- Cautions 1. Before devices connected to the IEBus can perform communication, an appropriate communication mode must be set. Note that if a master unit and an associated unit (slave unit) have different communication modes, they will not be able to communicate properly.
 - Communication cannot be performed properly between a unit operating at an oscillator frequency of 6 MHz and another operating at 6.29 MHz, even when set to the same communication mode. Units must use the same oscillator frequency to be able to communicate.



2.2.3 Communication Address

With the IEBus, each device is assigned a unique 12-bit communication address. The communication address consists of the following parts:

High-order 4 bits : Group number (number identifying the group to which a device belongs)

Low-order 8 bits : Unit number (number identifying a device in a group)

2.2.4 Broadcast

In ordinary communication, transmission and reception are performed between one master unit and one associated slave unit. Broadcast can also be done between one master unit and more than one slave unit. In this case master unit transmits data to an arbitrary number of slave units. In this case, the slave units do not return on acknowledge signal to the master unit.

Whether the communication to be performed is broadcast or ordinary communication is determined by the setting of the broadcast bit. (For details of the broadcast bit, see (1) (2) in Section 2.3.)

There are two types of broadcast.

(1) Group broadcast

Broadcast is performed to the devices in a particular group. These devices all have the same group number, as indicated by the high-order 4 bits of each communication address.

(2) General broadcast

Broadcast is performed to all devices, regardless of their group numbers.

These two types of broadcast are distinguished by the slave address. (For details of the slave address, see (3) in Section 2.3.)

2.3 TRANSMISSION PROTOCOL

Fig. 2-1 shows the IEBus transmission signal format.

Communication data is transmitted as a sequence of signals called a communication frame. The transmission speed and the maximum amount of data that can be transmitted in one communication frame depend on the communication mode.



Fig. 2-1 Transmission Signal Format

(When fx = 6 MHz)

Field name Header		Master address fi	Slave address field			Control field Data-length field			h	Data field											
Numbe	er of bits	1	1	12	1	12	1	1	4	1	1	8	1	1	8	1	1		8	1	1
		Start bit	Broad- cast bit	Master address	Р	Slave address	Р	Α	Control bits	Р	Α	Data- length bits	Р	Α	Data bits	Р	Α		Data bits	Р	А
Trans	smission time																				
_	Mode 0		Approx. 7330 μ s Approx. 1590 \times N μ s																		
	Mode 1					Appro	x. 2	090	μs							App	orox	. 410)×N μs	3	

P: Parity bit (1 bit)

A: Acknowledge bit (1 bit)When A = 0: ACKWhen A = 1: NAKN: Number of data bytes

Remark For broadcast, the value of the acknowledge bit is ignored.

(1) Header

The header consists of a start bit and a broadcast bit. These are explained below.

1 Start bit

The start bit is a signal used to notify the other units of the beginning of data transmission.

Before a unit starts data transmission, it outputs a low-level signal (start bit) for a specified duration, then outputs the broadcast bit.

When the unit attempts to output the start bit, another unit may have already output the start bit. In such a case, the unit does not output the start bit, and instead waits for the other unit to stop outputting the start bit. Then, synchronized with the completion of start bit output by the other unit, the unit starts output of the broadcast bit.

All units, except that unit which started the transmission, detect the start bit and become ready for reception.

2 Broadcast bit

The broadcast bit is used to distinguish between broadcast and ordinary communication.

If the broadcast bit is 0, broadcast is indicated. If the broadcast bit is 1, ordinary communication is indicated. There are two types of broadcast: group broadcast and general broadcast. These types are distinguished by the slave address. (For details of the slave address, see (3).)

For broadcast, more than one slave unit can exist as an associated communication station. Therefore, the acknowledge bits for the master address field and subsequent fields are not returned.

When more than one unit starts sending a communication frame at the same time, broadcast takes precedence over ordinary communication and wins arbitration.



(2) Master address field

The master address field is used to transmit the local unit address (master address) to other units.

The master address field consists of master address bits and a parity bit.

A master address consists of 12 bits. It is output starting with the MSB.

When more than one unit starts transmitting the same broadcast bit value at the same time, arbitration determination is performed by the master address field.

Each time a unit transmits one bit of the master address field, the unit compares its output data with the data on the bus. If the comparison indicates that the master address output by the unit differs from the data on the bus, the unit determines that it has lost an arbitration. The unit stops transmission, and readies itself for reception. The IEBus is organized by wired AND. When arbitration is performed between units (arbitration masters), the unit having the smallest master address value wins the arbitration.

After the 12-bit master address has been output, only one unit is finally determined as being the master unit, such that that unit remains in the transmission state.

Next, the master unit outputs a parity bit Note to post the master address to other units. Then, the master unit proceeds to the slave address field.

Note Even parity is used. When the number of 1's in the master address bits is odd, the parity bit is set to 1.

(3) Slave address field

The slave address field is used to transmit the address (slave address) of a unit (slave unit) with which the master unit wants to communicate.

The slave address field consists of slave address bits, a parity bit, and an acknowledge bit.

A slave address consists of 12 bits. It is output starting with the MSB. After a 12-bit slave address has been transmitted, a parity bit is output to prevent the slave address from being received incorrectly. Then, the master unit attempts to detect the acknowledge signal from a slave unit to confirm that the slave unit exists on the bus. When the acknowledge signal is detected, the master unit outputs a control field. Note, however, that when performing broadcast, the master unit outputs the control field without attempting to detect the acknowledge bit. The slave unit outputs an acknowledge signal when the slave unit recognizes a match between the slave unit's address and the slave address transmitted by the master unit match, and that both the master address and slave address have even parity. If the slave unit detects odd parity, it does not recognize the addresses as matching, so does not output an acknowledge signal. In this case, the master unit is placed in the standby (monitor) state, and communication terminates.

For broadcast, the slave address is used to distinguish between group broadcast or general broadcast, as follows:

When the slave address is FFFH : General broadcast When the slave address is other than FFFH : Group broadcast

Remark For group broadcast, the number of a target group is indicated by the high-order 4 bits of the slave address.



(4) Control field

The control field indicates the type and direction of the next data field.

The control field consists of control bits, a parity bit, and an acknowledge bit.

The four control bits are output starting with the MSB.

Following the control bits, a parity bit is output. If even parity is detected, and the function requested by the master unit can be performed by the slave unit, the slave unit outputs an acknowledge signal. Then, the slave unit proceeds to the data-length field. If the slave unit cannot perform the processing requested by the master unit, even when even parity is detected, or if odd parity is detected, the slave unit does not output an acknowledge signal, and it enters the standby (monitor) state again.

After detecting the acknowledge signal, the master unit proceeds to the data-length field.

If an acknowledge signal is not detected, the master unit enters the standby state, terminating communication. For broadcast, however, the master unit proceeds to the next data-length field without attempting to detect the acknowledge signal.

Table 2-3 lists the meanings of the control bits.

(5) Data-length field

The data-length field specifies the communication data length, in bytes.

The data-length field consists of the data-length bits, a parity bit, and an acknowledge bit.

The eight data-length bits are output starting with the MSB. The data-length bits indicate the communication data length, in bytes, as shown in Table 2-2.

Data-length bit (hexadecimal)	Transmission data length, in bytes							
01H	1							
02H	2							
:	:							
:	:							
FFH	255							
00H	256							

Table 2-2 Values of the Data-Length Bits and Their Meanings

Remark If the data length set in the data-length bits exceeds the maximum number of transmission bytes, the latter varying with the communication mode, more than one frame is transmitted. In the second and subsequent frames, the data-length bits indicate the remaining communication data length, in bytes.

The operation performed for this field differs depending on whether master transmission (when bit 3 of the control bits is 1) or master reception (when bit 3 of the control bits is 0) is performed.

1 Master transmission

The data-length bits and parity bit are output by the master unit. When the slave unit detects even parity, the slave unit outputs an acknowledge signal, then proceeds to the data field. For broadcast, however, the slave unit does not output an acknowledge signal.

If the slave unit detects odd parity, the slave unit does not output an acknowledge signal, regarding the received data-length bits as being incorrect. Then, the slave unit enters the standby (monitor) state again. At this time, the master unit also enters the standby state again, and communication terminates.



2 Master reception

The data-length bits and parity bit are output by the slave unit. When the master unit detects even parity, the master unit outputs the acknowledge signal.

If the master unit detects odd parity, the master unit does not output an acknowledge signal, regarding the received data-length bits as being incorrect. Then, the master unit enters the standby state again. At this time, the slave unit also enters the standby state again, and communication terminates.

(6) Data field

The data field is used for data transmission and reception to and from a slave unit.

The master unit uses the data field to transmit data to the slave unit, or to receive data from the slave unit.

The data field consists of data bits, a parity bit, and an acknowledge bit.

The eight data bits are output, starting with the MSB.

After the data bits have been output, the parity bit and acknowledge bit are output from the master unit and slave unit, respectively.

Broadcast is performed only when the master unit transmits data. At this time, any acknowledge signal is ignored. The operations related to master transmission and master reception are explained below.

1 Master transmission

When the master unit performs a write to a slave unit, the master unit transmits the data bits and a parity bit to the slave unit. The slave unit receives the data bits and parity bit, then outputs an acknowledge signal if even parity is detected and the reception buffer is empty. If odd parity is detected, or if the reception buffer is not empty, the slave unit rejects the corresponding data, and does not output an acknowledge signal. If no acknowledge signal is received from the slave unit, the master unit transmits the same data again. The master unit repeats this operation until it receives an acknowledge signal from the slave unit, or until the data exceeds the maximum number of transmission bytes.

When even parity is detected, and an acknowledge signal is received from the slave unit, the master unit transmits the subsequent data, if any, and provided the maximum number of transmission bytes is not reached.

For broadcast, an acknowledge signal is not output by any slave unit. The master unit transfers data one byte at a time.

2 Master reception

When the master unit reads data from a slave unit, the master unit outputs a synchronization signal for each bit as it is read

The slave unit outputs data and a parity bit to the bus according to the synchronization signal output by the master unit.

The master unit reads the data and parity bit output by the slave unit, and checks the parity.

If the master unit detects odd parity, or if the reception buffer is not empty, the master unit rejects the data, and does not output an acknowledge signal. The master unit repeats the read operation for the same data provided the maximum allowable number of transmission bytes per communication frame has not been reached.

If the master unit confirms even parity, and the reception buffer is empty, the master unit accepts the data, and returns an acknowledge signal to the slave unit. Then, the master unit reads the next data, provided the maximum allowable number of transmission bytes per frame has not been reached.



(7) Parity bit

A parity bit is used to check for errors in the transmission data.

A parity bit is added to the master address bits, slave address bits, control bits, data-length bits, and data bits. Even parity is used. If the number of 1's in the data is odd, the parity bit is set to 1. If the number of 1's in the data is even, the parity bit is set to 0.

(8) Acknowledge bit

In ordinary communication (one-unit-to-one-unit communication), an acknowledge bit is added in the following positions to confirm that data has been received correctly:

- · At the end of the slave address field
- · At the end of the control field
- · At the end of the data-length field
- · At the end of the data field

The acknowledge bit is defined as follows:

- 0: Indicates that transmission data has been recognized. (ACK)
- 1: Indicates that no transmission data has been recognized. (NAK)

For broadcast, the acknowledge bit is ignored.

1 Acknowledge bit at the end of the slave address field

If any of the following is detected, the acknowledge bit at the end of the slave address field is set to NAK, and transmission is stopped:

- The parity of the master address bits or slave address bits is incorrect.
- A timing error occurred (bit format error).
- · No slave unit is found.

(2) Acknowledge bit at the end of the control field

If any of the following is detected, the acknowledge bit at the end of the control field is set to NAK, and transmission is stopped:

- The parity of the control bits is incorrect.
- Although the slave reception buffer Note is not empty, bit 3 of the control bits is 1 (write operation).
- Although the slave transmission buffer Note is empty, the control bits indicate data read (3H, 7H).
- For a locked unit, a unit other than the unit that specified the lock makes a request by using control bits indicating 3H, 6H, 7H, AH, BH, EH, or FH.
- Although no lock has been set, control bits indicating lock address read (4H) are set.
- A timing error occurred.
- An undefined control bit setting has been made.

Note See (1) in Section 2.4.

(3) Acknowledge bit at the end of the data-length field

If any of the following is detected, the acknowledge bit at the end of the data-length field is set to NAK, and transmission is stopped:

- The parity of the data-length bits is incorrect.
- A timing error occurred.

4 Acknowledge bit at the end of the data field

If any of the following is detected, the acknowledge bit at the end of the data field is set to NAK, and transmission is stopped:

- The parity of the data bits is incorrect Note.
- · A timing error occurred after the previous acknowledge bit.
- The reception buffer is full, such that no more data can be accepted Note.

Note In this case, if the maximum allowable number of transmission bytes per frame has not yet been reached, the transmitter retries transmission of the data field until the maximum number of transmission bytes is reached.

2.4 TRANSMISSION DATA (CONTENTS OF THE DATA FIELD)

The contents of the data field are indicated by the control bits.

FΗ

0H

4H

5H

	Bit 3 ^{Note 1}	Bit 2	Bit 1	Bit 0	FunctionNote 2
0H	0	0	0	0	Read slave status (SSR)
1H	0	0	0	1	Undefined
2H	0	0	1	0	Undefined
ЗН	0	0	1	1	Read data and locking
4H	0	1	0	0	Read lock address (low-order 8 bits)
5H	0	1	0	1	Read lock address (high-order 4 bits)
6H	0	1	1	0	Read slave status (SSR) and unlocking
7H	0	1	1	1	Read data
8H	1	0	0	0	Undefined
9H	1	0	0	1	Undefined
АН	1	0	1	0	Write command and locking
ВН	1	0	1	1	Write data and locking
СН	1	1	0	0	Undefined
DH	1	1	0	1	Undefined
EH	1	1	1	0	Write command

Table 2-3 Meanings of the Control Bits

Notes 1. The transfer direction of the data-length bits of the subsequent data-length field and data in the data field changes according to the value of bit 3 (MSB).

Write data

When bit 3 is 1: Transfer from the master unit to the slave unit

When bit 3 is 0: Transfer from the slave unit to the master unit

1

2. The values of control bits 3H, 6H, AH, and BH specify locking and unlocking. When an undefined value, 1H, 2H, 8H, 9H, CH, or DH, is transmitted, no acknowledge signal is returned.

Once a unit has been locked by a master unit, the locked unit rejects the control bits received from other than the master unit that requested the lock, unless the value of the control bits is one of the values listed in Table 2-4. Then, the unit does not output the acknowledge bit.

 Bit 3
 Bit 2
 Bit 1
 Bit 0
 Function

 0
 0
 0
 0
 Read slave status

 0
 1
 0
 0
 Read lock address (low-order 8 bits)

Read lock address (high-order 4 bits)

Table 2-4 Control Field Acceptable to a Locked Slave Unit

(1) Reading the slave status (SSR) (control bits: 0H, 6H)

A master unit can read the slave status (0H, 6H) to determine why the slave unit did not return the acknowledge bit (ACK).

The slave status is determined from the result of the communication last performed by the slave unit.

All slave units can provide slave status information.

Table 2-5 lists the slave status meanings.

1

Fig. 2-2 Slave Status (SSR) Bit Format

MSB							LSB
bit 7	bit 6	bit 5	bit 4	bit 3	bit 2	bit 1	bit 0

Table 2-5 Slave Status Meanings

Bit	Value	Meaning			
Bit 0 ^{Note 1}	0	The slave transmission buffer is	empty.		
	1	The slave transmission buffer is	not empty.		
Bit 1 Note 2	0	The slave reception buffer is em	pty.		
	1	The slave reception buffer is not	empty.		
Bit 2	0	The unit is not locked.			
	1	The unit is locked.			
Bit 3	0	Fixed at 0			
Bit 4Note 3	0	Slave transmission disabled			
	1	Slave transmission enabled			
Bit 5	0	Fixed at 0	Indicates the highest		
Bit 7	00	Mode 0	mode supported by the unit Note 4.		
Bit 6	01	Mode 1			
	10	Reserved for future expansion			
	11				

- **Notes 1.** The slave transmission buffer is accessed during a data read operation (control bits: 3H, 7H). For the μ PD72042A and μ PD72042B, this buffer corresponds to the TBF available when STRQ of the FLG register is set to 1.
 - 2. The slave reception buffer is accessed during a data write operation (control bits: 8H, AH, BH, EH, FH). For the μ PD72042A and μ PD72042B, this buffer corresponds to the RBF available when SLRE of the FLG register is set to 1.
 - 3. The value of bit 4 can be selected by using the UAR1 register.
 - **4.** Bits 7 and 6 are currently fixed to 10 in the hardware of the μ PD72042A and μ PD72042B.

(2) Data/command transfer (control bits: Read (3H, 7H), write (AH, BH, EH, FH))

When data read (3H, 7H) is set, the data in the data buffer of the slave unit is read into the master unit. When data write (BH, FH) or command write (AH, EH) is set, the data received by the slave unit is processed according to the operation specifications for the slave unit.

- Remarks 1. The user can select data and commands as necessary according to the system.
 - 2. 3H, AH, and BH may cause locking, depending on the communication conditions and status.



(3) Reading a lock address (control bits: 4H, 5H)

When a lock address read operation (4H, 5H) is specified, the address (12 bits) of the master unit that issued the lock instruction is read in one-byte form, as shown below.

Fig. 2-3 Lock Address Format

MSB LSB

Control bits : 4H Low-order 8 bits

Control bits : 5H Undefined High-order 4 bits

(4) Locking and unlocking (control bits: Locking (3H, AH, BH), unlocking (6H))

The lock function is used to enable the transfer a message using more than one communication frame. When locked, a unit cannot receive data from other than the unit that requested the lock. Locking and unlocking are performed as follows:

1 Locking

The master unit can lock the slave unit by specifying the lock with the corresponding control bits (3H, AH, BH). In this case, when the transmission or reception of acknowledge bit 0 for the data-length field has been completed, but the communication frame is then terminated before transmission or reception of as many data bytes as are specified by the data-length bits is completed, the slave unit is locked. At this time, the bit indicating the lock status (bit 2) in the slave status byte is set to 1.

(2) Unlocking

The master unit can unlock a locked slave unit when the control bits specify locking (3H, AH, or BH) or unlocking (6H). The slave unit is unlocked once as many data bytes as are specified by the data-length bits have been transmitted or received within one communication frame. At this time, the bit indicating the lock status (bit 2) in the slave status byte is reset to 0.


For broadcast, locking or unlocking is not performed.

Caution When a locked unit is to be unlocked by the unit itself, hardware reset or software reset must be performed. (The lock status can be checked by referring to the contents of the LOR2 register.)

2.5 BIT FORMAT

Fig. 2-4 illustrates the bits that constitute an IEBus communication frame.

Fig. 2-4 IEBus Bit Format (Concept)



Logic 1: The potential difference between the bus lines (the BUS+ and BUS- pins) is 20 mV or less (low level).

Logic 0: The potential difference between the bus lines (the BUS+ and BUS- pins) is 120 mV or more (high level).

Preparation period : First and subsequent low-level (logic 1) periods

Synchronization period : Next high-level (logic 0) period

Data period : Period in which a bit value is indicated (logic 1 = low level, logic 0 = high level)

The synchronization and data periods are almost equal in duration.

For the IEBus, synchronization is established for each bit. The specifications of the total time required for a bit and the duration of each period allotted within the bit vary depending on the type of the transmission bits, and whether the unit is a master or slave.



3. MICROCOMPUTER INTERFACE

3.1 TRANSFER METHOD

Either of two microcomputer interface modes can be selected: three-wire serial I/O mode or two-wire serial I/O mode.

Whether three-wire serial I/O mode or two-wire serial I/O mode is selected depends on the input level of the SEL pin (pin 12). (See **Section 3.3** for details.)

 $SEL \leftarrow 1: \ Three-wire \ serial \ I/O$

SEL ← 0: Two-wire serial I/O

(1) Three-wire serial I/O (SEL \leftarrow 1)

Three wires are used to read and write data. The three wires are the serial clock input (SCK), serial data input (SI^{Note 1}), and serial data output (SO^{Note 2}).

(a) Read operation

Data is output to the SO pin upon detecting the falling edge of the SCK pin.

(b) Write operation

Data is input via the SI pin upon detecting the rising edge of the SCK pin. At this time, 1 is output on the SO pin.

(2) Two-wire serial I/O (SEL \leftarrow 0)

Two wires are used to read and write data. The two wires are the serial clock input (SCK) and serial data I/O (SIO^{Note 1}).

(a) Read operation

The SIO pin is placed in the output state, and data is output upon detecting the falling edge of the $\overline{\text{SCK}}$ pin.

(b) Write operation

The SIO pin is placed in the input state, and data is input upon detecting the rising edge of the SCK pin.

Notes 1. The SI pin for three-wire serial I/O mode is also used as the SIO pin for two-wire serial I/O mode.

2. The impedance of the SO pin for three-wire serial I/O mode goes high in two-wire serial I/O mode. So, connect the SO pin to GND or VDD.

Table 3-1 I/O States of the SIO (SI) and SO Pins

RESET	cs	SEL	C/D	SI (SIO)	SO		State
RESET	CS	SEL	C/D	31 (310)	30	Three-wire/two-wire	Operating mode
0	×	×	×	ı	Hi-Z	_	Reset state
1	1	×	×	ı	Hi-Z	_	Chip nonselected state
1	0	1	1	1	O*	Three-wire	Control mode
			0				Data write mode
					0		Data read mode
		0	1	I	Hi-Z	Two-wire	Control mode
			0				Data write mode
				0			Data read mode

I : Input state Hi-Z : High-impedance state

O : Output state imes : Don't care

O* : State in which 1 is output

3.2 DATA TRANSFER FORMAT

3.2.1 Three-Wire Data Transfer (SEL = 1)


(1) Control mode

When the C/\overline{D} input is set high, control mode is set to control data transfer. Data transfer control involves the following processing.

- (1) Register address setting
- 2 Register read/write selection

(a) μ PD72042A (starting with MSB)

(b) μ PD72042B (starting with LSB)



Remark After reset (RESET) cancellation, the state enabling writing to the register at address 0000B is set.


Caution In control mode, each data item is read every eighth clock pulse. (Data of less than eight clock periods is ignored.)




(2) Data read mode

When the C/\overline{D} pin is set low after register read is selected in control mode, the data read mode is set. In data read mode, the data in a read register is read on the SO pin upon detecting the falling edge of the \overline{SCK} pin.

(a) μ PD72042A (starting with MSB)

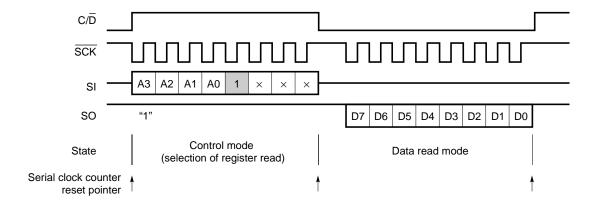

(b) μ PD72042B (starting with LSB)

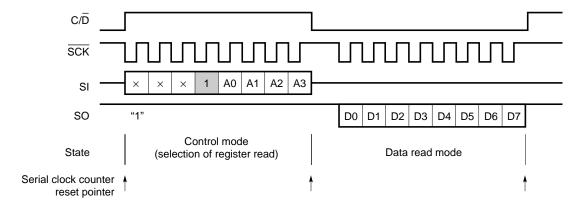


Caution When the C/\overline{D} pin is set high in data read mode, the serial clock counter is reset. Therefore, the remaining bits of the byte cannot be read; at the next falling edge, read is performed starting from the next byte in the case of RBF, or from the first bit for other registers.


(3) Data write mode

When the C/\overline{D} pin is set low after register write has been selected in control mode, data write mode is set. In data write mode, data for a write register is applied to the SI pin at the rising edge of the \overline{SCK} pin.

(a) μ PD72042A (starting with MSB)

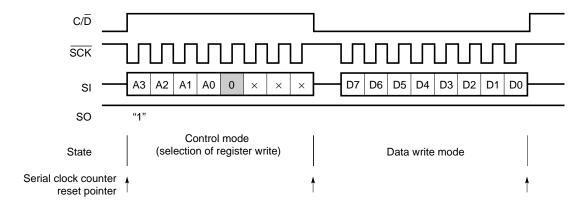

(b) μ PD72042B (starting with LSB)

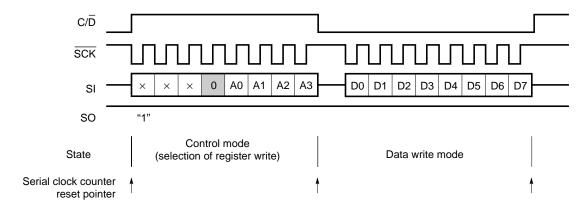

Caution Register overwrite is started immediately after the eighth clock rising edge. All registers other than TBF are overwritten on the eighth clock rising edge. (Data of less than eight clock periods is ignored.)




3.2.2 Two-Wire Data Transfer (SEL = 0)

(1) Control mode

When the C/\overline{D} input is set high, control mode is set to control data transfer. Data transfer control involves the following processing.

- 1) Register address setting
- (2) Register read/write selection

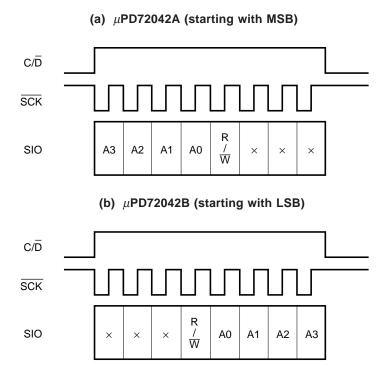


Remark After reset (RESET) cancellation, the state enabling writing to the register at address 0000B is set.


Caution In control mode, each data item is read every eighth clock pulse. (Data of less than eight clock periods is ignored.)

(2) Data read mode

(a) μ PD72042A (starting with MSB)

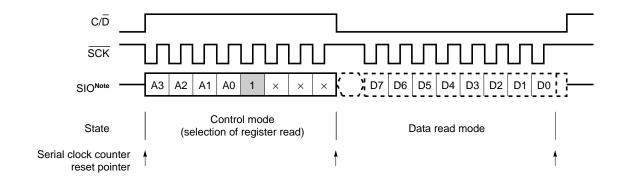

(b) μ PD72042B (starting with LSB)

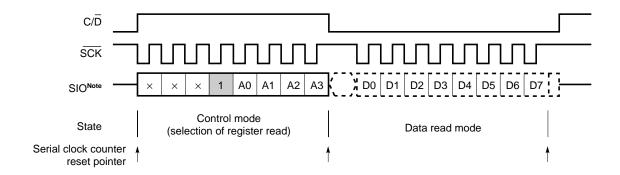


Note ——— SIO pin input state
---- SIO pin output state

- Cautions 1. When the C/D pin is set high in data read mode, the serial clock counter is reset. Therefore, the remaining bits of the byte cannot be read; at the next falling edge, a read operation is performed starting from the next byte in the case of RBF, or from the first bit for other registers.
 - 2. The SIO pin is a CMOS I/O pin. So, be careful to avoid an output collision between the SIO pin and the microcomputer. Further, a pull-up resistor is required when N-ch open-drain output of the microcomputer is used. Note that if the last output level is low upon the termination of read mode, current will flow constantly.




(3) Data write mode

(a) μ PD72042A (starting with MSB)

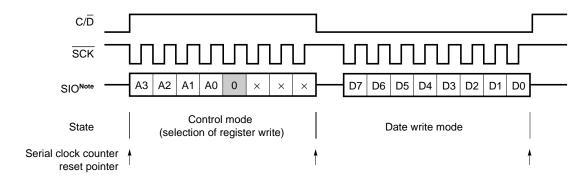

(b) μ PD72042B (starting with LSB)

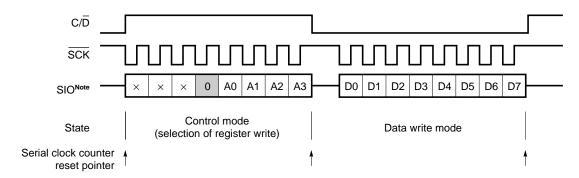


Note — SIO pin input state

Caution Register overwrite is started immediately after the eighth clock rising edge. All registers other than TBF are overwritten at the eighth clock rising edge. (Data of less than eight clock periods is ignored.)




3.3 CONNECTION TO A MICROCOMPUTER

(1) Three-wire serial I/O

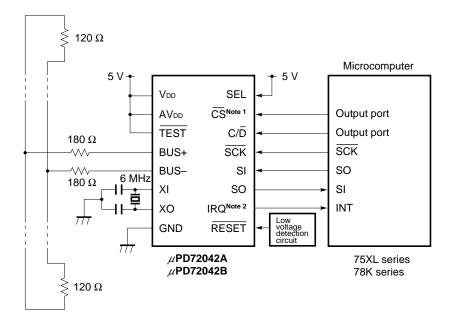

(2) Two-wire serial I/O

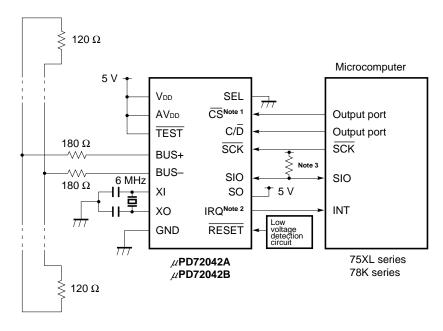

Notes 1. When only the μ PD72042A or μ PD72042B is to be controlled from a microcomputer via a serial I/O interface, the $\overline{\text{CS}}$ pin must be tied low (by connecting it to GND).

- 2. When an interrupt is detected by polling (in FLG register read), IRQ may be left open. When high-volume or high-speed data transfer is required, however, the system described above is recommended to ensure reliable data transfer.
- 3. Required when the microcomputer's N-ch open-drain output is used. The SIO pin of the μ PD72042A and μ PD72042B is a CMOS I/O pin.



3.4 STANDBY MODE SETTING AND CANCELLATION

Standby mode can be set by setting STREQ of the CTR register to 1. The XI pin for oscillation is tied to GND, and the impedance of the XO pin goes high.

In standby mode (with the STM flag of the FLG register set to 1), only the following registers can be accessed:

Writable register : CTR (address 0000B) Readable register : FLG (address 0001B)

Standby mode can be cancelled by setting STREQ of the CTR register to 0.

 \star Caution Do not read any data from internal registers via the serial I/O during the period from when a microcomputer sets the STREQ flag to 1 to when the μ PD72042A or μ PD72042B enters the standby mode. This period is one-communication frame at maximum.

3.5 RESET MODE SETTING AND CANCELLATION

For hardware reset, the registers are initialized and standby mode is set. (During this period, oscillation is stopped.) For software reset, the registers are initialized, and operation is started.

4. REGISTERS

A microcomputer controls IEBus communication by reading from and writing to the internal registers of the μ PD72042A or μ PD72042B.

Registers are classified into write registers and read registers. The total size of the write registers is 40 bytes; the transmission buffer uses 33 of the 40 bytes. The total size of the read registers is 49 bytes; the reception buffer uses 40 of the 49 bytes.

Table 4-1 lists the registers.



Table 4-1 $\,\mu$ PD72042A and $\,\mu$ PD72042B Registers

(a) Write registers

	Address	Name	High-order 4 bits			Low-order 4 bits				Note	Reference page	
ОН	0000	CTR	-	_	_	REEN	SRST		_	STREQ	Α	p. 33
1H	0001	CMR	0	LOCK	BU	IFC		СО	МС		С	p. 34
			1	0	0	0	0	IRS	MFC	DERC		
2H	0010	UAR1	Local station address (low-order 4 bits)				Condition code				В	p. 36
3H	0011	UAR2		Loca	l station	n addres	s (high-	order 8	bits)		В	p. 36
4H	0100	SAR1	Slave address (low-order 4 bits)				0	0	0	0	D	p. 37
5H	0101	SAR2		S	Slave ad	ldress (h	nigh-order 8 bits)				D	p. 37
6H	0110	MCR	Broadc	Broadcast bits Number of arbitrations			Control bits			D	p. 38	
7H	0111	-	-						_	_		
8H	1000	_	-						_	_		
EH	1110	TBF	Numl	per of by	ytes of t	transmis	sion da	ta, trans	mission	data	F	p. 40

(b) Read registers

	Address	Name	High-order 4 bits			Low-order 4 bits			Note	Reference page		
OН	0000	STR	TFL	TEP	RFL	REP		_	-		А	p. 41
1H	0001	FLG	_	MARQ	STRQ	SLRE	CEX	RAW	STM	IRQ	А	p. 42
2H	0010	RDR1		Numb	er of by	tes of n	naster r	eception	data		А	p. 44
3H	0011	RDR2		Numb	•	tes of sl dcast re		•	ata or		А	p. 44
4H	0100	LOR1			Lock ad	dress (le	ow-orde	r 8 bits)			Н	p. 45
5H	0101	LOR2		Lock	state		Lock address (high-order 4 bits)				Н	p. 45
6H	0110	DAR1		Broadcast address – (low-order 4 bits)					E	p. 46		
7H	0111	DAR2		Broadcast address (high-order 8 bits)						Е	p. 46	
8H	1000	RCR		Return codes (MARC, SLRC)						А	p. 47	
EH	1110	RBF		Tra	ansmitte	er addre	ss, rece	ption da	ıta		G	p. 59

Note Writable and readable periods of the registers of the μ PD72042A and μ PD72042B

- A: Arbitrary
- B: After system reset cancellation
- C: While CEX of the FLG register (address 0001) is set to 0
- D: While MARQ of the FLG register (address 0001) is set to 0
- E: After SLRC of the RCR register (address 1000) is set to 1100 (broadcast reception error)
- F: While TFL of the STR register (address 0000) is set to 0
- G: While REP of the STR register (address 0000) is set to 0
- H: When CEX of the FLG register (address 0001) is set to 0 after LOCK of the CMR register (address 0001) is set to 1



Cautions 1. In standby mode (with STM of the FLG register set to 1), the user can only write to the CTR register (including standby mode cancellation) and read from the FLG register.

2. Never access a free address.

Slave status (SSR) can be read into RBF by setting the control bits to 0H or 6H from the master unit.

 CTR
 Address
 : 0000B (0H)

 Read/write
 : Write

 Control register
 When reset
 : xxx00xx1B

CTR is a one-byte write register used to control μ PD72042A and μ PD72042B operations.

b7	b6	b5	b4	b3	b2	b1	b0	
_	_	_	REEN	SRST	_	_	STREQ	CTR

[REEN]

When REEN is set to 1, the SLRE flag of the FLG register is immediately set to 1 to enable both slave and broadcast reception.

[SRST]

When SRST is set to 1, the μ PD72042A or μ PD72042B is immediately reset. (Note, however, that STREQ is set to a written value.)

[STREQ]

- 1: Requests standby mode.
- 0: Exits from standby mode.

Standby mode setting and cancellation

The μ PD72042A or μ PD72042B is requested to enter the standby mode by setting the STREQ flag to 1 from the microcomputer. The μ PD72042A or μ PD72042B enters standby mode when the standby mode input enabled state (carrier sense state) is set. In this case, the impedance of the BUS+ and BUS- pins goes high (logic 1), and the STM flag of the FLG register is set to 1. In standby mode, oscillation is stopped, and all operations are stopped while preserving the internal data, thus minimizing power consumption.

When, in standby mode, the STREQ flag is set to 0 from the microcomputer, standby mode is cancelled after the period (about 20 ms at fx = 6 MHz) needed for oscillation to stabilize; the halted operations are resumed from the point at which standby mode was set. At this time, the STM flag of the FLG register changes to 0. In standby mode, only writing to the CTR register (for standby mode cancellation) and reading from the FLG register can be performed from the microcomputer.

- Cautions 1. When the SRST flag and STREQ flag are simultaneously set to 1, standby mode is set after software reset. (This state is the same as that set by hardware reset.) Note, however, that when the SRST flag is set to 1 in standby mode, a software reset is performed, but this is not reflected in the FLG register.
 - 2. Do not read any data from internal registers via the serial I/O during the period from when a microcomputer sets the STREQ flag to 1 to when the μ PD72042A or μ PD72042B enters the standby mode. This period is one-communication frame at maximum.



 CMR
 Address
 : 0001B (1H)

 Read/write
 : Write

 Command register
 When reset
 : 00000000B

CMR is a one-byte write register used to set a command for communication control, transmission/reception buffer control, or optional function setting.

When data is set in CMR from the microcomputer, CEX of the FLG register is set to 1. When the μ PD72042A or μ PD72042B processes the data set in CMR, CEX is set to 0.

After the microcomputer checks that CEX of the FLG register is set to 0, new data can be set in CMR.

The following describes the data that is set in CMR.

(1) When bit 7 (MSB) of CMR is 0

b7	b6	b5	b4	b3		b0	_
0	LOCK	BU	IFC		COMC		CMR

[LOCK]: Lock state setting command

- 1: The value representing the lock state (0001 for locked or 0000 for not-locked) and lock address are output to LOR1 and LOR2. Note, however, that when 0000 (not-locked) is output, any lock address value is ignored.
- 0 : The contents of LOR1 and LOR2 remain as is.

[BUFC]: Transmission/reception buffer control command

00 : The transmission and reception buffers remain as is.

01: The transmission buffer (TBF) is cleared.

10 : The reception buffer (RBF) is cleared.

11 : The data of the previous (latest) communication frame to be stored in the reception buffer (RBF) is cleared Note 1.

[COMC]: Communication control command

- 0000: Communication operation remains as is.
- 0001: The locked state is cancelled.
- 1000: Master communication is requested Note 2.
- 1001: Master communication is requested, with the previous master transmission state held Note 3.
- 1010: Master communication is aborted.
- 1011: Slave data transmission is requested Note 4.
- 1100: Slave data transmission is requested, with the previous slave data transmission state held Note 5.
- 1101: Slave data transmission is aborted.
- 1111: Slave reception and broadcast reception are disabled.

Notes 1. If the microcomputer has already read the data for the previous (latest) communication frame from RBF, or optional function setting in CMR is selected and MFC = 0, clear RBF with BUFC = 10.

- **Notes 2.** When the MSB of the control bits set in MCR is 1 (for master transmission), set the number of bytes of transmission data, and at least one byte of transmission data in TBF before command setting.
 - 3. When the MSB of the control bits set in MCR is 1 (for master transmission), set at least one byte of transmission data before command setting. This operation is not required if all transmission data has already been set in TBF.
 - **4.** Set the number of bytes of transmission data, and at least one byte of transmission data in TBF before command setting.
 - **5.** Set at least one byte of transmission data in TBF before command setting. This operation is not required if all transmission data has already been set in TBF.

(2) When bit 7 (MSB) of CMR is 1

An optional function is set.

b7	b6	b5	b4	b3	b2	b1	b0	_
1	0	0	0	0	IRS	MFC	DERC	CMR

[MFC]: Selection of one frame/multiple frames

- 1: Data for multiple frames is stored in RBF.
- 0: Data for only one frame is stored in RBF.

[DERC]: Broadcast reception selection

- 1: The issue of return code 1100 (broadcast reception error) for SLRC of the RCR register is enabled.
- 0: The issue of return code 1100 (broadcast reception error) for SLRC of the RCR register is disabled.

[IRS]: Interrupt generation condition selection

- 0 : An interrupt is requested when the data of the RCR register changes.
- 1 : An interrupt is requested when the data of the RCR register changes to other than the following:

MARC = 0000B (start of master transmission)

MARC = 0100B (start of master reception)

SLRC = 0000B (start of slave data transmission)

SLRC = 0100B (start of slave reception)

SLRC = 1000B (start of broadcast reception)

Caution Set an optional function in initialization processing after reset cancellation for the μ PD72042A or μ PD72042B. Until an optional function has been set, the μ PD72042A and μ PD72042B will not accept IEBus communication.



UAR2

UAR1 Address : 0010B (2H) (UAR1)


0011B (3H) (UAR2)

Read/write : Write

Local station unit address registerWhen reset : Undefined (with the

previous data held)

UAR1 and UAR2 are registers used to set a local station unit address (12 bits) and condition code. Set UAR1 and UAR2 after reset cancellation.



[Local station address]

A local station address is used as a master address when the local station performs communication as the master unit. A local station address is used as a slave address when the local station performs communication as a slave.

★ [Condition code]

Bit position	Condition code	Condition setting
b3, b2	00	Communication is performed in mode 0.
	01	Communication is performed in mode 1.
	10	Undefined
	11	
b0	0	The slave transmission section is disabled.
	1	The slave transmission section is enabled.

Remark Bit 1 of a condition code is not used. (Set the bit to either 0 or 1.)

SAR1 Address : 0100B (4H) (SAR1)

SAR2 0101B (5H) (SAR2)

Read/write : Write

Slave address register When reset : Undefined (the pre-

vious data is held)

The SAR1 and SAR2 registers are used to set the address of a remote station (slave address) in master communication.

Set SAR1 and SAR2 while the value of MARQ of the FLG register is 0 (while master communication is not requested).

	b7	b4	b3			b0	_
	Slave address (low-order	4 bits)	0	0	0	0	SAR1
							-
	b7					b0	_
Slave address (high-order 8 bits)							SAR2



MCR Address : 0110B (6H)


Read/write : Write

Master communication register When reset : Undefined (the pre-

vious data is held)

The MCR register is used to set a master communication condition.

Set MCR while the value of MARQ of the FLG register is 0 (while master communication is not requested).



[Broadcast bit]

This bit is used to select broadcast or separate communication.

Bit 7 = 0: Broadcast

Bit 7 = 1: Separate communication

★ [Number of arbitrations] (Number of retries)

This field is used to set the maximum number of retry operations to be performed if arbitration is lost in master communication. The μ PD72042A and μ PD72042B automatically retry communication as many times as the number set in this field.

,			
b6	b5	b4	Number of retries
0	0	0	0
0	0	1	1
0	1	0	2
0	1	1	3
1	0	0	4
1	0	1	5
1	1	0	6
1	1	1	7



[Control bits]

This control field is used to set the control bits (four bits).

· Contents of control bits

	Bit 3 ^{Note 1}	Bit 2	Bit 1	Bit 0	FunctionNote 2
0H	0	0	0	0	Slave status (SSR) read
1H	0	0	0	1	Undefined
2H	0	0	1	0	Undefined
ЗН	0	0	1	1	Data read and lock
4H	0	1	0	0	Lock address read (low-order 8 bits)
5H	0	1	0	1	Lock address read (high-order 4 bits)
6H	0	1	1	0	Slave status (SSR) read and unlock
7H	0	1	1	1	Data read
8H	1	0	0	0	Undefined
9H	1	0	0	1	Undefined
AH	1	0	1	0	Command write and lock
ВН	1	0	1	1	Data write and lock
СН	1	1	0	0	Undefined
DH	1	1	0	1	Undefined
EH	1	1	1	0	Command write
FH	1	1	1	1	Data write

Notes 1. The value of bit 3 (MSB) determines the transfer direction of the subsequent data-length field data and data field data.

When bit 3 is set to 1: Data is transferred from the master unit to a slave unit.

When bit 3 is set to 0: Data is transferred from a slave unit to the master unit.

2. 3H, 6H, AH, and BH are control bits used for lock setting and cancellation. When an undefined value of 1H, 2H, 8H, 9H, CH, or DH is sent, no acknowledgement is returned.



TBF	Address : 1110B (EH)
	Read/write : Write
Transmission buffer	When reset : Empty

TBF is a 33-byte FIFO buffer used to hold the number of bytes of transmission data and transmission data for master transmission and slave data transmission.

TBF can be written from the microcomputer when the TFL flag of the STR register is set to 0 (indicating that TBF is not full).

In master transmission and slave data transmission, the following format is used to load data into TBF from the microcomputer.

	TBF		
Byte 1	Number of bytes of transmission data		
Byte 2	First byte of transmission data		
Byte 3 Second byte of transmission data			
:	÷		
Byte 33	:		

[Byte 1]: Number of bytes of transmission data

Between 1 and 256 bytes can be set.

Number of bytes of transmission data	Data set in byte 1 of TBF
1	01H
2	02H
255	FFH
256	00H

[Bytes 2 and up]: Transmission data

As much transmission data as is set in byte 1 is set in byte 2 and subsequent bytes.

STR Address : 0000B (0H)

Read/write : Read

Status register When reset : 0101xxxxB

STR is a one-byte read register used to indicate the states of TBF and RBF.

b7	b6	b5	b4	b3	b2	b1	b0	_
TFL	TEP	RFL	REP	_	_	_	_	STR

[TFL]

1: TBF is full.

0 : TBF is not full. The microcomputer can load data into TBF.

[TEP]

1: TBF is empty. The microcomputer can load initial data into TBF.

0: TBF is not empty.

[RFL]

1: RBF is full.

0: RBF is not full.

[REP]

1: RBF is empty.

0 : RBF is not empty. The microcomputer can read data from RBF.



 FLG
 Address : 0001B (1H)

 Read/write : Read

 Flag register
 When reset : 00000010B

FLG is a one-byte read register used to indicate statuses such as the communication state, command execution state, and interrupt state.

b7	b6	b5	b4	b3	b2	b1	b0	_
_	MARQ	STRQ	SLRE	CEX	RAW	STM	IRQ	FLG

[MARQ]

- 1 : A request for communication as the master unit is being made.
- 0 : No request for communication as the master unit is being made. Data can be written to the SAR1, SAR2, and MCR registers.
- ★ The MARQ flag is set and reset as described below.
 - Set : When the CEX flag of the FLG register is set to 0 after 1000 or 1001 is set in COMC of the CMR register
 - Reset: When master communication is terminated

[STRQ]

- 1 : A request for slave unit data transmission is being made.
- 0 : No request for slave unit data transmission is being made.

The STRQ flag is set and reset as described below.

- Set : When the CEX flag of the FLG register is set to 0 after 1011 or 1100 is set in COMC of the CMR register
- · Reset: When slave data transmission is terminated

[SLRE]

- 1 : Slave reception or broadcast is allowed.
- 0 : Slave reception and broadcast are not allowed.

The SLRE flag is set and reset as described below.

- Set : When REEN of the CTR register is set to 1
- Reset: When slave reception or broadcast reception is terminated normally or suspended, or when CEX of the FLG register is set to 0 after 1111 is set in COMC of the CMR register

When SLRE = 0, bit 1 of the slave status is set to 1 regardless of the state of RBF; communication frame reception based on the AH, BH, EH, and FH control bits, received from the master station, is not performed.



[CEX]

- 1: A command is currently being executed.
- 0 : Execution of a command has terminated. A command code can be set in CMR.

The CEX flag is set and reset as described below.

• Set : When a command code is set in CMR

• Reset : When μ PD72042A or μ PD72042B command processing is terminated

[RAW]

1 : The μ PD72042A or μ PD72042B is running away.

0 : The μ PD72042A or μ PD72042B is not running away.

The RAW flag is used to indicate a microprogram crash in the μ PD72042A or μ PD72042B, as detected by a watchdog timer.

When the RAW flag is set to 1, a request to interrupt the microcomputer is issued. An interrupt pulse signal is output on the IRQ pin, and the IRQ flag of the FLG register is set. At this time. The microcomputer must reset the μ PD72042A or μ PD72042B by driving the $\overline{\text{RESET}}$ pin of the μ PD72042A or μ PD72042B low or by setting the SRST flag of the CTR register to 1.

[STM]

- 1: Standby mode is set.
- 0 : Standby mode is not set.

[IRQ]

- 1 : An interrupt request was made.
- 0 : No interrupt request is made.

The IRQ flag is set when a return code including the code in the RCR register is changed Note, or when the RAW flag changes from 0 to 1 (crash). When the FLG register is read with the IRQ flag set to 1, the IRQ flag is reset. For details of the return codes, see the description of the RCR register.

Note IRQ flag setting depends on the IRS value of the CMR register.




RDR1 Address : 0010B (2H) (RDR1) RDR2

0011B (3H) (RDR2)

Read/write : Read Reception data register When reset: 00H

The RDR1 and RDR2 registers are used to hold the number of bytes of reception data stored in RBF for each frame received during master, slave, or broadcast reception.

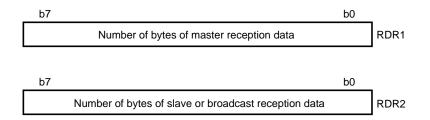

[RDR1]

RDR1 indicates the number of bytes of data set in RBF by a communication frame during master reception. One of the following values is set in RDR1:

• When master communication is requested (COMC = 1000 or 1001) : RDR1 = 0• When master reception is started (MARC = 0100) : RDR1 = 3

· Each time one byte of data is received : RDR1 is incremented by 1.

[RDR2]

RDR2 indicates the number of bytes of data set in RBF by a communication frame in slave reception or broadcast reception. One of the following values is set in RDR2:

• When slave reception is started (SLRC = 0100) : RDR2 = 3• When broadcast reception is started (SLRC = 1000) : RDR2 = 3

· Each time one byte of data is received : RDR2 is incremented by 1.

. Example of RDR2 setting



Note N: Number of bytes of data received with the previous communication frame



LOR1 Address : 0100B (4H) (LOR1)

0101B (5H) (LOR2)


Read/write : Read

Lock register When reset : 0×H (LOR2)

LOR1 is undefined.

The LOR1 and LOR2 registers are used to hold a lock state.

LOR1 and LOR2 set a lock state and lock address after the lock state setting command is set in the CMR register (LOCK = 1), then executed.



[Lock state]

0000: Not locked 0001: Locked

LOR2

Remark When 0000 (not locked) is set in the lock state bits, any lock address value is ignored.



DAR2

DAR1 Address : 0110B (6H) (DAR1) High-order 4 bits


0111B (7H) (DAR2)

Read/write : Read

Broadcast address register When reset: Undefined

The DAR1 and DAR2 registers are used to hold a broadcast address (master address) involved when a broadcast reception error occurs.


DAR1 and DAR2 are updated each time a broadcast reception error occurs (SLRC of the RCR register is set to 1100). So, ensure that when a broadcast reception error occurs, the contents of DAR1 and DAR2 are read by the microcomputer within the time indicated below.

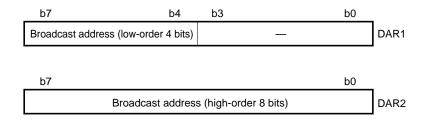

Maximum allowable DAR1 and DAR2 read time (t: At fx = 6 MHz):

Approx. 5420 μ s (mode 0)

Approx. 1490 μ s (mode 1)



- Cautions 1. If the microcomputer cannot read the data in DAR1 and DAR2 within the times indicated above, DAR1 and DAR2 may be updated by the occurrence of another broadcast reception error, and the subsequently updated broadcast address may be read.
 - 2. A broadcast address is stored in DAR1 and DAR2 when DERC (broadcast reception selection) of the CMR register is set to 1.



RCR Address : 1000B (8H)


Read/write : Read

Return code register When reset : 111111111B

RCR is a one-byte read register used to indicate the IEBus communication status (return code).

RCR consists of two return codes: MARC and SLRC. MARC indicates the communication status in master transmission or master reception. SLRC indicates the communication status in slave data transmission, slave reception, or broadcast reception. When the contents of RCR change, an interrupt request is sent to the microcomputer according to the setting of the IRS flag of the CMR register.

The MARC and SLRC flags are set independently, such that the microcomputer can simultaneously read the master communication status and slave communication status.



Caution When IRQ is set as a result of a program crash, the previous value of RCR is preserved.

[MARC]

MARC represents a return code issued during master transmission or master reception.

(a) Master transmission

Master transmission is performed when the microcomputer performs the setting explained below.

· Master transmission setting

- 1 In the low-order 4 bits of the MCR register, control bits (1010, 1011, 1110, or 1111) are set for master-to-slave data transfer.
- In COMC of the CMR register, a command (1000 or 1001) for requesting master communication is set.

Table 4-2 lists the MARC return codes for master transmission.



Table 4-2 MARC Return Codes for Master Transmission

	MARC	Description						
0000 1. Meaning : Master transmission is started.								
		2. Occurrence condition: This return code is issued when the master address field in a communication frame has been transmitted, and the unit has won the arbitration to become the master unit.						
	0001	1. Meaning: Master transmission data is not available.						
		2. Occurrence condition: This return code is issued if the next transmission data is not set in TBF during master transmission.						
*		 Microcomputer processing: If data consisting of one or more bytes is not set in TBF within the time below, transmission may be terminated prior to its completion. Transmission data setting time: Approx. 1570 μs (mode 0)						
	0010	Meaning: Master transmission was terminated normally.						
		2. Occurrence condition: This return code is issued when as much data as the amount specified in the data-length field has been transmitted normally. In this case, the MARQ flag of the FLG register changes from 1 to 0.						
0011 1. Meaning : Master transmission was aborted.								
 2. Occurrence condition: This return code is issued in any of the following cases. In each case flag of the FLG register changes from 1 to 0. When the unit has lost the arbitration to become the master unit. When a transmission is stopped because the NAK is returned from the slave unit at the en address field, the control field, or the data-length field of a communication frame (excluding the whole is terminated prior to the transmission of as much data as the amount in the data-length field of a communication frame. 								

(b) Master reception

Master reception is performed when the microcomputer performs the setting below.

• Master reception setting

- 1 In the low-order 4 bits of the MCR register, control bits (0000, 0011, 0100, 0101, 0110, or 0111) are set for slave-to-master data transfer.
- ② In COMC of the CMR register, a command (1000 or 1001) for requesting master communication is set.

Table 4-3 indicates the MARC return codes for master reception.

Table 4-3 MARC Return Codes for Master Communication


MARC	Description
0100	1. Meaning: Master reception has started.
	2. Occurrence condition: ① The unit has won the arbitration to become the master unit, and a communication frame up to the data-length field was transferred successfully. ② When the control field is received, RBF becomes ready for reception Note.
	After the data-length field, 0000 is set in MARC, and three-byte data consisting of a slave address, control bits, and data-length bits is set in RBF. If RBF becomes full when this three-byte data is set, 0001 is set in MARC.
	3. Microcomputer processing: Three-byte data consisting of a slave address, control bits, and data- length bits can be read from RBF.
0101	1. Meaning: The master reception buffer is full.
	2. Occurrence condition: This return code is issued when RBF becomes full during data reception as the master unit, and reception data cannot be set in RBF.
	 Microcomputer processing: If data consisting of one or more bytes is not read from RBF within the time below, the one-byte data cannot be received, and the μPD72042A or μPD72042B returns an NAK. Reception data read time: Approx. 1570 μs (mode 0) Approx. 390 μs (mode 1)
0110	1. Meaning: Master reception was terminated normally.
	2. Occurrence condition: This return code is issued when as much data as the amount specified in the data-length field has been received normally in a communication frame. In this case, the MARQ flag of the FLG register changes from 1 to 0.
	Microcomputer processing: Reception data can be read from RBF, and the number of bytes of master reception data can be read from RDR1.
0111	1. Meaning: Master reception was aborted.
	 2. Occurrence condition: This return code is issued in any of the following cases. In each case, the MARQ flag of the FLG register changes from 1 to 0. When the unit has lost the arbitration to become the master unit. When a transmission is stopped because the NAK is returned from the slave unit at the end of the slave address field or the control field of a communication frame or because the NAK is sent to the slave unit at the end of the data-length field of a communication frame (excluding the broadcast). When a communication is terminated prior to the reception of as much data as the amount specified in the data-length field of a communication frame.
	Microcomputer processing: Reception data can be read from RBF, and the number of bytes of master reception data can be read from RDR1.

Note See Note of Table 4-9.




[MARC occurrence interval]

(a) When master transmission is performed

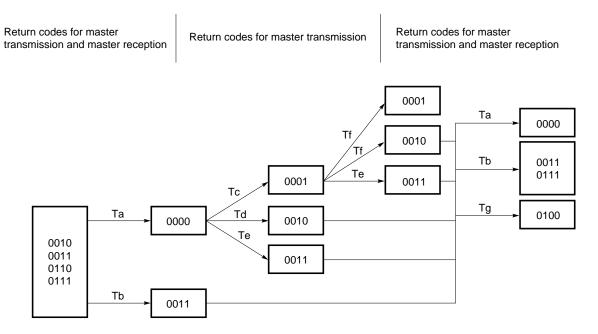

★ Table 4-4 Minimum Return Code Occurrence Interval for Master Transmission (t: At fx = 6 MHz)

Interval	Mode 0	Mode 1
Та	Approx. 2430 μs	Approx. 740 <i>μ</i> s
Tb	Approx. 90 μs	Approx. 90 μs
Тс	Approx. 4710 μs	Approx. 1170 μs
Td	Approx. 6290 μs	Approx. 1570 μs
Te	Approx. 20 μs	Approx. 20 μs
Tf	Approx. 1570 μs	Approx. 390 μs
Tg	Approx. 7150 μs	Approx. 1920 μs



(b) When master reception is performed


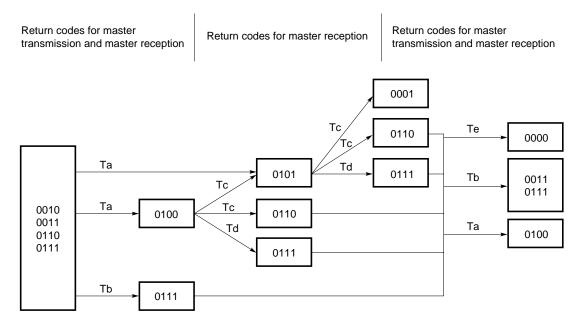


Table 4-5 Minimum Return Code Occurrence Interval for Master Reception (t: At fx = 6 MHz)

Interval	Mode 0	Mode 1
Та	Approx. 7150 μs	Approx. 1920 μs
Tb	Approx. 90 μs	Approx. 90 μs
Тс	Approx. 1570 μs	Approx. 390 μs
Td	Approx. 20 μs	Approx. 20 μs
Te	Approx. 2430 μs	Approx. 740 μs





[SLRC]

SLRC indicates the communication status for slave data transmission, slave reception, or broadcast reception.

(a) Slave data transmission

Slave data transmission is performed when the microcomputer makes the setting described below.

· Slave data transmission setting

In COMC of the CMR register, a command (1011 or 1100) for requesting slave data transmission is set from the microcomputer.

Table 4-6 SLRC Return Codes in Slave Data Transmission

SLRC	Description				
0000	1. Meaning: Slave data transmission has been started.				
	2. Occurrence condition: This return code is issued when the control bits (0011 or 0111) requesting data transmission are received from the master unit.				
0001	1. Meaning: Slave transmission data is not available.				
	Occurrence condition: This return code is issued when the next transmission data is not set in TBF during slave data transmission.				
	 3. Microcomputer processing: If data consisting of one or more bytes is not set in TBF within the time below, transmission may be terminated prior to its completion. Transmission data setting time: Approx. 1570 μs (mode 0)				
0010	1. Meaning: Slave data transmission was terminated normally.				
	2. Occurrence condition: This return code is issued when as much data as the amount specified in the data-length field has been transmitted normally. In this case, the STRQ flag of the FLG register changes from 1 to 0.				
0011	1. Meaning: Slave data transmission was aborted.				
	Occurrence condition: This return code is issued when communication is terminated prior to the transmission of as much data as the amount specified in the data-length field in a communication frame. In this case, the STRQ flag of the FLG register changes from 1 to 0.				

*



(b) Slave reception

Slave reception is performed when the broadcast bit is set to 1, and a communication frame with the local station address specified in the slave address field is received.

Table 4-7 indicates the SLRC return codes for slave reception.

Table 4-7 SLRC Return Codes for Slave Reception

SLRC	Description				
0100	1. Meaning: Slave reception is started.				
	2. Occurrence condition: ① A separate communication frame up to the data-length field was received normally from the master unit. ② Once the control field has been received, RBF is ready for reception Note.				
	After the data-length field, 0100 is set in SLRC, and three-byte data consisting of a master address, control bits, and data-length bits is set in RBF.				
	3. Microcomputer processing: Three-byte data consisting of a master address, control bits, and datalength bits can be read from RBF.				
0101	1. Meaning: The slave reception buffer is full.				
	2. Occurrence condition: This return code is issued when RBF becomes full during data reception as a slave unit, and reception data cannot be set in RBF.				
	 Microcomputer processing: If data consisting of one or more bytes is not read from RBF within the period indicated below, the one-byte data cannot be received, and the μPD72042A or μPD72042B returns an NAK. Reception data read time: Approx. 1570 μs (mode 0)				
0110	Meaning: Slave reception was terminated normally.				
	2. Occurrence condition: This return code is issued when as much data as the amount specified in the data-length field has been received normally in a communication frame. In this case, the SLRE flag of the FLG register changes from 1 to 0.				
	Microcomputer processing: Reception data can be read from RBF, and the number of bytes of slave reception data can be read from RDR2.				
0111	1. Meaning: Slave reception was aborted.				
	2. Occurrence condition: This return code is issued when reception is terminated prior to the reception of as much data as the amount specified in the data-length field of a communication frame. In this case, the SLRE flag of the FLG register changes from 1 to 0.				
	Microcomputer processing: Reception data can be read from RBF, and the number of bytes of slave reception data can be read from RDR2.				

Note See Note of Table 4-9.

*



(c) Broadcast reception

Broadcast reception is performed when the broadcast bit is set to 0, and a communication frame with FFH (general broadcast) or the local station group address specified in the slave address field is received. Table 4-8 indicates the SLRC return codes for broadcast reception.

Table 4-8 SLRC Return Codes for Broadcast Reception

SLRC	Description				
1000	1. Meaning: Broadcast reception is started.				
	2. Occurrence condition:				
	A broadcast frame up to the data-length field was received from the master unit normally. Once the control field has been received, RBF is ready for reception Note.				
	After the data-length field, 1000 is set in SLRC, and three-byte data consisting of a master address, control bits, and data-length bits is set in RBF.				
	3. Microcomputer processing: Three-byte data consisting of a master address, control bits, and data- length bits can be read from RBF.				
1001	1. Meaning: The broadcast reception buffer is full.				
	2. Occurrence condition: This return code is issued when RBF becomes full during data reception as a slave unit, preventing subsequent reception data from being set in RBF.				
	 3. Microcomputer processing: If data consisting of one or more bytes is not read from RBF within the time below, broadcast reception is aborted. Reception data read time: Approx. 1570 μs (mode 0) Approx. 390 μs (mode 1) 				
1010	1. Meaning: Broadcast reception was terminated normally.				
 Occurrence condition: This return code is issued when as much data as the amount specified data-length field has been received normally in a communication frame. In this case, the SLRI the FLG register changes from 1 to 0. Microcomputer processing: Reception data can be read from RBF, and the number of bytes broadcast reception data can be read from RDR2. 					
				1011	1. Meaning: Broadcast reception was aborted.
	2. Occurrence condition: This return code is issued when reception is terminated prior to the reception of as much data as the amount specified in the data-length field in a communication frame. In this case, the SLRE flag of the FLG register changes from 1 to 0.				
	Microcomputer processing: Reception data can be read from RBF, and the number of bytes of broadcast reception data can be read from RDR2.				

Note See Note of Table 4-9.

Table 4-9 indicates the SLRC return code issued in broadcast reception when an optional function is set in the CMR register with DERC = 1.

Table 4-9 SLRC Return Code in Broadcast Reception When the Optional Function Is Set (DERC = 1)

SLRC	Description				
1100	1. Meaning: Broadcast reception error				
	2. Occurrence condition: This return code is issued if RBF is not ready for reception when the control field is received. In this case, the master address in the communication frame is set as a broadcast address in DAR2 and DAR1.				
	 3. Microcomputer processing: A broadcast address can be read from DAR1 and DAR2. However, the data of DAR1 and DAR2 is updated each time a broadcast reception error occurs. So, ensure that data is read from DAR1 and DAR2 within the interval indicated below. Read time: Approx. 5420 μs (mode 0)				

Note RBF is ready for reception according to the optional function setting in CMR, as described below.

(i) When MFC = 0

The SLRE flag of the FLG register is 1 (slave reception and broadcast reception only); and RBF is empty.

(ii) When MFC = 1

The SLRE flag of the FLG register is 1 (slave reception and broadcast reception only); and RBF has at least 4 bytes of free space.

When RBF is ready for reception, bit 1 of slave status transmitted from the master unit with control bits 0000 or 0110 is set to 0.

+




[SLRC occurrence interval]

(a) When slave data transmission is performed

Return codes for broadcast Return codes for broadcast reception, slave data Return codes for slave data transmission reception, slave data transmission, and slave reception transmission, and slave reception 0001 Tb 0010 Ta 0000 Td 0001 0011 0010 Tb Те 0011 0100 1000 0110 Ta Tc 0000 0010 0111 1010 Td Ta 1011 1100 0011 1100

★ Table 4-10 Minimum Return Code Occurrence Interval for Slave Data Transmission (t: At fx = 6 MHz)

Interval	Mode 0	Mode 1	
Та	Approx. 5420 μs	Approx. 1490 μs	
Tb Approx. 1570 μs		Approx. 390 μs	
Тс	Approx. 3140 μs	Approx. 780 μs	
Td	Approx. 20 μs	Approx. 20 μs	
Te	Approx. 7150 μs	Approx. 1920 μs	



(b) When slave reception is performed

1100


Return codes for broadcast Return codes for broadcast Return codes for slave reception reception, slave data reception, slave data transmission, and slave reception transmission, and slave reception 0101 Tb 0110 Td 0000 0010 Тс 0011 0101 0111 0110 Tb Та 0100 0111 1000 Ta Tb 1010 0100 0110 1011

Table 4-11 Minimum Return Code Occurrence Interval for Slave Reception (t: At fx = 6 MHz)

0111

Interval	Mode 0	Mode 1
Та	Approx. 7150 μs	Approx. 1920 μs
Tb Approx. 1570 μs		Approx. 390 μs
Тс	Approx. 20 μs	Approx. 20 μs
Td	Approx. 5420 μs	Approx. 1490 μs

Тс



Td

1100




(c) When broadcast reception is performed

Return codes for broadcast reception, slave data transmission, and slave reception


Return codes for broadcast reception

Return codes for broadcast reception, slave data transmission, and slave reception

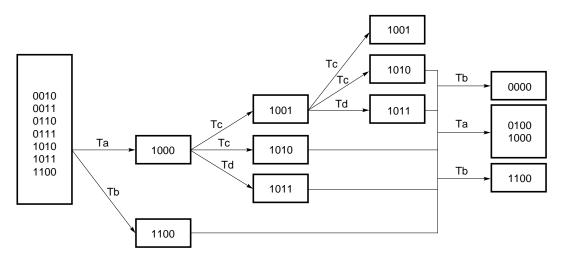

★ Table 4-12 Minimum Return Code Occurrence Interval for Broadcast Reception (t: At fx = 6 MHz)

Interval	Mode 0	Mode 1
Та	Approx. 7150 μs	Approx. 1920 μs
Tb	Approx. 5420 μs	Approx. 1490 μs
Тс	Approx. 1570 μs	Approx. 390 μs
Td	Approx. 20 μs	Approx. 20 μs



RBF Address : 1110B (EH)

> Read/write : Read

Reception buffer When reset : Undefined

RBF is a 40-byte FIFO buffer used to hold a transmitter address, control bits, data-length bits, and reception data for master reception, slave reception, or broadcast reception.

RBF can be read by the microcomputer when the REP flag of the STR register is 0 (indicating that RBF is not empty). When an optional function is set in the CMR register with MFC = 1, multiple communication frames can be held in RBF until RBF becomes full.

In master reception, slave reception, and broadcast reception, the format below is used to transfer data from RBF to the microcomputer.

	RE			
	High-order 4 bits	Low-order 4 bits		
Byte 1	Transmitter address (high-order 8 bits)			
Byte 2	Transmitter address (low-order 4 bits) Control bits			
Byte 3	Data-len	gth bits		
Byte 4	First byte of re	eception data	}	Communication frame 1
Byte 5	Second byte of	reception data		
	Last reception data			
	Transmitter address	s (high-order 8 bits)		
	Transmitter address (low-order 4 bits)	Control bits		
	Data-len	gth bits		
	First byte of re	eception data	>	Communication frame 2
	Second byte of	reception data		
	Last reception data			
Byte 40				



[Byte 1, byte 2 (high-order 4 bits)]: Transmitter address

As indicated below, the transmitter address depends on whether the communication mode is master reception, slave reception, or broadcast reception.

Transmitter address

Case	Transmitter address	
Master reception	Slave address	
Slave reception	Master address	
Broadcast reception		

[Byte 2 (low-order 4 bits)] : Control bits

[Byte 3] : Data-length bits

[Byte 4 and up] : Reception data

The number of bytes of reception data is set in the RDR1 or RDR2 register, as described below.

RDR1: Number of bytes of reception data in master reception

RDR2: Number of bytes of reception data in slave reception or broadcast reception

The number of bytes of reception data indicates the number of bytes of data received normally within a communication frame. This means that the number of bytes of reception data will match the length set in the data-length field of a communication frame only when the data has been received normally.

5. EXAMPLE TIMINGS FOR COMMUNICATION

This chapter provides examples of the timings at which the contents of internal registers change during communication. The following seven examples are given:

(1) Master transmission timing example 1

Timing at which a return code is generated upon the start of master transmission and at the normal termination of transmission

(2) Master transmission timing example 2

Timing at which a return code is generated upon the start of master transmission, transmission data empty, and the suspension of transmission

(3) Slave data transmission timing example

Timing at which a return code is generated upon the start of slave data transmission and the normal termination of transmission

(4) Master reception timing example

Timing at which a return code is generated upon the start of master reception and the normal termination of reception

(5) Slave reception timing example 1


Timing at which a return code is generated upon the start of slave reception and the normal termination of reception

(6) Slave reception timing example 2


Timing at which a return code is generated upon the start of slave reception, reception buffer full, and the normal termination of reception

(7) Broadcast reception timing example


Timing at which a return code is generated upon the occurrence of an error during broadcast reception

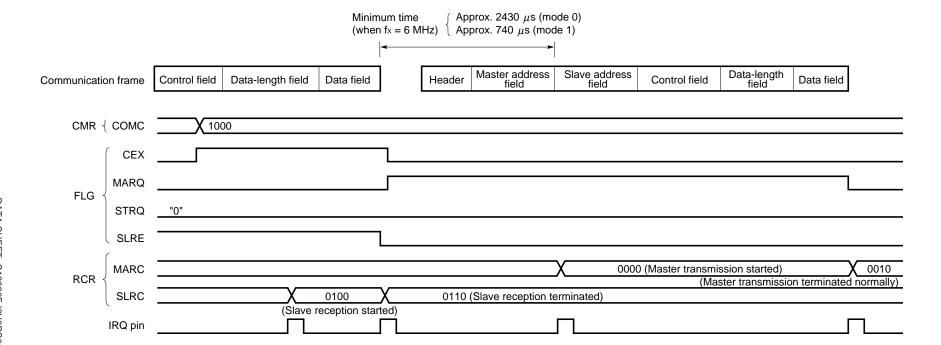


(2) Master transmission timing example 2

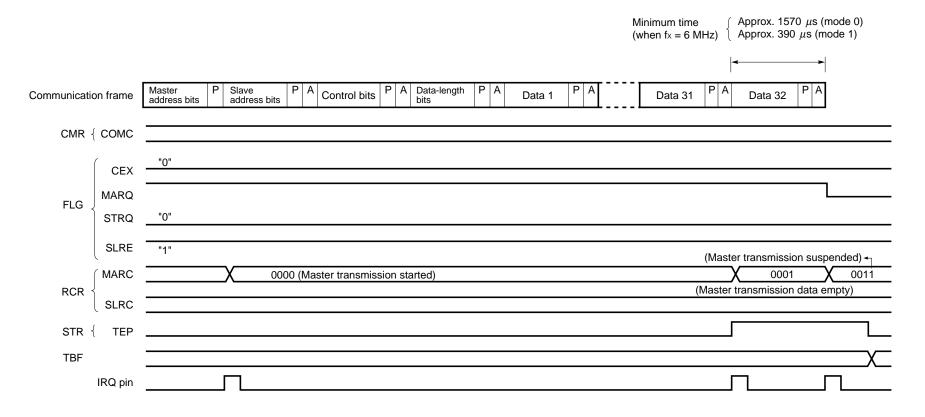


(3) Slave data transmission timing example

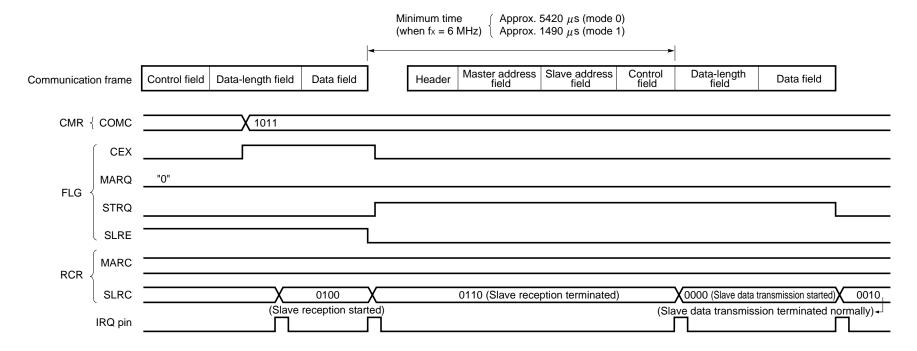


(4) Master reception timing example

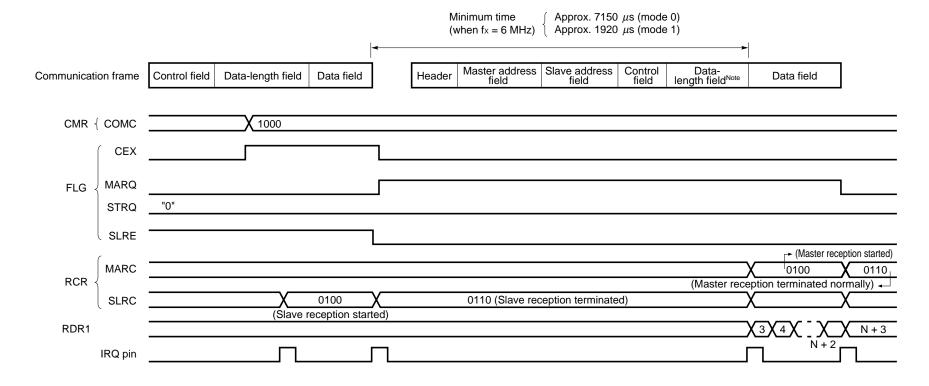


Note Data-length bit: N

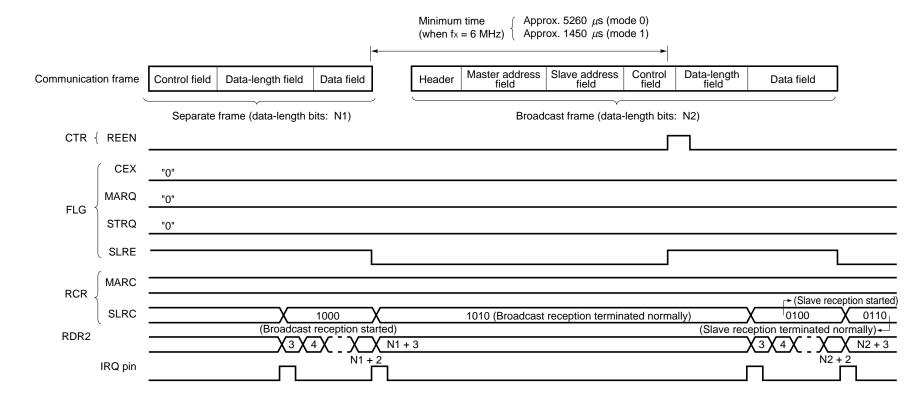

(6) Slave reception timing example 2

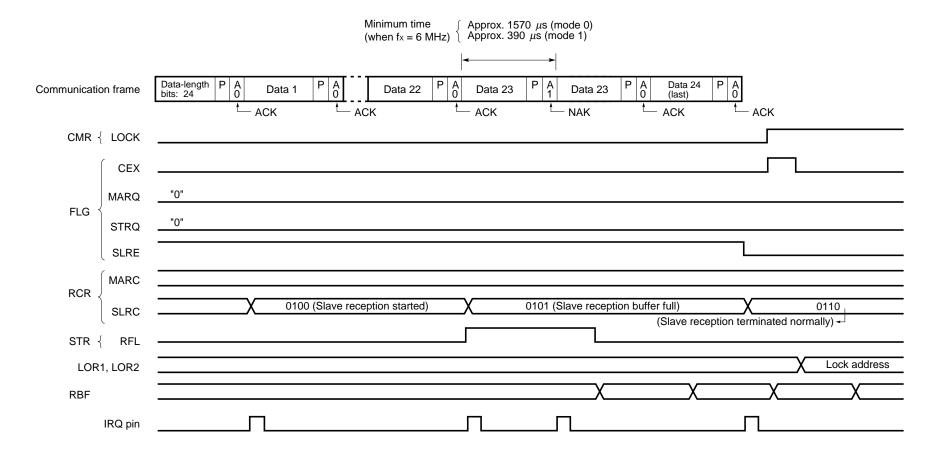

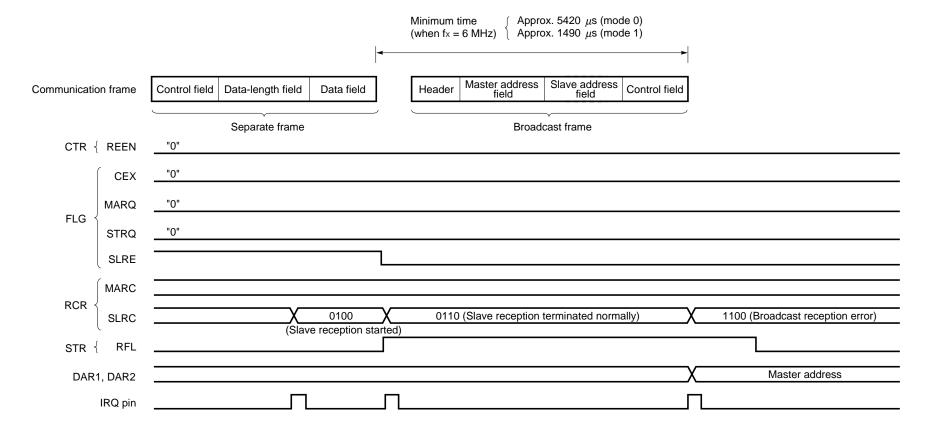



6. EXAMPLE MICROCOMPUTER PROCESSING FLOW

This chapter provides an example of the processing flow for controlling the μ PD72042A or μ PD72042B from the microcomputer. The main parts of this example processing flow are the following two routines:

• Main routine

Performs processing based on the communication flags set by the interrupt routine.

• Interrupt routine

Sets the communication flags by reading the statuses of the μ PD72042A or μ PD72042B upon the issue of an interrupt request.



6.1 COMMUNICATION FLAGS

Table 6-1 lists the communication flags used in the main and interrupt routines, excluding those flags assigned to the registers of the μ PD72042A or μ PD72042B.

Table 6-1 Communication Flags

Name	Description			
RAWF	Program crash detection flag (1: Detected, 0: Not detected)			
TRRQ	Transmission processing request flag (1: Requested, 0: Not requested)			
TRCF	Transmission status (TRC stored)			
1	Number of bytes in transmission data set in TBF			
RERQ ^{Note}	Reception processing request flag (1: Requested, 0: Not requested)			
RECF ^{Note}	Reception status (REC stored)			
SIZE ^{Note}	Number of bytes in reception data which can be read from RBF (RDR1/RDR2 stored)			
PWNote	Write pointer for RERQ, RECF, and SIZE			
PRNote	Read pointer for RERQ, RECF, and SIZE			
J	Number of bytes in reception data which has actually been read from RBF			
MCRQ	Master communication processing request flag (1: Requested, 0: Not requested)			
SDRQ	Slave data transmission processing request flag (1: Requested, 0: Not requested)			
CORQ	Command processing request flag (1: Requested, 0: Not requested)			
MTRQF	Master transmission request flag (1: Requested, 0: Not requested)			
MRRQF	Master reception request flag (1: Requested, 0: Not requested)			
STRQF	Slave data transmission request flag (1: Requested, 0: Not requested)			
SLREF	Slave broadcast reception enable flag (1: Enabled, 0: Disabled)			

Note RERQ, RECF, and SIZE are stored in a buffer pair pointed to by PW and PR.

• Buffer configuration

Pointer	RERQ	RECF	SIZE
0			
1			

Remark Buffers pointed to by the write pointer (PW) : RERQw, RECFw, and SIZEw Buffers pointed to by the read pointer (PR) : RERQR, RECFR, and SIZER



6.2 MAIN ROUTINE

Fig. 6-1 shows the processing flow of the main routine.

Start μ PD72042A or μ PD72042B ; See Section 6.4.1. initial setting routine Communication flag ; See Section 6.4.2. initialization routine RAWF? ; Initialize if program crash is detected. 0 TRRQ? Transmission TRRQ- 0 processing routine ; See Section 6.4.6. 0 RERQ? Reception RERQ← 0 processing routine ; See Section 6.4.7. 0 Master communi-MCRQNote? cation processing MCRQ**-**0 ; See Section 6.4.4. routine 0 Slave data trans-SDRQNote? mission processing SDRQ← ; See Section 6.4.5. routine 0 CORQ^{Note}? Command CORQ←0 processing routine ; See Section 6.4.3. 0 Application processing routine

Fig. 6-1 Processing Flow of Main Routine

Note Communication flags MCRQ, SDRQ, and CORQ are set to 1 by the application processing routine.




6.3 INTERRUPT ROUTINE

The interrupt routine performs the required processing when an interrupt request is issued from the μ PD72042A or μ PD72042B.

The interrupt routine disables the interrupts received from the μ PD72042A or μ PD72042B, reads the statuses (FLG and RCR registers) of the μ PD72042A or μ PD72042B, and sets the communication flags to be used by the main routine.

To enable the handling of an interrupt request which may occur while the interrupts from the μ PD72042A or μ PD72042B are disabled, do not clear the interrupt flags such that such a request can be detected upon the completion of the interrupt routine processing (see **Fig. 6-2**).

Fig. 6-2 Operation when an Interrupt Occurs during Execution of Interrupt Routine

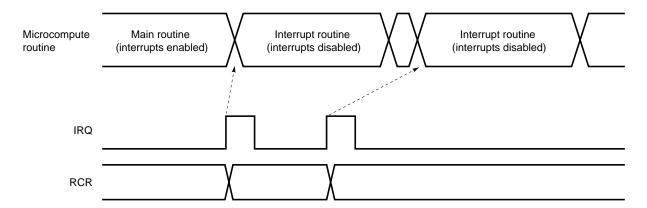

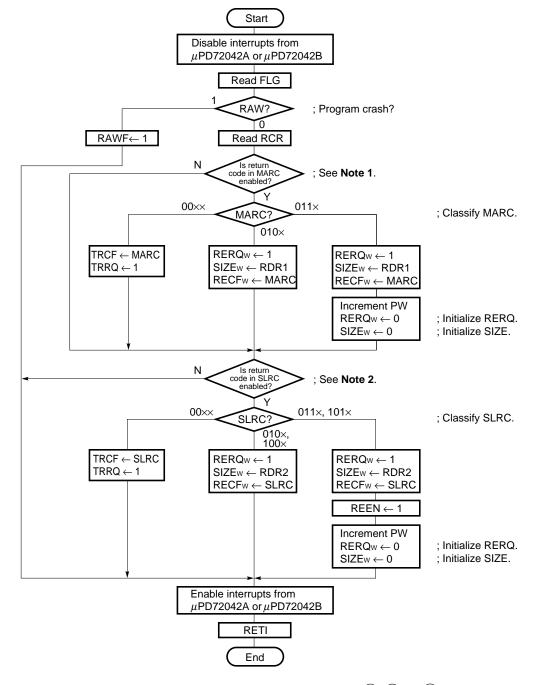


Fig. 6-3 Flow of Interrupt Routine

- **Notes 1.** The return code in MARC is enabled when any of conditions, (1), (2), or (3), below, is satisfied:
 - 1) MARC has been changed Note 3.
 - (2) MTRQF = 1 and MARQ = 0
 - \bigcirc MRRQF = 1 and MARQ = 0
 - 2. The return code in SLRC is enabled when any of conditions, (1), (2), or (3), below, is satisfied:
 - 1 SLRC has been changed Note 3.
 - (2) STRQF = 1 and STRQ = 0
 - (3) SLREF = 1 and SLRE = 0
 - 3. When MARC is 0001 or 0101, the same value may be generated consecutively, such that MARC is set to 1111 to enable the detection of a change in MARC the next time it is generated. When SLRC is 0001, 0101, or 1001, it is again set to 1111 for the same reason.



6.4 PROCESSING ROUTINES


This section describes the processing routines called from the main routine.

6.4.1 μ PD72042A or μ PD72042B Initial Setting Routine

This routine is executed when the μ PD72042A or μ PD72042B is first started or upon the detection of a program crash (RAW = 1).

Fig. 6-4 shows the flow of the μ PD72042A or μ PD72042B initial setting routine.

Fig. 6-4 μ PD72042A or μ PD72042B Initial Setting Routine

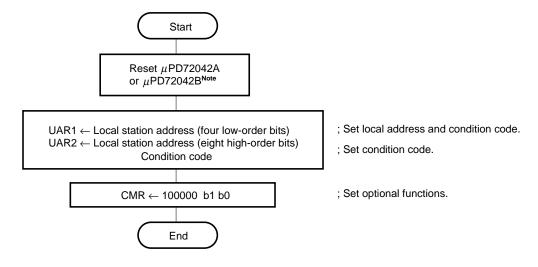

Note There are two methods of performing reset, as follows:

- (1) Set the RESET pin to low.
- 2 Set SRST in CTR to 1.

Type 1 reset causes the μ PD72042A or μ PD72042B to enter standby mode, thus requiring the subsequent release of standby mode.

Caution To enable normal IEBus communication, always perform the above initial setting.

6.4.2 Communication Flag Initialization Routine

This routine initializes the communication flags listed in Table 6-1, as follows:

RAWF $\leftarrow 0$ TRRQw $\leftarrow 0$ $RERQw \leftarrow 0$ SIZEw $\leftarrow 0$ ← 1 PW $\leftarrow 0$ PR $\leftarrow 0$ MCRQ $\leftarrow 0$ SDRQ $\leftarrow 0$ CORQ $\leftarrow 0$ $\mathsf{MTRQF} \ \leftarrow 0$ $MRRQF \leftarrow 0$ $\mathsf{STRQF} \ \leftarrow 0$ SLREF $\leftarrow 0$

6.4.3 Command Processing Routine

This routine is executed when CORQ has been set by the application processing routine.

The command processing routine sets a command code, in the CMR register, to set the lock state, control transmission/reception buffers, control communication, and set optional functions.

The commands for master communication and slave data transmission request are described in **Sections 6.4.4** and **6.4.5**.

Fig. 6-5 shows the flow of the command processing routine.

Read FLG

1 CEX?

CMR ← Command code

End

Start

Waiting for termination of previous command?

Fig. 6-5 Command Processing Routine

6.4.4 Master Communication Processing Routine

This routine is executed when MCRQ has been set by the application processing routine.

The master communication processing routine consists of the following three processing routines:

• Master transmission processing routine 1

This routine is used to transmit data, as the master unit, starting from the first data in TBF.

• Master transmission processing routine 2

This routine is used to start master transmission from the point at which the previous master transmission was suspended.


· Master reception processing routine

This routine is used to receive data, as the master unit, from a slave unit.

(1) Master transmission processing routine 1

Fig. 6-6 shows the flow of master transmission processing routine 1.

Fig. 6-6 Flow of Master Transmission Processing Routine 1

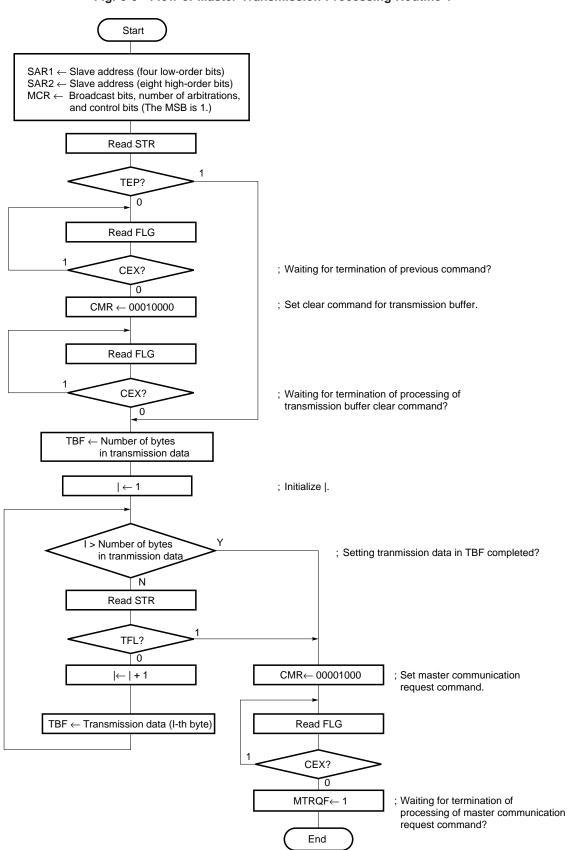

(2) Master transmission processing routine 2

Fig. 6-7 shows the flow of master transmission processing routine 2.

Start I > Number of bytes ; Setting tranmission data in TBF completed? in tranmission data N Read STR TFL? 0 | ← | + 1 TBF \leftarrow Transmission data (I-th byte) Read FLG CEX? ; Waiting for terminaton of previous command? 0 CMR ← 00001001 ; Set master communication continuation command. Read FLG CEX? ; Waiting for termination of processing of master communication continuation command? 0 $\mathsf{MTRQF} \leftarrow 1$ End


Fig. 6-7 Flow of Master Transmission Processing Routine 2



(3) Master reception processing routine

Fig. 6-8 shows the flow of the master reception processing routine.

Fig. 6-8 Flow of Master Reception Processing Routine

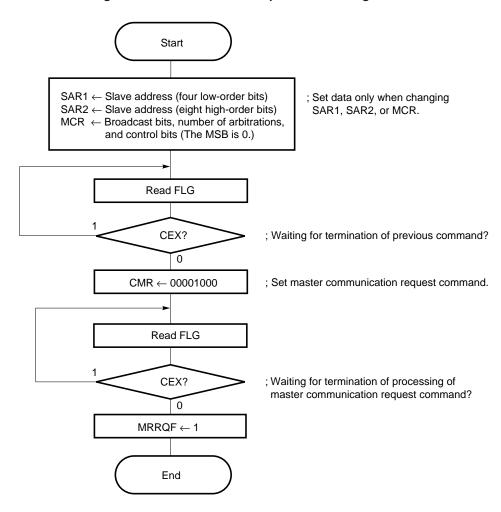

6.4.5 Slave Data Transmission Processing Routine

This routine is executed when SDRQ has been set by the application processing routine.

The slave data transmission processing routine consists of the following two processing routines:

• Slave data transmission processing routine 1

This routine is used to transmit data, starting from the first data in TBF, when requested from the master unit.

• Slave data transmission processing routine 2

This routine is used to start slave data transmission from the point at which the previous slave data transmission was suspended.

(1) Slave data transmission processing routine 1

Fig. 6-9 shows the flow of slave data transmission processing routine 1.

Start Read STR TEP? 0 Read FLG CEX? ; Waiting for termination of previous command? 0 $\mathsf{CMR} \leftarrow 00010000$; Set clear command for transmission buffer. Read FLG CEX? ; Waiting for termination of processing of transmission buffer clear command? 0 TBF ← Number of bytes in transmission data ; Initialize I. | ← 1 I > Number of bytes in ; Setting of tranmission data in TBF tranmission data completed? N Read STR TFL? 0 $\mathsf{CMR} \leftarrow \mathsf{00001011}$ | ← | + 1 Set slave data transmission request command. $\mathsf{TBF} \leftarrow \mathsf{Transmission} \; \mathsf{data} \; (\mathsf{I-th} \; \mathsf{byte})$ Read FLG CEX? 0 STRQF ← 1 End

Fig. 6-9 Flow of Slave Data Transmission Processing Routine 1

(2) Slave data transmission processing routine 2

Fig. 6-10 shows the flow of slave data transmission processing routine 2.

Start I > Number of bytes in ; Setting of tranmission data in tranmission data TBF completed? N Read STR TFL? 0 | ← | + 1 TBF ← Transmission data (I-th byte) Read FLG CEX? ; Waiting for termination of previous command? 0 CMR ← 00001100 ; Set slave data transmission continuation command. Read FLG CEX? ; Waiting for termination of processing of slave data transmission continuation command? 0 $\mathsf{STRQF} \leftarrow \mathsf{1}$ 0 End

Fig. 6-10 Flow of Slave Data Transmission Processing Routine 2



6.4.6 Transmission Processing Routine

This routine is executed when TRRQ has been set by the interrupt routine during the execution of master transmission processing routine 1 (see **6.4.4 (1)**), master transmission processing routine 2 (see **6.4.4 (2)**), or the slave data transmission processing routine (see **6.4.5**).

Fig. 6-11 shows the flow of the transmission processing routine.

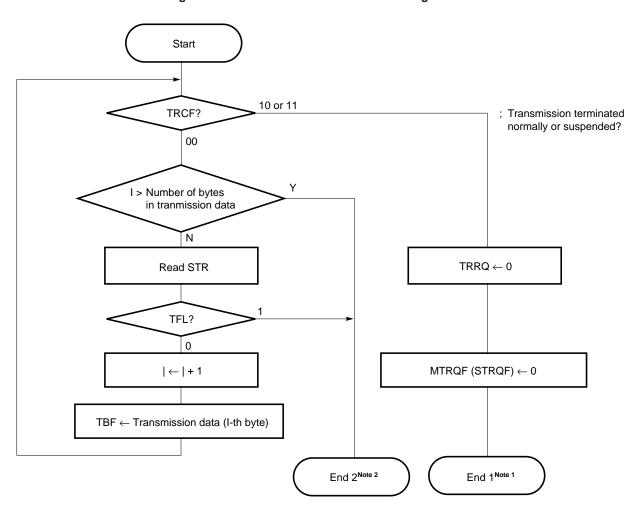


Fig. 6-11 Flow of Transmission Processing Routine


- Notes 1. Indicates that transmission of the communication frame has ended (terminated normally or suspended).
 - 2. Indicates that setting of the transmission data has been completed with the current TBF.

6.4.7 Reception Processing Routine

This routine is executed when RERQ has been set by the interrupt routine.

Fig. 6-12 shows the flow of the reception processing routine.

Fig. 6-12 Flow of Reception Processing Routine

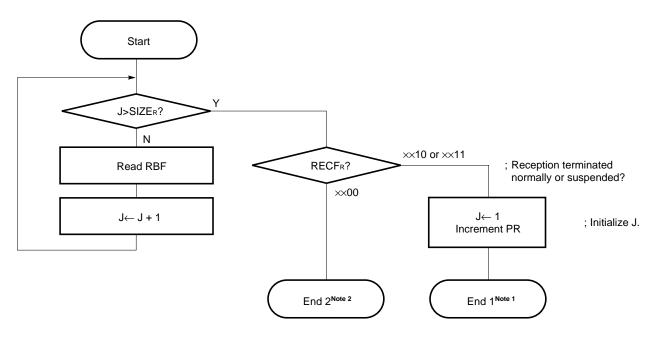

Notes 1. Indicates that reception of the communication frame has ended (terminated normally or suspended).

2. Indicates that reading of the reception data has been completed with the current RBF.



7. ELECTRICAL CHARACTERISTICS

ABSOLUTE MAXIMUM RATINGS ($T_A = 25 \, ^{\circ}C$)

Parameter	Symbol	Conditions	Rated value	Unit
Supply voltage	VDD, AVDD	VDD - AVDD < 0.5 V	-0.5 to +7.0	V
Input voltage for logic section	Vı		-0.5 to V _{DD} + 0.3	V
Output voltage for logic section	Vo		-0.5 to V _{DD} + 0.3	V
Bus input voltage	V _{BI}		-0.5 to +6.0	V
Bus output voltage	Vво		-0.5 to +6.0	V
Operating ambient temperature	TA		-40 to +85	°C
Storage temperature	Тѕтс		-65 to +150	°C

Caution Absolute maximum ratings are rated values beyond which physical damage may be caused to the unit; if any of the parameters in the table above exceeds its rated value, even momentarily, the performance and/or reliability of the product may deteriorate. Therefore, never exceed the product's rated values.

DC CHARACTERISTICS (TA = -40 to +85 °C, VDD = 5 V ± 10 %)

Parameter	Symbol	Conditions	Min.	Тур.	Max.	Unit
Input high voltage	ViH		0.8V _{DD}		V _{DD}	V
Input low voltage	VIL		0		0.2V _{DD}	V
Output high voltage	Vон	Іон = -400 μΑ	0.7V _{DD}			V
Output low voltage	VoL	IoL = 2.5 mA			0.4	V
Input leakage current, high	Ін	VI = VDD			10	μΑ
Input leakage current, low	ILIL	V1 = 0 V			-10	μΑ
Output leakage current, high	Ісон	Vo = Vdd			10	μΑ
Output leakage current, low	Ісос	Vo = 0 V			-10	μΑ
Supply current (normal operation mode)	I _{DD1}			3.5	10	mA
Supply current (standby mode)	I _{DD2}				50	μΑ

CAPACITANCE CHARACTERISTICS (TA = 25 °C, VDD = 0 V)


Parameter	Symbol	Conditions	Min.	Тур.	Max.	Unit
Input capacitance	Cı	fc = 1 MHz Excluding the BUS+ and BUS-			15	pF
I/O capacitance	Сю	pins. 0 V for pins others than the measured pins.			15	pF



AC CHARACTERISTICS (TA = -40 to +85 °C, VDD = 5 V ± 10 %)

Parameter	Symbol	Conditions	Min.	Тур.	Max.	Unit
System clock		fx = 6 MHz	5.91	6.00	6.09	MHz
		fx = 6.29 MHz	6.20	6.29	6.38	MHz
SCK cycle time	tĸcy		0.8			μs
SCK high-level width	tкн		0.4			μs
SCK low-level width	tĸL		0.4			μs
SI (SIO)Note 1 setup time	tsıĸ	Referred to SCK ↑	100			ns
SI (SIO) ^{Note 1} hold time	tksi	Referred to SCK↑	400			ns
SO (SIO)Note 2 output delay	tкso	Referred to SCK ↓			300	ns
CS, C/D setup time	tsa	Referred to SCK ↓	50			ns
CS, C/D hold time	tha	Referred to SCK↑	400			ns
IRQ output high-level width			8		11	μs
RESET low-level width			6			μs

SERIAL TRANSFER TIMING

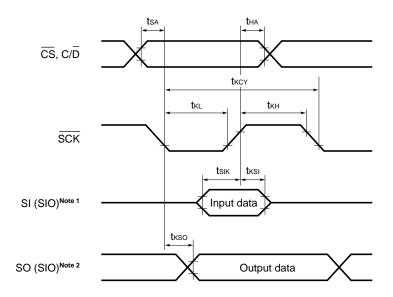

Notes 1. For 3-wire serial I/O: SI


For 2-wire serial I/O: SIO

2. For 3-wire serial I/O: SO

For 2-wire serial I/O: SIO



★ Oscillator circuit (External system clock)




Caution When using system clock oscillator, wire the portion enclosed in broken lines in the figure as follows to avoid adverse influences on the wiring capacitance:

- Keep the wiring length as short as possible.
- · Do not cross the wiring over the other signal lines.
- Do not route the wiring in the vicinity of lines through which a high fluctuating current flows.
- Always keep the ground point of the capacitor of the oscillator circuit at the same potential as GND.
- . Do not connect the power source pattern through which a high current flows.
- Do not extract signals from the oscillator.

IEBUS DRIVER/RECEIVER CHARACTERISTICS (TA = -40 to +85 °C, VDD = 5 V ± 10 %)

Parameter	Symbol	Conditions	Min.	Тур.	Max.	Unit
Output high voltage	Ion	$R_L = 60 \Omega \pm 5 \%$, $R = 180 \Omega \pm 5 \%$	2.73		6.22	mA
Output low voltage	loL				1.0	μΑ
Common mode output voltage	Vосом	For high and low levels $X = 1/2V_{DD}$	X – 0.25	1/2VDD	X + 0.25	V
Input high voltage	ViH		120			mV
Input low voltage	VIL				20.0	mV
Input hysteresis voltage	VIHYS			25		mV
Common mode input voltage, high	Vінсом		1.00		V _{DD} - 1.0	V
Common mode input voltage, low	VILCOM		0		V _{DD}	V
Driver output resistance	Ro	Between BUS+ and BUS-	100			kΩ
Driver output capacitance	Со	Between BUS+ and BUS-, between BUS+			25	pF
Receiver input capacitance	Cı	and GND, and between BUS- and GND			25	pF

★ Circuit connected to IEBus

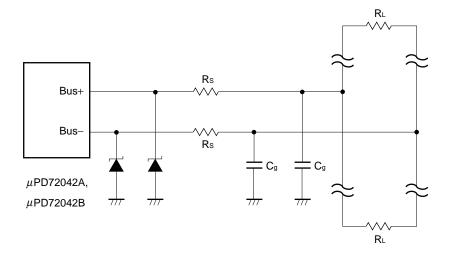

 $\begin{array}{ll} \textbf{Remark} & \text{Protective resistor} & \text{Rs} = 180 \ \Omega \pm 5 \ \% \\ & \text{Terminating resistor} & \text{RL} = 120 \ \Omega \pm 5 \ \% \\ \end{array}$

Load capacitor C₉

Please use the capacitor on the bus line under the capacitance shown in the table below.

System clock (fx)	Maximum capacitance between the Bus+ pin and Bus- pin
6 MHz	8000 pF
6.29 MHz	7100 pF

Therefore, the total load capacitance C_T between the Bus+ pin and Bus- pin is as follows.


$$C_T = \sum_{g=1}^{N} \frac{1}{2} C_g + C_w$$
 Cw: Wiring capacitance

- Cautions 1. The circuit constants in the above figure are applied when each unit connected to the IEBus line uses the μ PD72042A and μ PD72042B.
 - 2. The load capacitor connected to the bus line should be located closer to the IEBus than to the protective resistor, as shown in the figure above.
 - 3. Do not insert inductive parts into the bus line.





8. PACKAGE DRAWING


16 PIN PLASTIC SOP (375 mil)

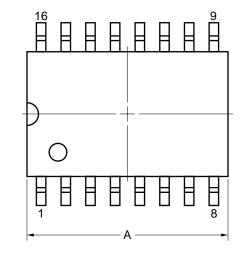

detail of lead end



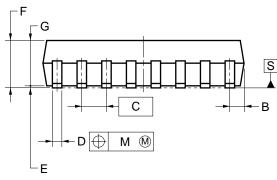

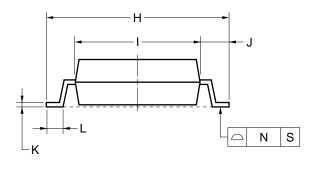

NOTE

Each lead centerline is located within 0.12 mm of its true position (T.P.) at maximum material condition.

ITEM	MILLIMETERS
Α	10.2±0.26
В	0.805 MAX.
С	1.27 (T.P.)
D	$0.42^{+0.08}_{-0.07}$
Е	0.125±0.075
F	2.9 MAX.
G	2.50±0.2
Н	10.3±0.3
ı	7.2±0.2
J	1.6±0.2
К	$0.17^{+0.08}_{-0.07}$
L	0.8±0.2
М	0.12
N	0.10
Р	3°+7° -3°

P16GT-50-375B-1



9. RECOMMENDED SOLDERING CONDITIONS

When soldering this product, it is highly recommended to observe the conditions as shown below. If other soldering processes are used, or if the soldering is performed under different conditions, please make sure to consult with our sales offices.

For more details, refer to our document "SEMICONDUCTOR DEVICE MOUNTING TECHNOLOGY MANUAL" (C10535E).

Surface mount devices

 μ PD72042AGT: 16-pin plastic SOP (375 mil) μ PD72042BGT: 16-pin plastic SOP (375 mil)

Process	Conditions	Symbol
Infrared ray reflow	Peak temperature: 235 °C or below (Package surface temperature), Reflow time: 30 seconds or less (at 210 °C or higher), Maximum number of reflow processes: 2 times.	
VPS	Peak temperature: 215 °C or below (Package surface temperature), Reflow time: 40 seconds or less (at 200 °C or higher), Maximum number of reflow processes: 2 times.	VP15-00-2
Wave soldering	Solder temperature: 260 °C or below, Flow time: 10 seconds or less, Maximum number of flow processes: 1 time, Pre-heating temperature: 120 °C or below (Package surface temperature).	WS60-00-1
Partial heating method	Pin temperature: 300 °C or below, Heat time: 3 seconds or less (Per each side of the device).	_

Caution Apply only one kind of soldering condition to a device, except for "partial heating method", or the device will be damaged by heat stress.



APPENDIX A MAIN DIFFERENCES BETWEEN μ PD72042A, μ PD72042B, AND μ PD6708

	Product	Item	μPD72042A	μPD72042B	μPD6708	
	Oscillatio	n frequency (fx)	6 MHz		12 MHz	
	Operating voltage (VDD)		5 V ±10 %			
	Operating	g ambient temperature (T _A)	−40 to +85 °C			
*	IEBus	Communication mode	Mode 0, 1	Mode 0, 1, 2		
	Driver/receiver		Built-in			
	Transmission buffer		33 bytes	4 bytes		
		Reception buffer	40 bytes		20 bytes	
	Interface with microcomputerNote		Serial interface (3-wire/2-wire)		Serial interface (3-wire)	
			MSB first	LSB first	MSB first	
	Package		16-pin SOP (375 mil)		16-pin SOP (300 mil) 16-pin DIP (300 mil)	

Note The setting method for the commands, data, and related pins for the μ PD72042A and μ PD72042B differs from that for the μ PD6708.

APPENDIX B IEBus PROTOCOL ANALYZER

Naito Densei Co., Ltd. offers an IEBus protocol analyzer for monitoring communication on IEBus and evaluating application systems. For details of its functions and to place an order, contact:

★ Naito Densei Machida Mfg. Co., Ltd. 3-9-25, Hisamoto, Takatsu-ku Kawasaki, Kanagawa 213-0011, JAPAN TEL 044 (822) 3813 FAX 044 (822) 3681

NOTES FOR CMOS DEVICES -

1 PRECAUTION AGAINST ESD FOR SEMICONDUCTORS

Note: Strong electric field, when exposed to a MOS device, can cause destruction of the gate oxide and ultimately degrade the device operation. Steps must be taken to stop generation of static electricity as much as possible, and quickly dissipate it once, when it has occurred. Environmental control must be adequate. When it is dry, humidifier should be used. It is recommended to avoid using insulators that easily build static electricity. Semiconductor devices must be stored and transported in an anti-static container, static shielding bag or conductive material. All test and measurement tools including work bench and floor should be grounded. The operator should be grounded using wrist strap. Semiconductor devices must not be touched with bare hands. Similar precautions need to be taken for PW boards with semiconductor devices on it.

(2) HANDLING OF UNUSED INPUT PINS FOR CMOS

Note: No connection for CMOS device inputs can be cause of malfunction. If no connection is provided to the input pins, it is possible that an internal input level may be generated due to noise, etc., hence causing malfunction. CMOS device behave differently than Bipolar or NMOS devices. Input levels of CMOS devices must be fixed high or low by using a pull-up or pull-down circuitry. Each unused pin should be connected to VDD or GND with a resistor, if it is considered to have a possibility of being an output pin. All handling related to the unused pins must be judged device by device and related specifications governing the devices.

③ STATUS BEFORE INITIALIZATION OF MOS DEVICES

Note: Power-on does not necessarily define initial status of MOS device. Production process of MOS does not define the initial operation status of the device. Immediately after the power source is turned ON, the devices with reset function have not yet been initialized. Hence, power-on does not guarantee out-pin levels, I/O settings or contents of registers. Device is not initialized until the reset signal is received. Reset operation must be executed immediately after power-on for devices having reset function.

[MEMO]

IEBus and Inter Equipment are trademarks of NEC Corporation.

The application circuits and their parameters are for reference only and are not intended for use in actual design-ins.

No part of this document may be copied or reproduced in any form or by any means without the prior written consent of NEC Corporation. NEC Corporation assumes no responsibility for any errors which may appear in this document.

NEC Corporation does not assume any liability for infringement of patents, copyrights or other intellectual property rights of third parties by or arising from use of a device described herein or any other liability arising from use of such device. No license, either express, implied or otherwise, is granted under any patents, copyrights or other intellectual property rights of NEC Corporation or others.

While NEC Corporation has been making continuous effort to enhance the reliability of its semiconductor devices, the possibility of defects cannot be eliminated entirely. To minimize risks of damage or injury to persons or property arising from a defect in an NEC semiconductor device, customers must incorporate sufficient safety measures in its design, such as redundancy, fire-containment, and anti-failure features.

NEC devices are classified into the following three quality grades:

"Standard", "Special", and "Specific". The Specific quality grade applies only to devices developed based on a customer designated "quality assurance program" for a specific application. The recommended applications of a device depend on its quality grade, as indicated below. Customers must check the quality grade of each device before using it in a particular application.

Standard: Computers, office equipment, communications equipment, test and measurement equipment, audio and visual equipment, home electronic appliances, machine tools, personal electronic equipment and industrial robots

Special: Transportation equipment (automobiles, trains, ships, etc.), traffic control systems, anti-disaster systems, anti-crime systems, safety equipment and medical equipment (not specifically designed for life support)

Specific: Aircrafts, aerospace equipment, submersible repeaters, nuclear reactor control systems, life support systems or medical equipment for life support, etc.

The quality grade of NEC devices is "Standard" unless otherwise specified in NEC's Data Sheets or Data Books. If customers intend to use NEC devices for applications other than those specified for Standard quality grade, they should contact an NEC sales representative in advance.

Anti-radioactive design is not implemented in this product.