

FEATURES

- Good Anode Uniformity
1:1.1 Typ. (at -1000 V and peak wavelength)
- Low Cross-talk
0.1 % Typ. (each channel)
Black slit faceplate used
- High Cathode Sensitivity
Luminous 250 $\mu\text{A/lm}$ Typ. (-01 Type)
Luminous 500 $\mu\text{A/lm}$ Typ. (-20 Type)
- Anode Structure
2.8 mm Channel Pitch
2.0 mm $\times$ 2.5 mm $\times$ 8 Anodes

APPLICATIONS

- Biomedical Fluorescence Detection
- Laser Scanning Detection
- Spectroscopy
- Environmental Monitoring



Figure 1: Typical Spectral Response


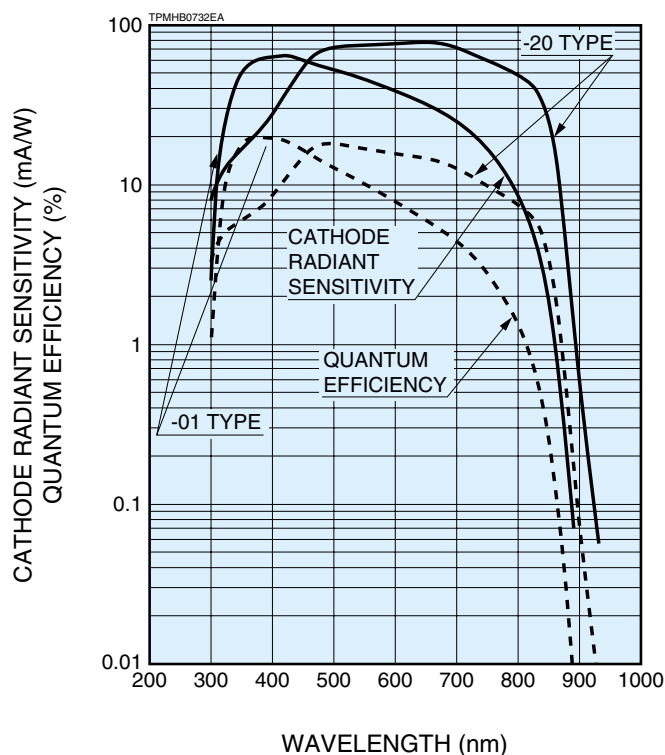


Figure 2: Anode Uniformity (Example)

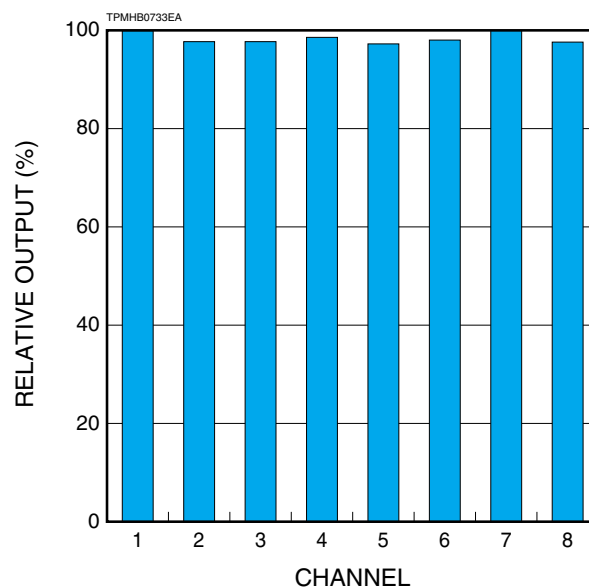

Supply Voltage: -1000 V
Wavelength: peak wavelength

8 CHANNEL LINEAR ARRAY MULTIANODE PMT ASSEMBLY H9530 SERIES



SPECIFICATIONS

Parameter		Description / Value		Unit
		H9530-01	H9530-20	
Spectral Response	Range	300 to 880	300 to 920	nm
	Peak Wavelength	420	630	nm
Photocathode	Material	Multialkali		—
	Effective Area per Channel	2.0 × 2.5		mm
Channel Pitch		2.8		mm
Window Material	Clear Parts	Borosilicate glass		—
	Slit Parts	Black Borosilicate glass		—
Dynode	Structure	Metal Channel		—
	Number of Stages	12		—
Insulation Cover Material		P.O.M.		—
Maximum Supply Voltage		-1200		V
Supply Voltage		-1000		V
Cathode Characteristics (Typ.)	Luminous (2856 K)	250	500	μA/lm
	Red / White Ratio R-68	0.3	0.45	—
Anode Characteristics (Typ.)	Luminous (2856 K)	750	1500	A/lm
	Dark Current per Channel (After 30 min.)	0.5	1	nA
	Gain (at 1000 V)	3 × 10 ⁶		—
Cross-talk (Typ.)		0.1 ^(A)		%
Anode Uniformity (Typ.)		1: 1.1 ^(B)		—
Maximum Average Anode Current per Channel		10 ^(C)		μA

NOTE

(A) The ratio of signal between a channel and an average of adjacent two channels, when the incident light is given to the center channel through 2.0 mm × 2.5 mm aperture. Cross-talk is measured with the analog mode. Cross-talk: (Area B + Area C) / 2 / Area A × 100



Cross-talk (Example)

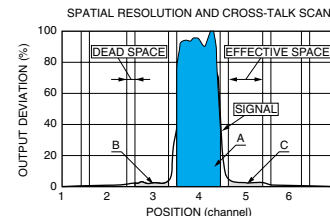

(B) Uniformity is measured on each channel with -1000 V at peak wavelength.


(C) at -1000 V

Figure 3: Dimensional Outline (Unit: mm)

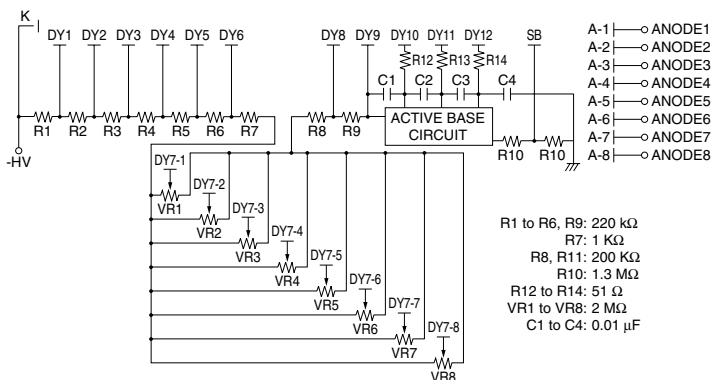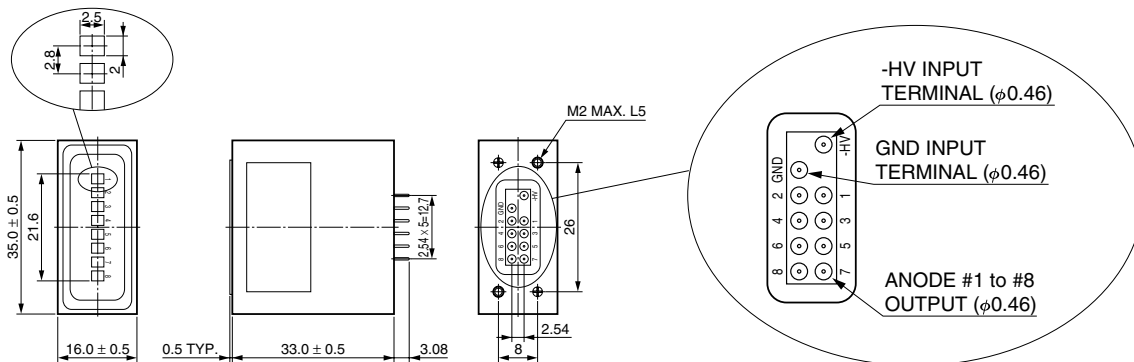

VOLTAGE DIVIDER CURRENT: 0.35 mA at -1000 V INPUT

SOCKET: SD-106-T-22 (Supplied)

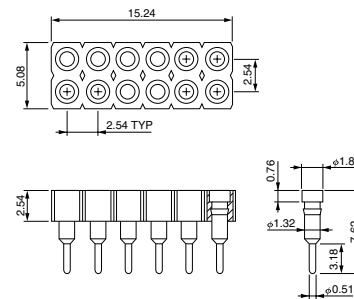

TPMHA0508EB

TACCA0257EA

HAMAMATSU

WEB SITE <http://www.hamamatsu.com>

HAMAMATSU PHOTONICS K.K., Electron Tube Division

314-5, Shimokanzo, Toyooka-village, Iwata-gun, Shizuoka-ken, 438-0193, Japan, Telephone: (81)539/62-5248, Fax: (81)539/62-2205

U.S.A.: Hamamatsu Corporation: 360 Foothill Road, P. O. Box 6910, Bridgewater, N.J. 08807-0910, U.S.A., Telephone: (1)908-231-0960, Fax: (1)908-231-1218 E-mail: usa@hamamatsu.com

Germany: Hamamatsu Photonics Deutschland GmbH: Arzbergerstr. 10, D-82211 Herrsching am Ammersee, Germany, Telephone: (49)8152-375-0, Fax: (49)8152-2658 E-mail: info@hamamatsu.de

France: Hamamatsu Photonics France S.A.R.L.: 8, Rue du Saule Trapu, Parc du Moulin de Massy, 91882 Massy Cedex, France, Telephone: (33)1 69 53 71 00, Fax: (33)1 69 53 71 10 E-mail: infos@hamamatsu.fr

United Kingdom: Hamamatsu Photonics UK Limited: 2 Howard Court, 10 Tewin Road Welwyn Garden City Hertfordshire AL7 1BW, United Kingdom, Telephone: 44(0)1707-294888, Fax: 44(0)1707-325777 E-mail: info@hamamatsu.co.uk

North Europe: Hamamatsu Photonics Norden AB: Smidesvägen 12, SE-171-41 SOLNA, Sweden, Telephone: (46)8-509-031-00, Fax: (46)8-509-031-01 E-mail: info@hamamatsu.se

Italy: Hamamatsu Photonics Italia: S.R.L.: Strada della Moia, 1/E, 20020 Arese, (Milano), Italy, Telephone: (39)02-935 81 733, Fax: (39)02-935 81 741 E-mail: info@hamamatsu.it

www.DataSheet4u.com

OCT. 2004 IP