

For Positron CT Scanner Using BaF₂ Scintillator 10mm (3/8 Inch) Diameter, 8-Stage, Head-On, Bialkali Photocathode

FEATURES

- Coincidence Resolving Time
with BaF₂-BaF₂/2²²Na 0.45ns
- Fast Time Response
Transit Time Spread (FWHM) 0.6ns
- Quantum Efficiency at 225nm 18%

GENERAL

Parameter		Description/Value	Unit
Spectral Response		160 to 650	nm
Wavelength of Maximum Response		420	nm
Photocathode	Material	Bialkali	—
	Minimum Useful Area	8	mm dia.
Window Material		Fused silica	—
Dynode	Structure	Linear focused	—
	Number of Stages	8	—
Direct Interelectrode Capacitances	Anode to Last Dynode	0.7	pF
	Anode to All Other Electrodes	2.0	pF
Base		11-pin glass base	—
Weight		Approx. 5	g
Suitable Socket		E678-11N (supplied)	—

MAXIMUM RATINGS (Absolute Maximum Values)

Parameter		Value	Unit
Supply Voltage	Between Anode and Cathode	1500	Vdc
Average Anode Current		0.03	mA
Ambient Temperature		-80 to +50	°C

CHARACTERISTICS (at 25°C)

Parameter		Min.	Typ.	Max.	Unit
Cathode Sensitivity	Luminous (2856K)	60	95	—	μA/lm
	Radiant at 420nm	—	76	—	mA/W
	Blue	—	9.5	—	μA/lm-b
Anode Sensitivity	Luminous (2856K)	30	100	—	A/lm
	Radiant at 420nm	—	8.0×10^4	—	A/W
Gain		—	1.1×10^6	—	—
Anode Dark Current (after 30 min. storage in darkness)		—	2	50	nA
Time Response	Anode Pulse Rise Time	—	0.7	—	ns
	Electron Transit Time	—	9.0	—	ns

VOLTAGE DISTRIBUTION RATIO AND SUPPLY VOLTAGE

Electrodes	K	Dy1	Dy2	Dy3	Dy4	Dy5	Dy6	Dy7	Dy8	P
Distribution Ratio	3	1.5	1.5	1	1	1	1	1	1	1

Supply Voltage: 1250Vdc, K: Cathode, Dy: Dynode, P: Anode

PHOTOMULTIPLIER TUBE R2496

Figure 1: Typical Spectral Response

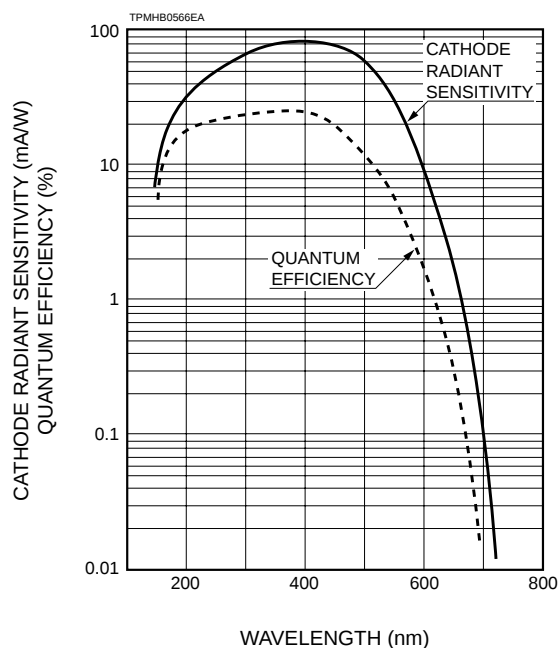


Figure 2: Typical Gain Characteristics


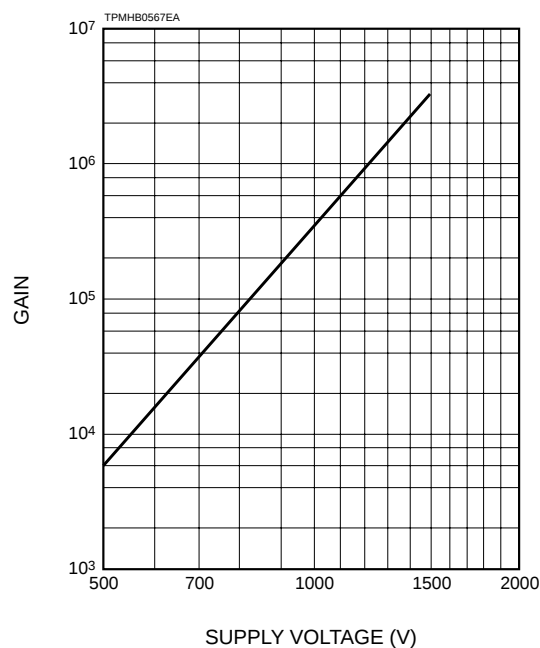


Figure 3: Dimensional Outline and Basing Diagram (Unit: mm)

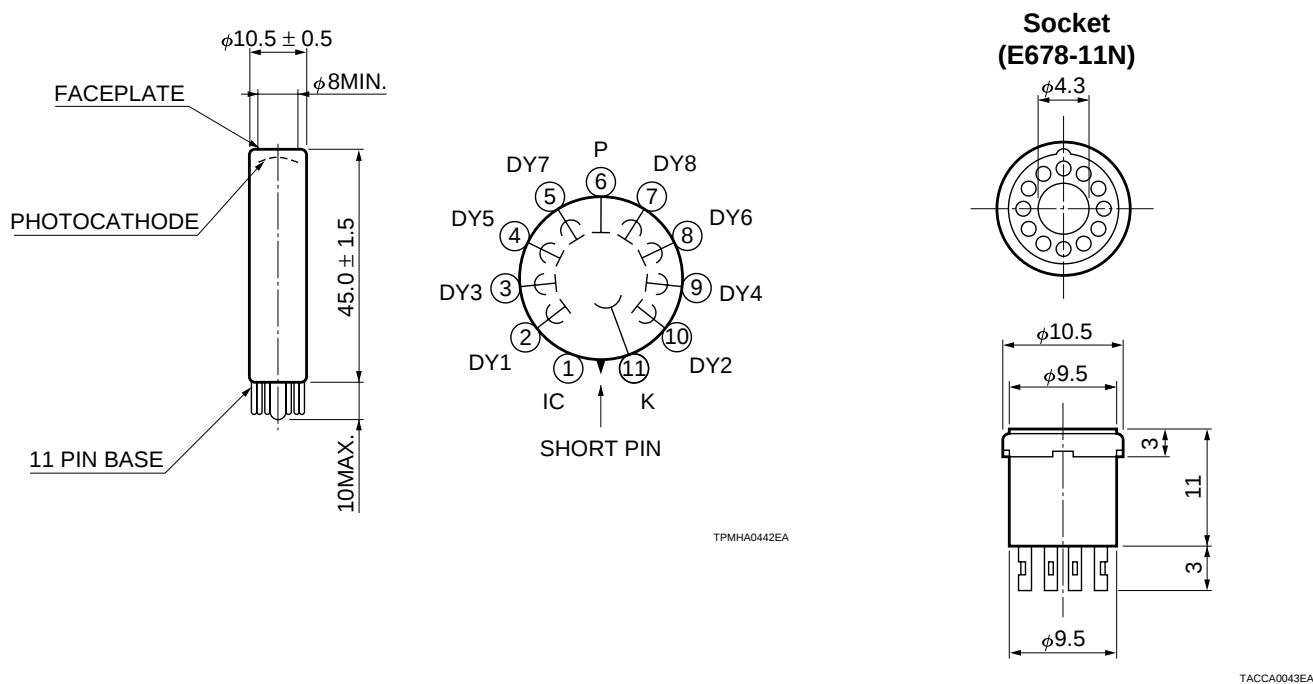

HAMAMATSU

HAMAMATSU PHOTONICS K.K., Electoron Tube Center

314-5, Shimokanzo, Toyooka-village, Iwata-gun, Shizuoka-ken, 438-0193, Japan, Telephone: (81)539/62-5248, Fax: (81)539/62-2205

U.S.A.: Hamamatsu Corporation: 360 Foothill Road, P. O. Box 6910, Bridgewater, N.J. 08807-0910, U.S.A., Telephone: (1)908-231-0960, Fax: (1)908-231-1218

Germany: Hamamatsu Photonics Deutschland GmbH: Arzbergerstr. 10, D-82211 Herrsching am Ammersee, Germany, Telephone: (49)8152-375-0, Fax: (49)8152-2658

France: Hamamatsu Photonics France S.A.R.L.: 8, Rue du Saule Trappu, Parc du Moulin de Massy, 91882 Massy Cedex, France, Telephone: (33)1 69 53 71 00, Fax: (33)1 69 53 71 10

United Kingdom: Hamamatsu Photonics UK Limited: Lough Point, 2 Gladbeck Way, Windmill Hill, Enfield, Middlesex EN2 7JA, United Kingdom, Telephone: (44)181-367-3560, Fax: (44)181-367-6384

North Europe: Hamamatsu Photonics Norden AB: Färögatan 7, S-164-40 Kista Sweden, Telephone: (46)8-703-29-50, Fax: (46)8-750-58-95

Italy: Hamamatsu Photonics Italia: S.R.L.: Strada della Moia, 1/E, 20020 Arese, (Milano), Italy, Telephone: (39)02-935 81 733, Fax: (39)02-935 81 741

TPMH1229E01
SEPT. 1998