

HCD-GX355/GX555/ RG270/RG475/RG575

SERVICE MANUAL

Ver. 1.4 2005.10

- HCD-GX355 is the amplifier, CD player, tape deck and tuner section in MHC-GX355.
- HCD-GX555 is the amplifier, CD player, tape deck and tuner section in MHC-GX555.
- HCD-RG270 is the amplifier, CD player, tape deck and tuner section in MHC-RG270.
- HCD-RG475 is the amplifier, CD player, tape deck and tuner section in MHC-RG475S.
- HCD-RG575 is the amplifier, CD player, tape deck and tuner section in MHC-RG575S.



Photo: HCD-RG575

US Model
Canadian Model
HCD-GX355/GX555
AEP Model
UK Model
Australian Model
HCD-RG270/RG475
E Model
HCD-RG270/RG475/RG575

CD Section	Model Name Using Similar Mechanism	NEW
	CD Mechanism Type	CDM74KFS-F1BD81C (Except Mexican model) or CDM74KF-K6BD83S (US, Canadian, AEP, UK, East European, Russian, E2, E51 models)/CDM74KFS-F1BD84 (Mexican model)
	Base Unit Name	BU-F1BD81C (Except Mexican model) or BU-K6BD83S-WOD (US, Canadian, AEP, UK, East European, Russian, E2, E51 models)/BU-F1BD84 (Mexican model)
	Optical Pick-up Block Name	KSM-215DCP or KSM-213DCP
TAPE Section	Model Name Using Similar Mechanism	NEW
	Tape Transport Mechanism Type	CWM43FF13

- Abbreviation
E2 : 120V AC Area in E model
E51 : Chilean and Peruvian models

SPECIFICATIONS

Amplifier section

AUDIO POWER SPECIFICATIONS (HCD-GX555/GX355 USA model only)

HCD-GX555

POWER OUTPUT AND TOTAL HARMONIC DISTORTION:

With 6 ohm loads, both channels driven, from
120 – 10,000 Hz: rated 145 watts per channel
minimum RMS power, with no more than 10%
total harmonic distortion from 250 milliwatts to
rated output.

HCD-GX355

POWER OUTPUT AND TOTAL HARMONIC DISTORTION:

With 6 ohm loads, both channels driven, from
120 – 10,000 Hz: rated 150 watts per channel
minimum RMS power, with no more than 10%
total harmonic distortion from 250 milliwatts to
rated output.

North American model:

HCD-GX555

Front speaker

Continuous RMS power output (reference):
145 + 145 watts (6 ohms at
1 kHz, 10% THD)

Total harmonic distortion
less than 0.07% (6 ohms at
1 kHz, 80 W)

Sub woofer

Continuous RMS power output (reference):
170 watts (6 ohms at
80 Hz, 10% THD)

Total harmonic distortion
less than 0.07% (6 ohms at
80 Hz, 90 W)

HCD-GX355

Continuous RMS power output (reference):
150 + 150 watts (6 ohms at
1 kHz, 10% THD)

Total harmonic distortion
less than 0.07% (6 ohms at
1 kHz, 80 W)

European and Russian models:

HCD-RG475

Front speaker

DIN power output (rated): 110 + 110 watts (6 ohms at
1 kHz, DIN)

Continuous RMS power output (reference):
140 + 140 watts (6 ohms at
1 kHz, 10% THD)

Music power output (reference):

280 + 280 watts (6 ohms at
1 kHz, 10% THD)

Sub woofer

DIN power output (rated): 130 watts (6 ohms at
80 Hz, DIN)

Continuous RMS power output (reference):
160 watts (6 ohms at
80 Hz, 10% THD)

Music power output (reference):

320 watts (6 ohms at
80 Hz, 10% THD)

– Continued on next page –

COMPACT DISC DECK RECEIVER

9-879-533-05
2005J05-1
© 2005.10

Sony Corporation
Personal Audio Group
Published by Sony Engineering Corporation

SONY®

HCD-GX355/GX555/RG270/RG475/RG575

HCD-RG270

DIN power output (rated): 80 + 80 watts (6 ohms at 1 kHz, DIN)
Continuous RMS power output (reference): 100 + 100 watts (6 ohms at 1 kHz, 10% THD)
Music power output (reference): 200 + 200 watts (6 ohms at 1 kHz, 10% THD)

Other models:

HCD-RG575

The following measured at AC 120, 127, 220, 240 V 50/60 Hz
Front speaker
DIN power output (rated): 100 + 100 watts (6 ohms at 1 kHz, DIN)
Continuous RMS power output (reference): 125 + 125 watts (6 ohms at 1 kHz, 10% THD)

Sub woofer
DIN power output (rated): 120 watts (6 ohms at 80 Hz, DIN)
Continuous RMS power output (reference): 150 watts (6 ohms at 80 Hz, 10% THD)

HCD-RG475

Front speaker
The following measured at AC 120, 127, 220, 240 V 50/60 Hz
DIN power output (rated): 100 + 100 watts (6 ohms at 1 kHz, DIN)
Continuous RMS power output (reference): 120 + 120 watts (6 ohms at 1 kHz, 10% THD)

Sub woofer
DIN power output (rated): 120 watts (6 ohms at 80 Hz, DIN)
Continuous RMS power output (reference): 150 watts (6 ohms at 80 Hz, 10% THD)

HCD-RG270

The following measured at AC 120, 127, 220, 240 V 50/60 Hz
DIN power output (rated): 100 + 100 watts (6 ohms at 1 kHz, DIN)
Continuous RMS power output (reference): 125 + 125 watts (6 ohms at 1 kHz, 10% THD)

Inputs
AUDIO IN (stereo mini jack): voltage 250 mV, impedance 47 kilohms
MIC (phone jack) (Latin American model only): sensitivity 1 mV, impedance 10 kilohms

Outputs
PHONES (stereo mini jack): accepts headphones of 8 ohms or more
VIDEO OUT (phono jack) (Mexican model only): max. output level 1Vp-p, unbalanced, Sync negative, load impedance 75 ohms
SPEAKER: accepts impedance of 6 to 16 ohms
SUBWOOFER OUT (HCD-GX555/RG575/RG475 only): accepts impedance of 6 to 16 ohms

CD player section

System Compact disc and digital audio system
Laser Diode Properties Emission duration: continuous
Laser Output*: Less than 44.6μW
* This output is the value measurement at a distance of 200mm from the objective lens surface on the Optical Pick-up Block with 7mm aperture.
Frequency response 2 Hz – 20 kHz (±0.5 dB)
Signal-to-noise ratio More than 90 dB
Dynamic range More than 90 dB

Tape deck section

Recording system 4-track 2-channel, stereo
Frequency response 50 – 13,000 Hz (±3 dB), using Sony TYPE I cassettes

Tuner section

FM stereo, FM/AM superheterodyne tuner
FM tuner section
Tuning range
North American model: 87.5 – 108.0 MHz (100 kHz step)
Other models: 87.5 – 108.0 MHz (50 kHz step)

Antenna FM lead antenna
Antenna terminals 75 ohms unbalanced
Intermediate frequency 10.7 MHz
AM tuner section
Tuning range
Pan-American models: 530 – 1,710 kHz (with the tuning interval set at 10 kHz)
531 – 1,710 kHz (with the tuning interval set at 9 kHz)
European, Russian and Saudi Arabian models: 531 – 1,602 kHz (with the tuning interval set at 9 kHz)
Other models: 530 – 1,710 kHz (with the tuning interval set at 10 kHz)
531 – 1,602 kHz (with the tuning interval set at 9 kHz)

Antenna AM loop antenna
Intermediate frequency 450 kHz

General

Power requirements
North American model: 120 V AC, 60 Hz
European and Russian models: 230 V AC, 50/60 Hz
230 – 240 V AC, 50/60 Hz
Australian model: 220 V AC, 50/60 Hz
Argentine model: 127 V AC, 60 Hz
Mexican model: 120 – 127, 220 or 230 – 240 V AC, 50/60 Hz
Adjustable with voltage selector
Saudi Arabian model: 120 V, 220 V or 230 – 240 V AC, 50/60 Hz
Adjustable with voltage selector

Power consumption
USA model:
HCD -GX555: 285 watts
HCD -GX355: 210 watts
Canadian model:
HCD -GX555: 380 VA
HCD -GX355: 290 VA
European and Russian models:
HCD-RG475: 300 watts
0.25 watts (at the Power Saving Mode)
HCD -RG270: 190 watts
0.25 watts (at the Power Saving Mode)

Other models:
HCD-RG575: 300 watts
HCD-RG475: 300 watts

HCD -RG270: 210 watts

Dimensions (w/h/d) (excl. speakers)
Approx. 280 × 325 430 mm

Mass (excl. speakers)
North American models:
HCD-GX555: Approx. 10.5 kg
HCD-GX355: Approx. 10.0 kg
Canadian model:
HCD-GX555: Approx. 10.5 kg
HCD-GX355: Approx. 10.0 kg
European and Russian models:
HCD-RG475: Approx. 10.5 kg
HCD-RG270: Approx. 8.7 kg
Other models:
HCD-RG575: Approx. 10.5 kg
HCD-RG475: Approx. 10.5 kg
HCD-RG270: Approx. 10.0 kg

Design and specifications are subject to change without notice.


SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety check before releasing the set to the customer:
Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage.
Check leakage as described below.

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes.). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2 V AC range are suitable. (See Fig. A)

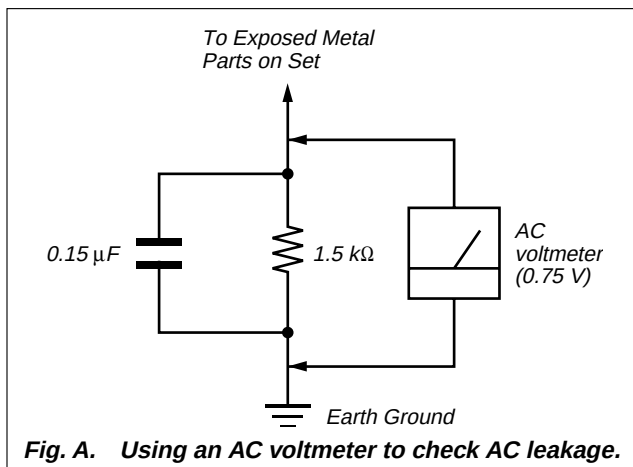**Notes on chip component replacement**


- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

Flexible Circuit Board Repairing

- Keep the temperature of the soldering iron around 270 °C during repairing.
- Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
- Be careful not to apply force on the conductor when soldering or unsoldering.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.



This appliance is classified as a CLASS 1 LASER product. This marking is located on the rear exterior.

DANGER

INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCK DEFEATED. AVOID DIRECT EXPOSURE TO BEAM.

DANGER

RADIATION DE LASER INVISIBLE LORS D'OUVERTURE. AVEC L'ENCLANCHEMENT DE SECURITE ANNULE. EVITER L'EXPOSITION DIRECTE AU RAYON.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK $\triangle$ OR DOTTED LINE WITH MARK $\triangle$ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE $\triangle$ SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COM- POSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

UNLEADED SOLDER

Boards requiring use of unleaded solder are printed with the lead-free mark (LF) indicating the solder contains no lead. (Caution: Some printed circuit boards may not come printed with the lead free mark due to their particular size)

**: LEAD FREE MARK**

Unleaded solder has the following characteristics.

- Unleaded solder melts at a temperature about 40 °C higher than ordinary solder.
Ordinary soldering irons can be used but the iron tip has to be applied to the solder joint for a slightly longer time.
Soldering irons using a temperature regulator should be set to about 350 °C.
Caution: The printed pattern (copper foil) may peel away if the heated tip is applied for too long, so be careful!
- Strong viscosity
Unleaded solder is more viscous (sticky, less prone to flow) than ordinary solder so use caution not to let solder bridges occur such as on IC pins, etc.
- Usable with ordinary solder
It is best to use only unleaded solder but unleaded solder may also be added to ordinary solder.

TABLE OF CONTENTS

1. SERVICING NOTES	5	7. EXPLODED VIEWS	
2. GENERAL	6	7-1. Overall Section	66
3. DISASSEMBLY		7-2. Back Panel Section	67
3-1. Disassembly Flow	8	7-3. Front Panel Section	68
3-2. Case (Top)	9	7-4. Key Section	69
3-3. Door (CD)	9	7-5. Chassis Section	70
3-4. Front Panel Section	10	7-6. Transformer Section	71
3-5. Mechanical Deck (CWM43FF13)	10	7-7. CD Mechanism Deck Section-1 (CDM74KFS-F1BD81C) (Except MX model)/ (CDM74KFS-F1BD84) (MX model)	72
3-6. CD Mechanism Deck (CDM74KFS-F1BD81C (Except MX model)/CDM74KFS-F1BD84 (MX model))	11	7-8. CD Mechanism Deck Section-2 (CDM74KFS-F1BD81C) (Except MX model)/ (CDM74KFS-F1BD84) (MX model)	73
3-7. Back Panel Section	11	8. ELECTRICAL PARTS LIST	74
3-8. MAIN Board	12		
3-9. BD Board/CD Board	12	• Abbreviation	
3-10. DRIVER Board, SW Board	13	MX: Mexican model	
3-11. Optical Pick-up Block (KSM-215DCP)	13		
3-12. SENSOR Board	14		
3-13. MOTOR (TB) Board	14		
3-14. MOTOR (LD) Board	15		
4. TEST MODE	16		
5. ELECTRICAL ADJUSTMENT	20		
6. DIAGRAMS			
6-1. Block Diagram – CD SERVO Section –	21		
6-2. Block Diagram – AUDIO/VIDEO Section –	22		
6-3. Block Diagram – AMP Section –	23		
6-4. Block Diagram – PANEL, POWER SUPPLY Section –	24		
6-5. Printed Wiring Board – CD Board – (Except MX model)	26		
6-6. Schematic Diagram – CD Board – (Except MX model)	27		
6-7. Printed Wiring Board – BD Board – (MX model)	28		
6-8. Schematic Diagram – BD Board – (MX model)	29		
6-9. Printed Wiring Boards – CHANGER Section –	30		
6-10. Schematic Diagram – CHANGER Section –	31		
6-11. Printed Wiring Board – MAIN Board –	32		
6-12. Schematic Diagram – MAIN Board (1/3) –	33		
6-13. Schematic Diagram – MAIN Board (2/3) –	34		
6-14. Schematic Diagram – MAIN Board (3/3) –	35		
6-15. Printed Wiring Board – POWER Board –	36		
6-16. Schematic Diagram – POWER Board –	37		
6-17. Printed Wiring Board – SUB WOOFER Board – (GX555/RG475/RG575 only)	38		
6-18. Schematic Diagram – SUB WOOFER Board – (GX555/RG475/RG575 only)	39		
6-19. Printed Wiring Boards – AUDIO, MIC, HEADPHONE Boards –	40		
6-20. Schematic Diagram – AUDIO, MIC, HEADPHONE Boards –	41		
6-21. Printed Wiring Boards – CD-G Section – (MX model only)	42		
6-22. Schematic Diagram – CD-G Section – (MX model only)	43		
6-23. Printed Wiring Board – PANEL Section (1/2)	44		
6-24. Printed Wiring Board – PANEL Section (2/2)	45		
6-25. Schematic Diagram – PANEL Section (1/2)	46		
6-26. Schematic Diagram – PANEL Section (2/2)	47		
6-27. Printed Wiring Boards – TRANS Section –	48		
6-28. Schematic Diagram – TRANS Section –	49		

HCD-GX355/GX555/RG270/RG475/RG575

SECTION 1

SERVICING NOTES

Ver. 1.1

NOTES ON HANDLING THE OPTICAL PICK-UP BLOCK OR BASE UNIT

The laser diode in the optical pick-up block may suffer electrostatic break-down because of the potential difference generated by the charged electrostatic load, etc. on clothing and the human body. During repair, pay attention to electrostatic break-down and also use the procedure in the printed matter which is included in the repair parts.

The flexible board is easily damaged and should be handled with care.

NOTES ON LASER DIODE EMISSION CHECK


The laser beam on this model is concentrated so as to be focused on the disc reflective surface by the objective lens in the optical pick-up block. Therefore, when checking the laser diode emission, observe from more than 30 cm away from the objective lens.

LASER DIODE AND FOCUS SEARCH OPERATION CHECK

Carry out the "S curve check" in "CD section adjustment" and check that the S curve waveforms is output three times.

• MODEL IDENTIFICATION

– Back Panel –

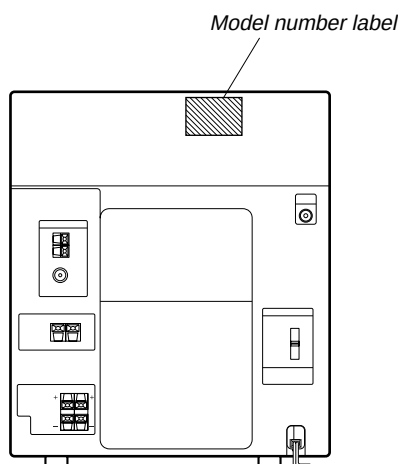

Label indication	Model
2-348-857-01 CA	GX355: CND
2-560-970-01 U	GX555: US
2-560-971-01 CA	GX555: CND
2-560-972-01 CED	RG475: AEP, UK, EE, RU
2-560-974-01 E3	RG475: E3
2-560-975-01 AU	RG475: AUS
2-560-979-01 U	GX355: US
2-560-980-01 CED	RG270: AEP, UK, EE, RU
2-560-982-01 E3	RG270: E3
2-560-982-11 E2	RG270: E2
2-560-983-01 EA3	EA
2-560-984-01 SP2	RG475: SP
2-560-985-01 AU	RG270: AUS
2-560-986-01 E51	RG270: E51
2-560-987-01 MX4	RG270: MX
2-560-987-11 MX4	
2-560-988-01 AR	RG270: AR
2-560-995-01 SP2	RG575: SP
2-580-005-01 E2	RG575: E2
2-580-005-11 E3	
2-580-007-01 E51	RG575: E51
2-580-008-01 MX4	RG575: MX
2-580-008-11 MX4	
2-580-009-01 AR	RG575: AR

• Abbreviation

AR : Argentine model
 AUS : Australian model
 CND : Canadian model
 E2 : 120V AC Area in E model
 E3 : 240V AC Area in E model
 E51 : Chilean and Peruvian models
 EA : Saudi Arabia model
 EE : East European model
 MX : Mexican model
 RU : Russian model
 SP : Singapore model

• Location of Controls

Main unit

ALPHABETICAL ORDER

A – O

ALBUM +/- 12

AUDIO IN 29

AUDIO IN jack 24

CD 32

CD SYNC 27

Deck A 25

Deck B 18

DISC 1 – 3 11

DISC SKIP/EX-CHANGE 13

Disc tray 10

DISPLAY 3

Display window 5

ECHO LEVEL¹⁾ 21

EFFECT ON/OFF 4

ENTER 4

EQ BAND 12

GROOVE 4

ILLUMINATION 2

MIC jack²⁾ 23

MIC LEVEL²⁾ 22

MULTI PLEX¹⁾ 6

Operation Dial

(– EQ +/- <<< >>> II/

– TUNING +) 17

P – Z

P FILE 4

PHONES jack 20

PLAY MODE 8

Power illuminator 15

PRESET EQ 4

REC PAUSE/START 29

Remote sensor 7

SUBWOOFER ON/OFF³⁾ 9

SURROUND 4

TAPE A/B 30

TUNER/BAND 31

TUNING MODE 8

VOLUME control 19

BUTTON DESCRIPTIONS

I/⏻ (power) 1

⏸ (pause) 12

■ (stop) 12

⏭ (fast forward) 12

▶ (play) 12

⏮ (rewind) 12

⏏ (eject) 14

PUSH ⏏ (deck B) (eject) 16

⏏ PUSH (deck A) (eject) 26

1) Mexican model only

2) Latin American model only

(Mexican model comes with 2 microphone jacks)

3) HCD-GX555/RG575/RG475 only

6

Remote control

ALPHABETICAL ORDER

A - E


ALBUM + **11**
 ALBUM - **13**
 CD **18**
 CLEAR **15**
 CLOCK/TIMER SELECT **2**
 CLOCK/TIMER SET **3**
 DISC SKIP **10**
 DISPLAY **21**
 ENTER **9**
 EQ **14**

F - Z

FM MODE **4**
 FUNCTION **6**
 PLAY MODE **20**
 REPEAT **4**
 SLEEP **22**
 TAPE **17**
 TUNER BAND **5**
 TUNER MEMORY **19**
 TUNING MODE **20**
 VOLUME +/- **12**

BUTTON DESCRIPT


I/⏻ (power) **1**
 ◀◀/▶▶ (rewind/fast forward) **7**
 ▶ (play) **8**
 || (pause) **8**
 ■ (stop) **8**
 +/- (tuning) **16**
 ◀◀/▶▶ (go back/go forward) **16**

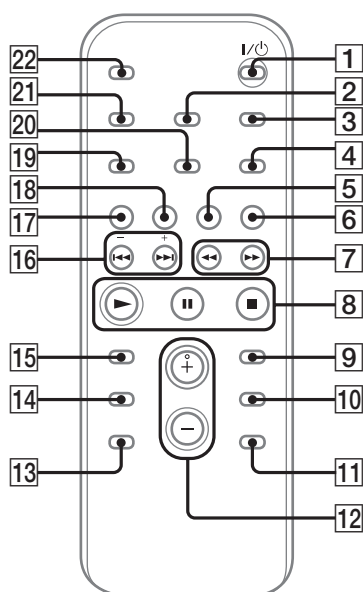

SECTION 3 DISASSEMBLY


- This set can be disassembled in the order shown below.

3-1. DISASSEMBLY FLOW

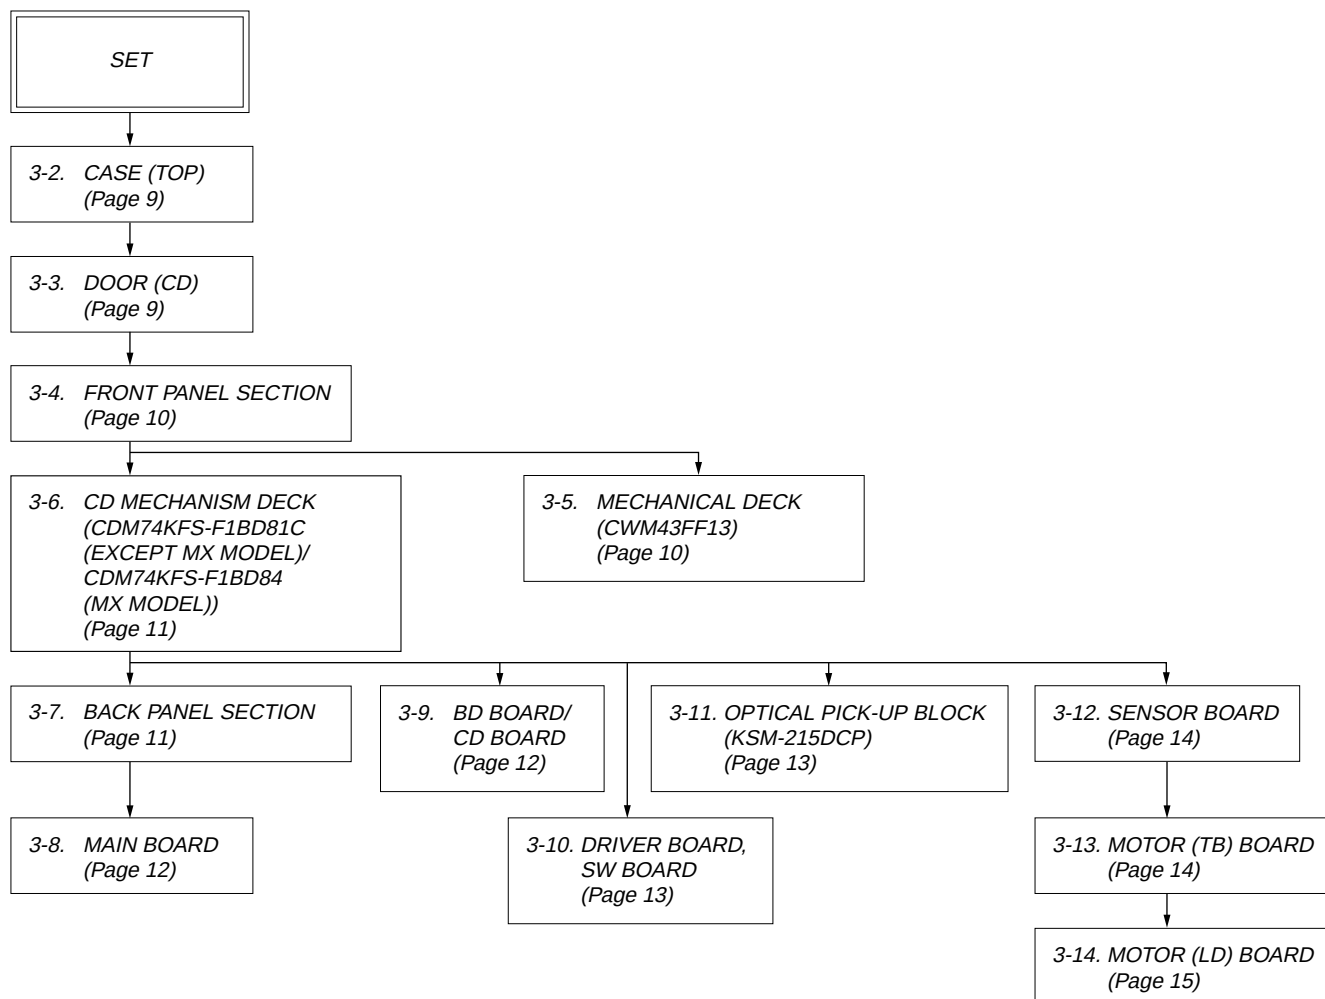


Note: Follow the disassembly procedure in the numerical order given.

3-2. CASE (TOP)

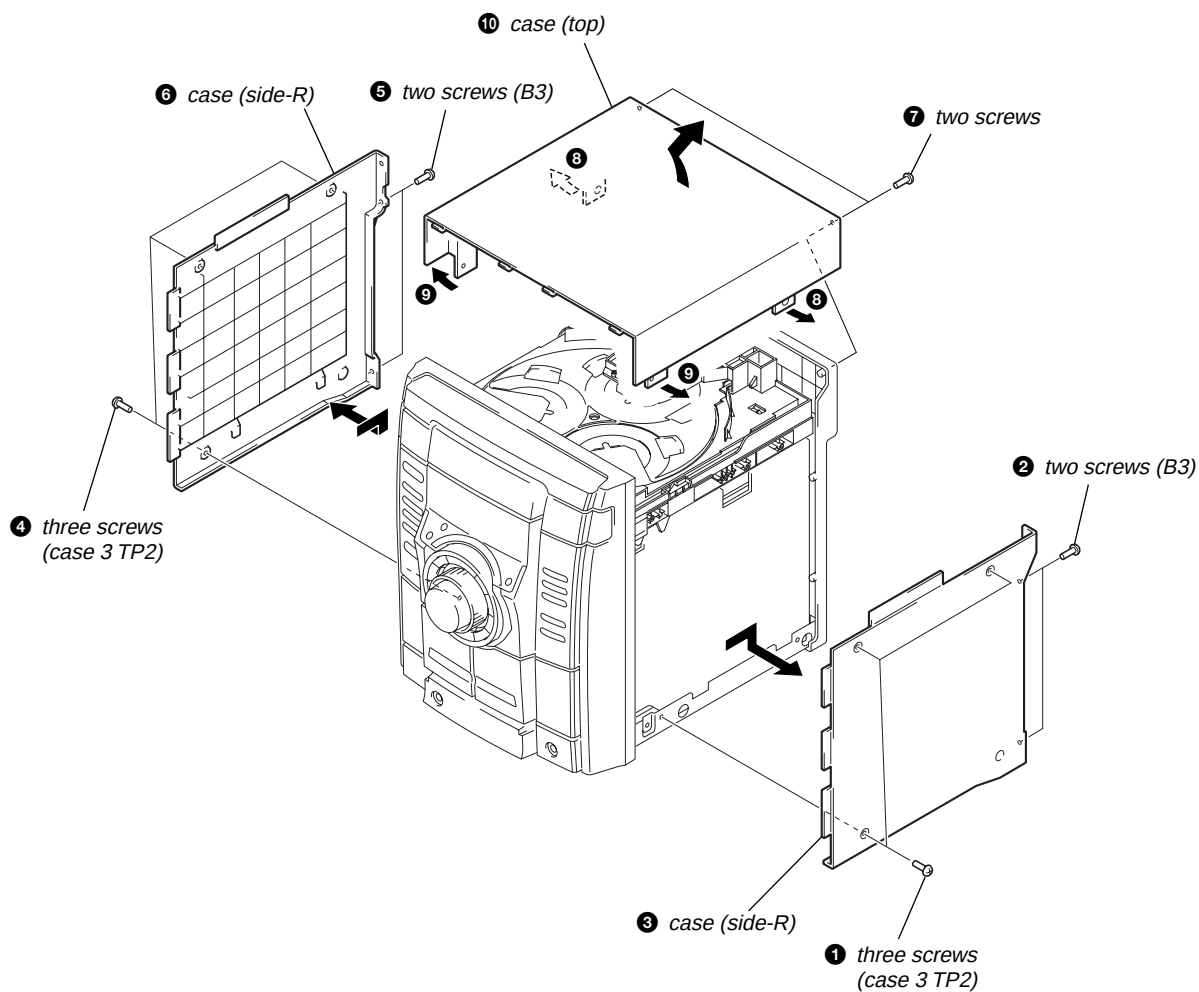

3-3. DOOR (CD)

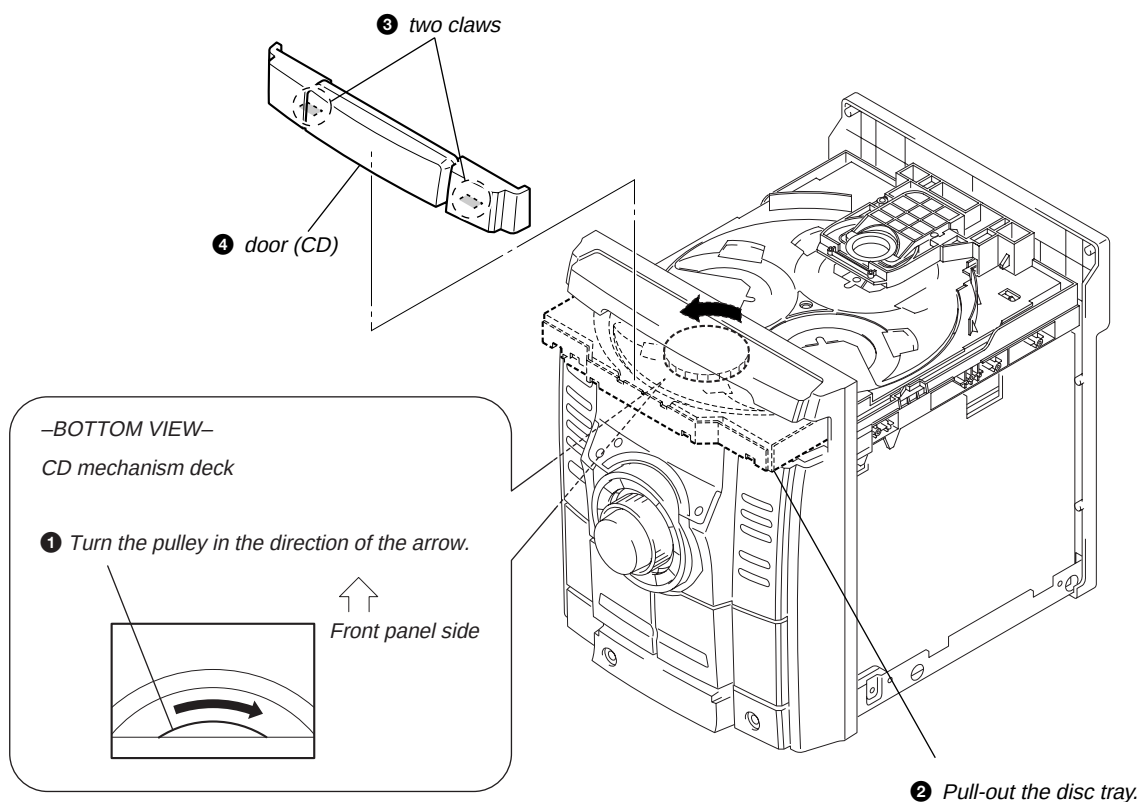

3-4. FRONT PANEL SECTION


- Abbreviation

AR : Argentina model

E2 : 120V AC Area in E model

E51 : Chilean and Peruvian models


MX : Mexican model

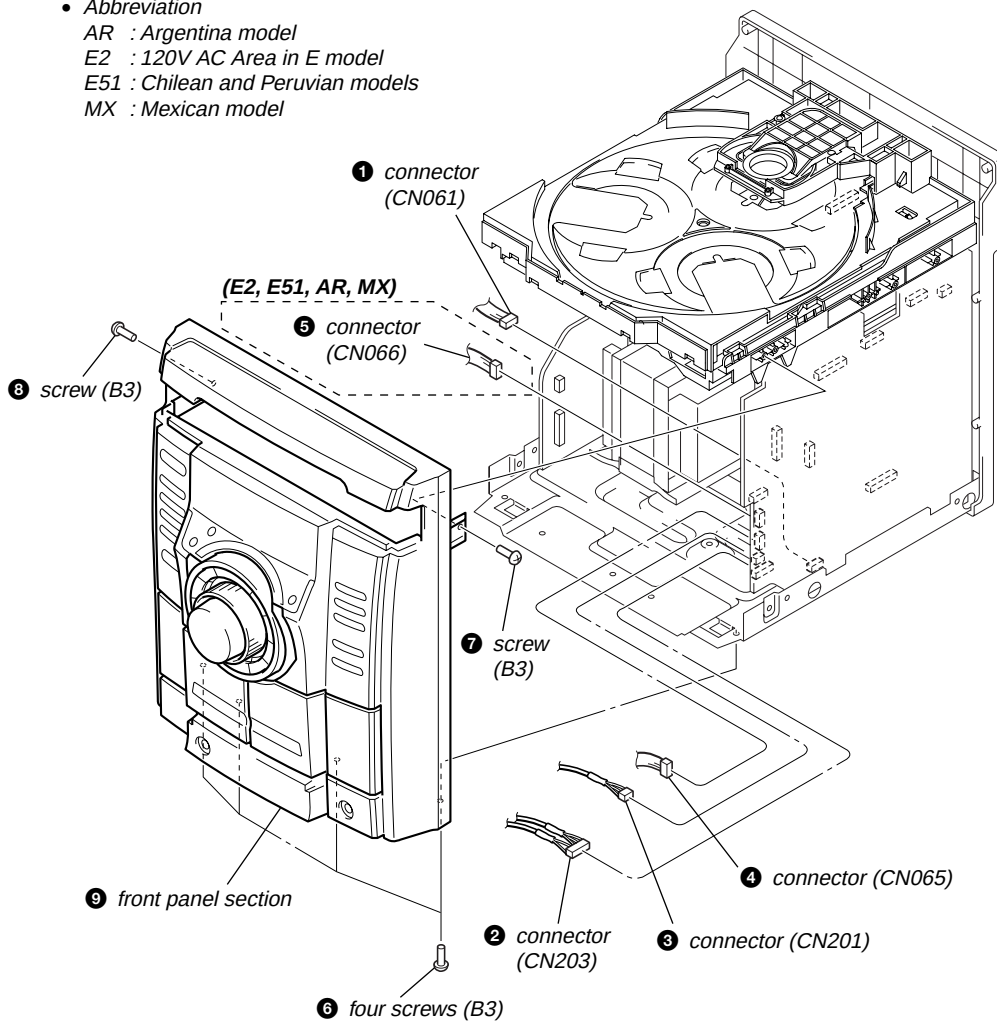


3-5. MECHANICAL DECK (CWM43FF13)

- Abbreviation


MX : Mexican model

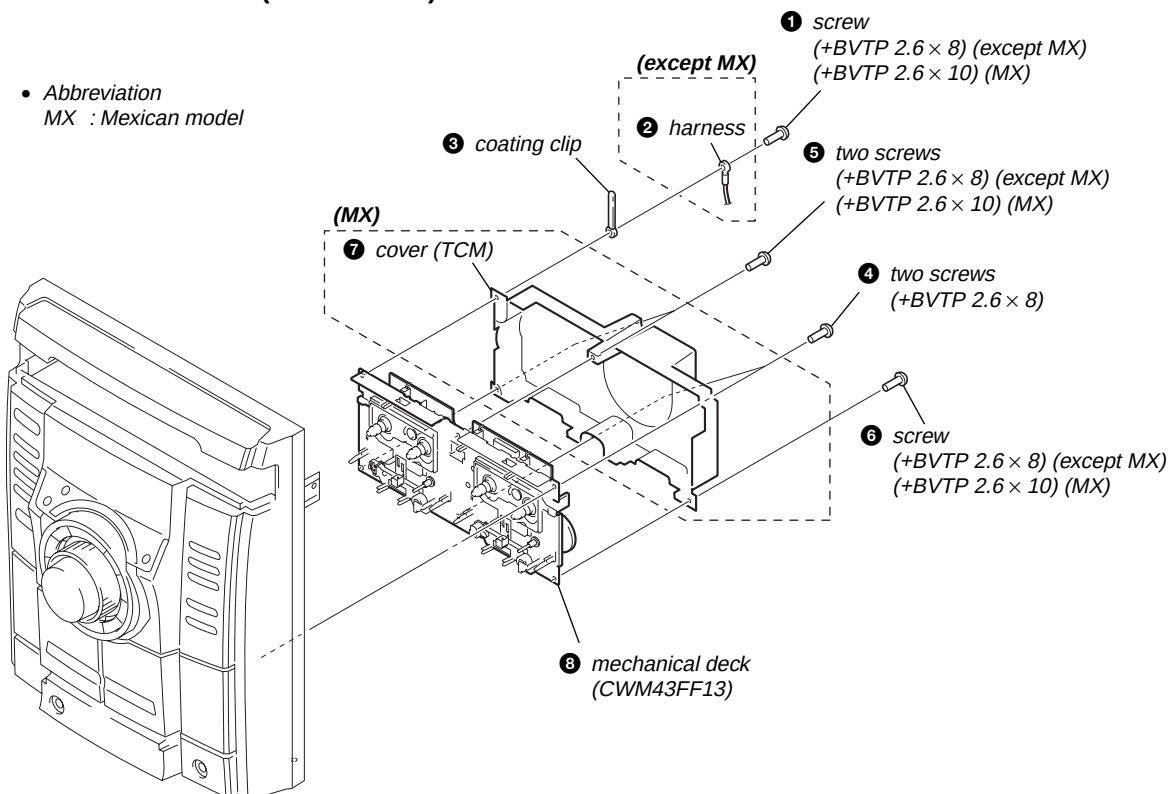


3-6. CD MECHANISM DECK (CDM74KFS-F1BD81C (EXCEPT MX MODEL)/CDM74KFS-F1BD84 (MX MODEL))

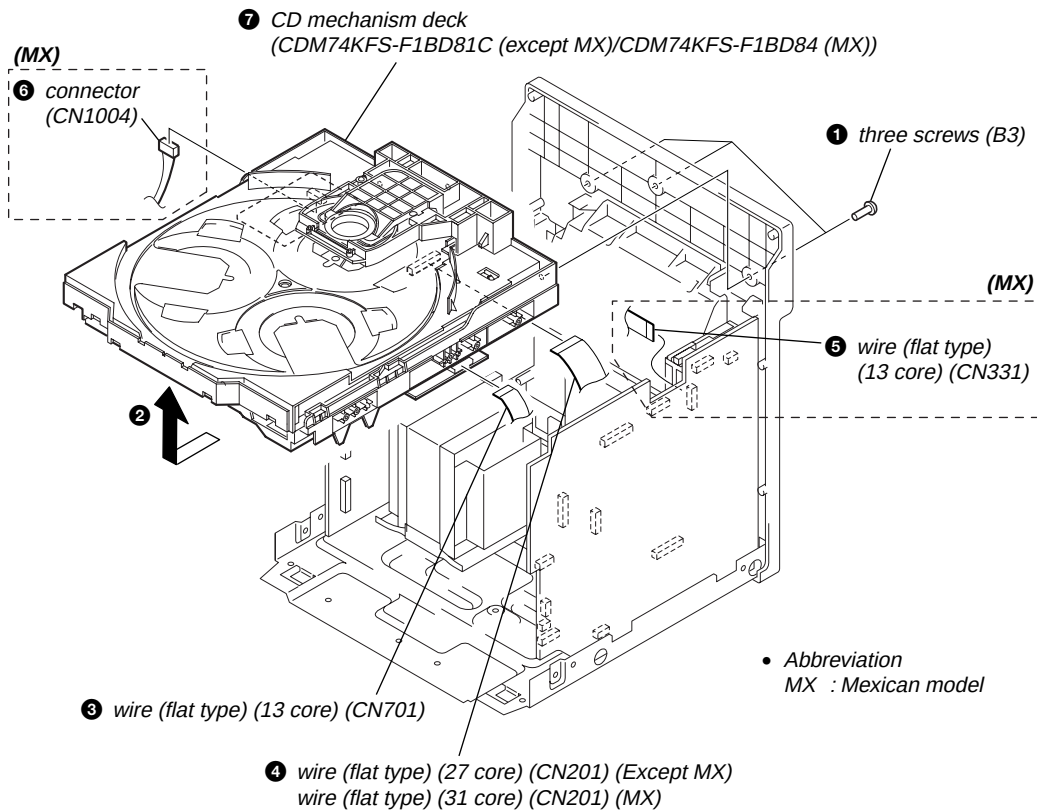

3-7. BACK PANEL SECTION

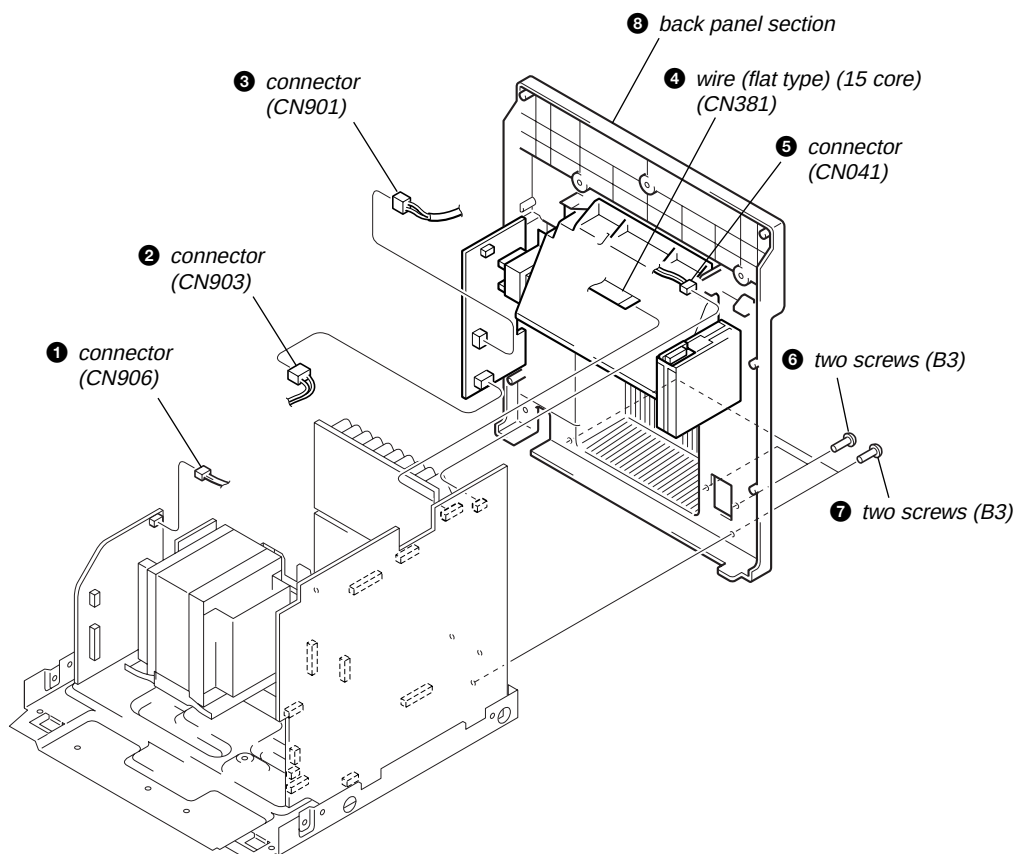


3-8. MAIN BOARD

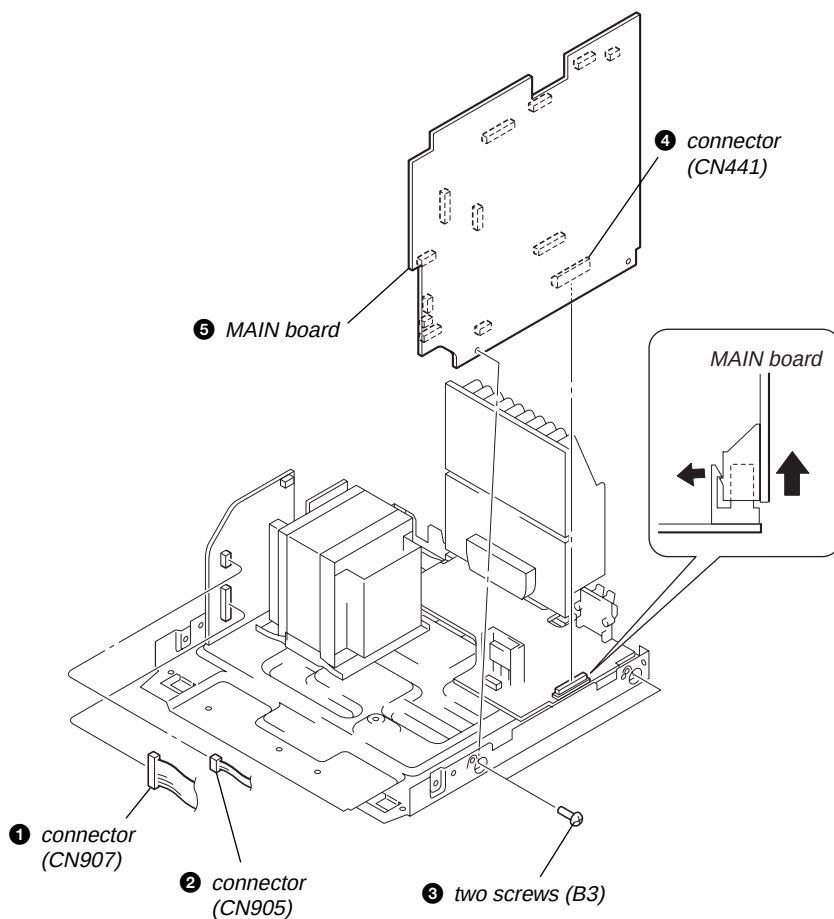


3-9. BD BOARD/CD BOARD

- Abbreviation
MX : Mexican model

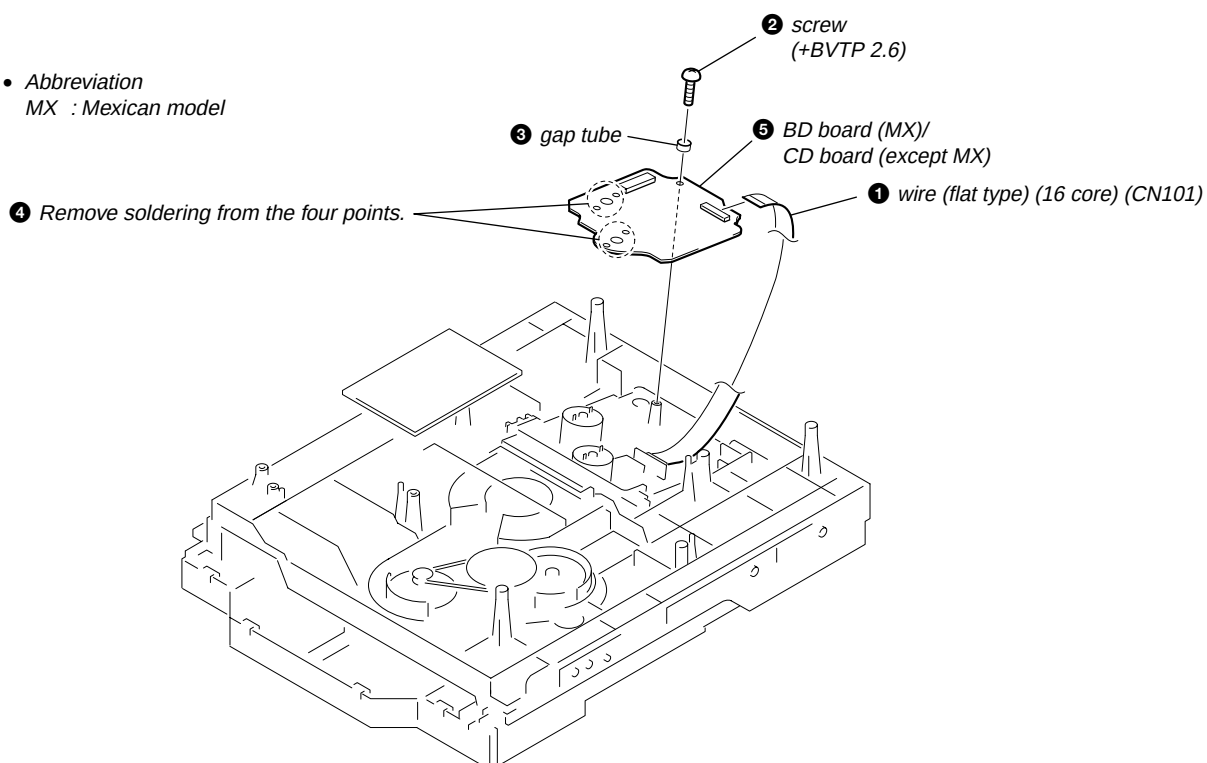


3-10. DRIVER BOARD, SW BOARD

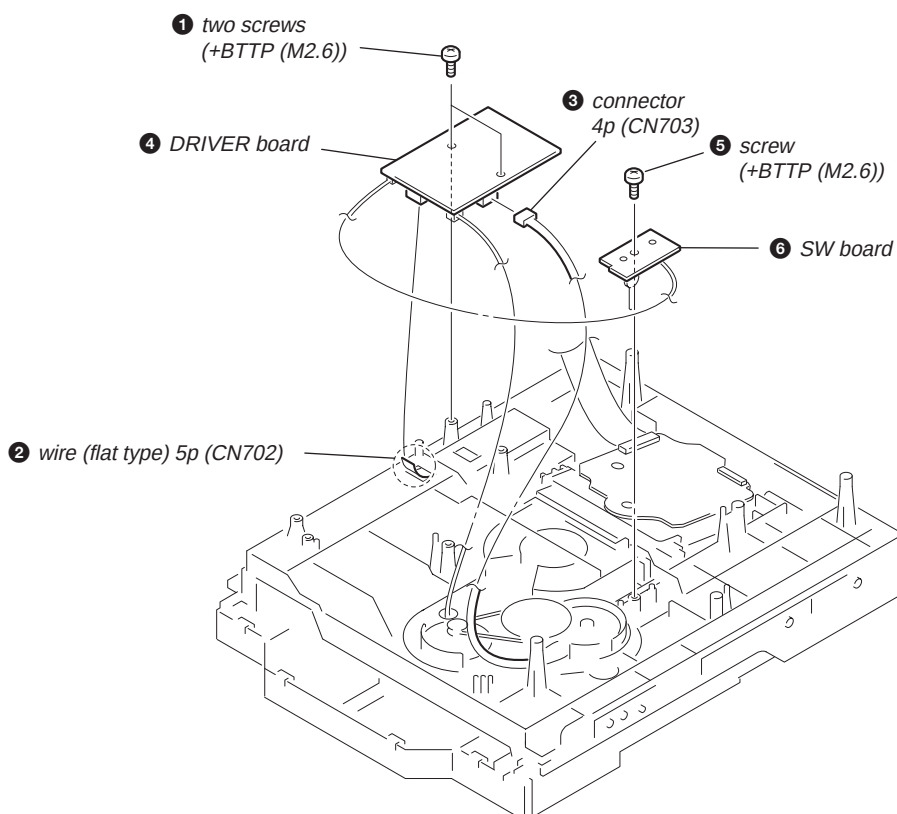


3-11. OPTICAL PICK-UP BLOCK (KSM-215DCP)


- Abbreviation
MX : Mexican model

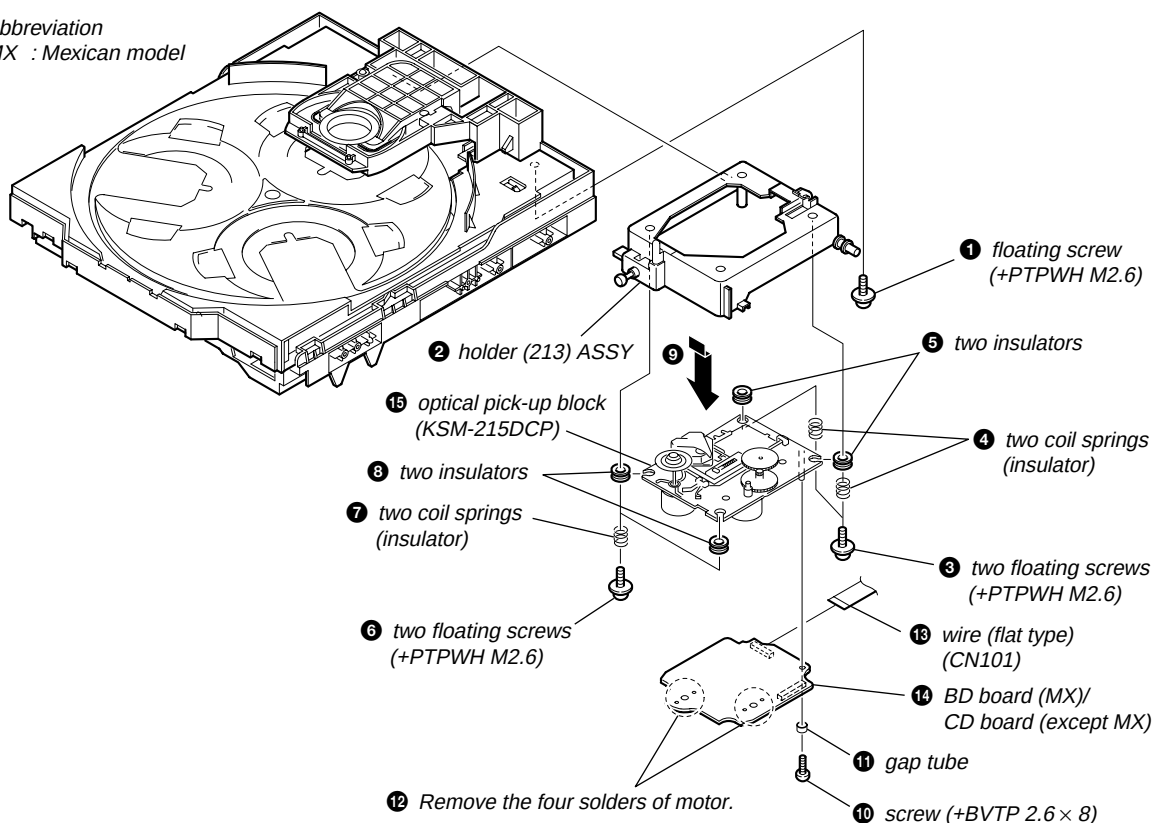


3-12. SENSOR BOARD

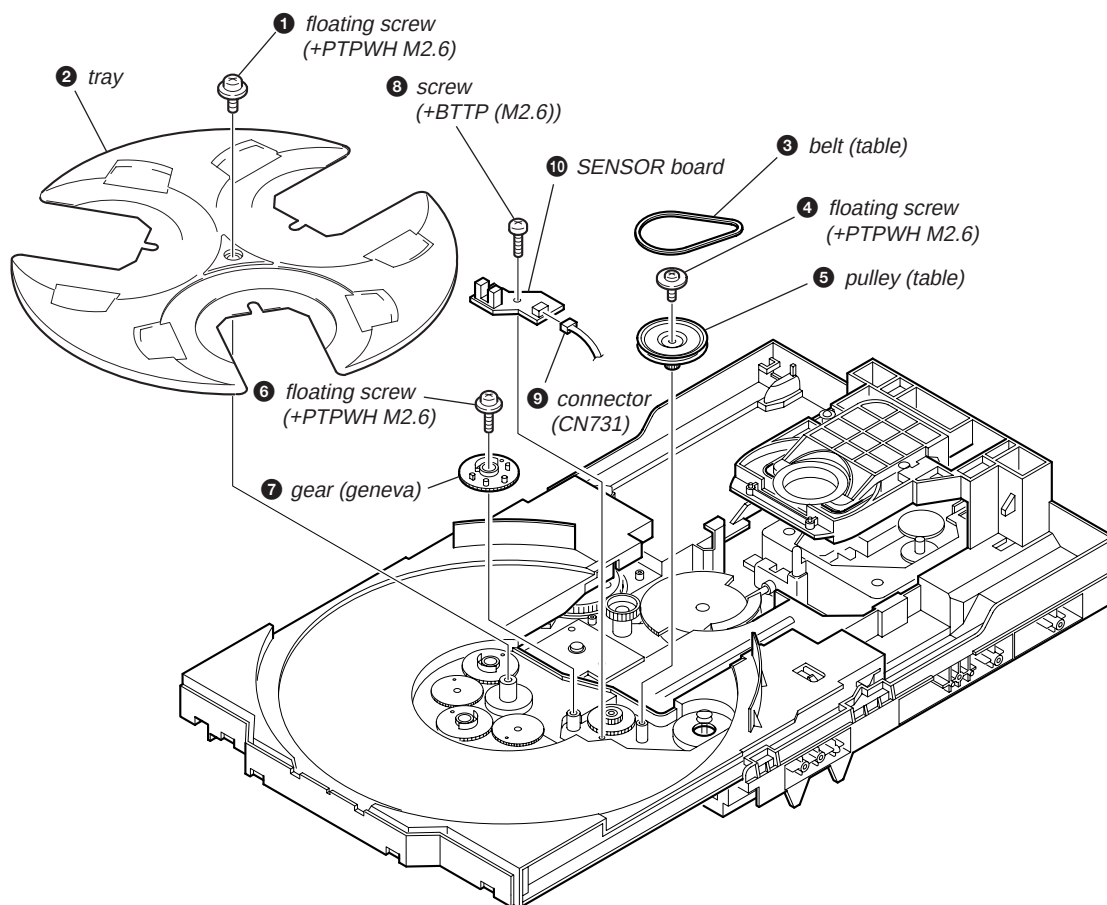

3-13. MOTOR (TB) BOARD

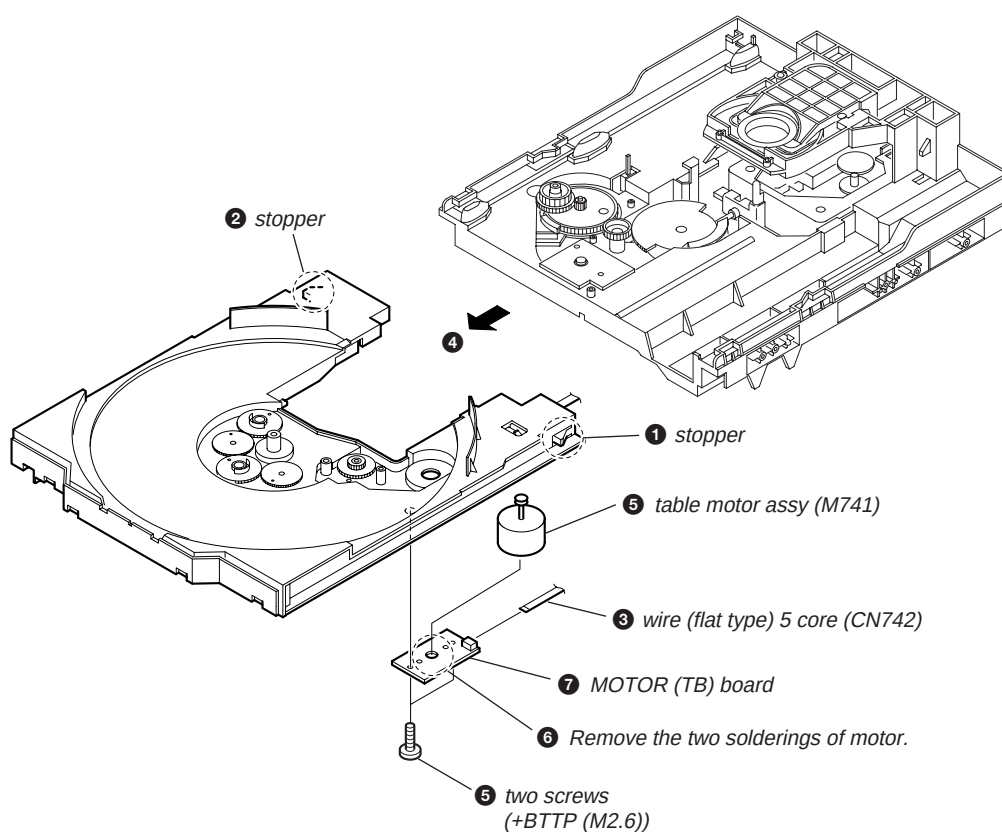

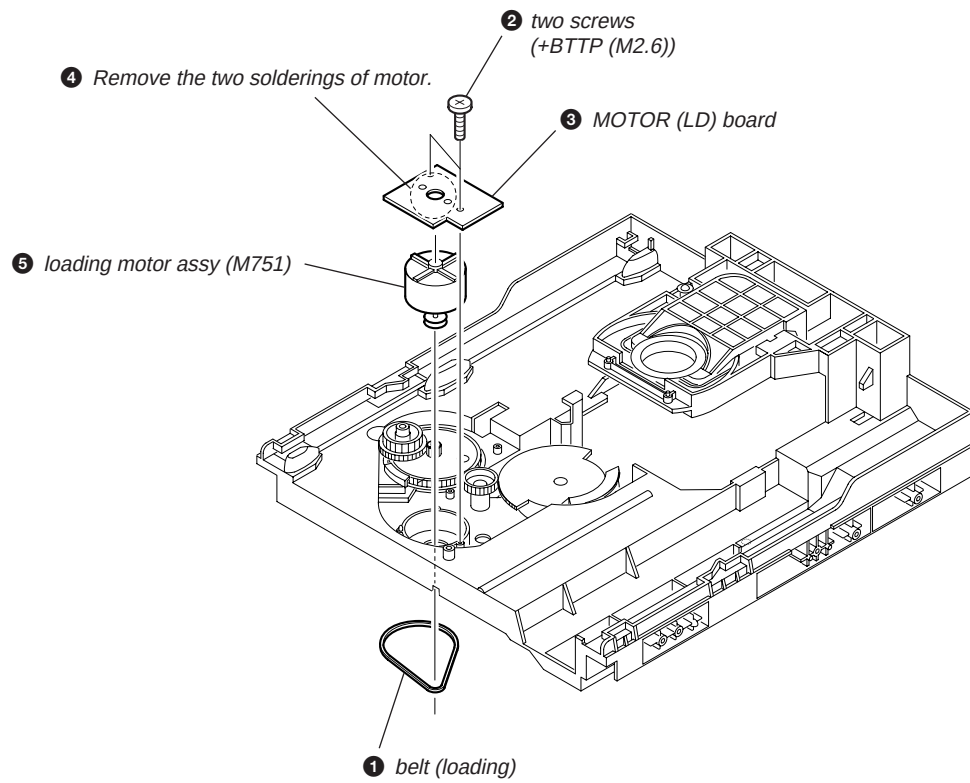3-14. MOTOR (LD) BOARD

SECTION 4

TEST MODE

MC COLD RESET

The cold reset clears all data including preset data stored in the RAM to initial conditions. Execute this mode when returning the set to the customer.

Procedure:

1. Press three buttons of **[■]**, **[ILLUMINATION]** and **[DISC 1]** simultaneously.
2. The message "COLD RESET" is displayed on the fluorescent indicator tube momentarily, then becomes standby states.

AM TUNING INTERVAL CHANGE-OVER

(Except AEP, UK, East European, Russian models)

A step of AM tuning interval can be changed over between 9 kHz and 10 kHz.

Procedure:

1. Press the **[I/⏻]** button to turn the power on.
2. Press the **[TUNER/BAND]** button to select "AM".
3. Press the **[I/⏻]** button to turn the power off.
4. Press two buttons of **[PLAY MODE/TUNING MODE]** and **[I/⏻]** simultaneously.
5. The message "AM 9K STEP" or "AM 10K STEP" is displayed on the fluorescent indicator tube, and thus the channel step is changed over.

CD SHIP (LOCK) MODE

This mode moves the optical pick-up to the position durable to vibration. Use this mode when returning the set to the customer after repair.

Procedure:

1. Press the **[I/⏻]** button to turn the power on.
2. Press the **[CD]** button to select "CD".
3. Press two buttons of **[CD]** and **[POWER]** simultaneously.
4. The message "LOCK" is displayed on the fluorescent indicator tube, and the CD ship mode is set.

CD SHIP (LOCK) MODE & COLD RESET

This mode is used to perform CD chip (lock) mode and cold reset simultaneously.

Procedure:

1. Press the **[I/⏻]** button to turn the power on.
2. Press the **[CD]** button to select "CD".
3. Press three buttons of **[■]**, **[CD]** and **[DISPLAY]** simultaneously.
4. The message "COLD RESET" is displayed on the fluorescent indicator tube momentarily, then becomes standby states.

CD TRAY LOCK MODE

This mode is used to unable to take sample disc out of tray in the shop.

Procedure:

1. Press the **[I/⏻]** button to turn the power on.
2. Press the **[CD]** button to select "CD".
3. Load a disc and press two buttons of **[■]** and **[▲]** for 5 seconds.
4. The message "LOCKED" is displayed on the fluorescent indicator tube and the CD tray is locked. (Even if pressing the **[▲]** button, the message "LOCKED" is displayed on the fluorescent indicator tube and the CD tray is locked)
5. To release this mode, press two buttons of **[■]** and **[▲]** for 5 seconds.
6. The message "UNLOCKED" is displayed on the fluorescent indicator tube and the CD tray is unlocked.

AMP TEST MODE

This mode is used to display the parameter of amplifier IC and display the VACS status.

Procedure:

1. Press the **[I/⏻]** button to turn the power on.
2. Press three buttons of **[■]**, **[ILLUMINATION]** and **[PRESET EQ]** simultaneously.
3. When the AMP test mode is activated, the message "AMP TEST IN" is displayed on the fluorescent indicator tube momentarily, then amplifier adjustment mode is displayed on the fluorescent indicator tube.
4. Press the **[DISPLAY]** button to changed over between VACS status display mode and the amplifier IC parameter display mode.
5. In this mode, press the **[GROOVE]** button to changed over DBFB on/off, and "DBFB ON" or "DBFB OFF" is displayed on the fluorescent indicator tube.
6. In this mode, press the **[SURROUND]** button to changed over surround on/off, and "SURROUND ON" or "SURROUND OFF" is displayed on the fluorescent indicator tube.
7. In this mode, press the **[EQ BAND]** button to enter the equalizer adjustment mode.
In the equalizer adjustment mode, press the **[EQ BAND]** button to change over the adjustment band as LOW/MID/HIGH. And turn the **[◀◀ EQ ▶▶]** knob to adjust the equalizer level of each bands.
8. To release the amplifier IC parameter display mode or equalizer adjustment mode, press the **[I/⏻]** button to the power off.

AGING MODE

This mode can be used for operation check of CD section and tape deck section.

CD section and tape deck section work in parallel.

If an error occurred:

The aging operation stops only an error occurred sections and display then status.

If no error occurs:

The aging operation continues repeatedly.

Procedure:

1. Press the **[I/O]** button to turn the power on.
2. Press the **[CD]** button to select "CD".
3. Load three discs and insert two tape to the deck A and B.
4. Press three buttons of **[■]**, **[ILLUMINATION]** and **[DISC SKIP/EX-CHANGE]** simultaneously.
5. Aging operations of CD and tape are started at the same time.
6. To release this mode, press the **[I/O]** button to turn the power off or press the function buttons to change the function.

1. Display at the Aging Mode

Display operating state of CD section and tape deck section alternately.


If an error occurred, stop display which that section.

2. CD Section

The sequence during the aging mode is following as below.

Display at the aging mode is the same as the normal operation.

Aging mode sequence (CD section) :

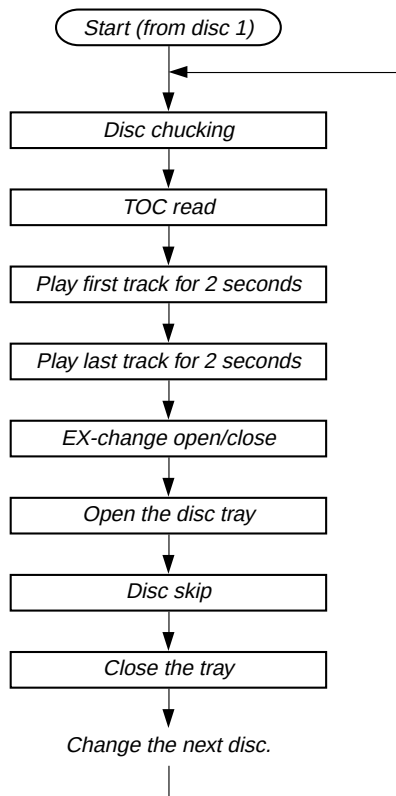


3. Tape Deck Section

The sequence during the aging mode is following as below.

If an error occurred, stop display that step.

Aging mode sequence (tape deck section) :

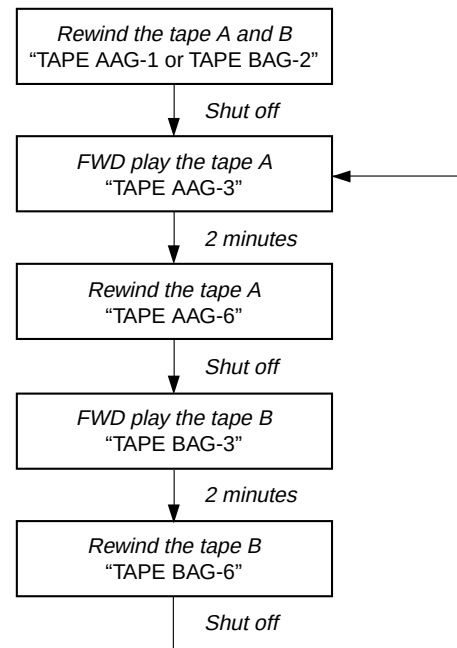

Note: "TAPE *AG-*" is display of each step.

PANEL TEST MODE

This mode is used to check the fluorescent indicator tube, LEDs and buttons.

Procedure:

1. Press the **[I/O]** button to turn the power on.
2. Press three buttons of **[■]**, **[ILLUMINATION]** and **[GROOVE]** simultaneously.
3. Fluorescent indicator tube and LEDs are all turned on.
4. Press two buttons of **[ALBUM -]** and **[ENTER]** simultaneously, mode is changed over.
5. In the key check mode, press each key, the defined key number of every each key list is displayed on the fluorescent indicator tube.
6. In the key count check mode, "KEYCNT 0" is displayed on the fluorescent indicator tube. Each time a key is pressed, "K" value increases. However, once a key is pressed, it is no longer taken into account.
7. In the headphone input check mode, connect the headphone, the message "H_P ON" is displayed on the fluorescent indicator tube, and disconnect the headphone, the message "H_P OFF" is displayed on the fluorescent indicator tube.
8. In the volume check mode, "VOLUME FLAT" is displayed on the fluorescent indicator tube. Turn the **[MASTER VOLUME]** knob clockwise, the message "VOLUME UP" is displayed on the fluorescent indicator tube momentarily and turn the **[MASTER VOLUME]** knob counterclockwise, the message "VOLUME DOWN" is displayed on the fluorescent indicator tube momentarily.

MC TEST MODE

This mode is used to check operations of microprocessor.

Procedure:

1. Press the **[I/⏻]** button to turn the power on.
2. Press three buttons of **[■]**, **[ILLUMINATION]** and **[DISC 3]** simultaneously.
3. When the MC test mode is activated, VACS level is displayed on the fluorescent indicator tube momentarily.
4. Turn the **[◀◀-EQ+>>]** knob clockwise, the message "ALL EQ MAX" is displayed on the fluorescent indicator tube momentarily and turn the **[◀◀-EQ+>>]** knob counter-clockwise, the message "ALL EQ MIN" is displayed on the fluorescent indicator tube momentarily.
5. Press the **[PRESET EQ]** button, the message "ALL EQ FLAT" is displayed on the fluorescent indicator tube momentarily.
6. Turn the **[MASTER VOLUME]** knob clockwise, the message "VOLUME MAX" is displayed on the fluorescent indicator tube momentarily and turn the **[MASTER VOLUME]** knob counterclockwise, the message "VOLUME MIN" is displayed on the fluorescent indicator tube momentarily.
7. Press the **[GROOVE]** button to changed over VACS on/off.
8. When the **[CD SYNC]** key is pressed with the test tape (AMS-100, AMS-110A) in the deck, number of space between tunes is counted, then if AMS-110A is set, "OK" is displayed on the fluorescent indicator tube and if AMS-100 is set, "NG" is displayed on the fluorescent indicator tube.
9. Press the **[I/⏻]** button to release from this mode, then cold reset is performed.

VERSION DISPLAY MODE

This mode is used to check the model, destination and software version.

Procedure:

1. Press the **[I/⏻]** button to turn the power on.
2. Press three buttons of **[■]**, **[ILLUMINATION]** and **[DISC 2]** simultaneously.
3. When this mode is activated, model and destination is displayed on the fluorescent indicator tube.
4. Press the **[DISPLAY]** button to changed over between software version and year, month, day of the software creation display mode and model and destination display mode.
5. To release this mode, press three buttons of **[■]**, **[ILLUMINATION]** and **[DISC 2]** simultaneously.

CD ERROR CODE DISPLAY MODE

This mode can be used for error code display of CD section.

Procedure:

1. Press the **[I/⏻]** button to turn the power on.
2. Press the **[CD]** key to select "CD".
3. Press three buttons of **[■]**, **[CD]** and **[DISC 1]** simultaneously.
4. When this mode is activated, mechanism deck error code is displayed on the fluorescent indicator tube.
5. Press the **[GROOVE]** button to changed over between optical pick-up error code display mode and mechanism deck error code mode.
6. Turn the **[◀◀-EQ+>>]** knob to change over display of error history.
7. To release this mode, press the **[I/⏻]** button to turn the power off.

1. Mechanism Deck Error Code Mode

When this mode is entered, mechanism deck error code is displayed with the 10-character format on the fluorescent indicator tube.

The first digit from the left indicates:

The first digit from the left indicates which mode the error history is. In the mechanism deck error code mode, "M" is displayed on the fluorescent indicator tube.

The second digit from the left indicates:

(Error history number display)

The second digit from the left indicates which order the error history is. "1" indicates the latest error history, and each time the number increases by one, the error history goes back to one-previous error.

The third and 4th digit from the left indicates:

(Error status display)

The third and 4th digit from the left indicates which error status is indicated.

Display	Status
0 0	No error
0 8	Table operation time-out (Table does not move to the target position within the specified time)
1 6	In the chucking down operation, the operation was retried by the maximum number of times but the operation could not be completed
1 7	In the chucking up and down operation, the reverse recovery processing was attempted but it could not be recovered
1 8	In the chucking up operation, the operation was retried by the maximum number of times but the operation could not be completed
2 0	Loading operation time-out (Table does not move to the target position within the specified time)
2 2	As the chuck was in the ex-open status at the initialization, the closing was attempted but could not be completed

The 5th and 6th digit from the left indicates:

(Present status display)

The 5th and 6th digit from the left indicates which operating status when an error occurred is indicated.

Display	Status
0 1	Open completion status
0 2	From open status, the movement to chucking down position is under way
0 3	From chucking down position, the open operation is under way
0 4	Chucking down completion status
1 0	The chucking down operation is under way
1 1	The chucking up operation is under way
1 2	Close completion status
1 3	From close status, the ex-open operation is under way
1 4	From ex-open status, the close operation is under way
1 8	Ex-pen completion status

The 7th and 8th digit from the left indicates:**(Motor status display)**

The 7th and 8th digit from the left indicates which motor output status when an error occurred is indicated.

Display	Status
× 0	No table motor output
× 1	Table motor forward output
× 2	Table motor backward output
× 3	Table motor break output
0 ×	No loading motor output
1 ×	Loading motor forward output
2 ×	Loading motor backward output
3 ×	Loading motor break output

The 9th and 10 th digit from the left indicates:**(Tray status display)**

The 9th and 10th digit from the left indicates which target processing when an error occurred is indicated.

Display	Status
0 1	Open operation
1 2	Close operation
1 8	Ex-open operation

2. Optical Pick-up Error Code Mode

When this mode is entered, optical pick-up error code is displayed with the 8-character format on the fluorescent indicator tube.

The first digit from the left indicates:

The first digit from the left indicates which mode the error history is. In the optical pick-up error code mode, “D” is displayed on the fluorescent indicator tube.

The second digit from the left indicates:**(Error history No. display)**

The second digit from the left indicates which order the error history is. “1” indicates the latest error history, and each time the number increases by one, the error history goes back to one-previous error.

The third and 4th digit from the left indicates:**(Error status display)**

The third and 4th digit from the left indicates which error status is indicated.

Display	Status
0 1	Not focused (TOC read without a disc)
0 2	GFS NG (TOC read with a disc chucked)
0 3	Start operation time-over
0 4	Defocused continuously (Defocused during TOC reading)
0 5	Q code not entered for specified time
0 6	Tracking not turned ON
0 7	Blank disc (Blank disc TOC read)

The 5th and 6th digit from the left indicates:**(Error step display)**

The 5th and 6th digit from the left indicates which processing when a trouble occurred

Display	Contents
0 1	Power OFF in progress
0 2	Initialize in progress
0 3	Oscillation stopping
0 4	From oscillation stop, oscillation starting
0 5	Stopping
0 6	Stop operation is under way
0 7	Start operation in progress
0 8	TOC read in progress
0 9	Search operation is under way
0 A	Playback operation is under way
0 B	Pause operation is under way
0 C	Playback manual search operation is under way
0 D	Pause manual search operation is under way
0 E	—

The 7th and 8th digit from the left indicates:

The 7th and 8th digit from the left indicates which operation in progress when a trouble occurred. (Step of each processing of the 5th and 6th digits is indicated)

5 REPEAT LIMIT CANCEL MODE

Number of repeat for CD playback is 5 times when the repeat mode is “REPEAT”. This mode is used to enables CD to repeat playback for limitless times.

Procedure:

1. Press the  button to turn the power on.
2. Press the  button to select “CD”.
3. Press three buttons of ,  and  simultaneously.
4. The message “LIMIT OFF” is displayed on the fluorescent indicator tube momentarily, CD repeat 5 limit is cancelled.


SECTION 5 ELECTRICAL ADJUSTMENTS

CD SECTION

Note:


1. CD Block is basically designed to operate without adjustment. Therefore, check each item in order given.
2. Use YEDS-18 (3-702-101-01) unless otherwise indicated.
3. Use an oscilloscope with more than 10M Ω impedance.
4. Clean the object lens by an applicator with neutral detergent when the signal level is low than specified value with the following checks.
 - Abbreviation
MX: Mexican model

RF signal waveform

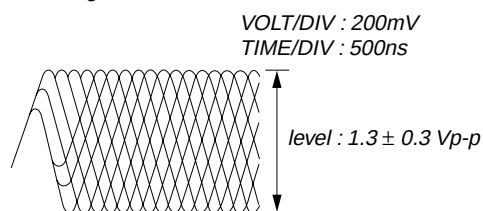

S-CURVE CHECK


CD board (except MX) oscilloscope
BD board (MX)



Procedure:

1. Connect an oscilloscope to TP (FE) and TP (VC) on the CD board (except MX) or BD board (MX).
2. Press the button to turn the power on.
3. Load the disc (YEDS-18) and actuate the focus search. (In consequence of open and close the disc tray, actuate the focus search)
4. Confirm that the oscilloscope waveform (S-curve) is symmetrical between A and B. And confirm peak to peak level within 3 ± 0.5 Vp-p.

S-curve waveform

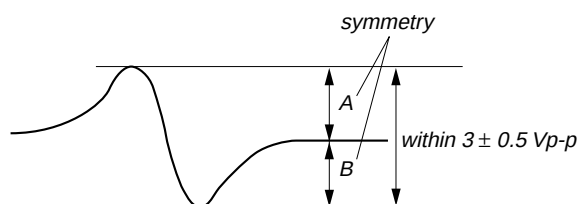


- Note:**
- Try to measure several times to make sure than the ratio of A : B or B : A is more than 10 : 7.
 - Take sweep time as long as possible and light up the brightness to obtain best waveform.

Connecting Location: CD board (except MX)
BD board (MX)

RFAC LEVEL CHECK

CD board (except MX) oscilloscope
BD board (MX)




Procedure:

1. Connect an oscilloscope to TP (RFACO) and TP (VC) on the CD board (except MX) or BD board (MX).
2. Press the button to turn the power on.
3. Load the disc (YEDS-18) and playback.
4. Confirm that oscilloscope waveform is clear and check if RFAC signal level is correct or not.

Note: Clear RFAC signal waveform means that the shape “ $\diamond$ ” can be clearly distinguished at the center of the waveform.


Connecting Location: CD board (except MX)
BD board (MX)

- CD BOARD (Conductor Side) (except MX) -
- BD BOARD (Conductor Side) (MX) -

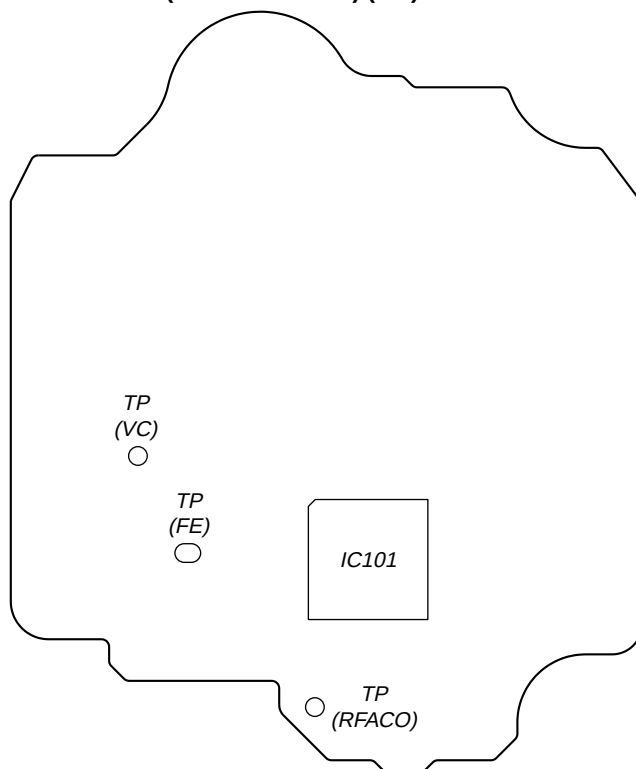


SECTION 6 DIAGRAMS


6-1. BLOCK DIAGRAM – CD SERVO Section –

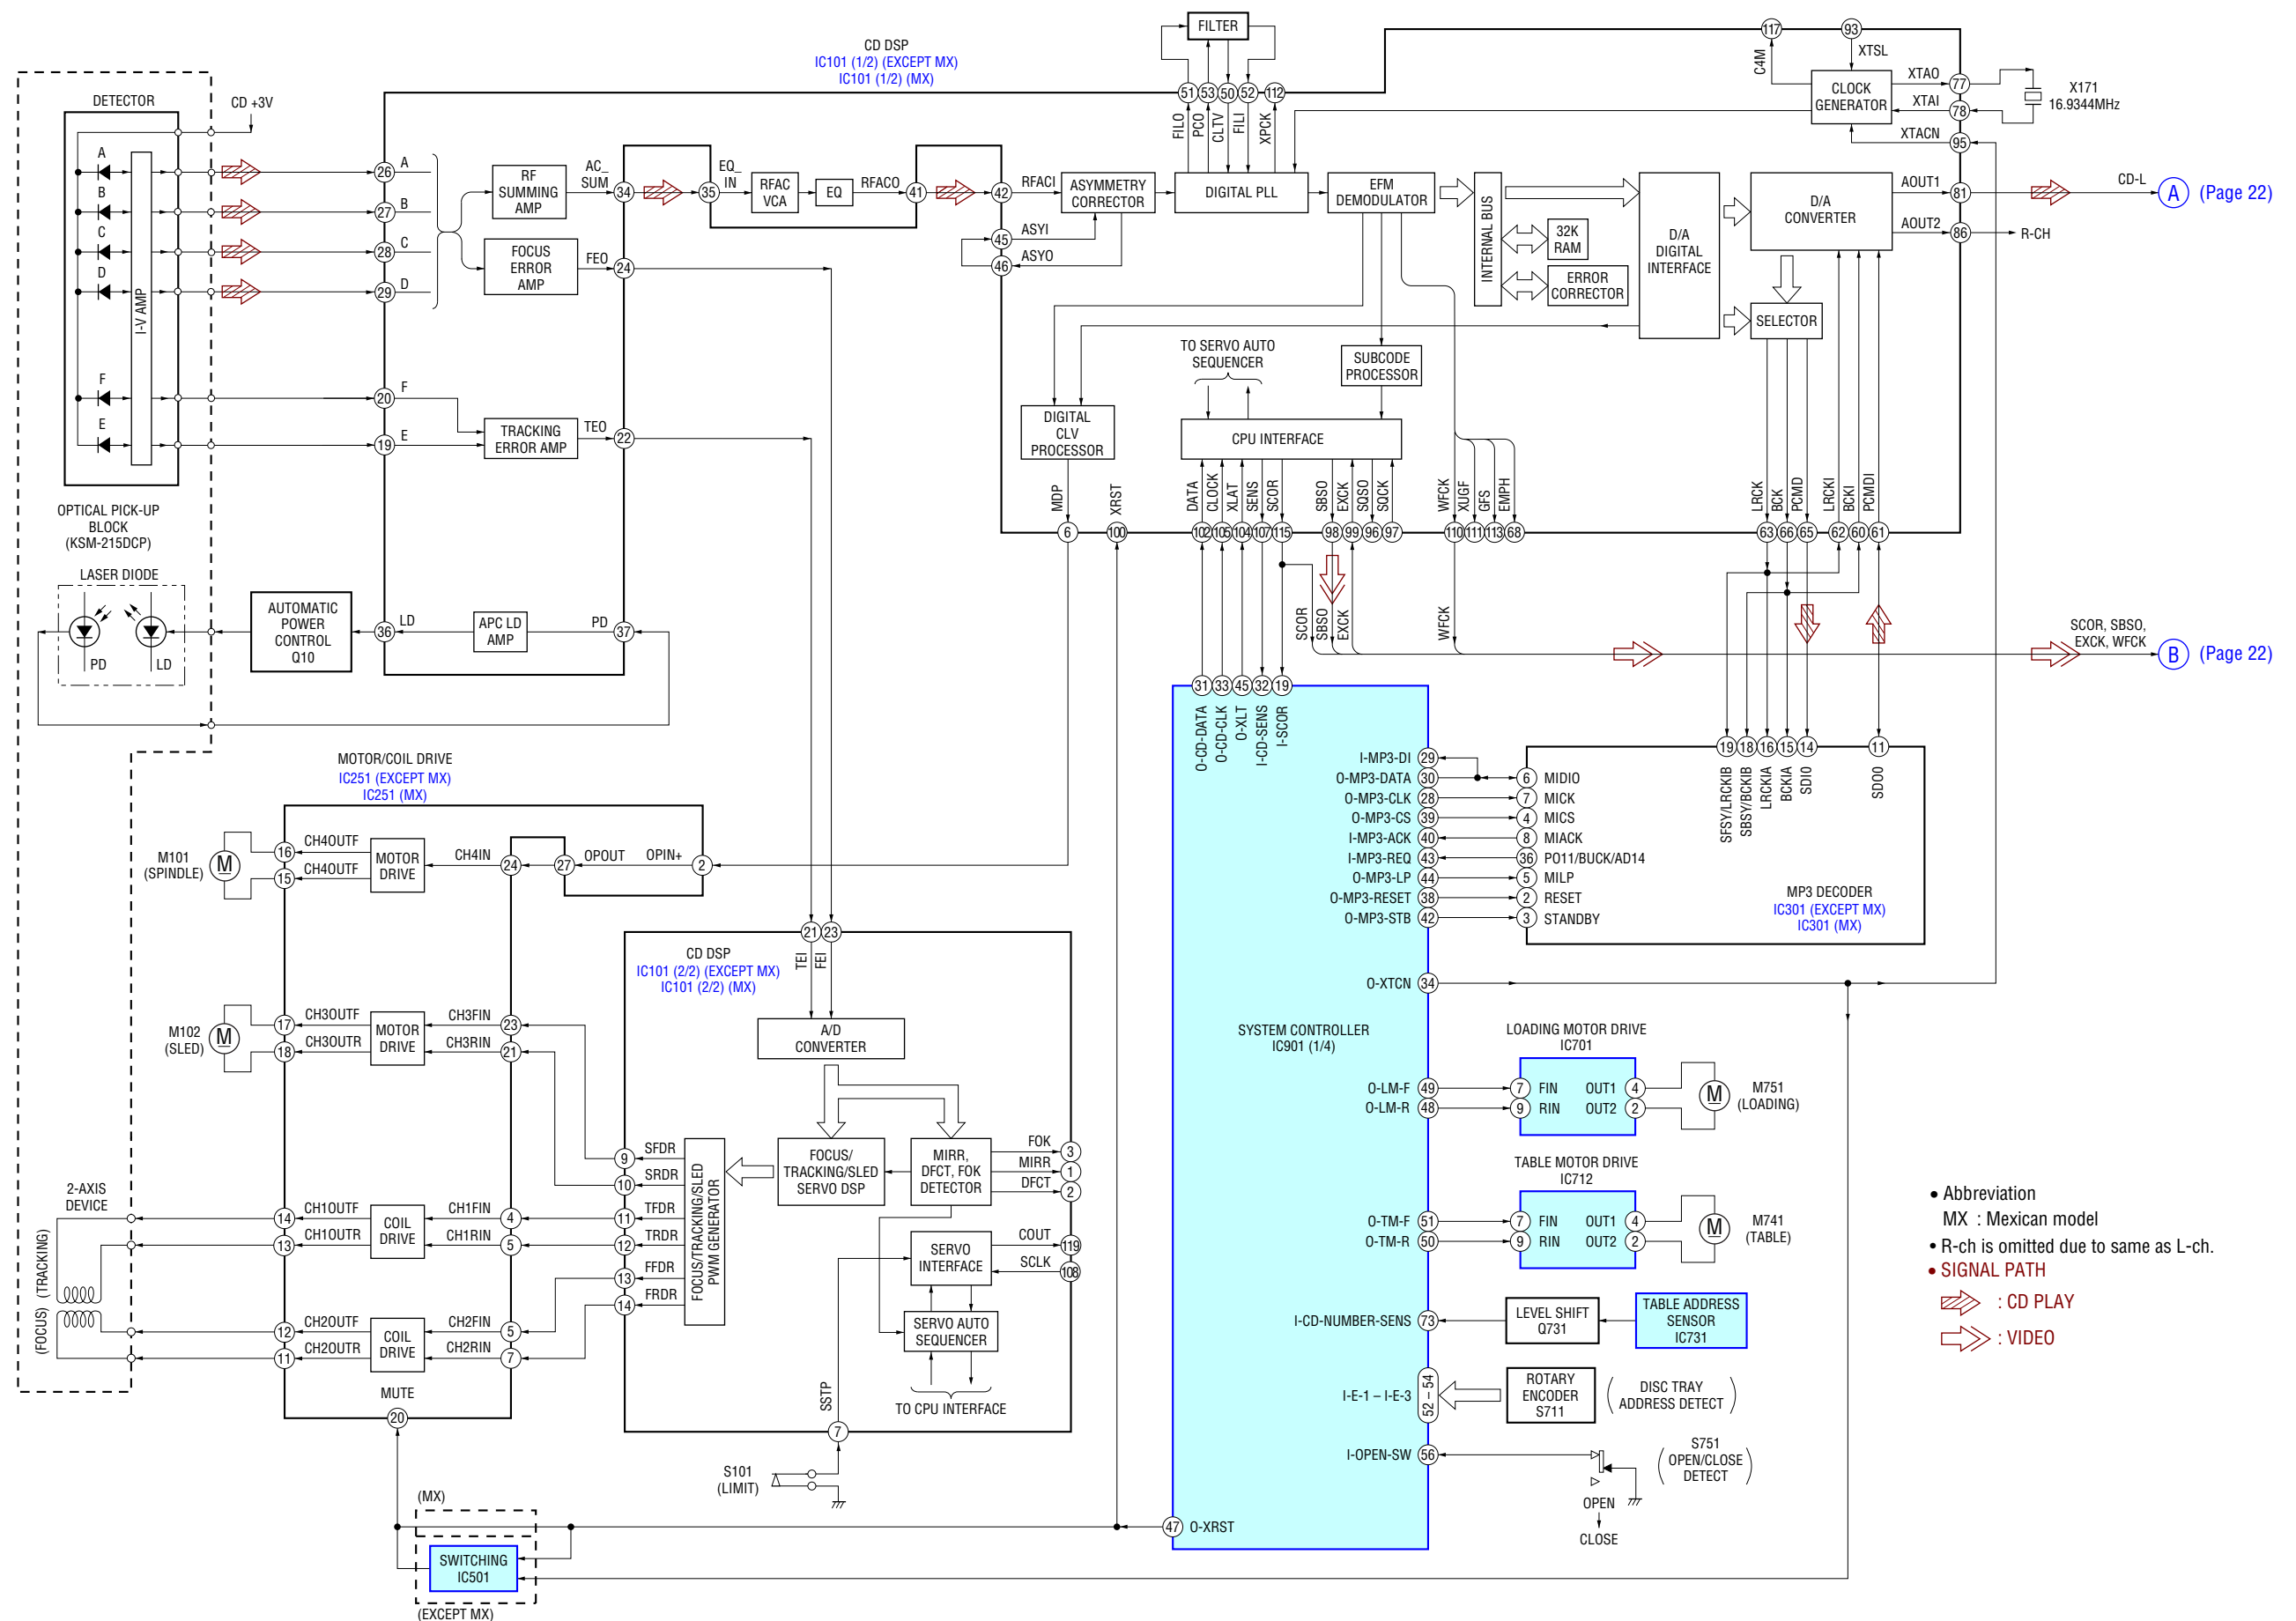


6-2. BLOCK DIAGRAM – AUDIO/VIDEO Section –

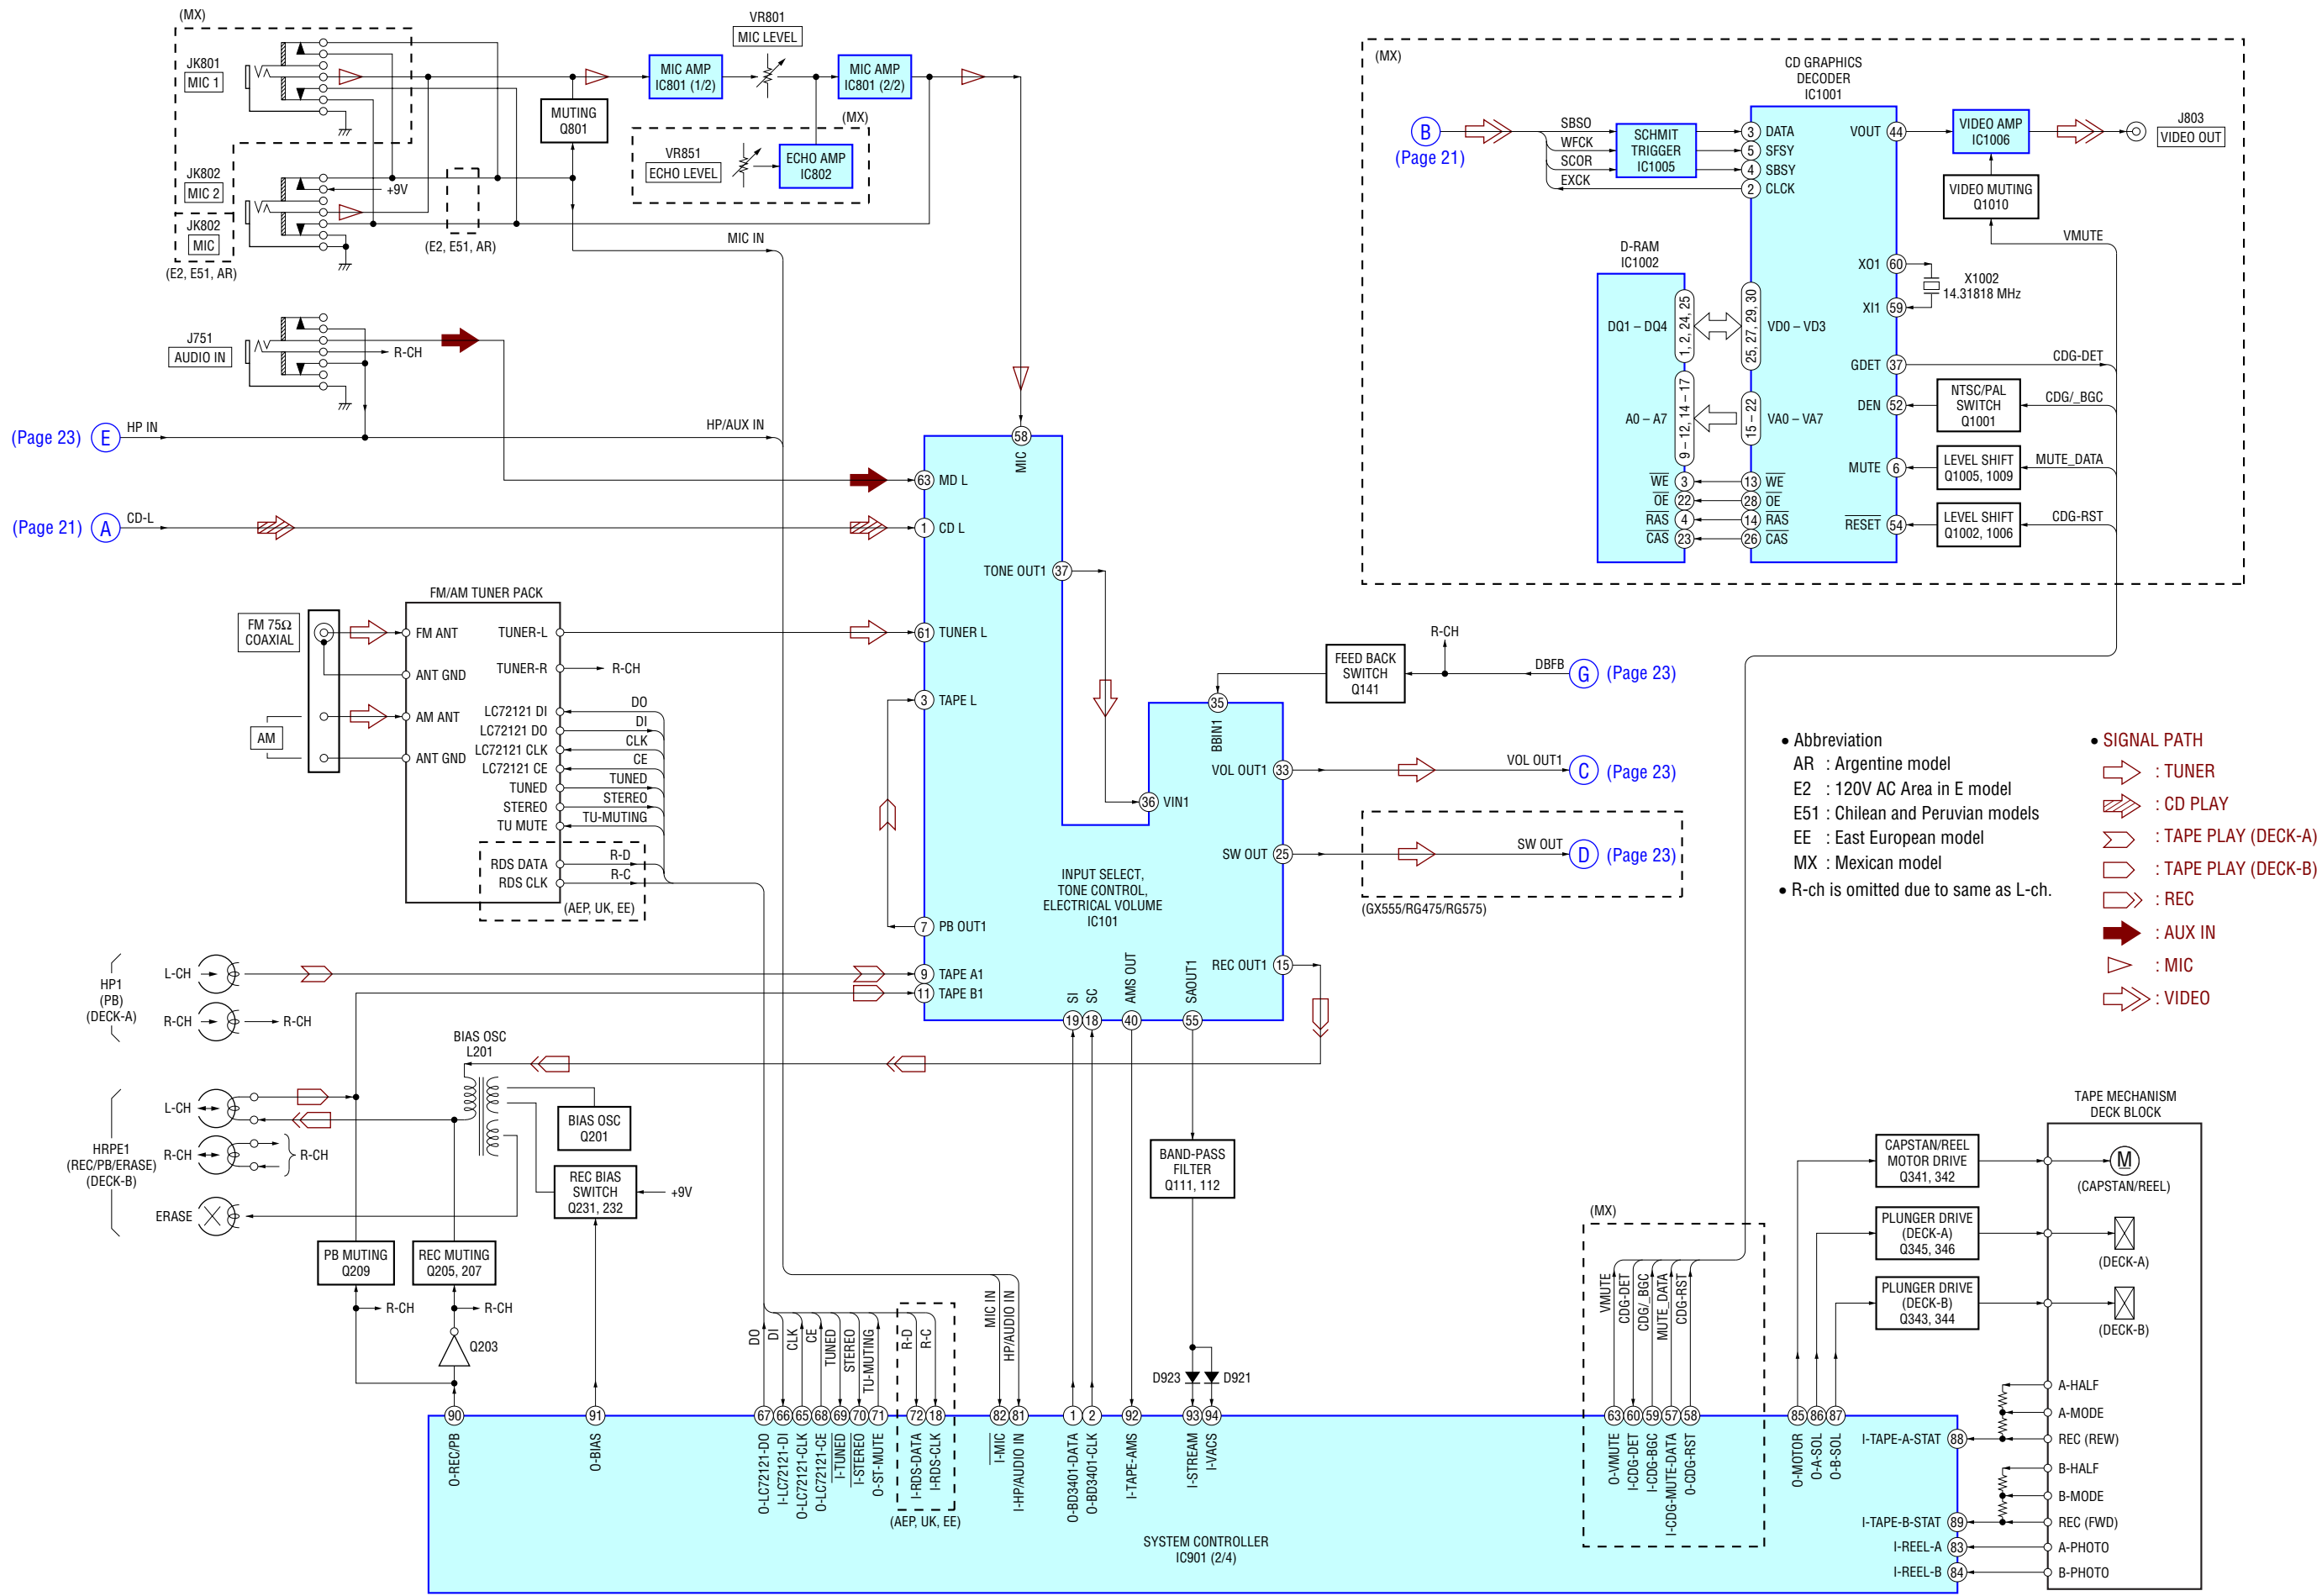

6-3. BLOCK DIAGRAM – AMP Section –

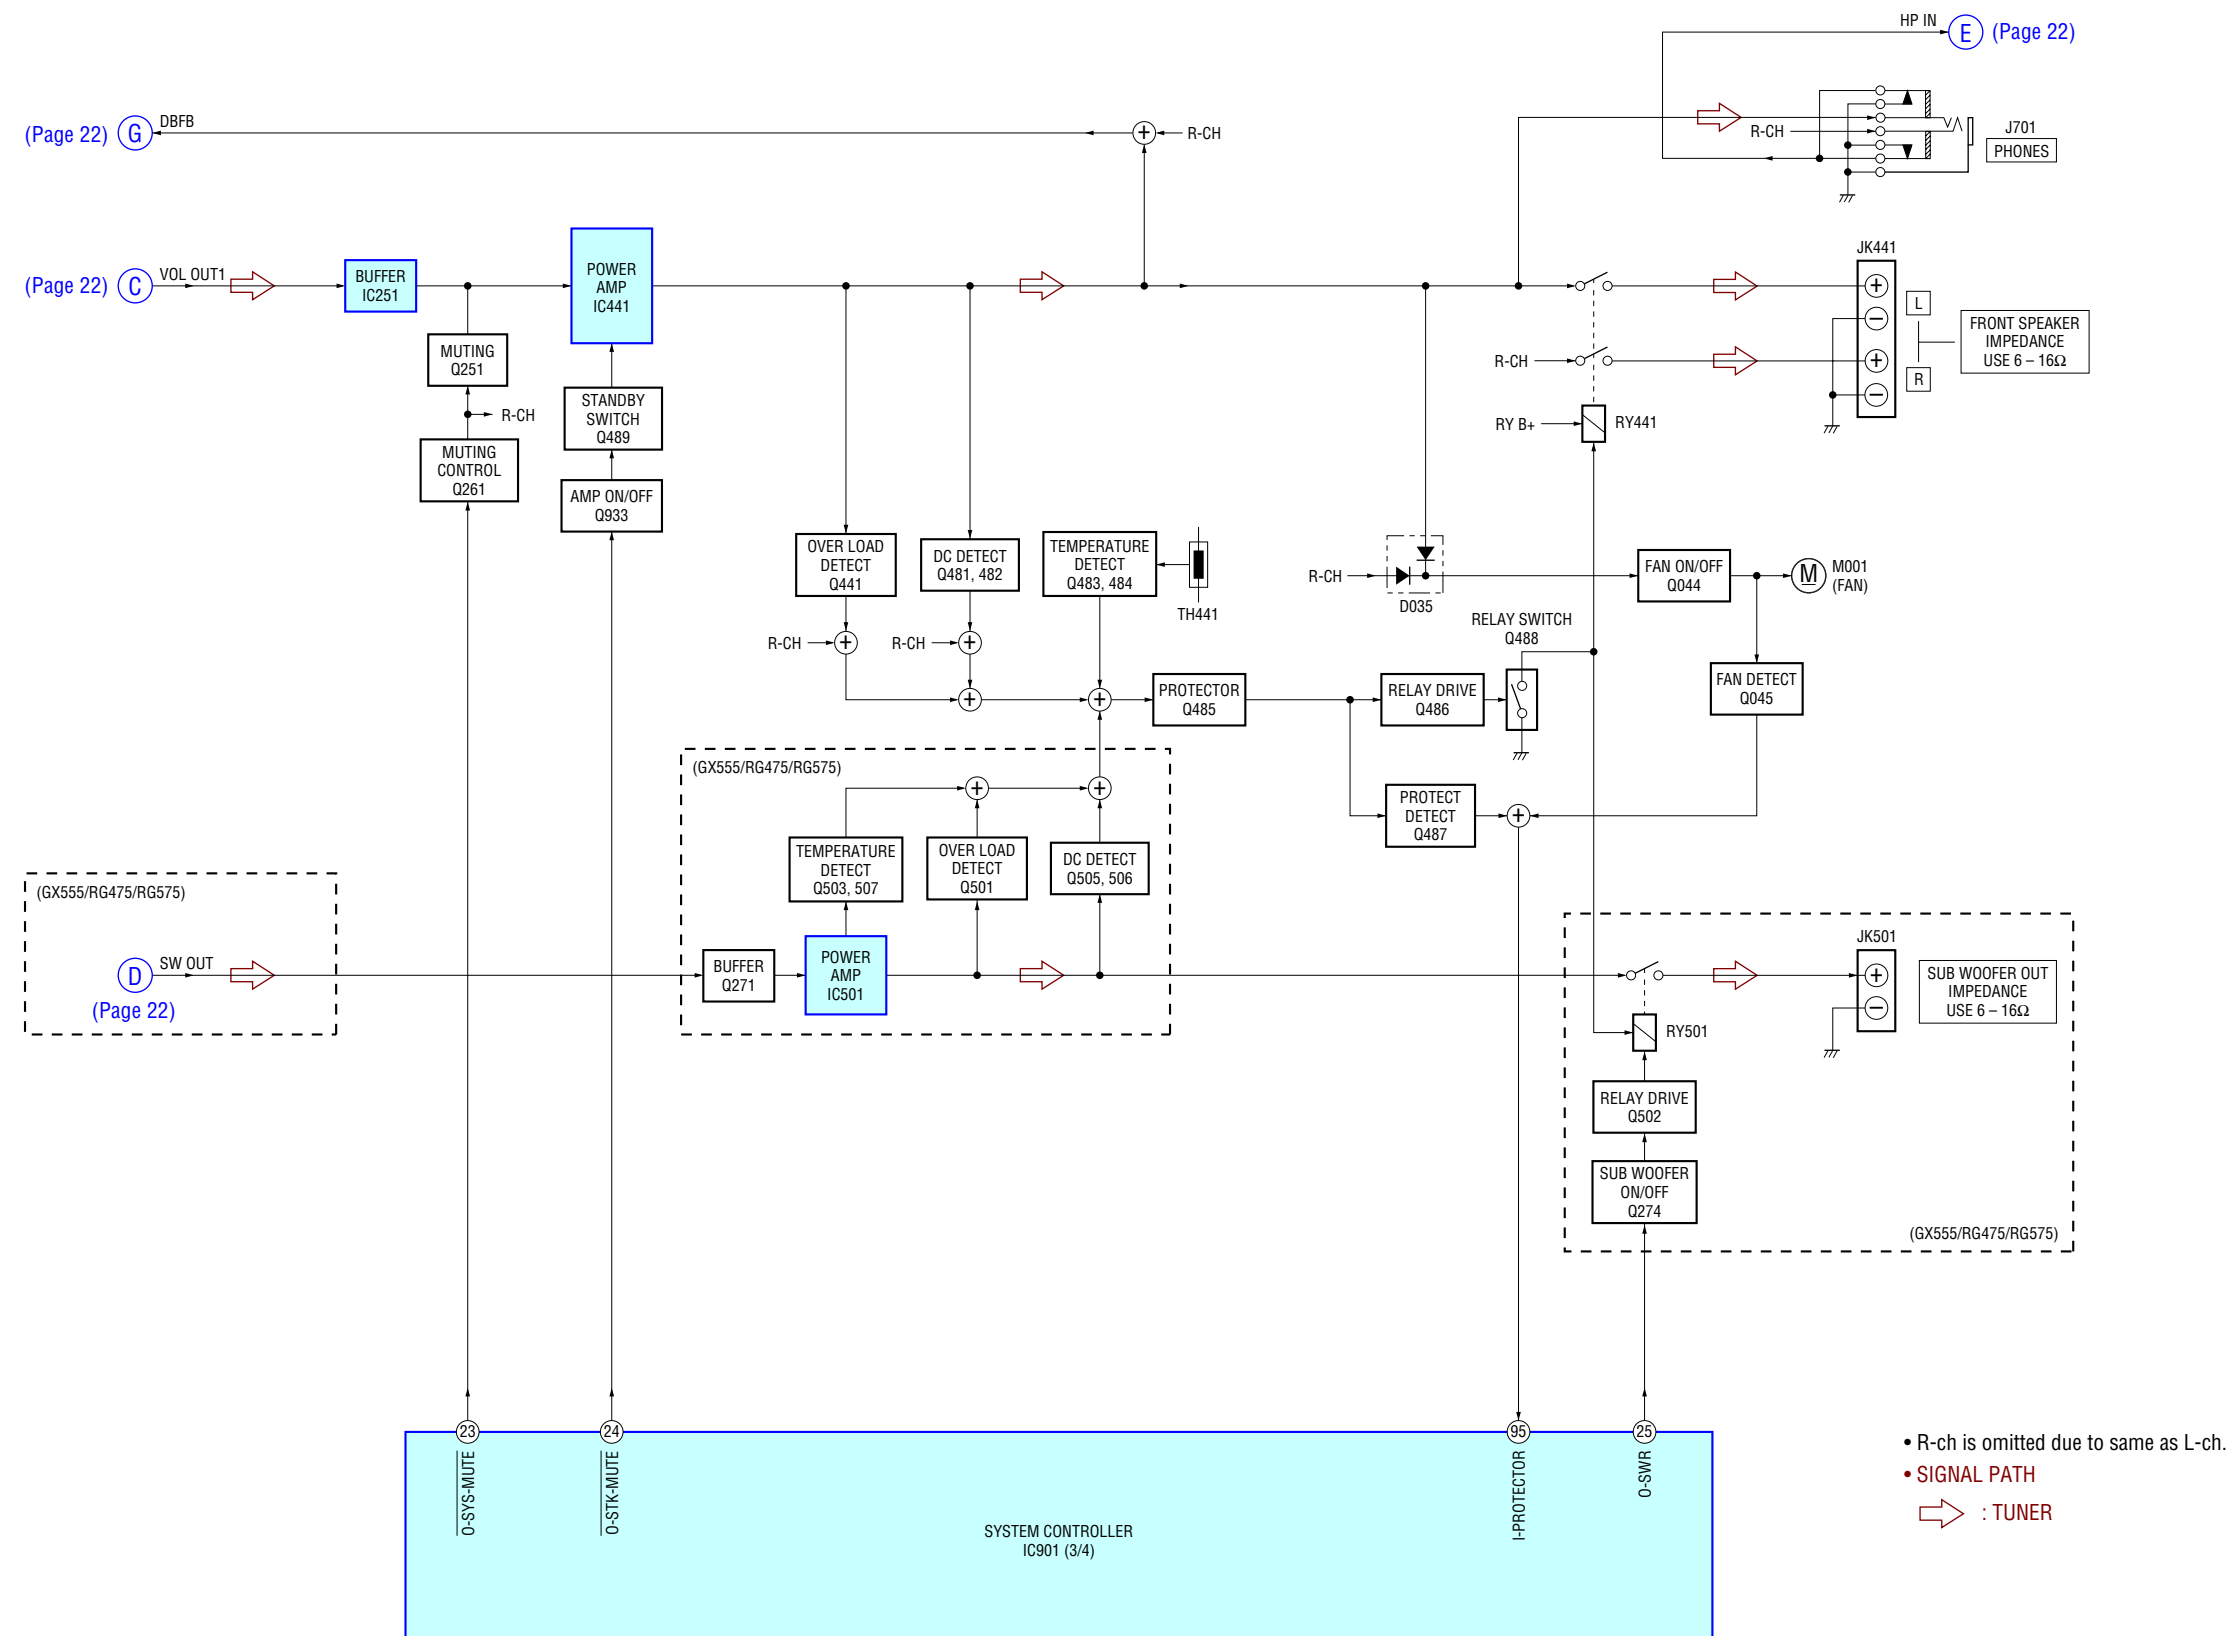

6-4. BLOCK DIAGRAM – PANEL, POWER SUPPLY Section –

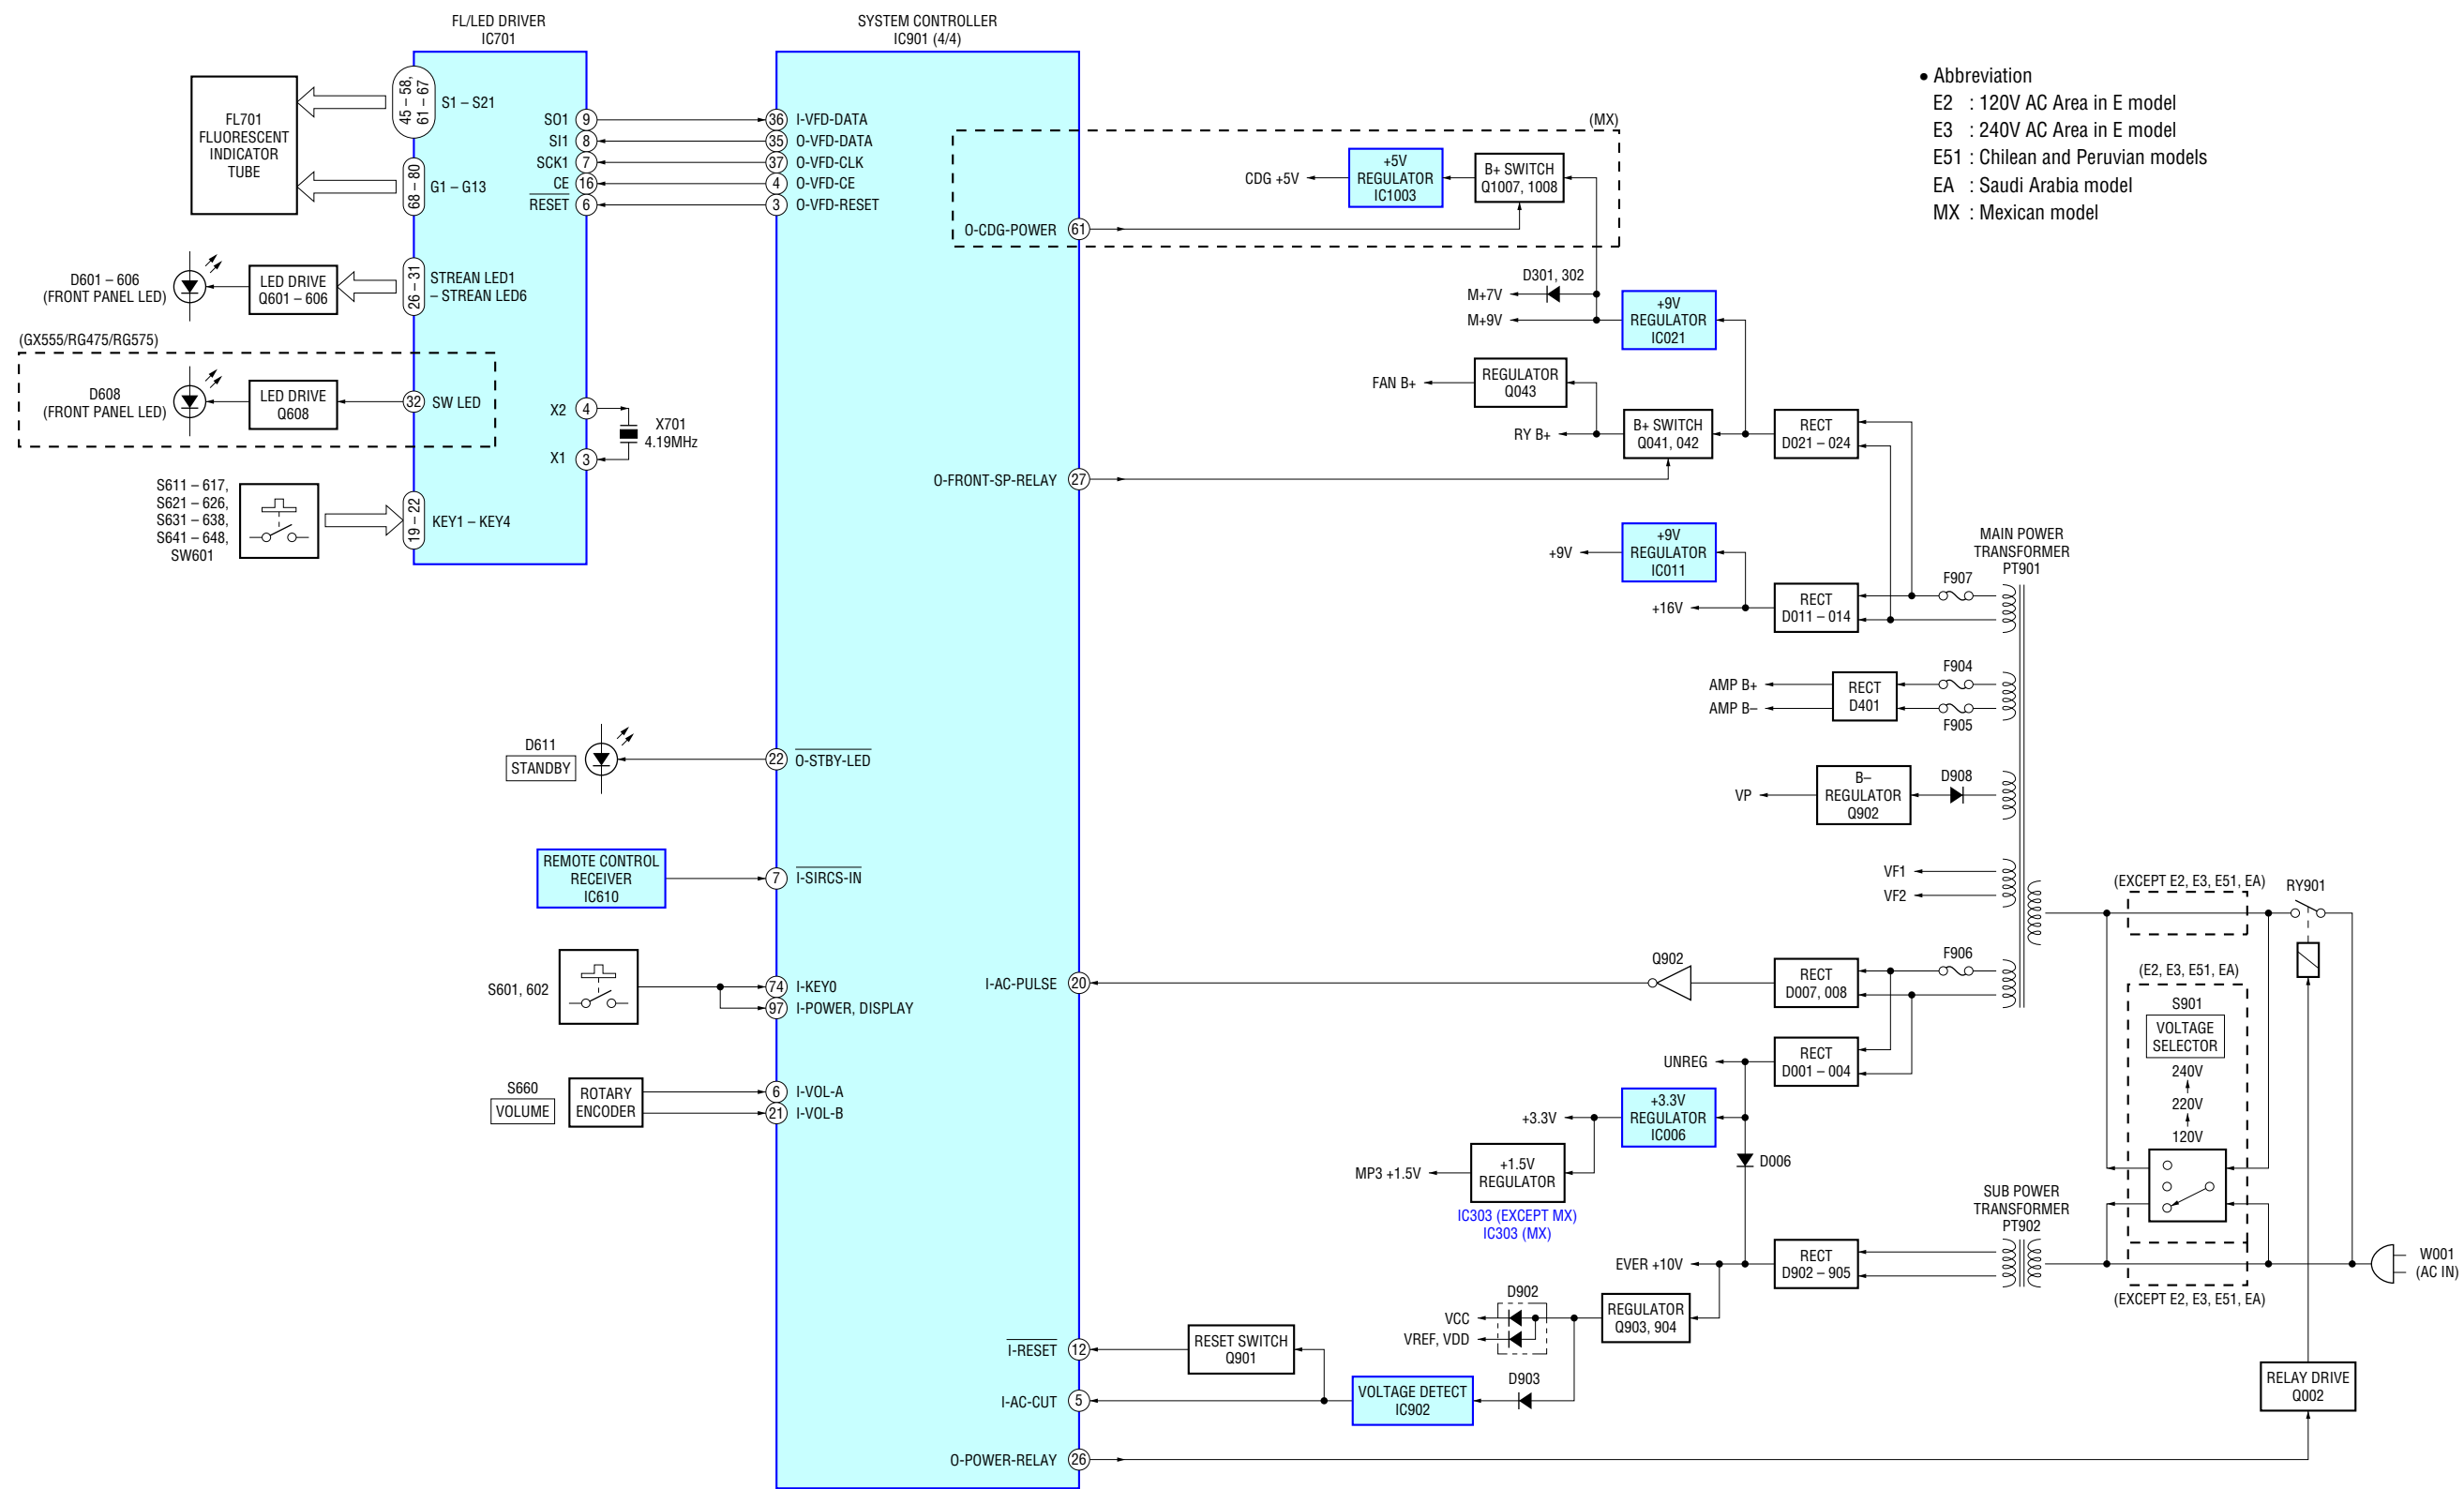

• Note For Printed Wiring Boards and Schematic Diagrams



Note on Printed Wiring Board:

- — : parts extracted from the component side.
 - : parts extracted from the conductor side.
 - △ : internal component.
 - : Pattern from the side which enables seeing.
- (The other layers' patterns are not indicated.)

Caution:
Pattern face side: Parts on the pattern face side seen from the pattern face are indicated.
(Conductor Side)
Parts face side: Parts on the parts face side seen from the parts face are indicated.
(Component Side)

Caution:
Pattern face side: Parts on the pattern face side seen from the pattern face are indicated.
(Side B)
Parts face side: Parts on the parts face side seen from the parts face are indicated.
(Side A)

• Indication of transistor

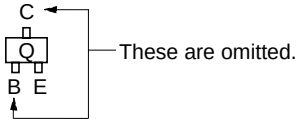

Note on Schematic Diagram:



- All capacitors are in μF unless otherwise noted. (p: pF) 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $\frac{1}{4}\text{W}$ or less unless otherwise specified.
- △ : internal component.
- ⬮ : nonflammable resistor.
- ⬮ : fusible resistor.
- : panel designation.

Note:
The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.


Note:
Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

- : B+ Line.
- : B- Line.
- Voltages and waveforms are dc with respect to ground under no-signal conditions.
 - CD/BD Section —
no mark : CD PLAY
 - CD-G Section —
no mark : CD-G PLAY
 - Other Sections —
no mark : FM
 - () : CD PLAY
 - << >> : TAPE PLAY
 - [] : TAPE REC
 - * : Impossible to measure
- Voltages are taken with a VOM (Input impedance 10 M Ω). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Signal path.
 - ➡ : TUNER (FM/AM)
 - ➡ : TAPE PLAY (DECK A)
 - ➡ : TAPE PLAY (DECK B)
 - ➡ : REC
 - ➡ : CD PLAY
 - ➡ : AUX IN
 - ➡ : MIC
 - ➡ : VIDEO
- Abbreviation
 - AR : Argentine model
 - AUS : Australian model
 - CND : Canadian model
 - E2 : 120 V AC Area in E model
 - E3 : 240 V AC Area in E model
 - E51 : Chilean and Peruvian models
 - EA : Saudi Arabia model
 - EE : East European model
 - MX : Mexican model
 - RU : Russian model
 - SP : Singapore model


• Circuit Boards Location

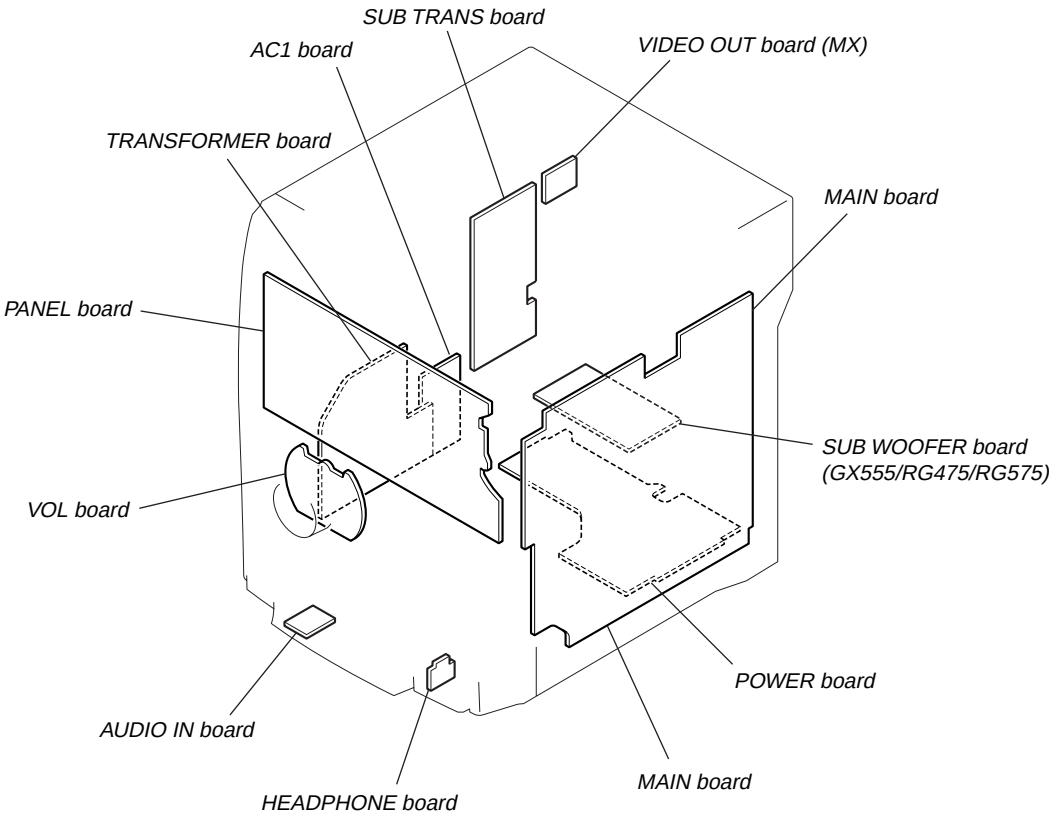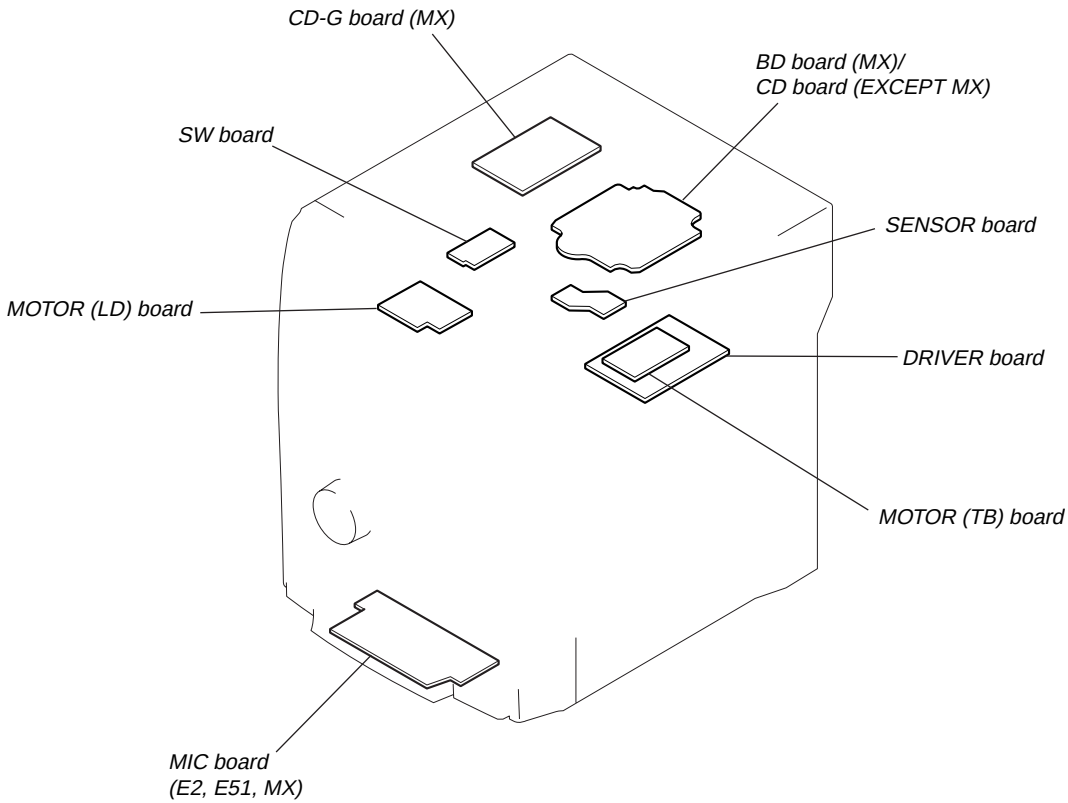


6-5. PRINTED WIRING BOARD – CD Board – (Except MX model) • See page 25 for Circuit Boards Location. : Uses unleaded solder.

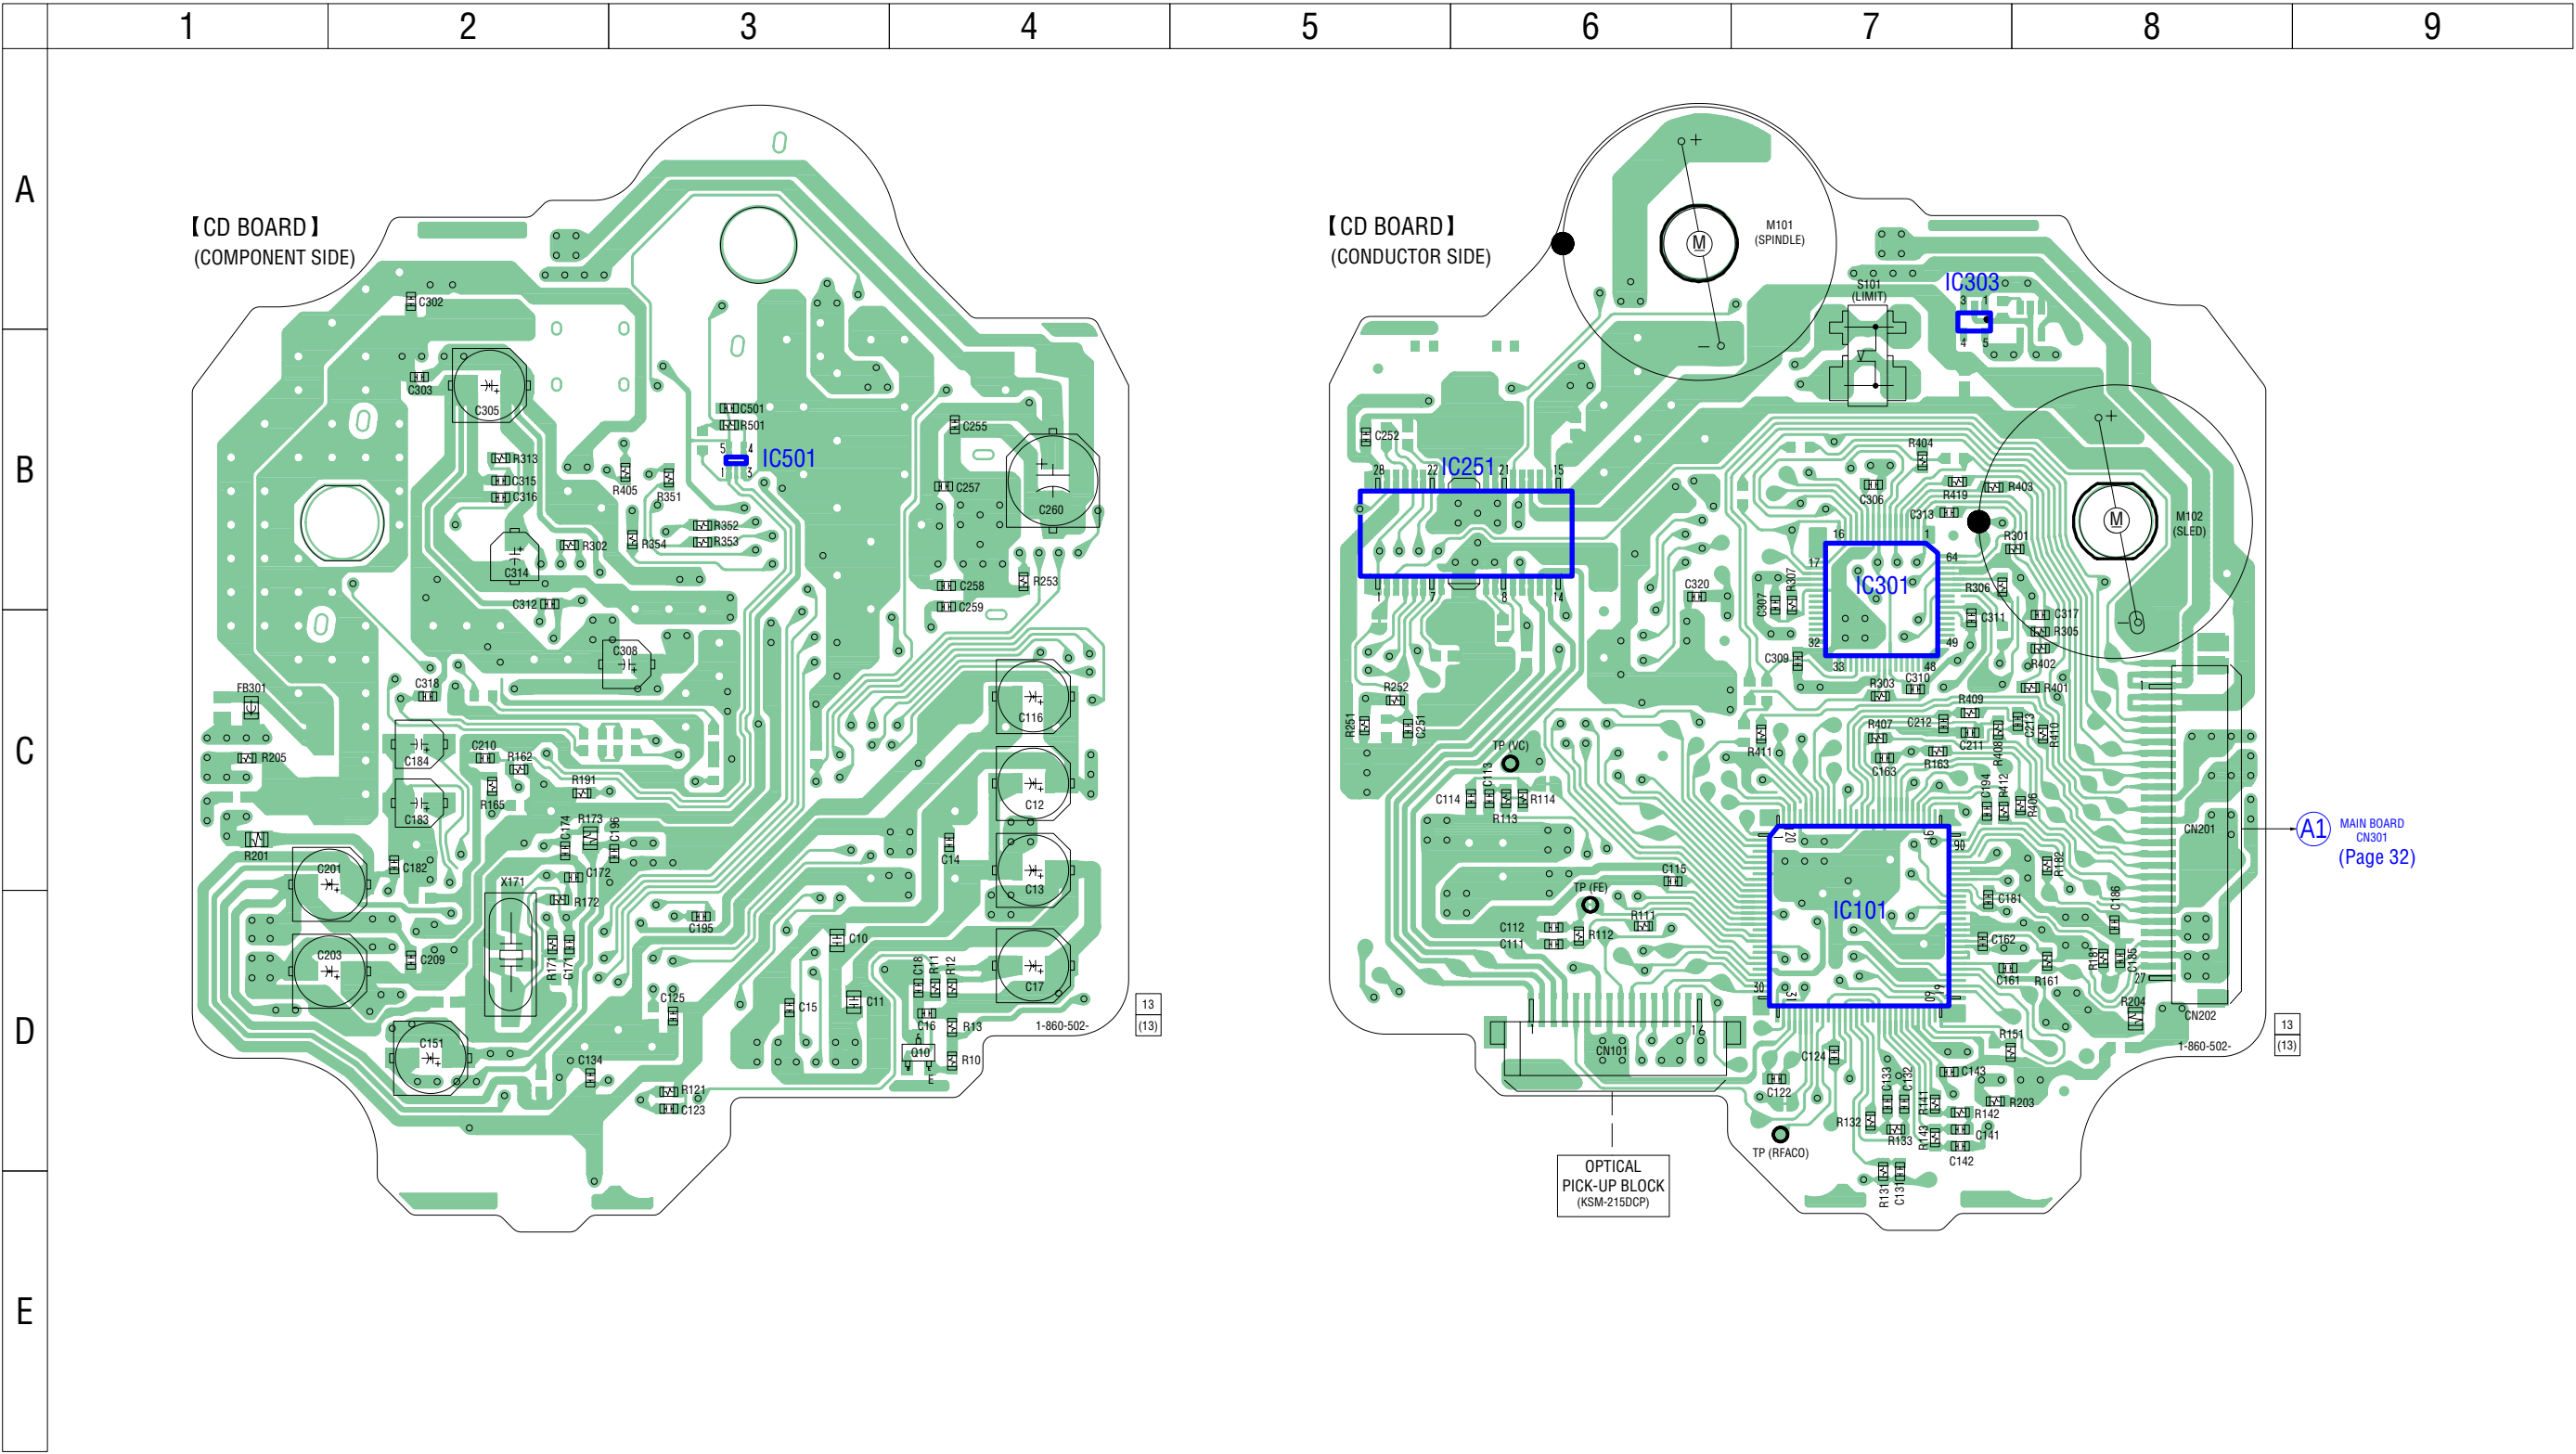


6-6. SCHEMATIC DIAGRAM – CD Board – (Except MX model) • See page 50 for Waveforms. • See page 50 for IC Block Diagrams.

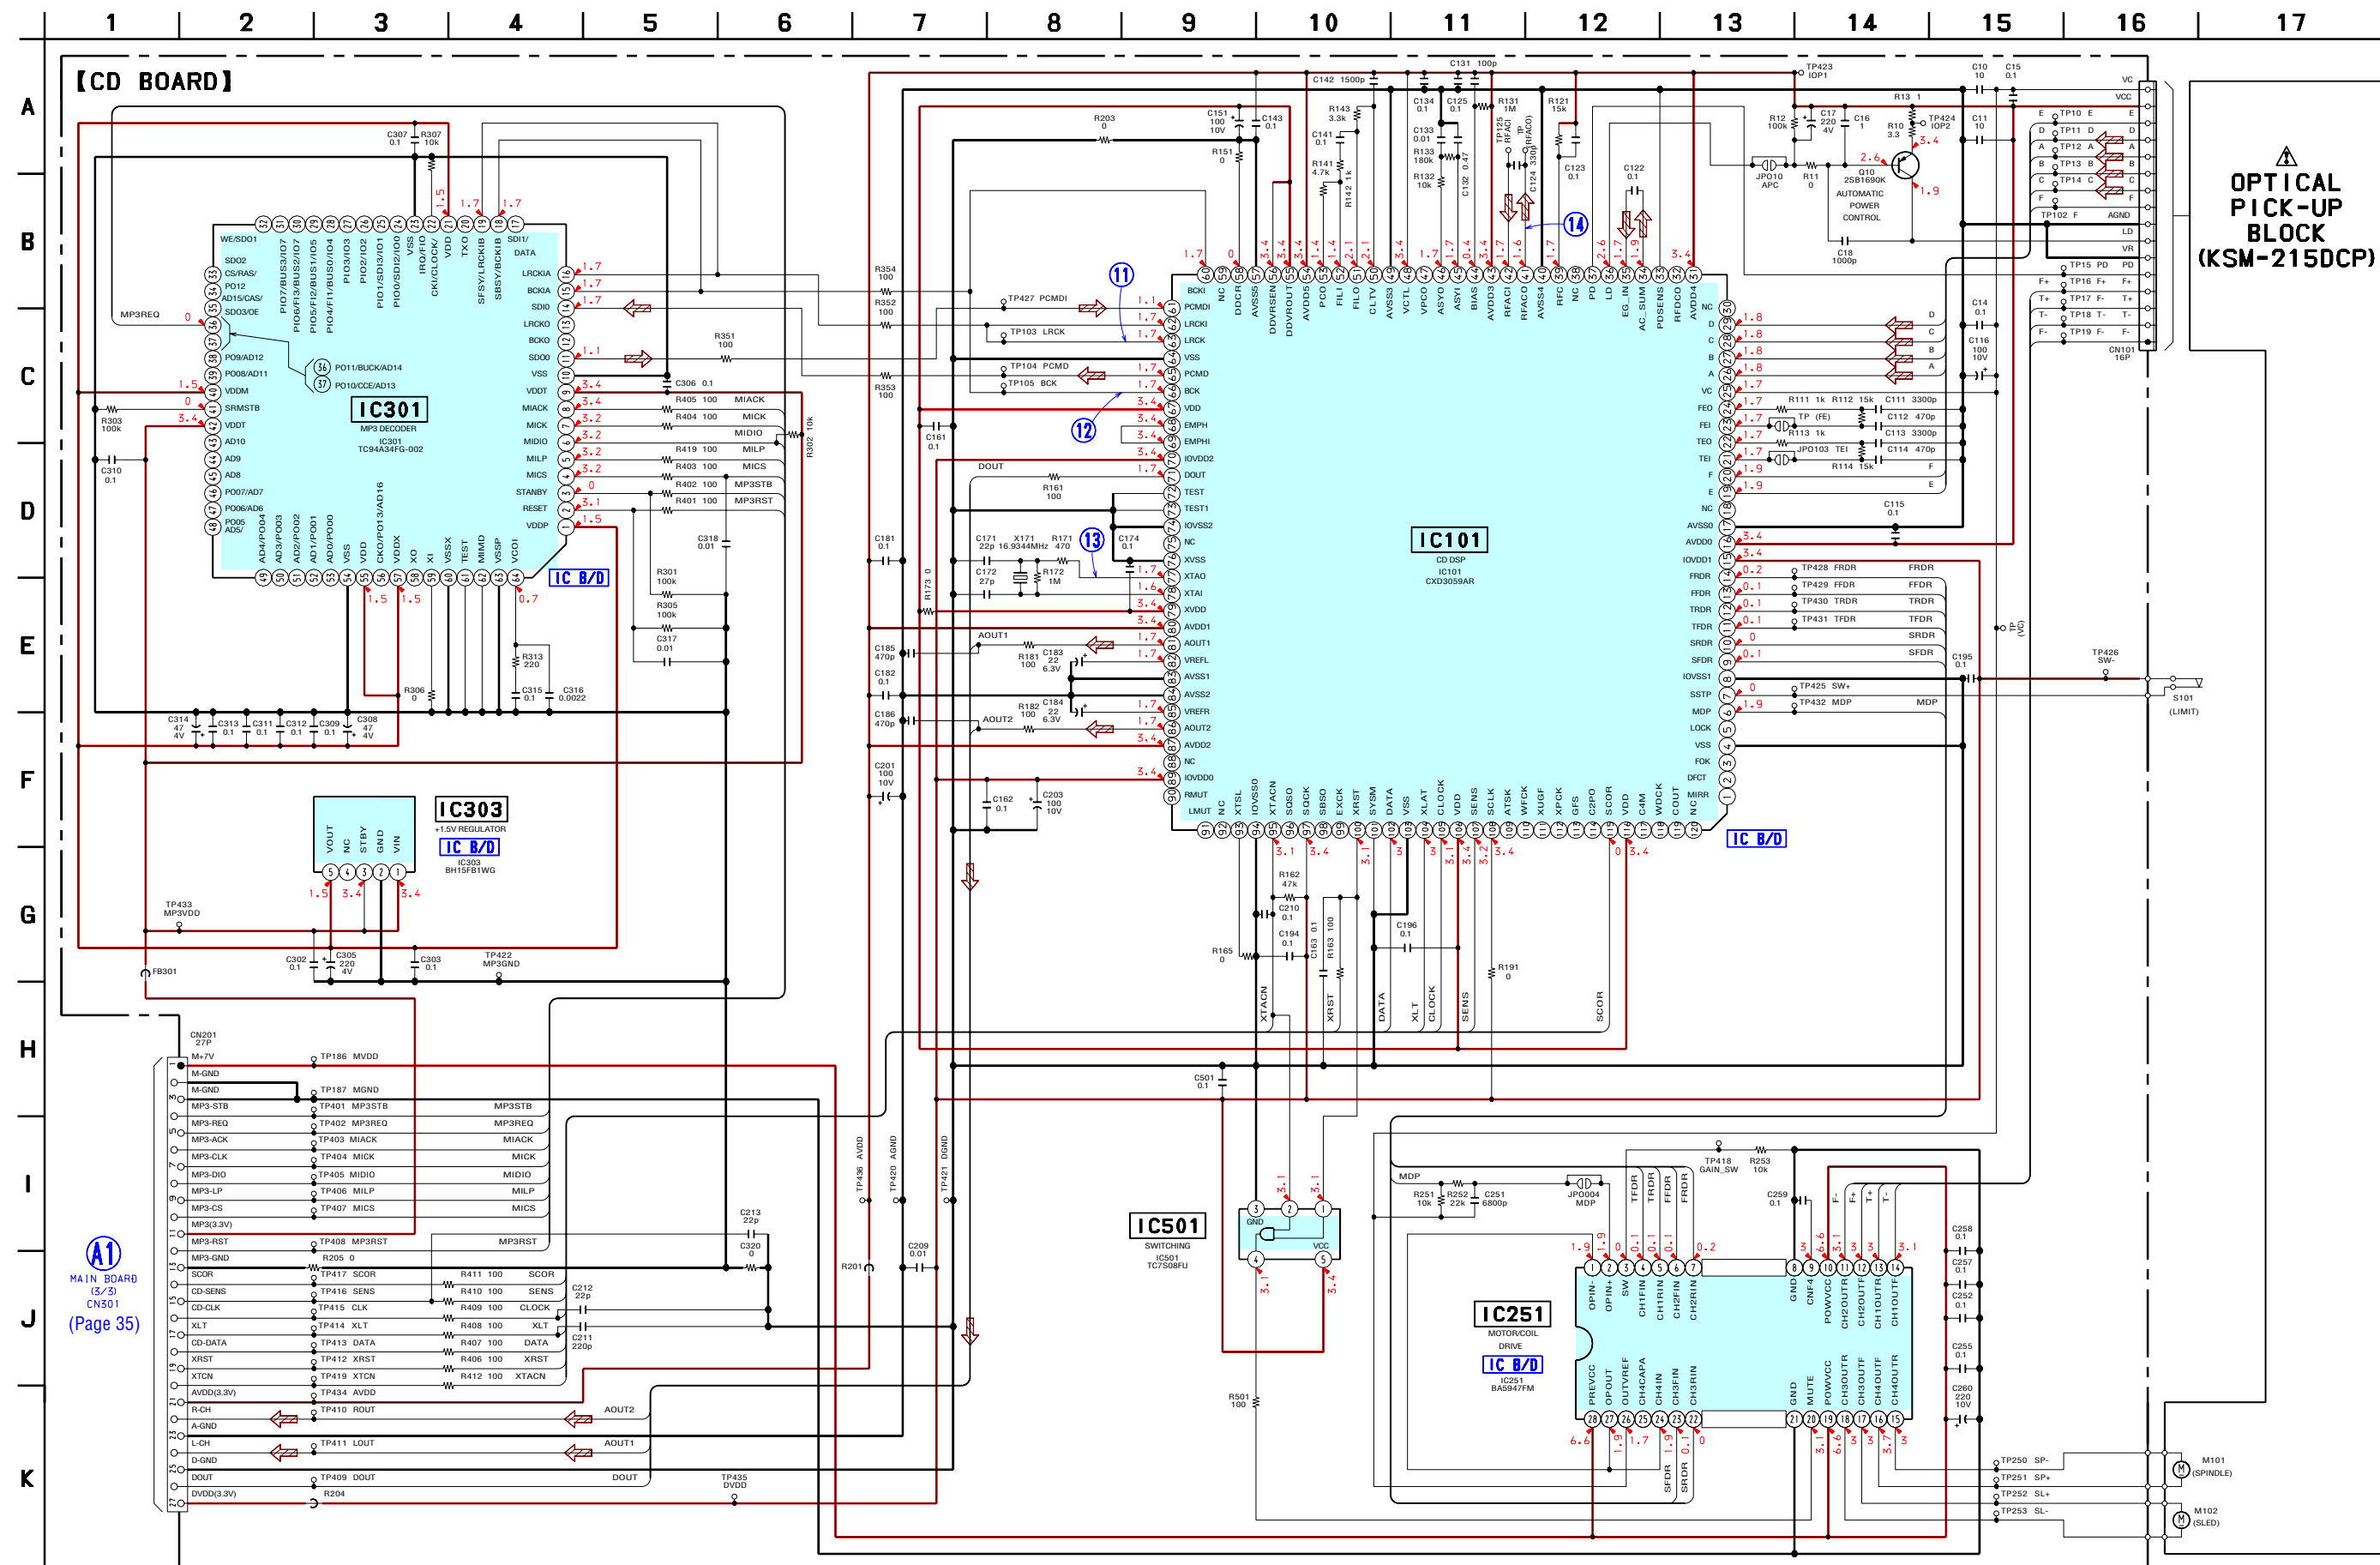

6-7. PRINTED WIRING BOARD – BD Board – (MX model only) • See page 25 for Circuit Boards Location. : Uses unleaded solder.

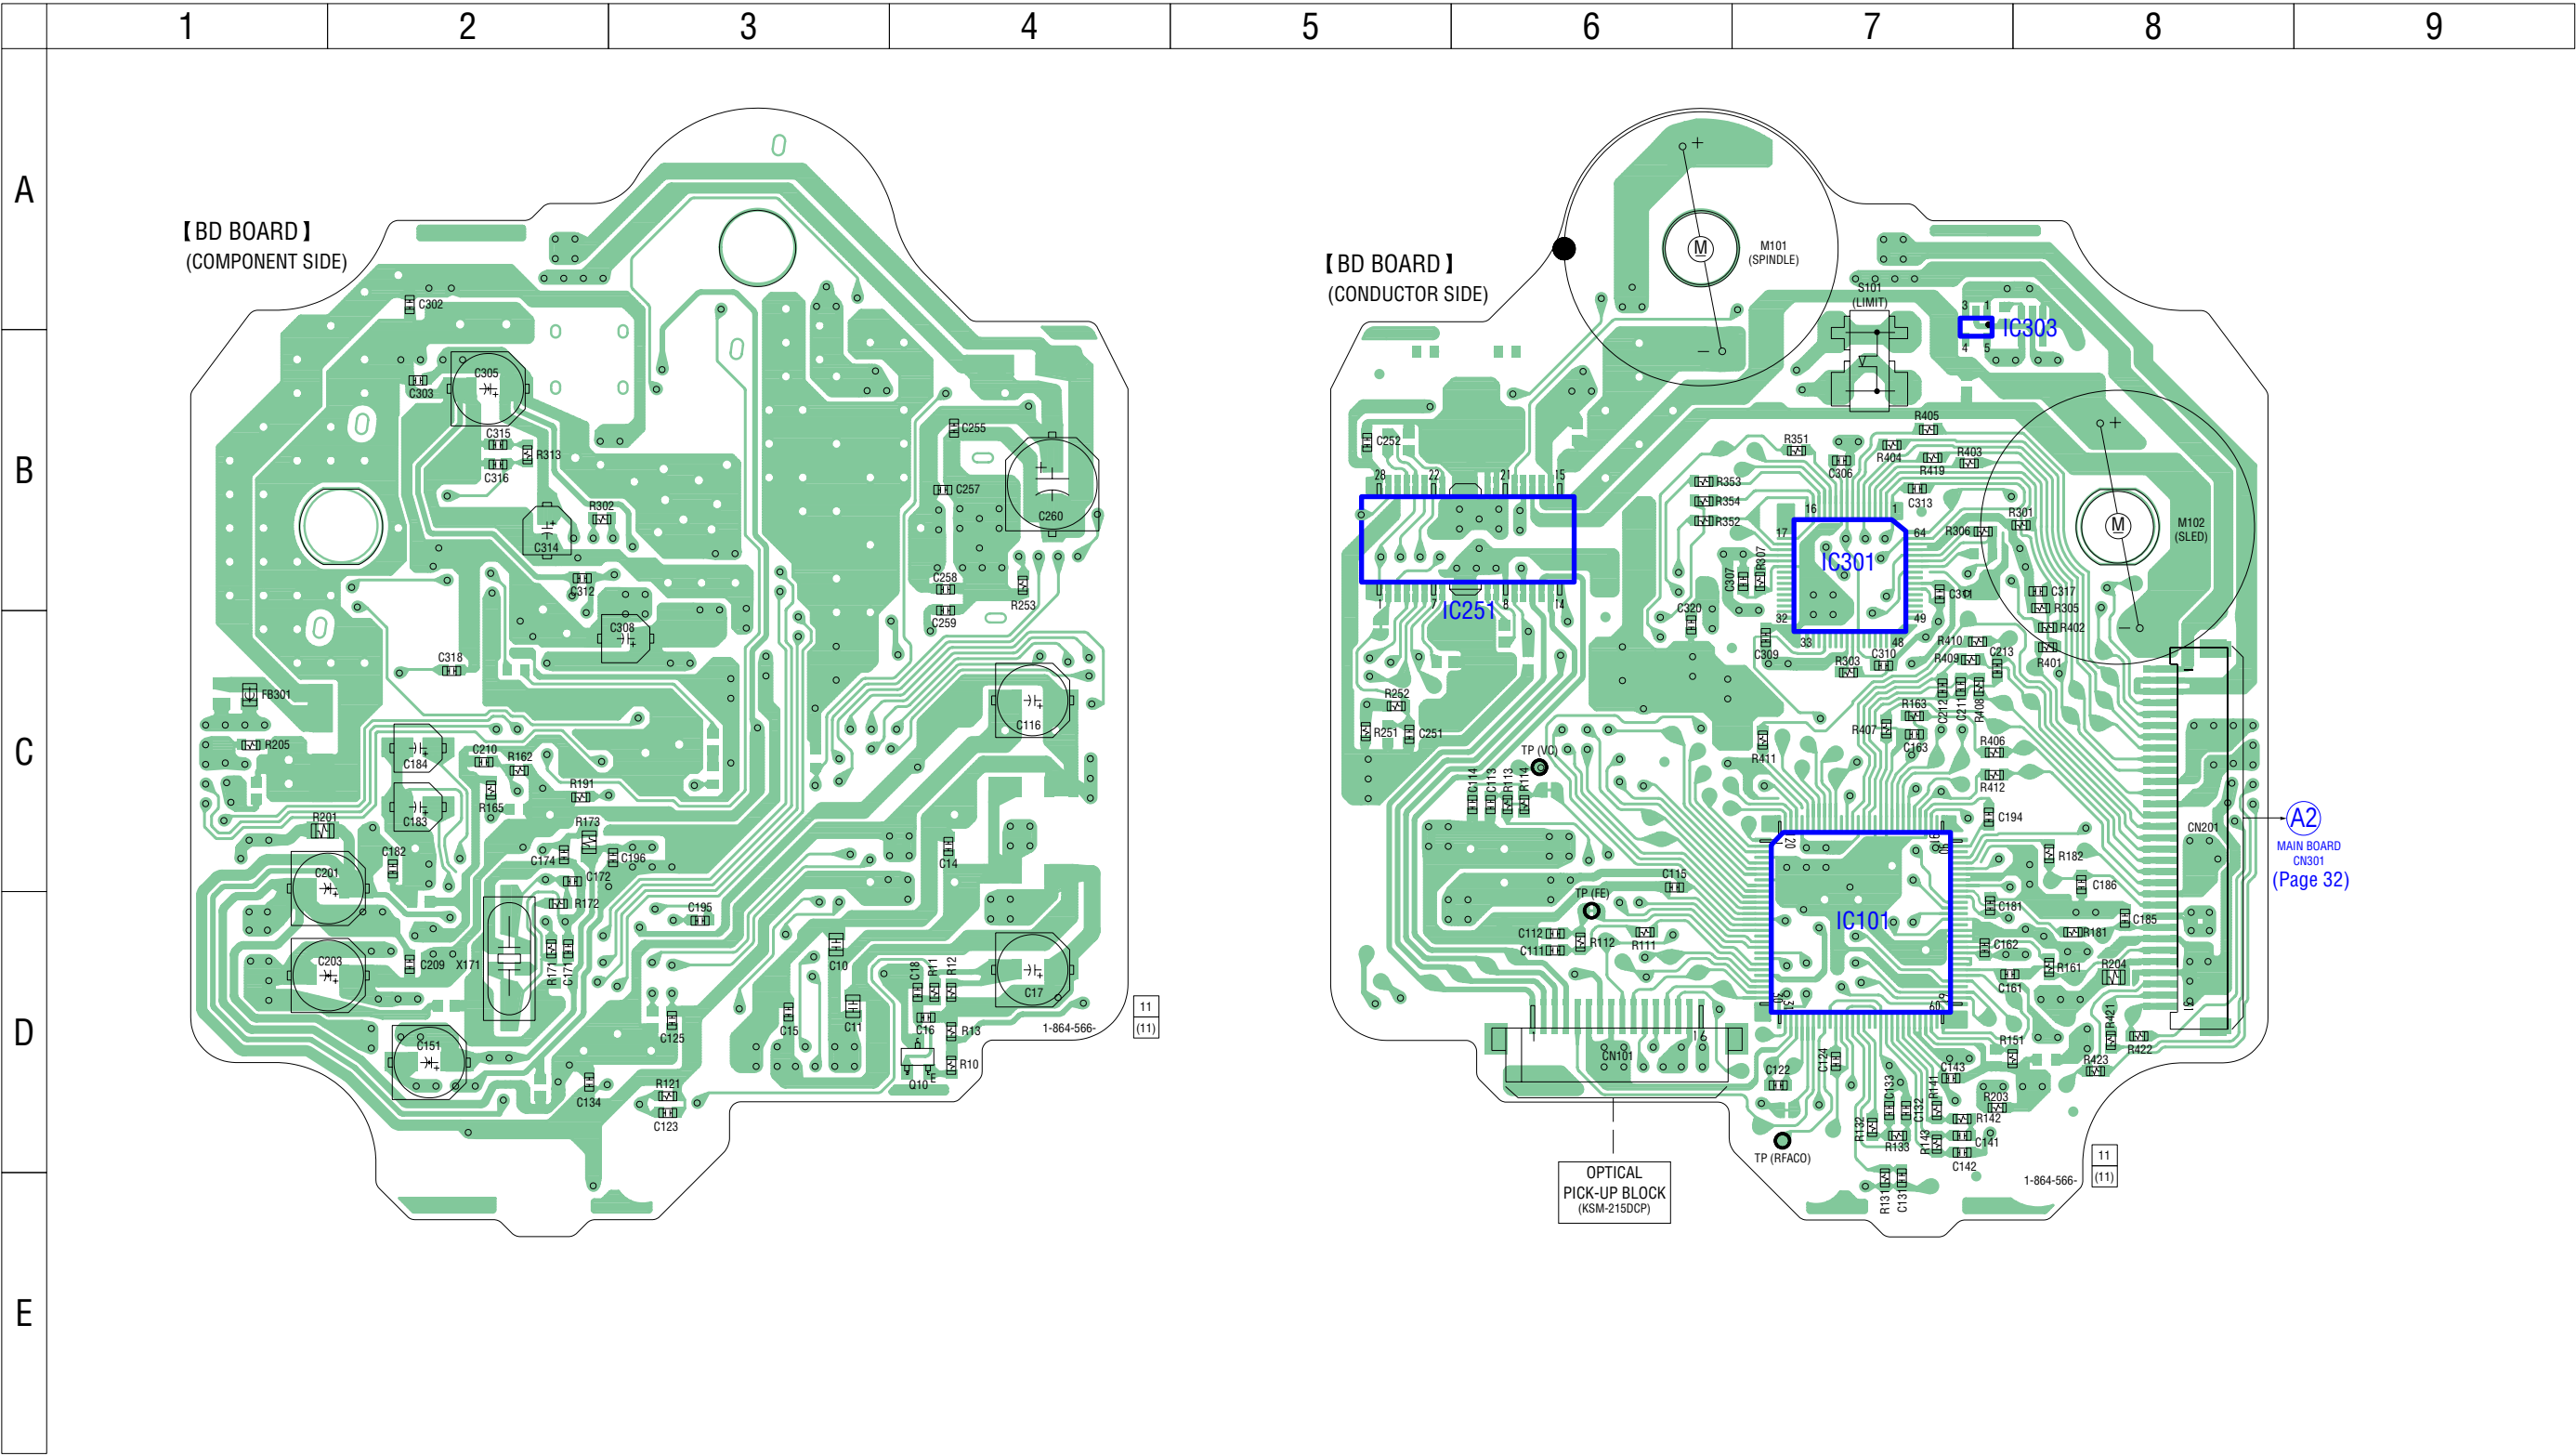


6-8. SCHEMATIC DIAGRAM – BD Board – (MX model only) • See page 50 for Waveforms. • See page 50 for IC Block Diagrams.

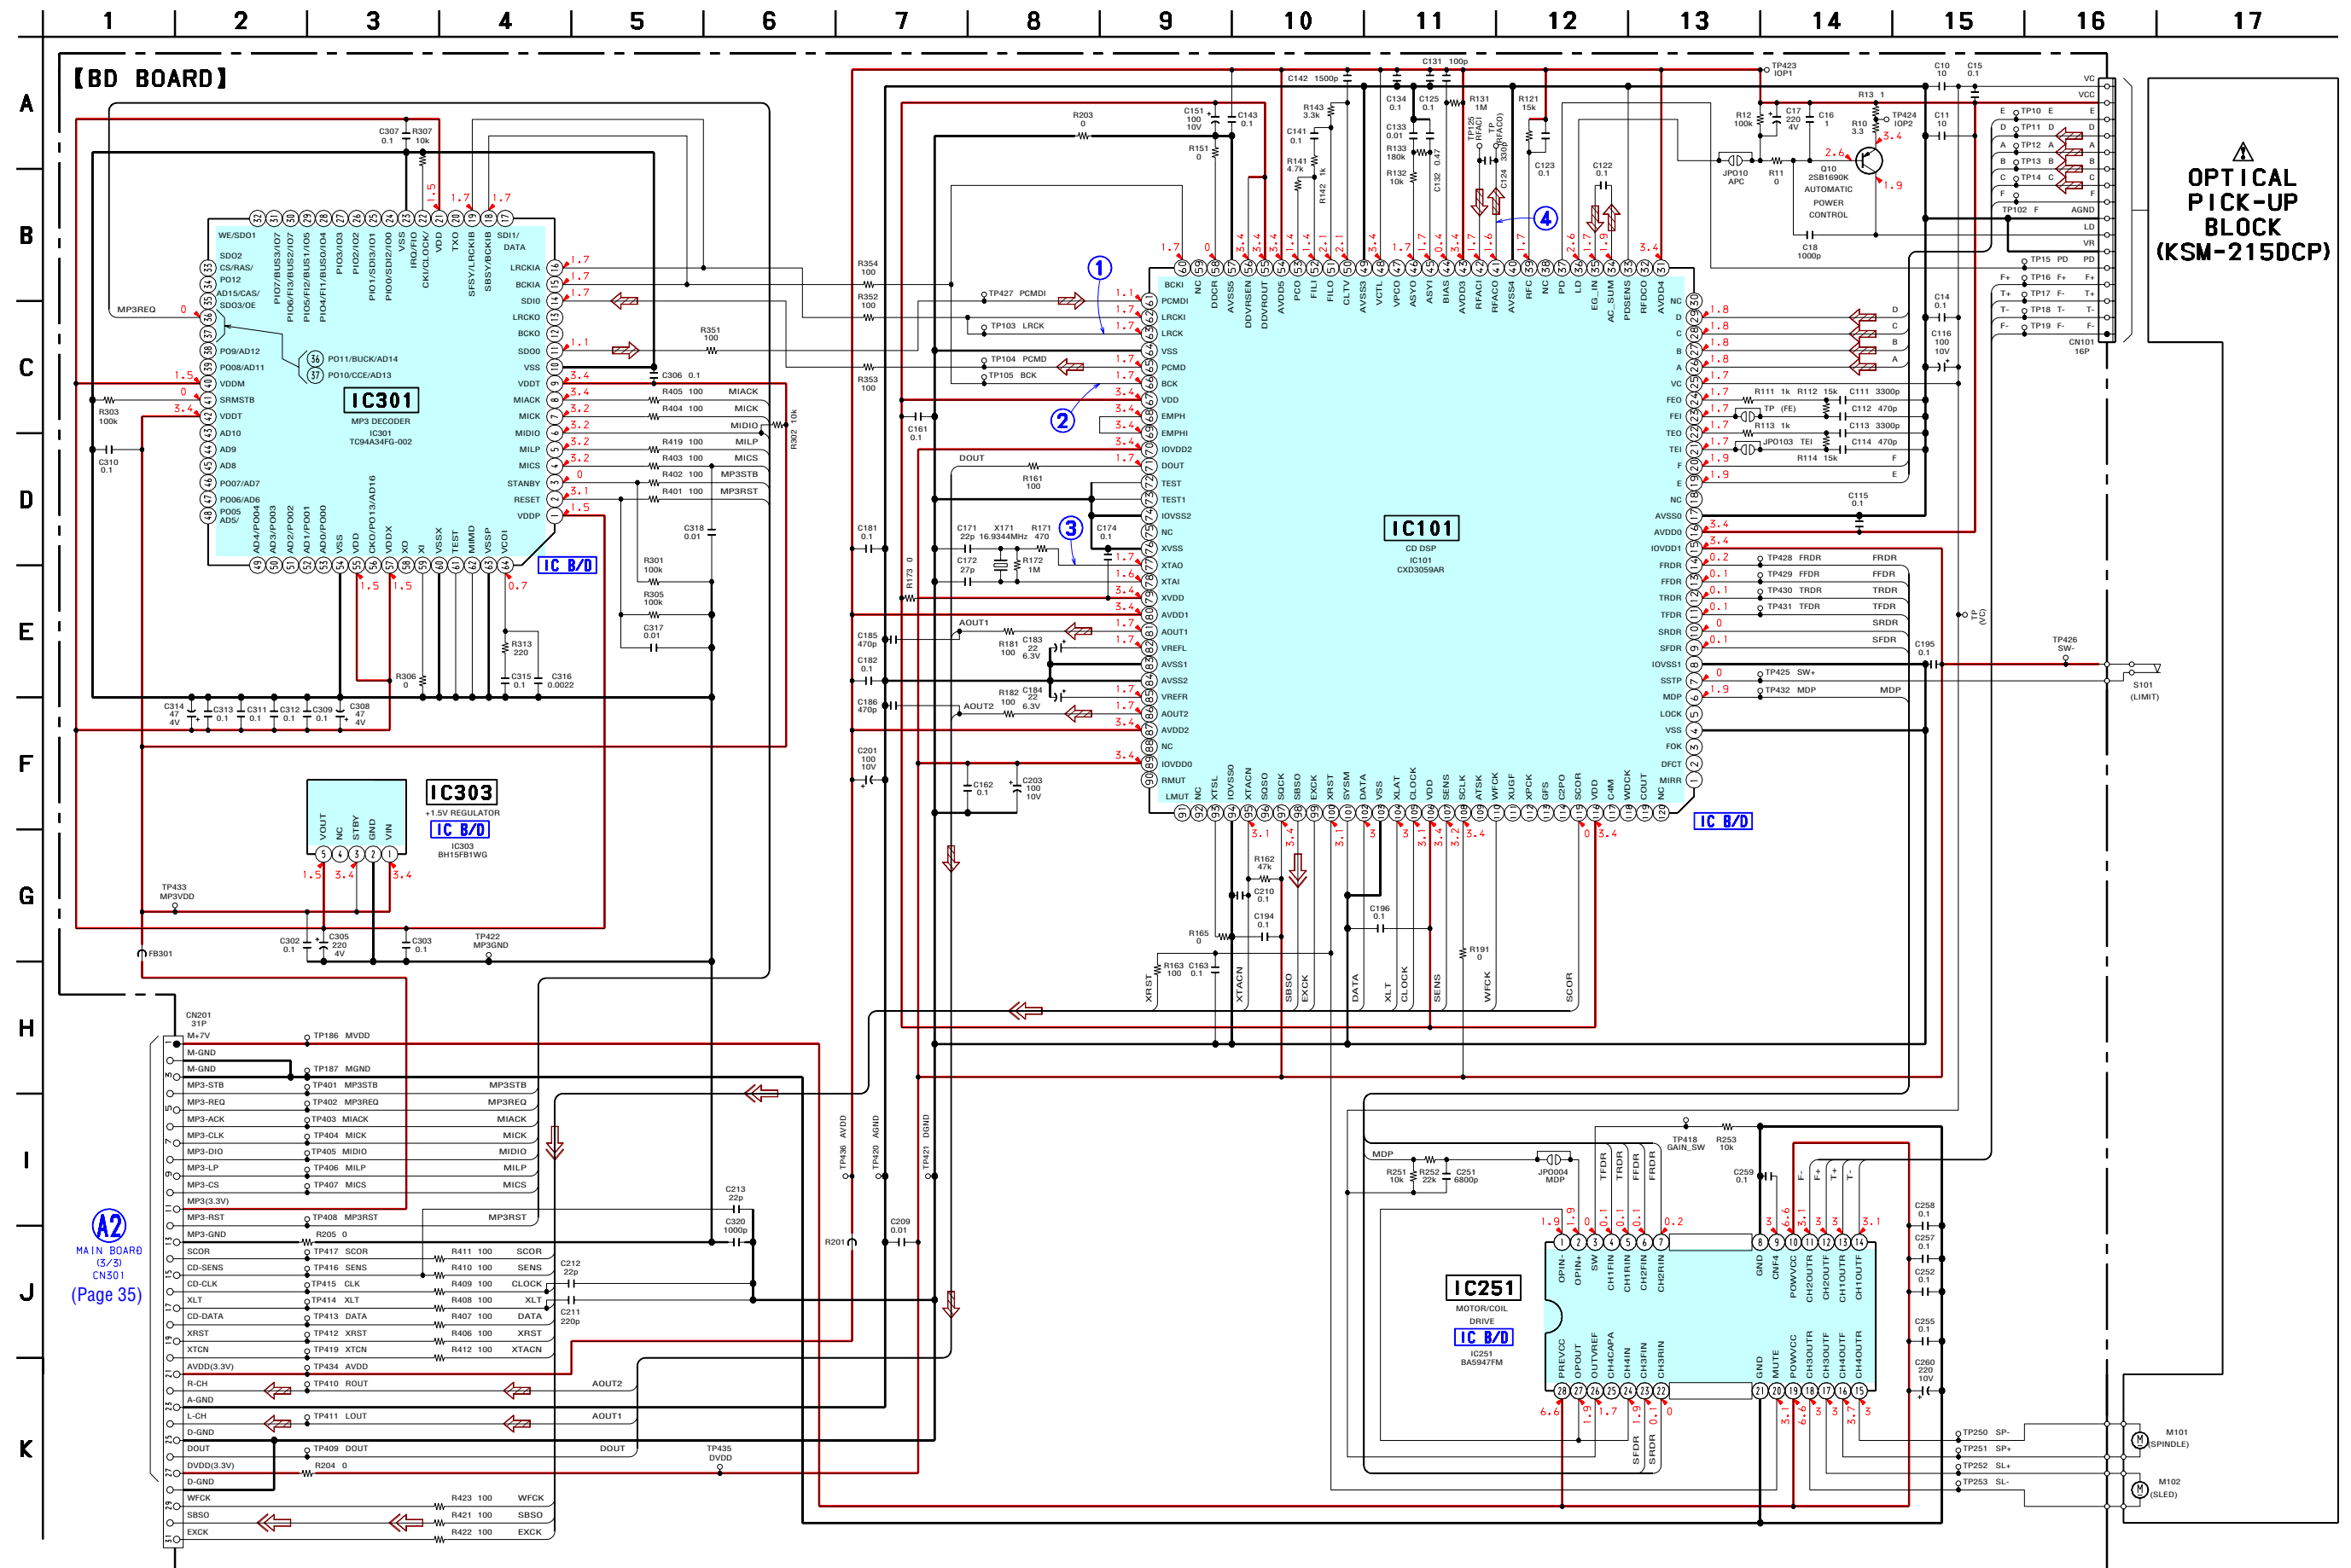


6-9. PRINTED WIRING BOARDS – CHANGER Section – • See page 25 for Circuit Boards Location. : Uses unleaded solder.

• Semiconductor Location

Ref. No.	Location
D701	D-5
D711	C-5
IC701	D-6
IC712	C-6
IC731	A-2
Q731	B-4

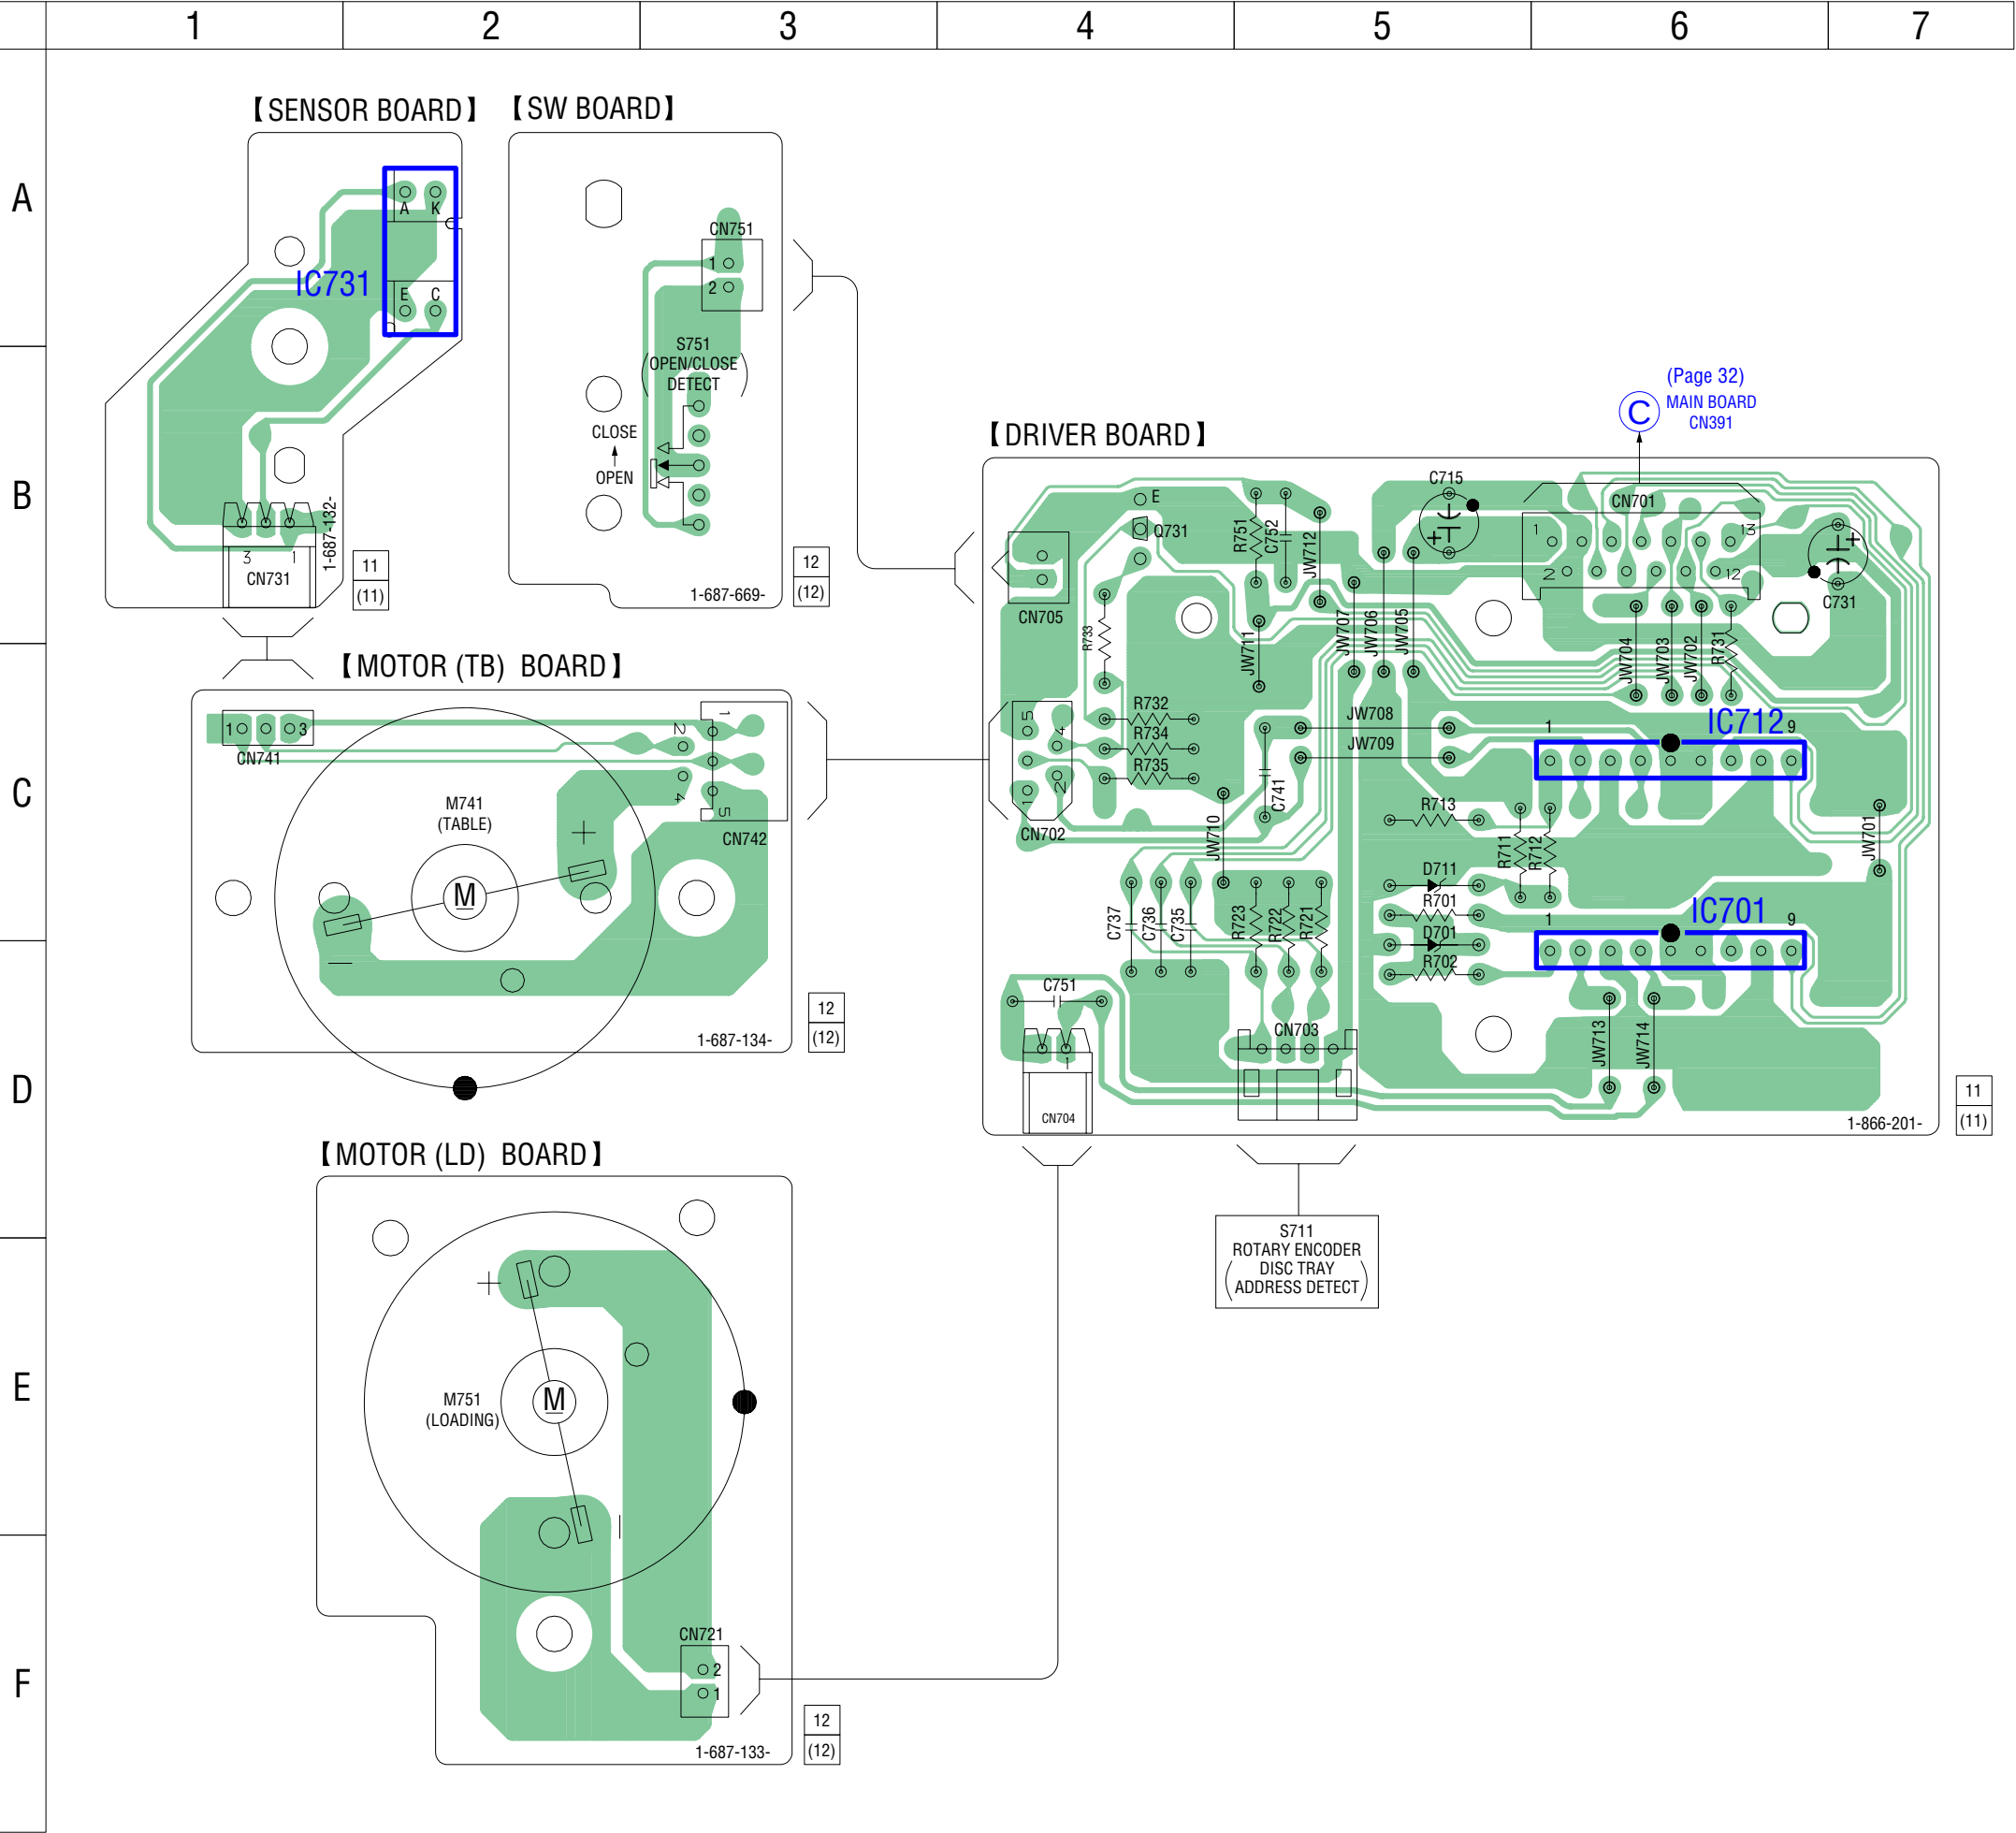

6-10. SCHEMATIC DIAGRAM – CHANGER Section – • See page 50 for IC Block Diagrams.

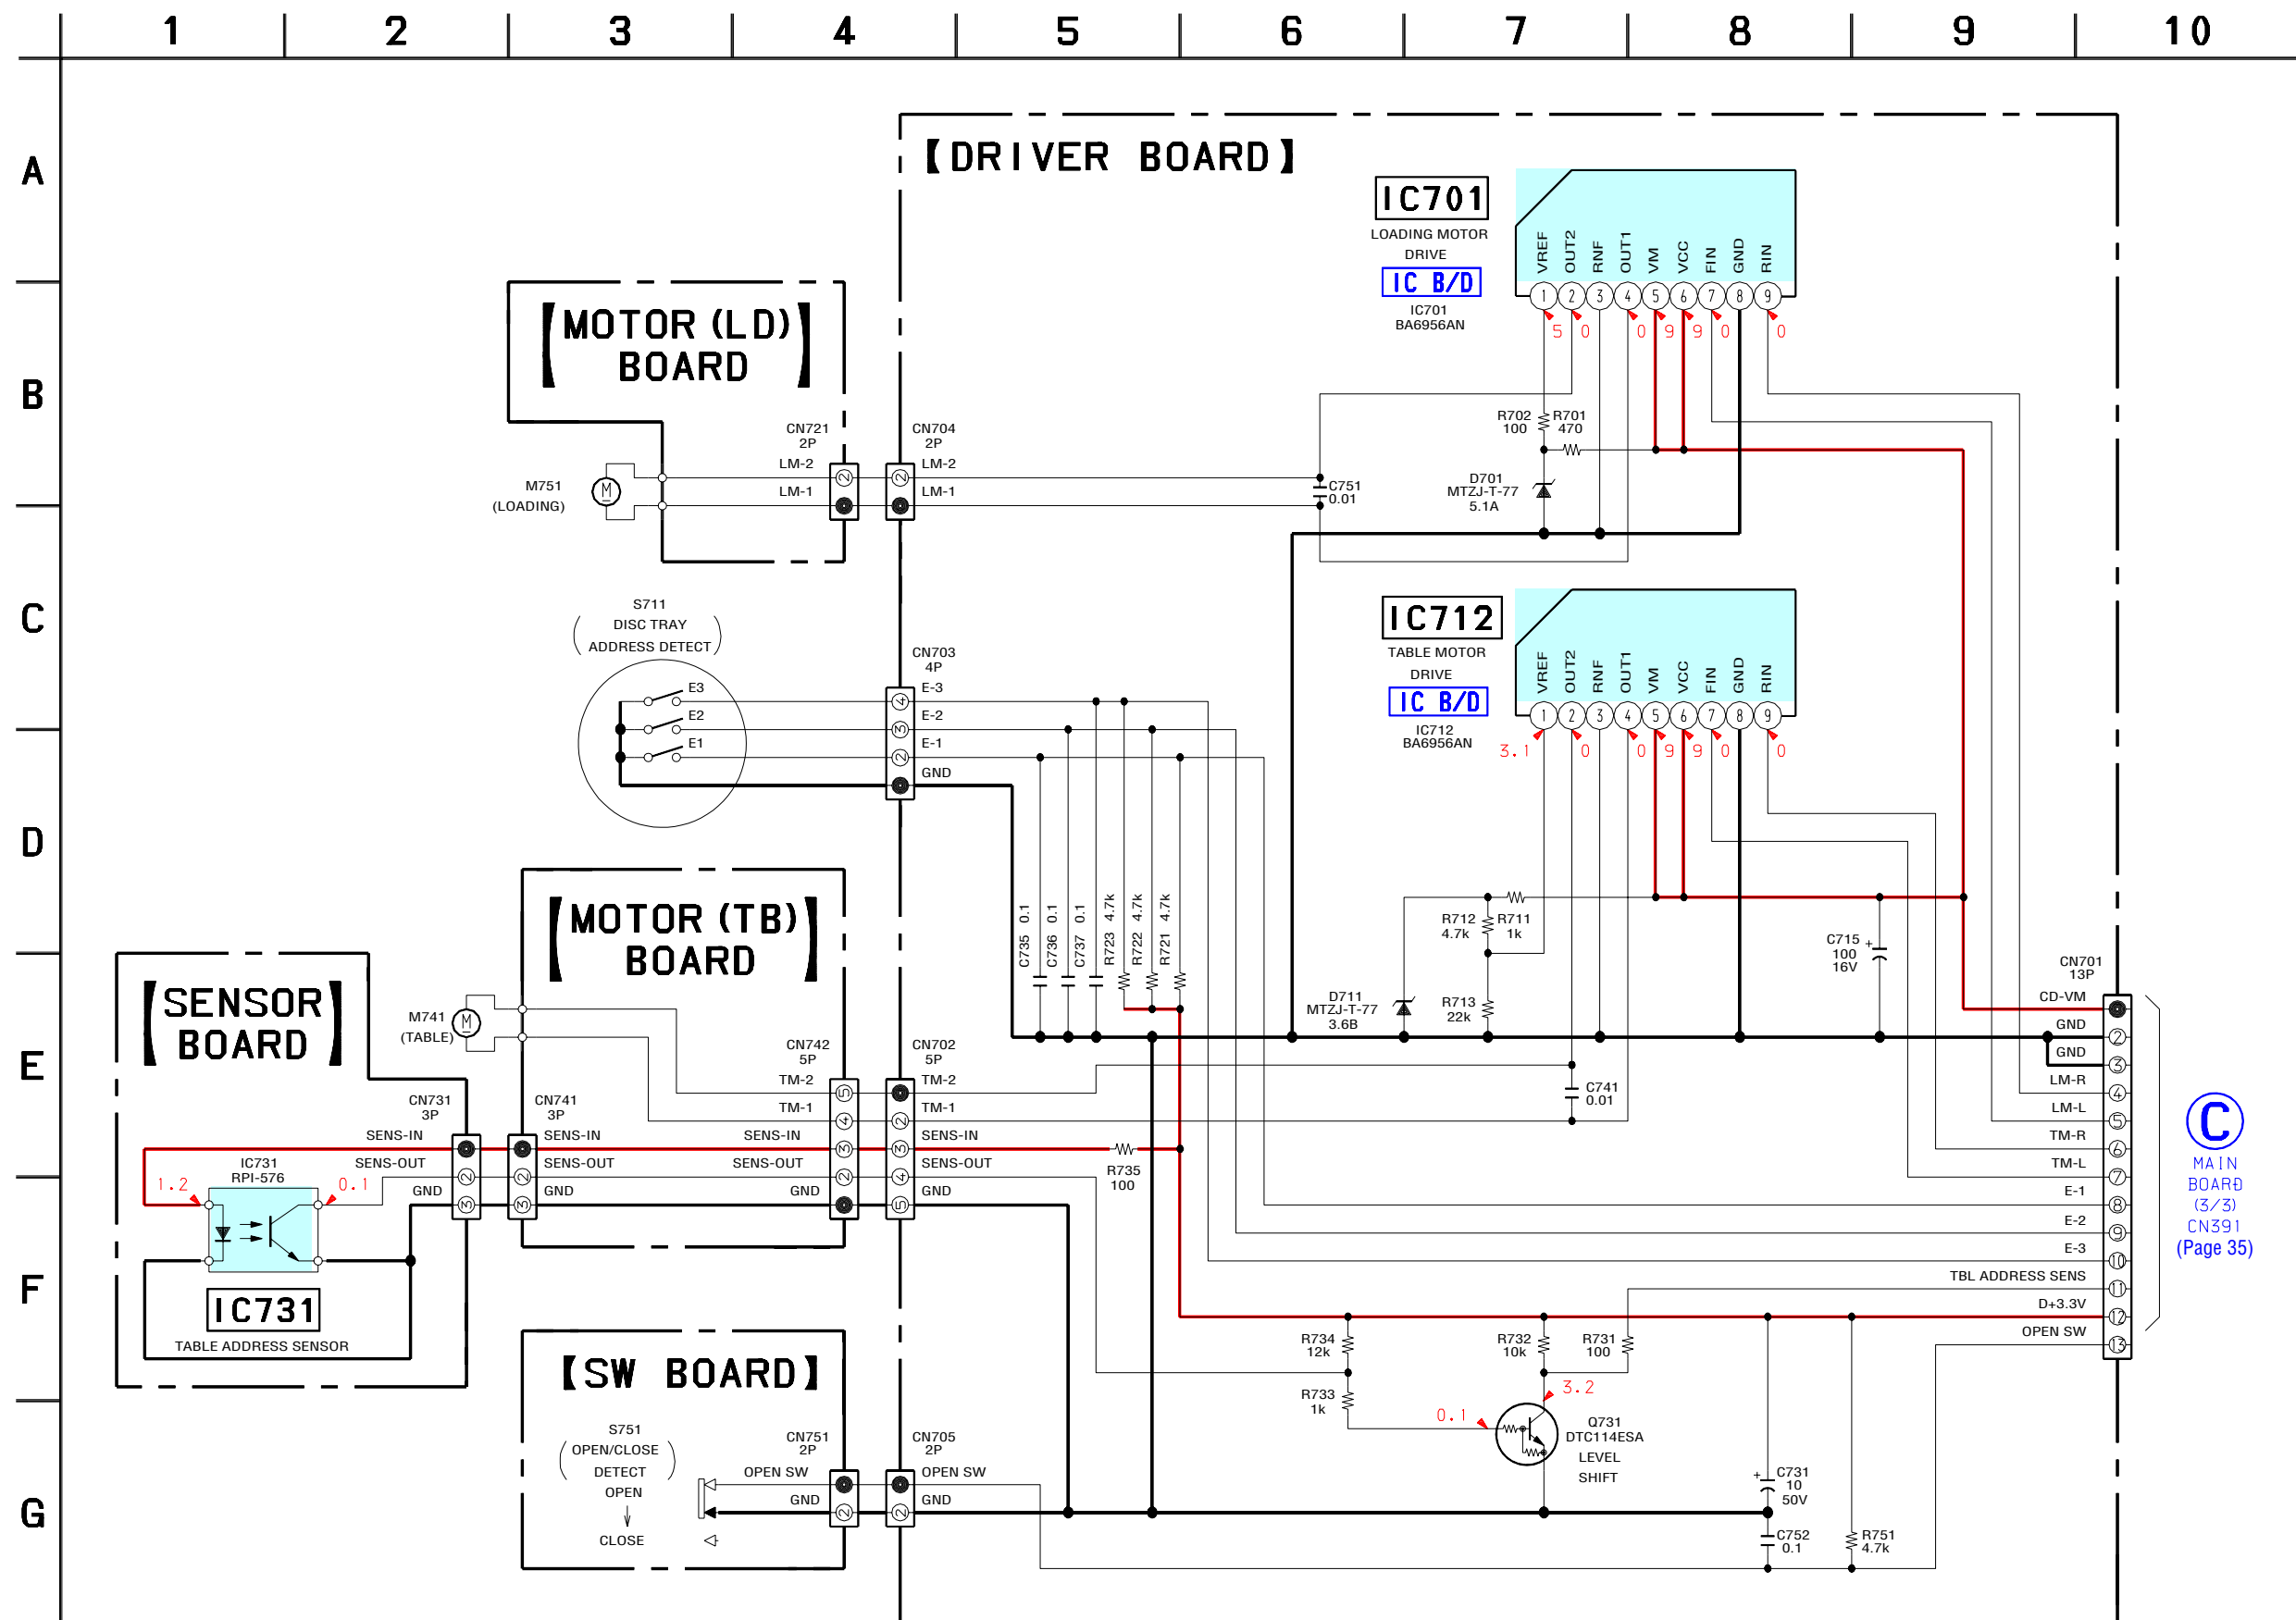

Ⓒ
MAIN
BOARD
(3/3)
CN391
(Page 35)


Ver. 1.1

- See page 25 for Circuit Boards Location.


4

⚠ : Uses unleaded solder.


Ref. No.	Location
D001	G-9
D002	G-9
D003	G-9
D004	G-9
D006	H-8
D007	H-10
D008	H-10
D011	G-8
D012	G-8
D013	G-8
D014	G-8
D021	G-7
D022	G-8
D023	G-7
D024	G-8
D031	H-10
D035	I-10
D041	C-11
D042	C-10
D121	G-6
D122	G-6
D301	C-5
D302	C-5
D303	C-6
D341	F-4
D901	D-5
D902	D-3
D903	E-3
D905	E-3
D910	E-3
D921	E-4
D923	E-4
D943	F-3
D947	F-3
IC006	F-9
IC011	F-8
IC021	F-7
IC101	G-4
IC251	I-7
IC901	B-4
IC902	E-3
Q002	F-10
Q041	C-10
Q042	D-10
Q043	C-10
Q044	C-11
Q045	C-11
Q111	G-4
Q112	G-5
Q141	H-6
Q142	I-6
Q201	I-5
Q203	J-4
Q205	I-4
Q206	I-4
Q207	I-4
Q208	I-4
Q209	I-3
Q210	I-3
Q231	J-4
Q232	I-4
Q251	I-8
Q252	J-8
Q261	I-8
Q271	E-11
Q274	F-10
Q341	F-4
Q342	F-5
Q343	F-4
Q344	F-4
Q345	F-4
Q346	F-5
Q901	E-3
Q902	C-3
Q903	E-4
Q904	E-5
Q933	D-5

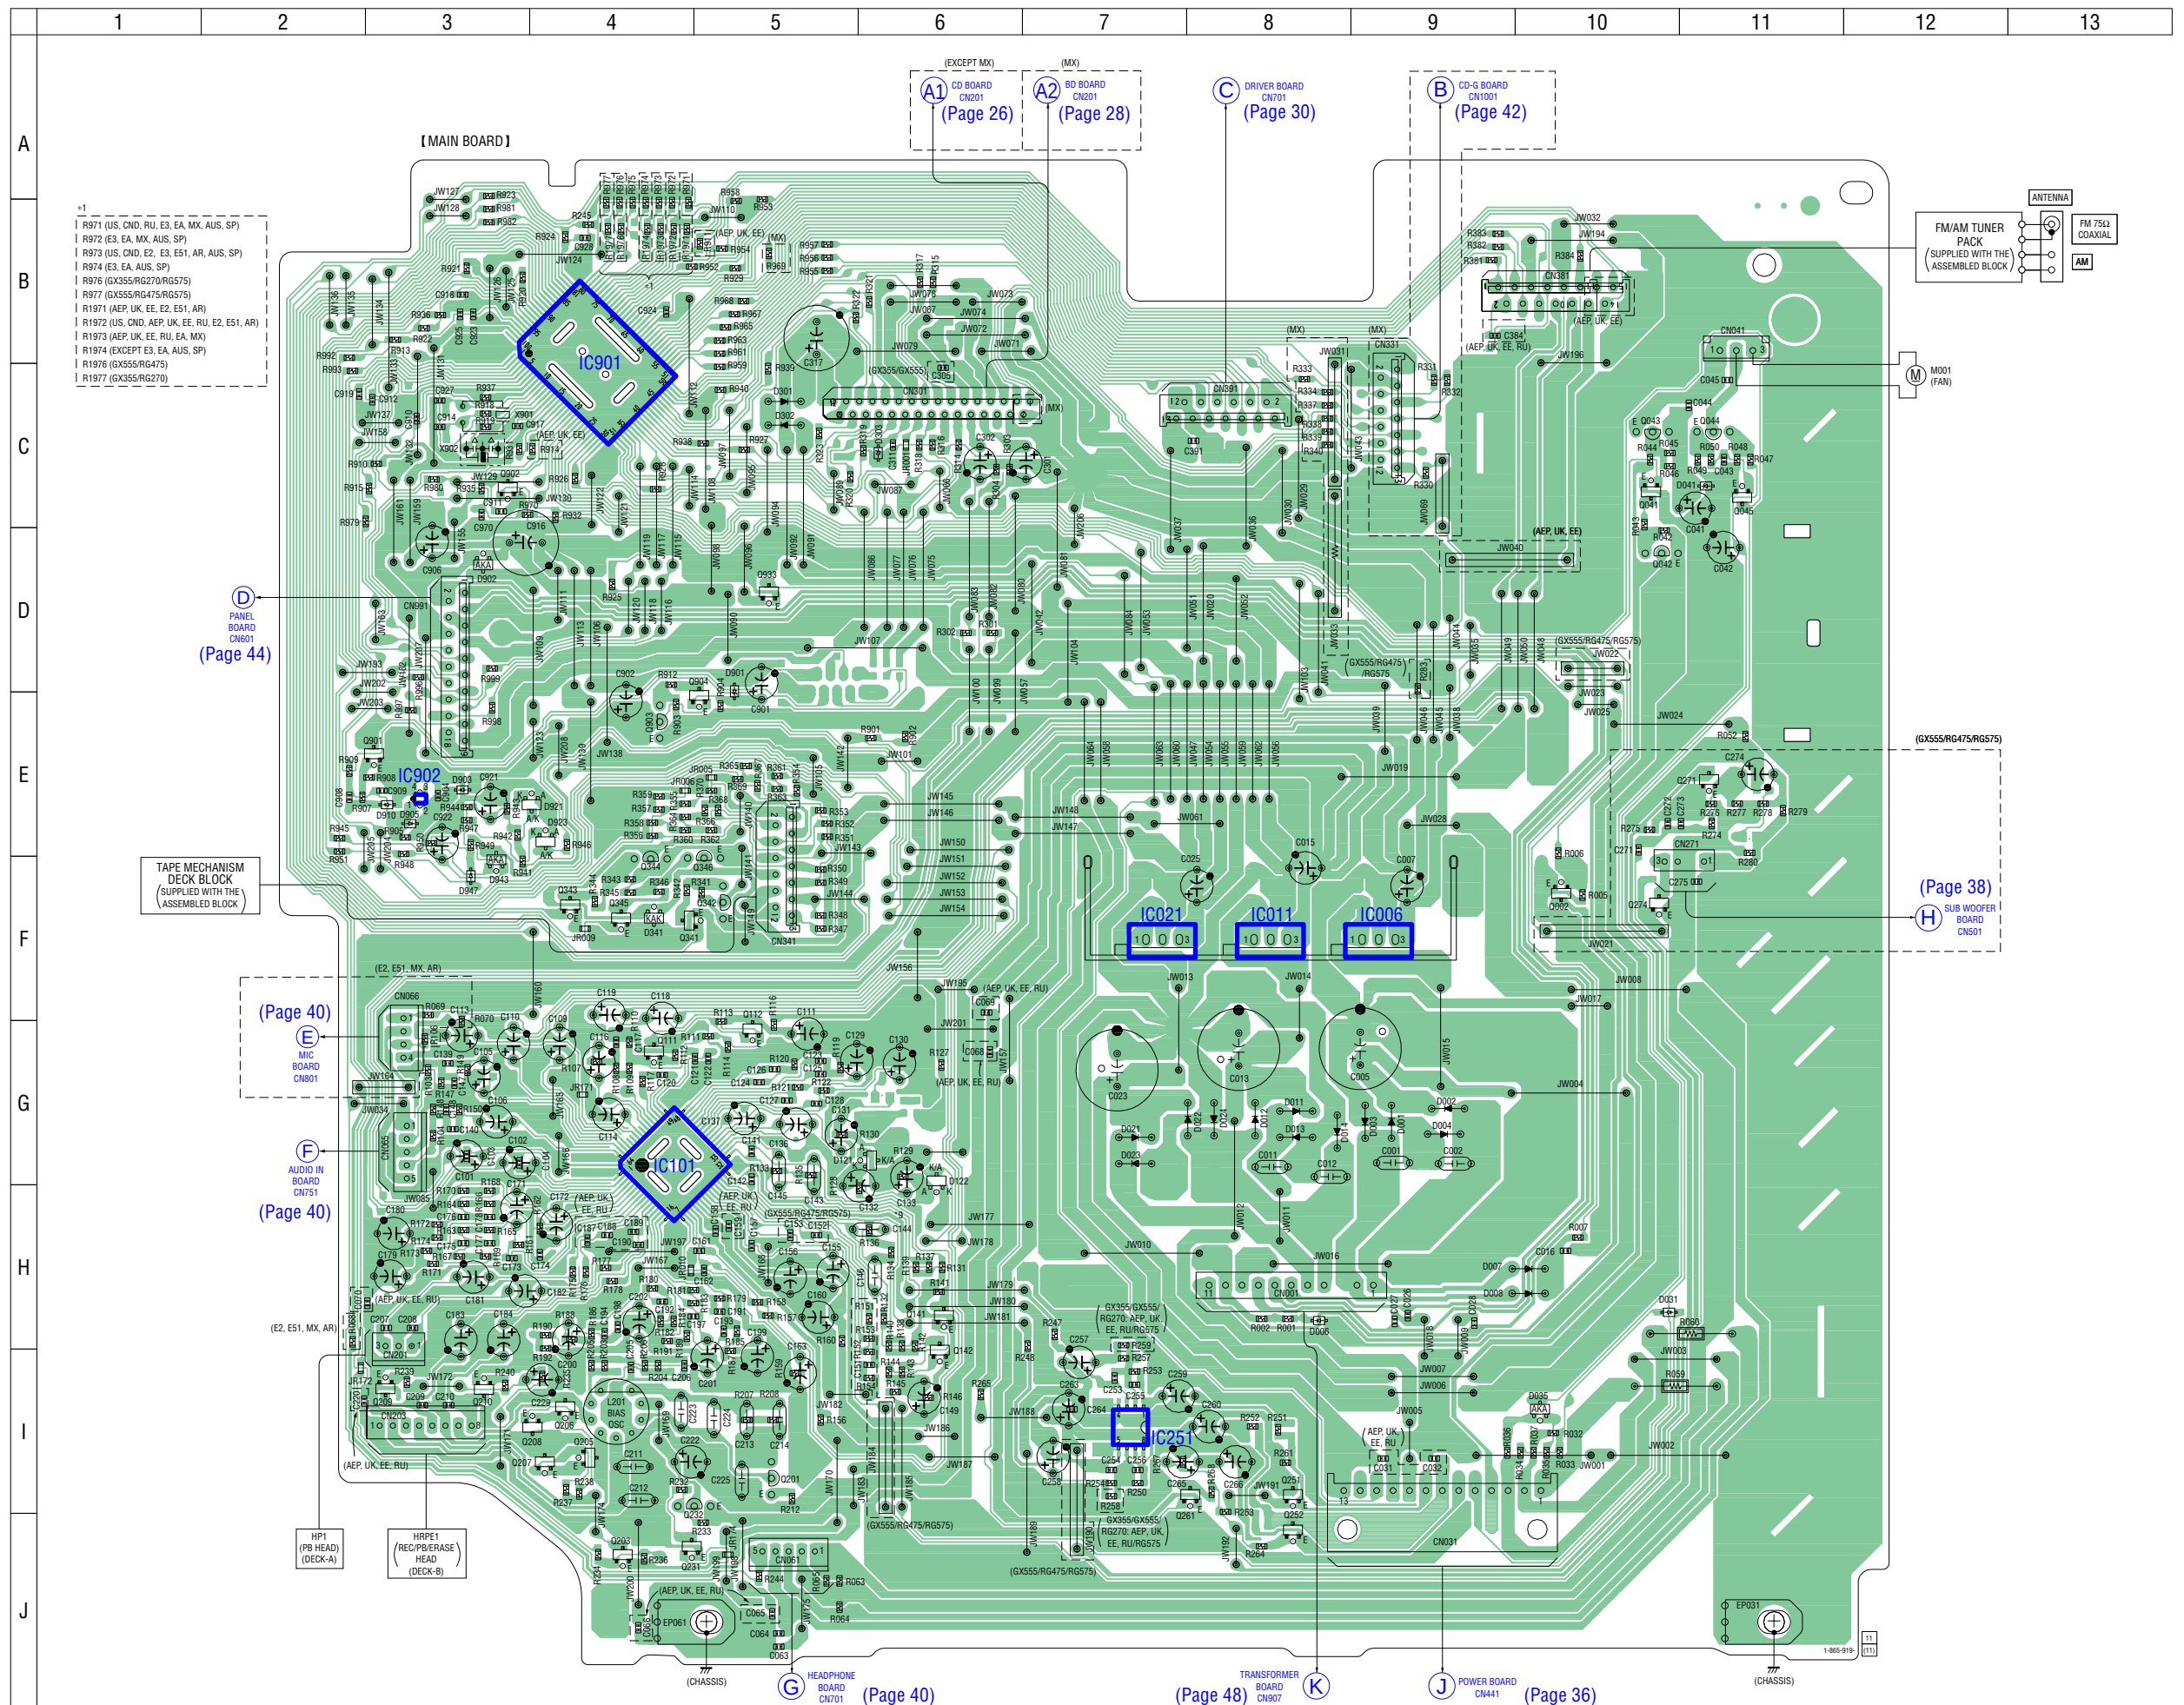


6-12. SCHEMATIC DIAGRAM – MAIN Board (1/3) – • See page 50 for Waveforms. • See page 60 for IC Pin Function Description.

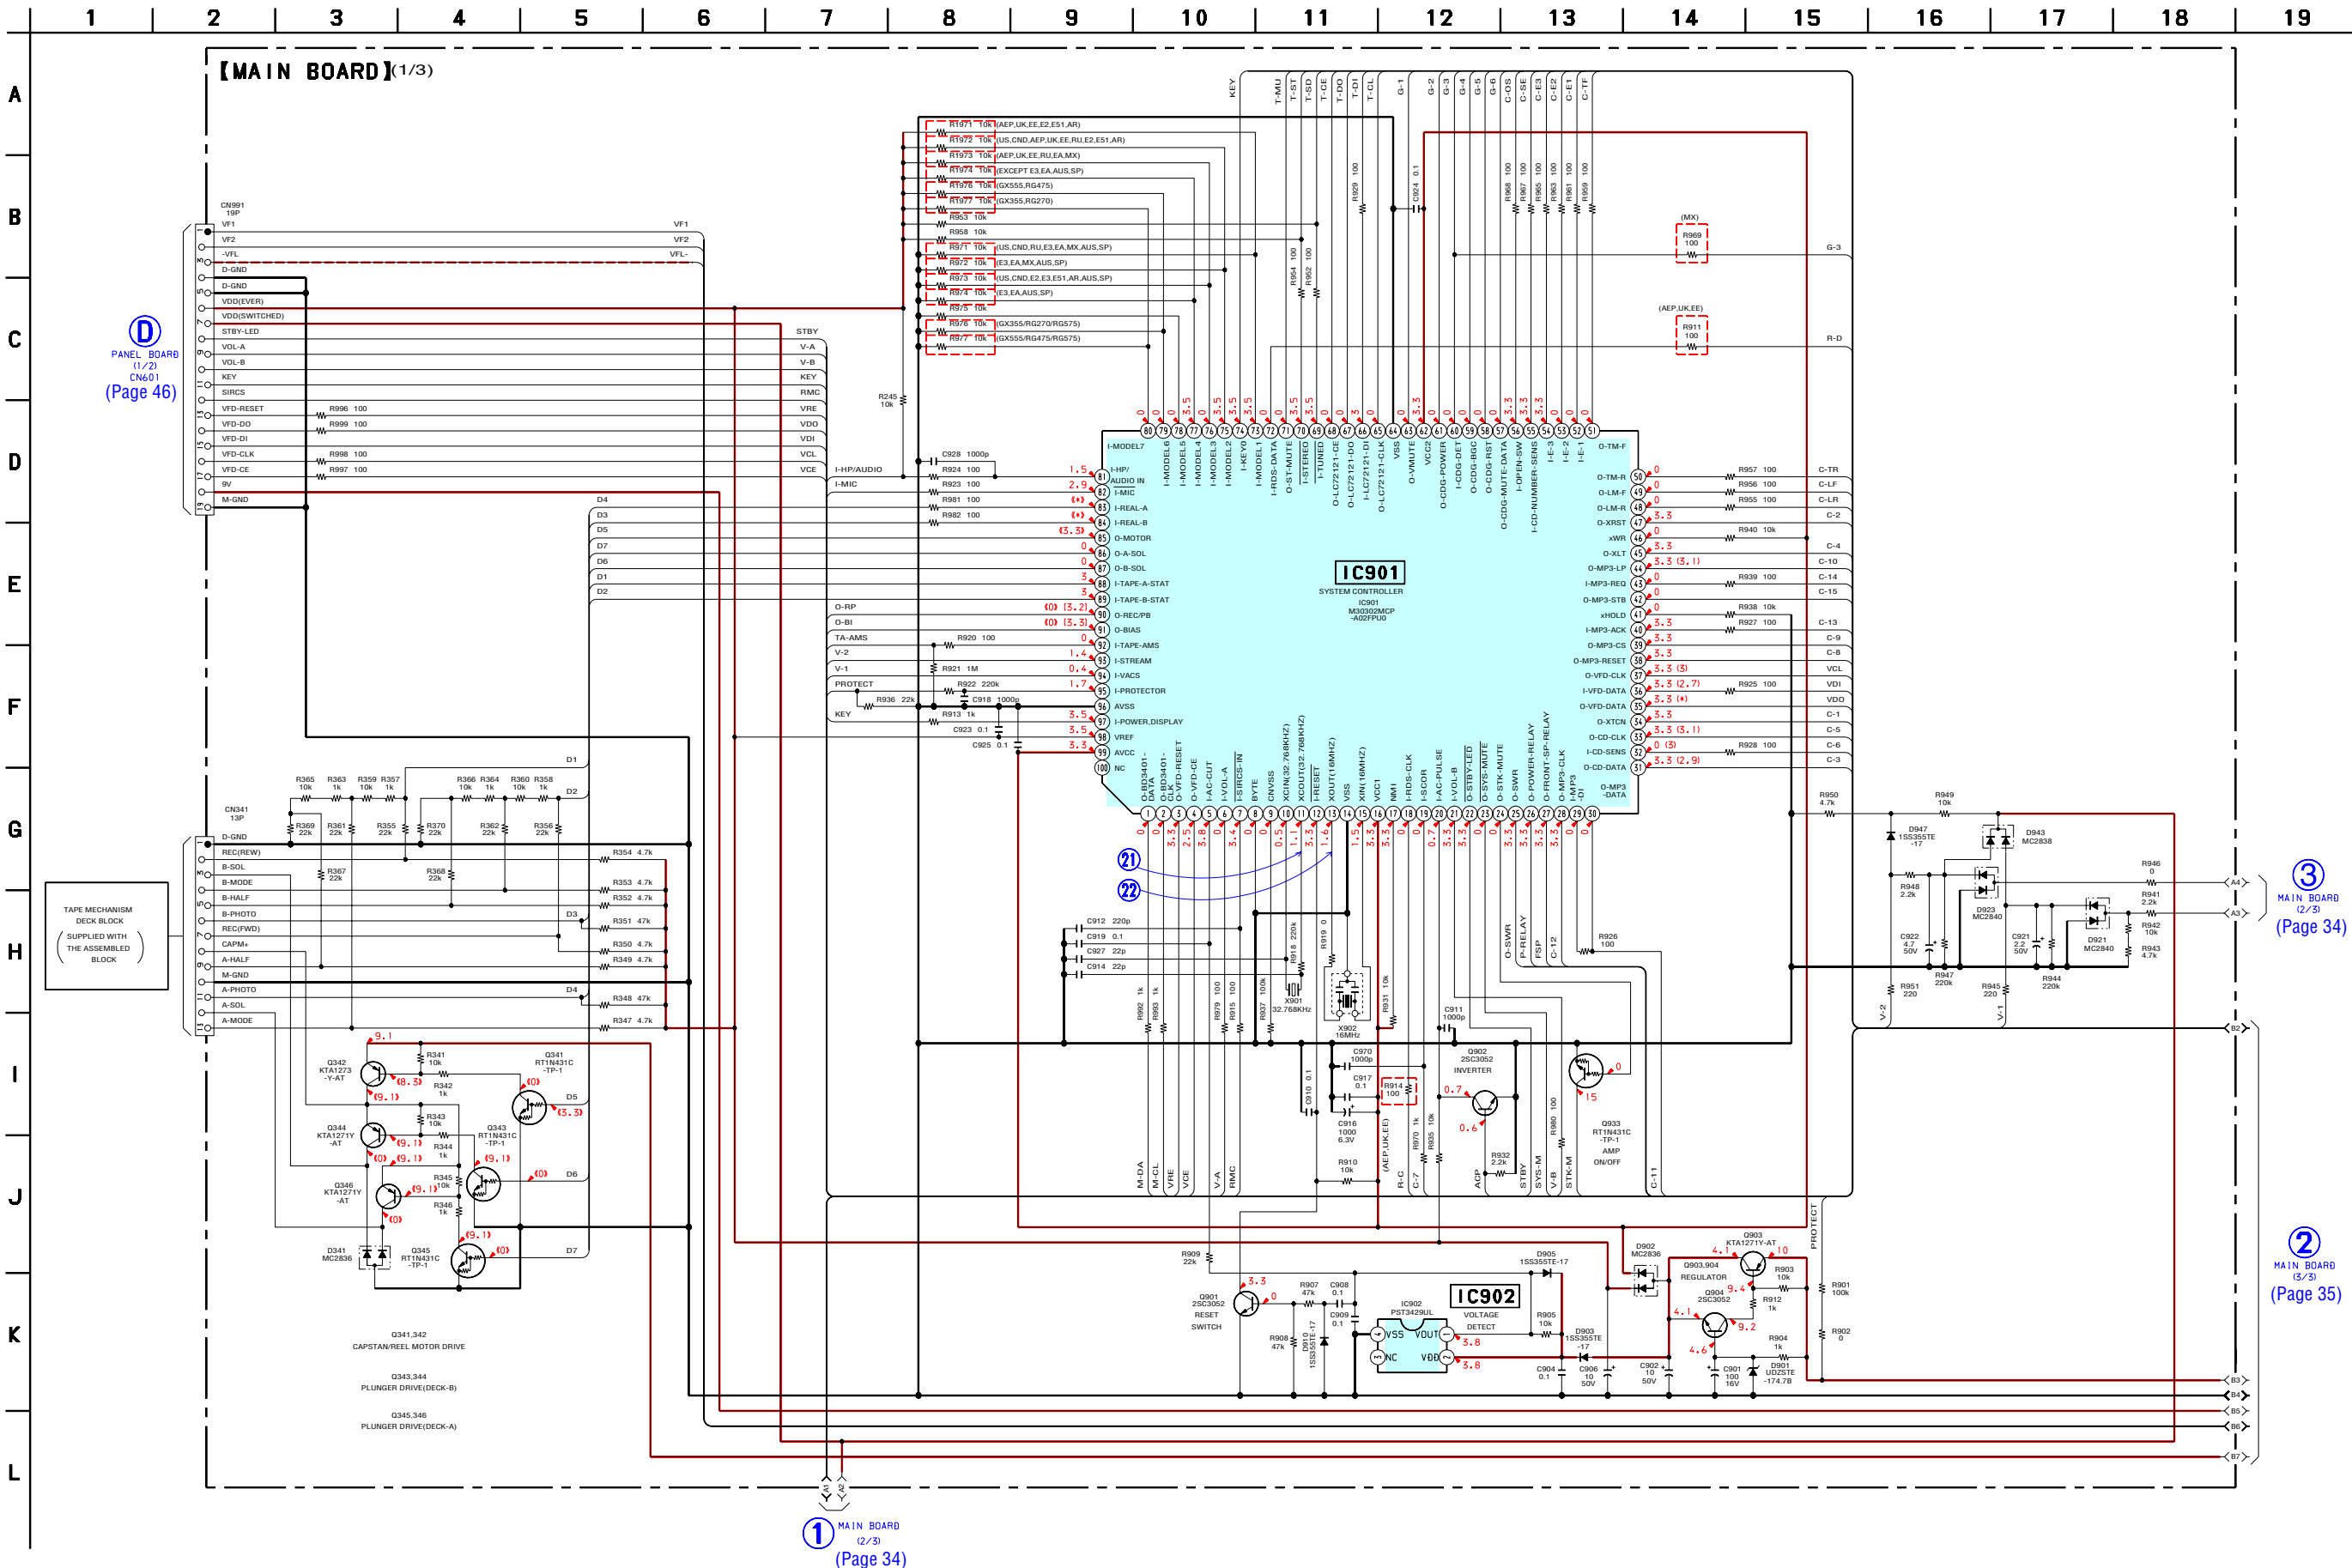


	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
--	---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----






6-15. PRINTED WIRING BOARD – POWER Board – • See page 25 for Circuit Boards Location.  : Uses unleaded solder.

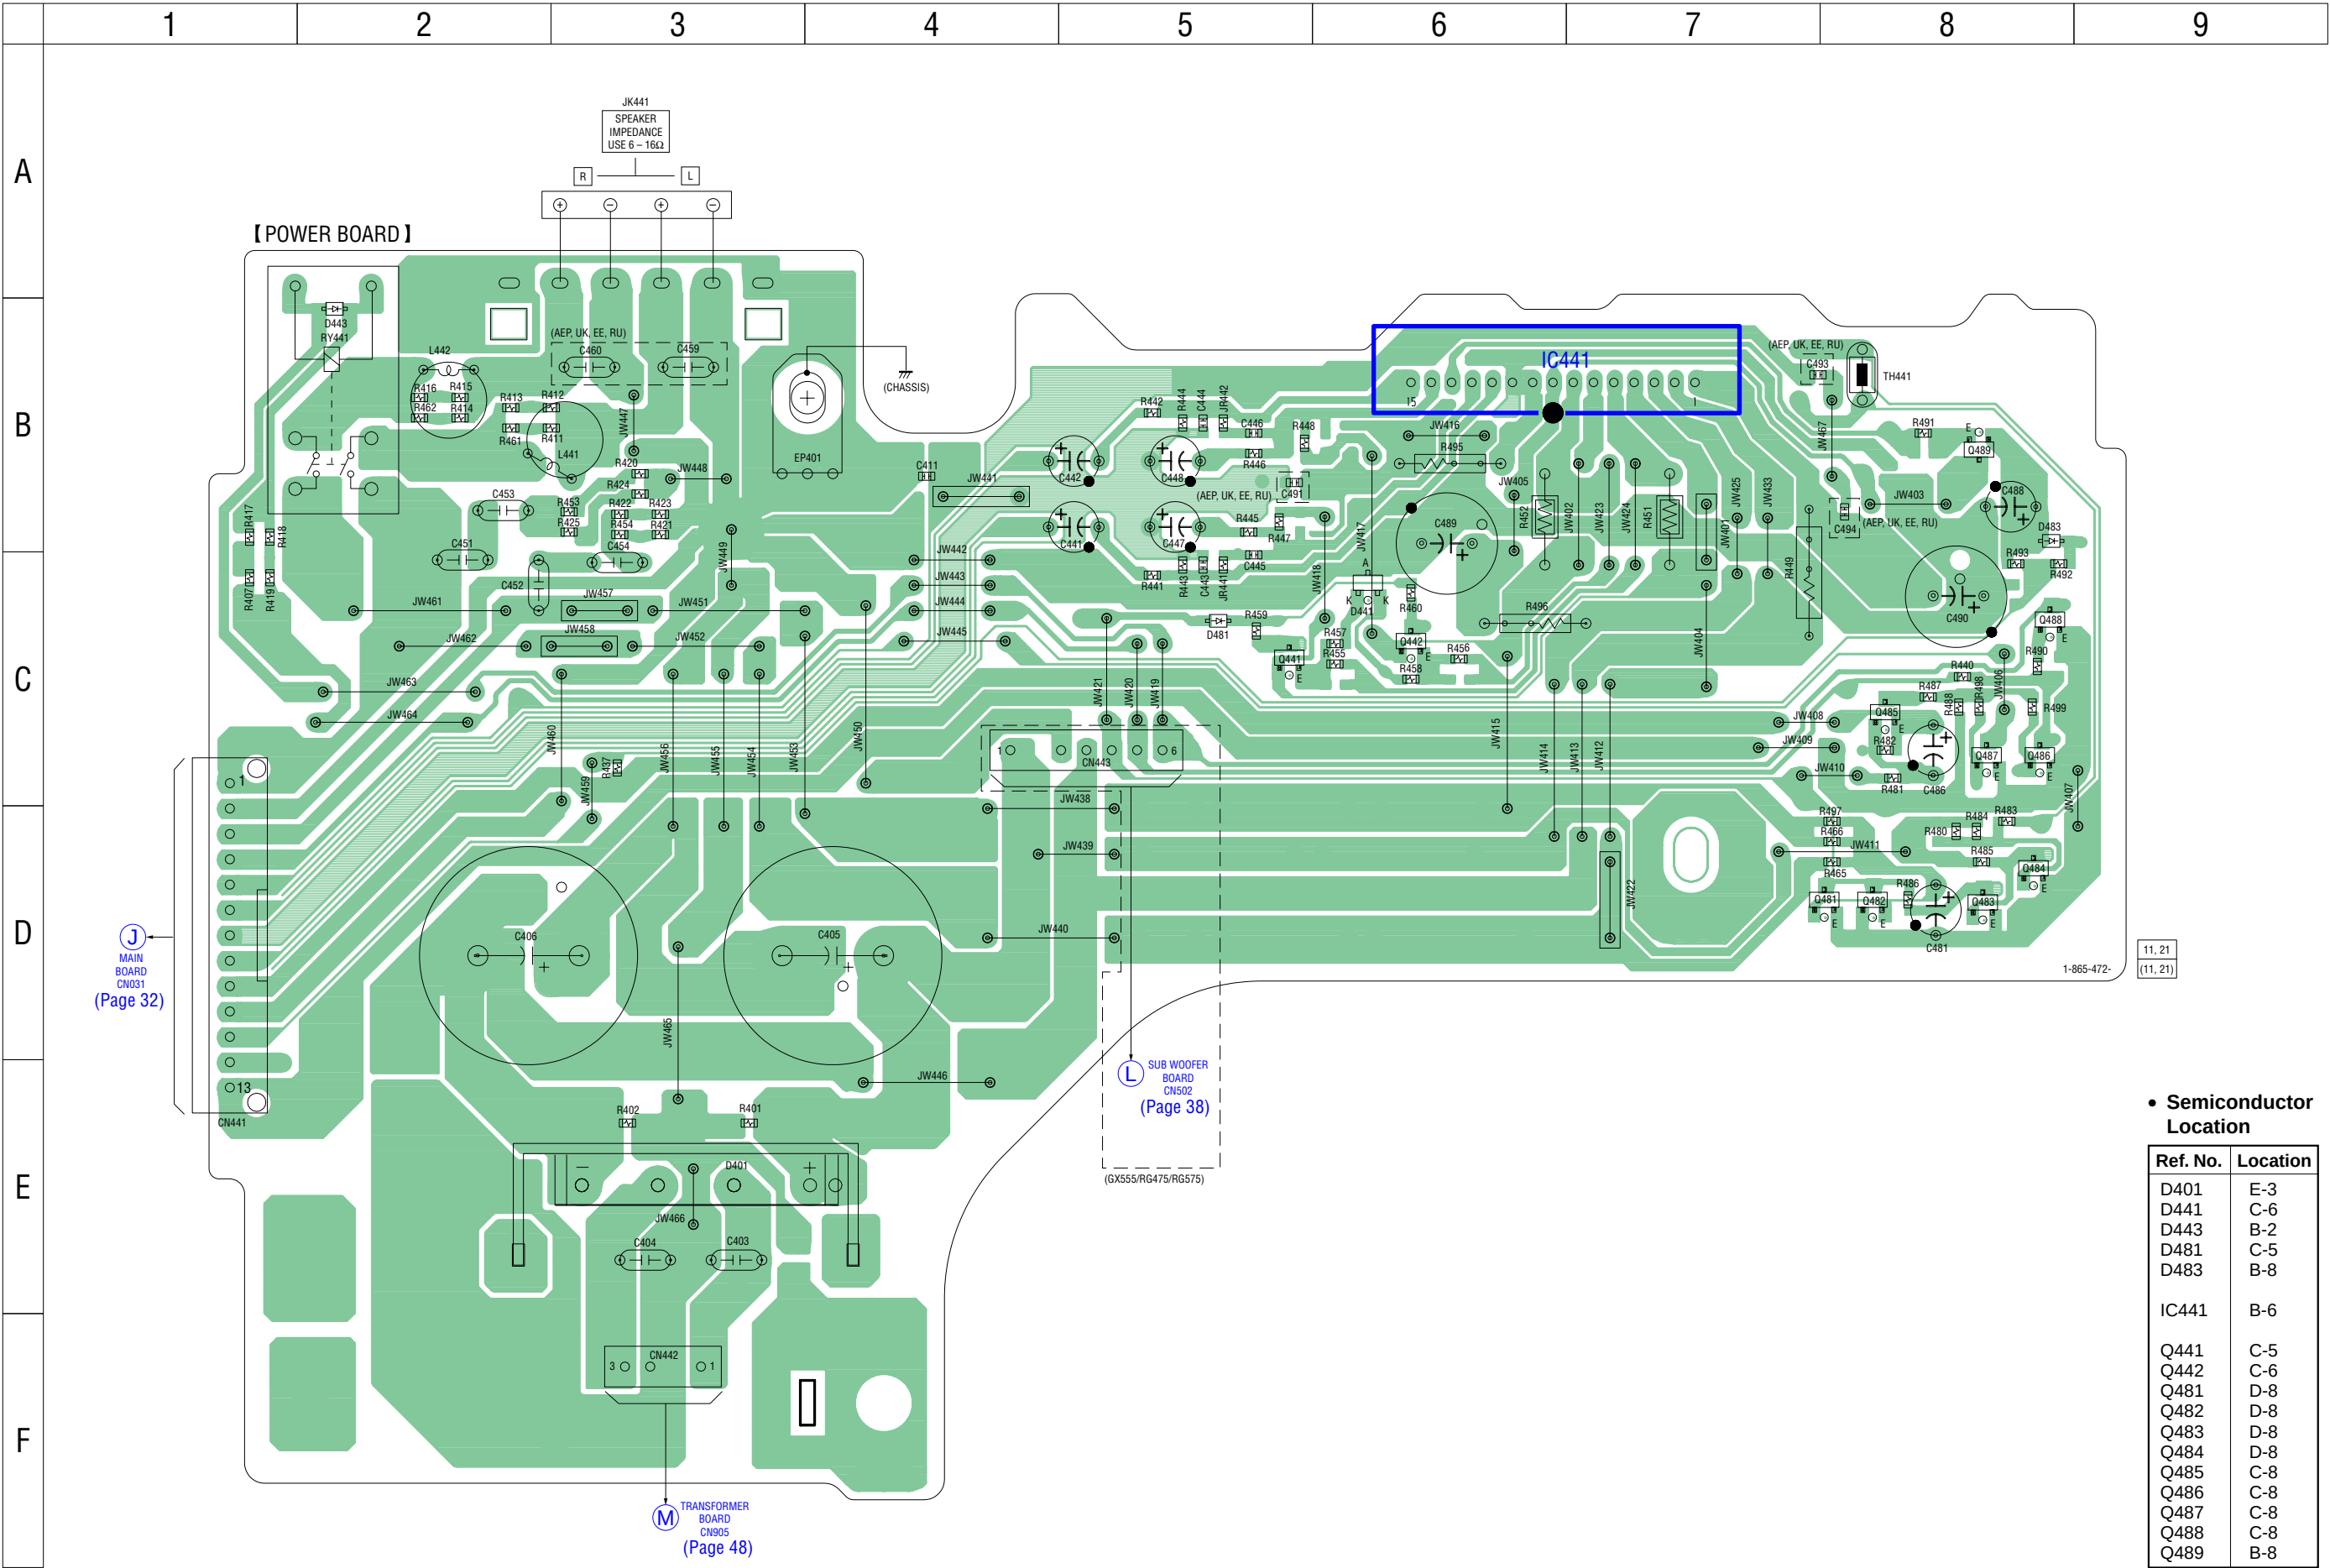

• Semiconductor Location


Ref. No.	Location
D401	E-3
D441	C-6
D443	B-2
D481	C-5
D483	B-8
IC441	B-6
Q441	C-5
Q442	C-6
Q481	D-8
Q482	D-8
Q483	D-8
Q484	D-8
Q485	C-8
Q486	C-8
Q487	C-8
Q488	C-8
Q489	B-8

6-16. SCHEMATIC DIAGRAM – POWER Board –

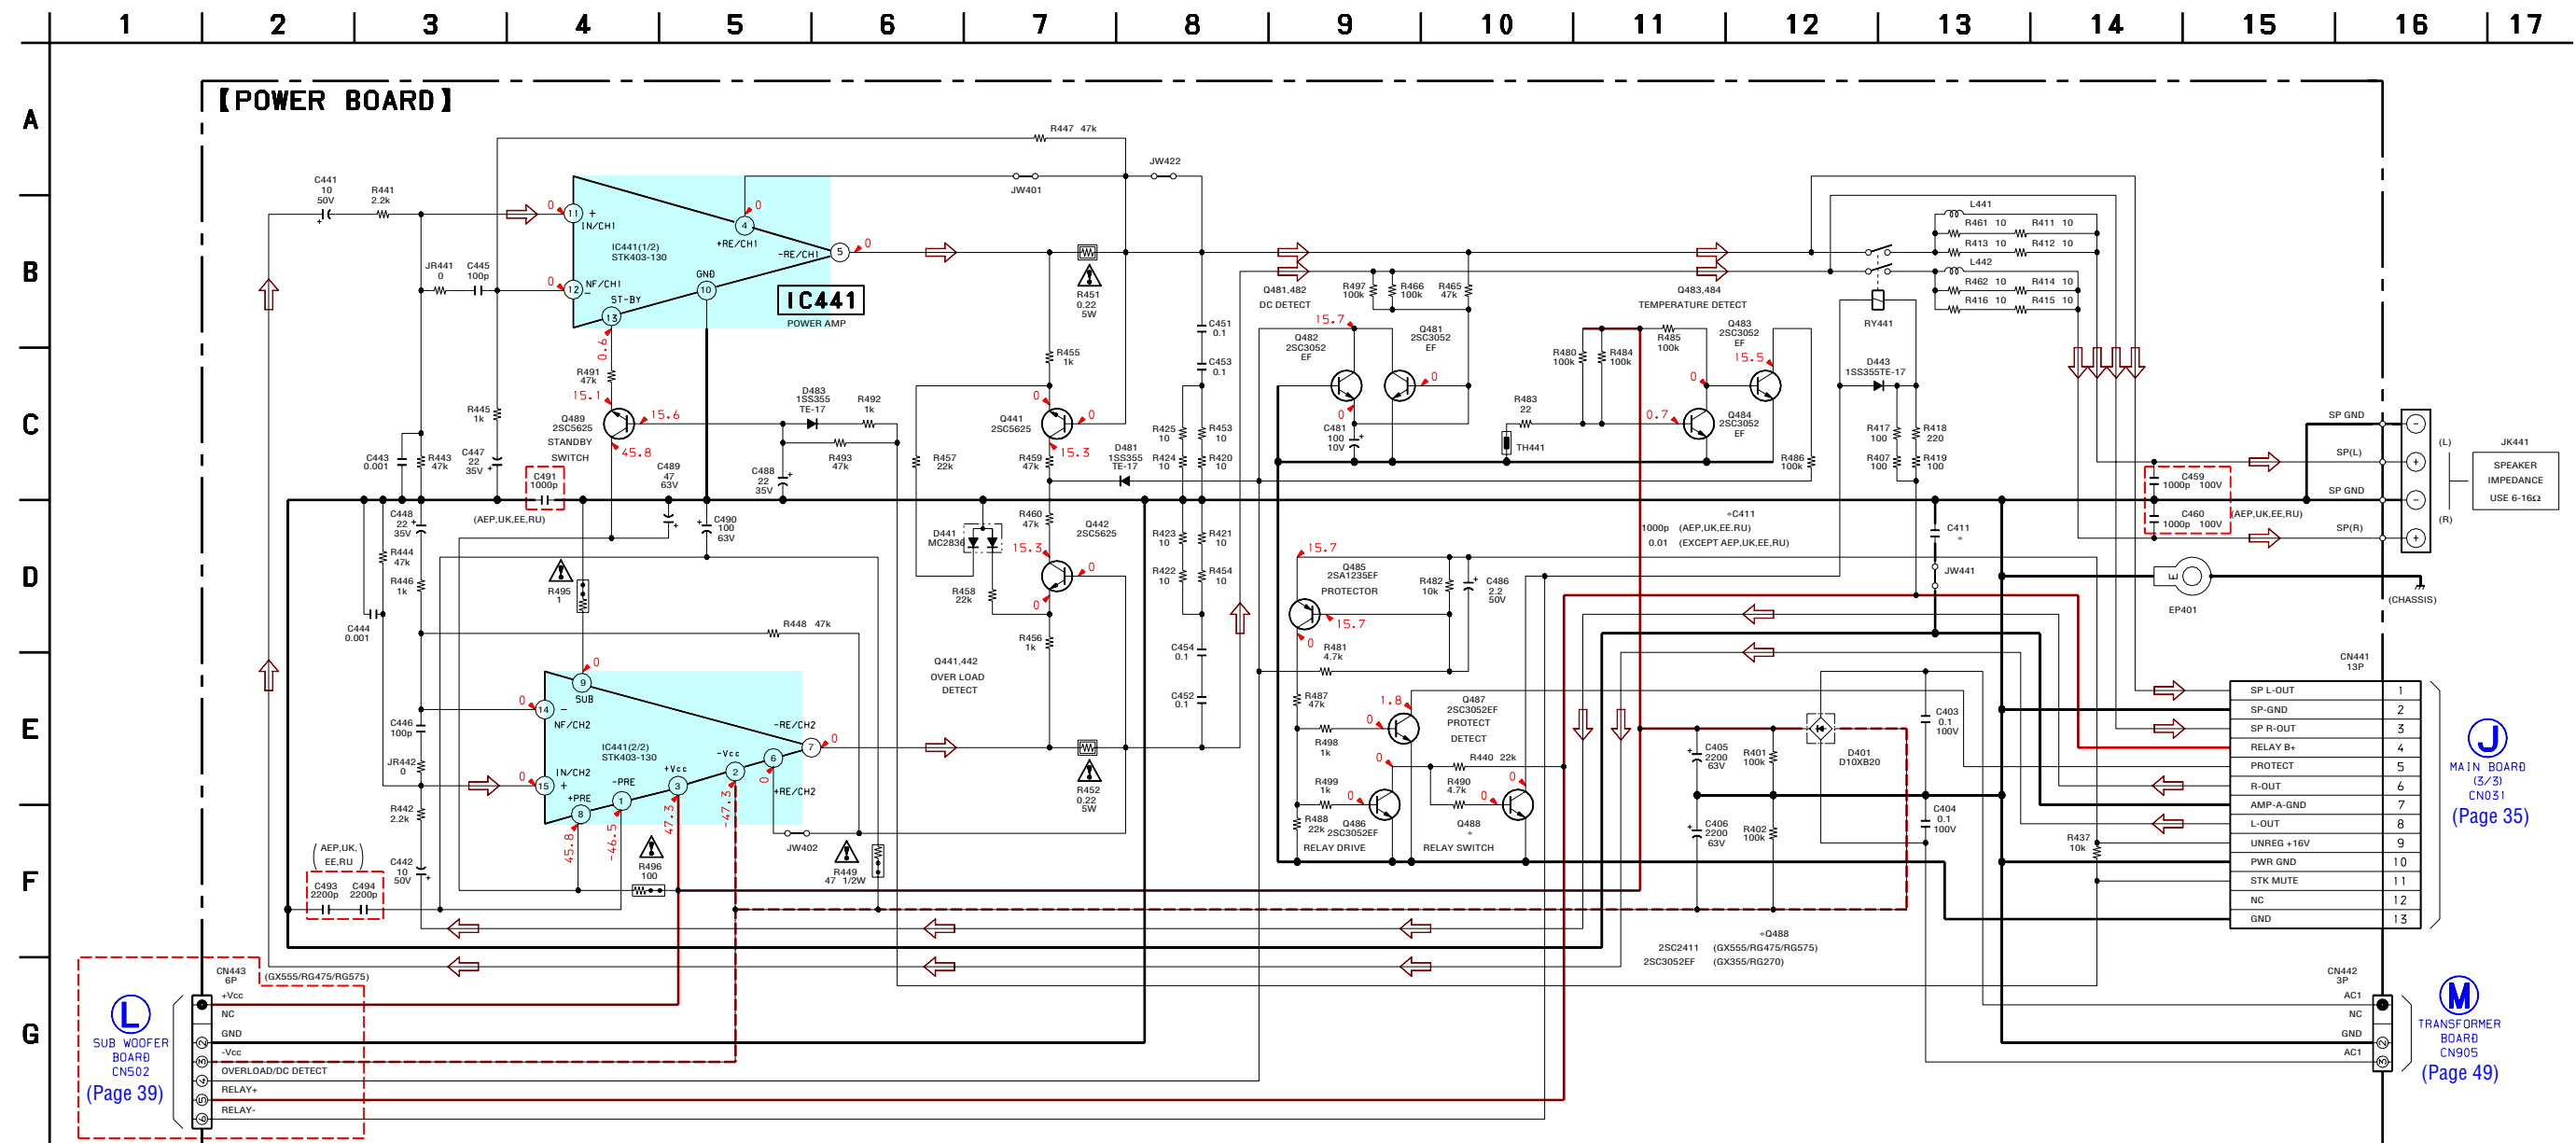




6-18. SCHEMATIC DIAGRAM – SUB WOOFER Board – (GX555/RG475/RG575 only)

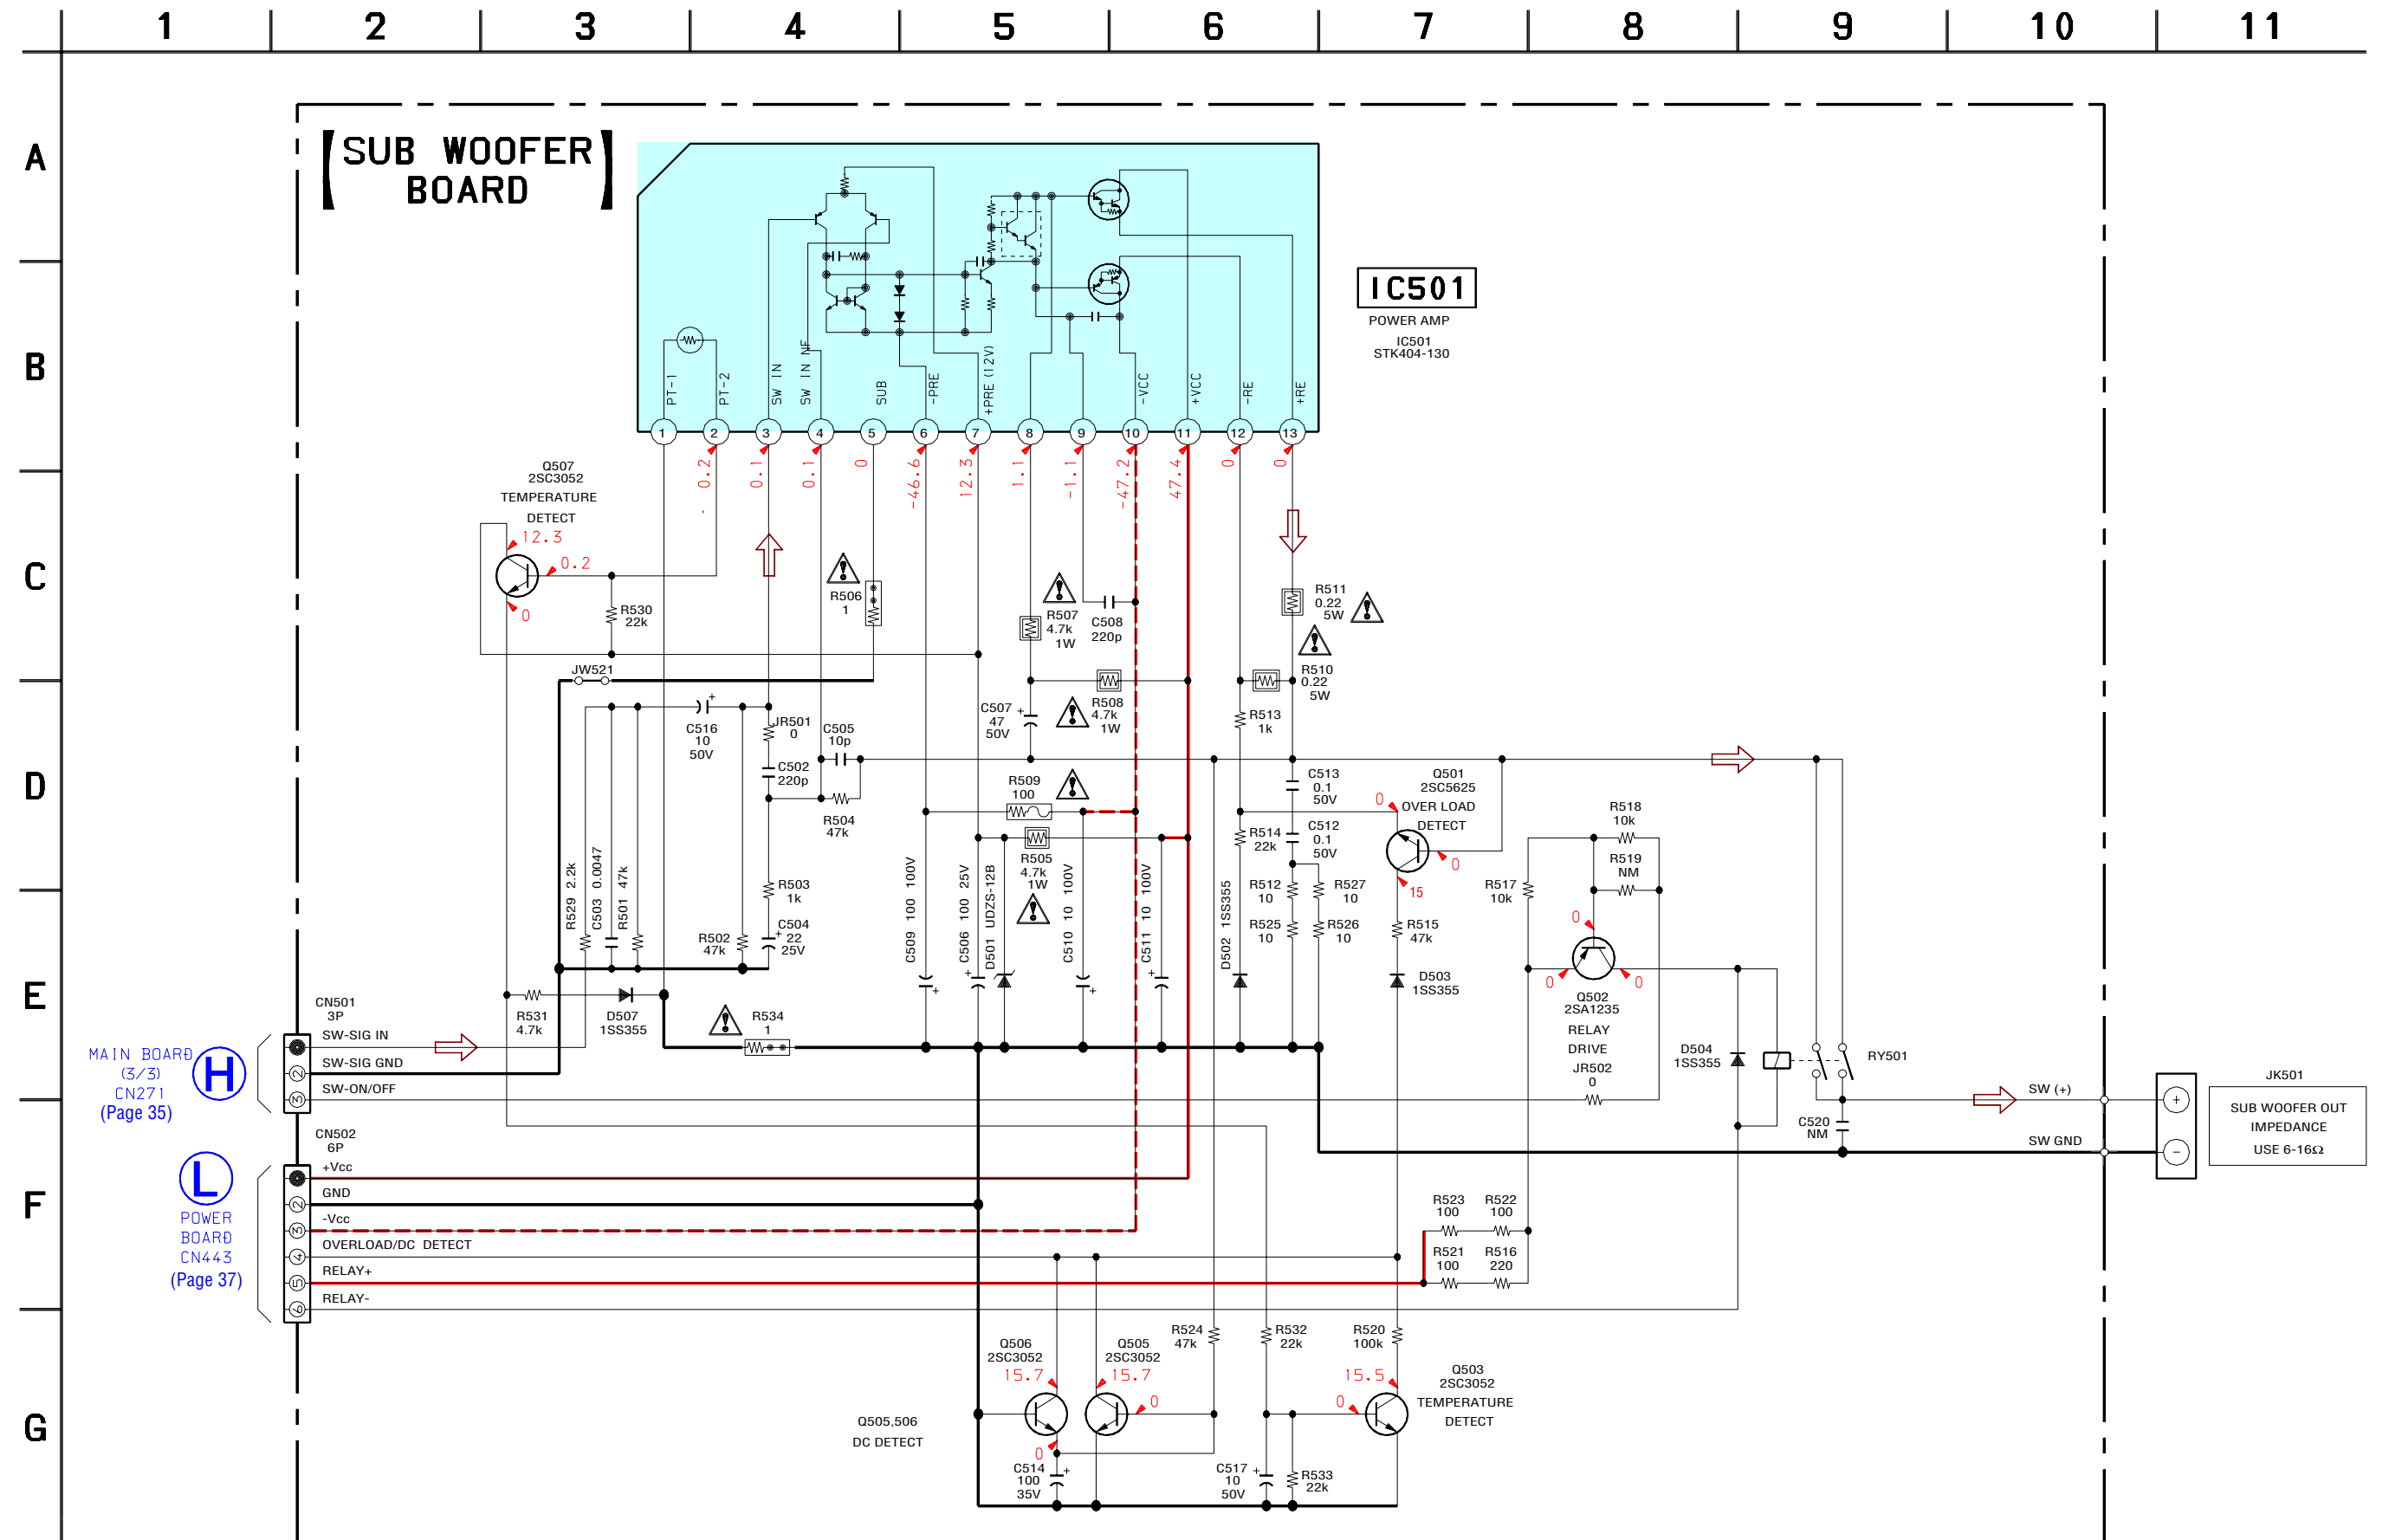




6-20. SCHEMATIC DIAGRAM – AUDIO IN, MIC, HEADPHONE Boards – • See page 50 for IC Block Diagrams.

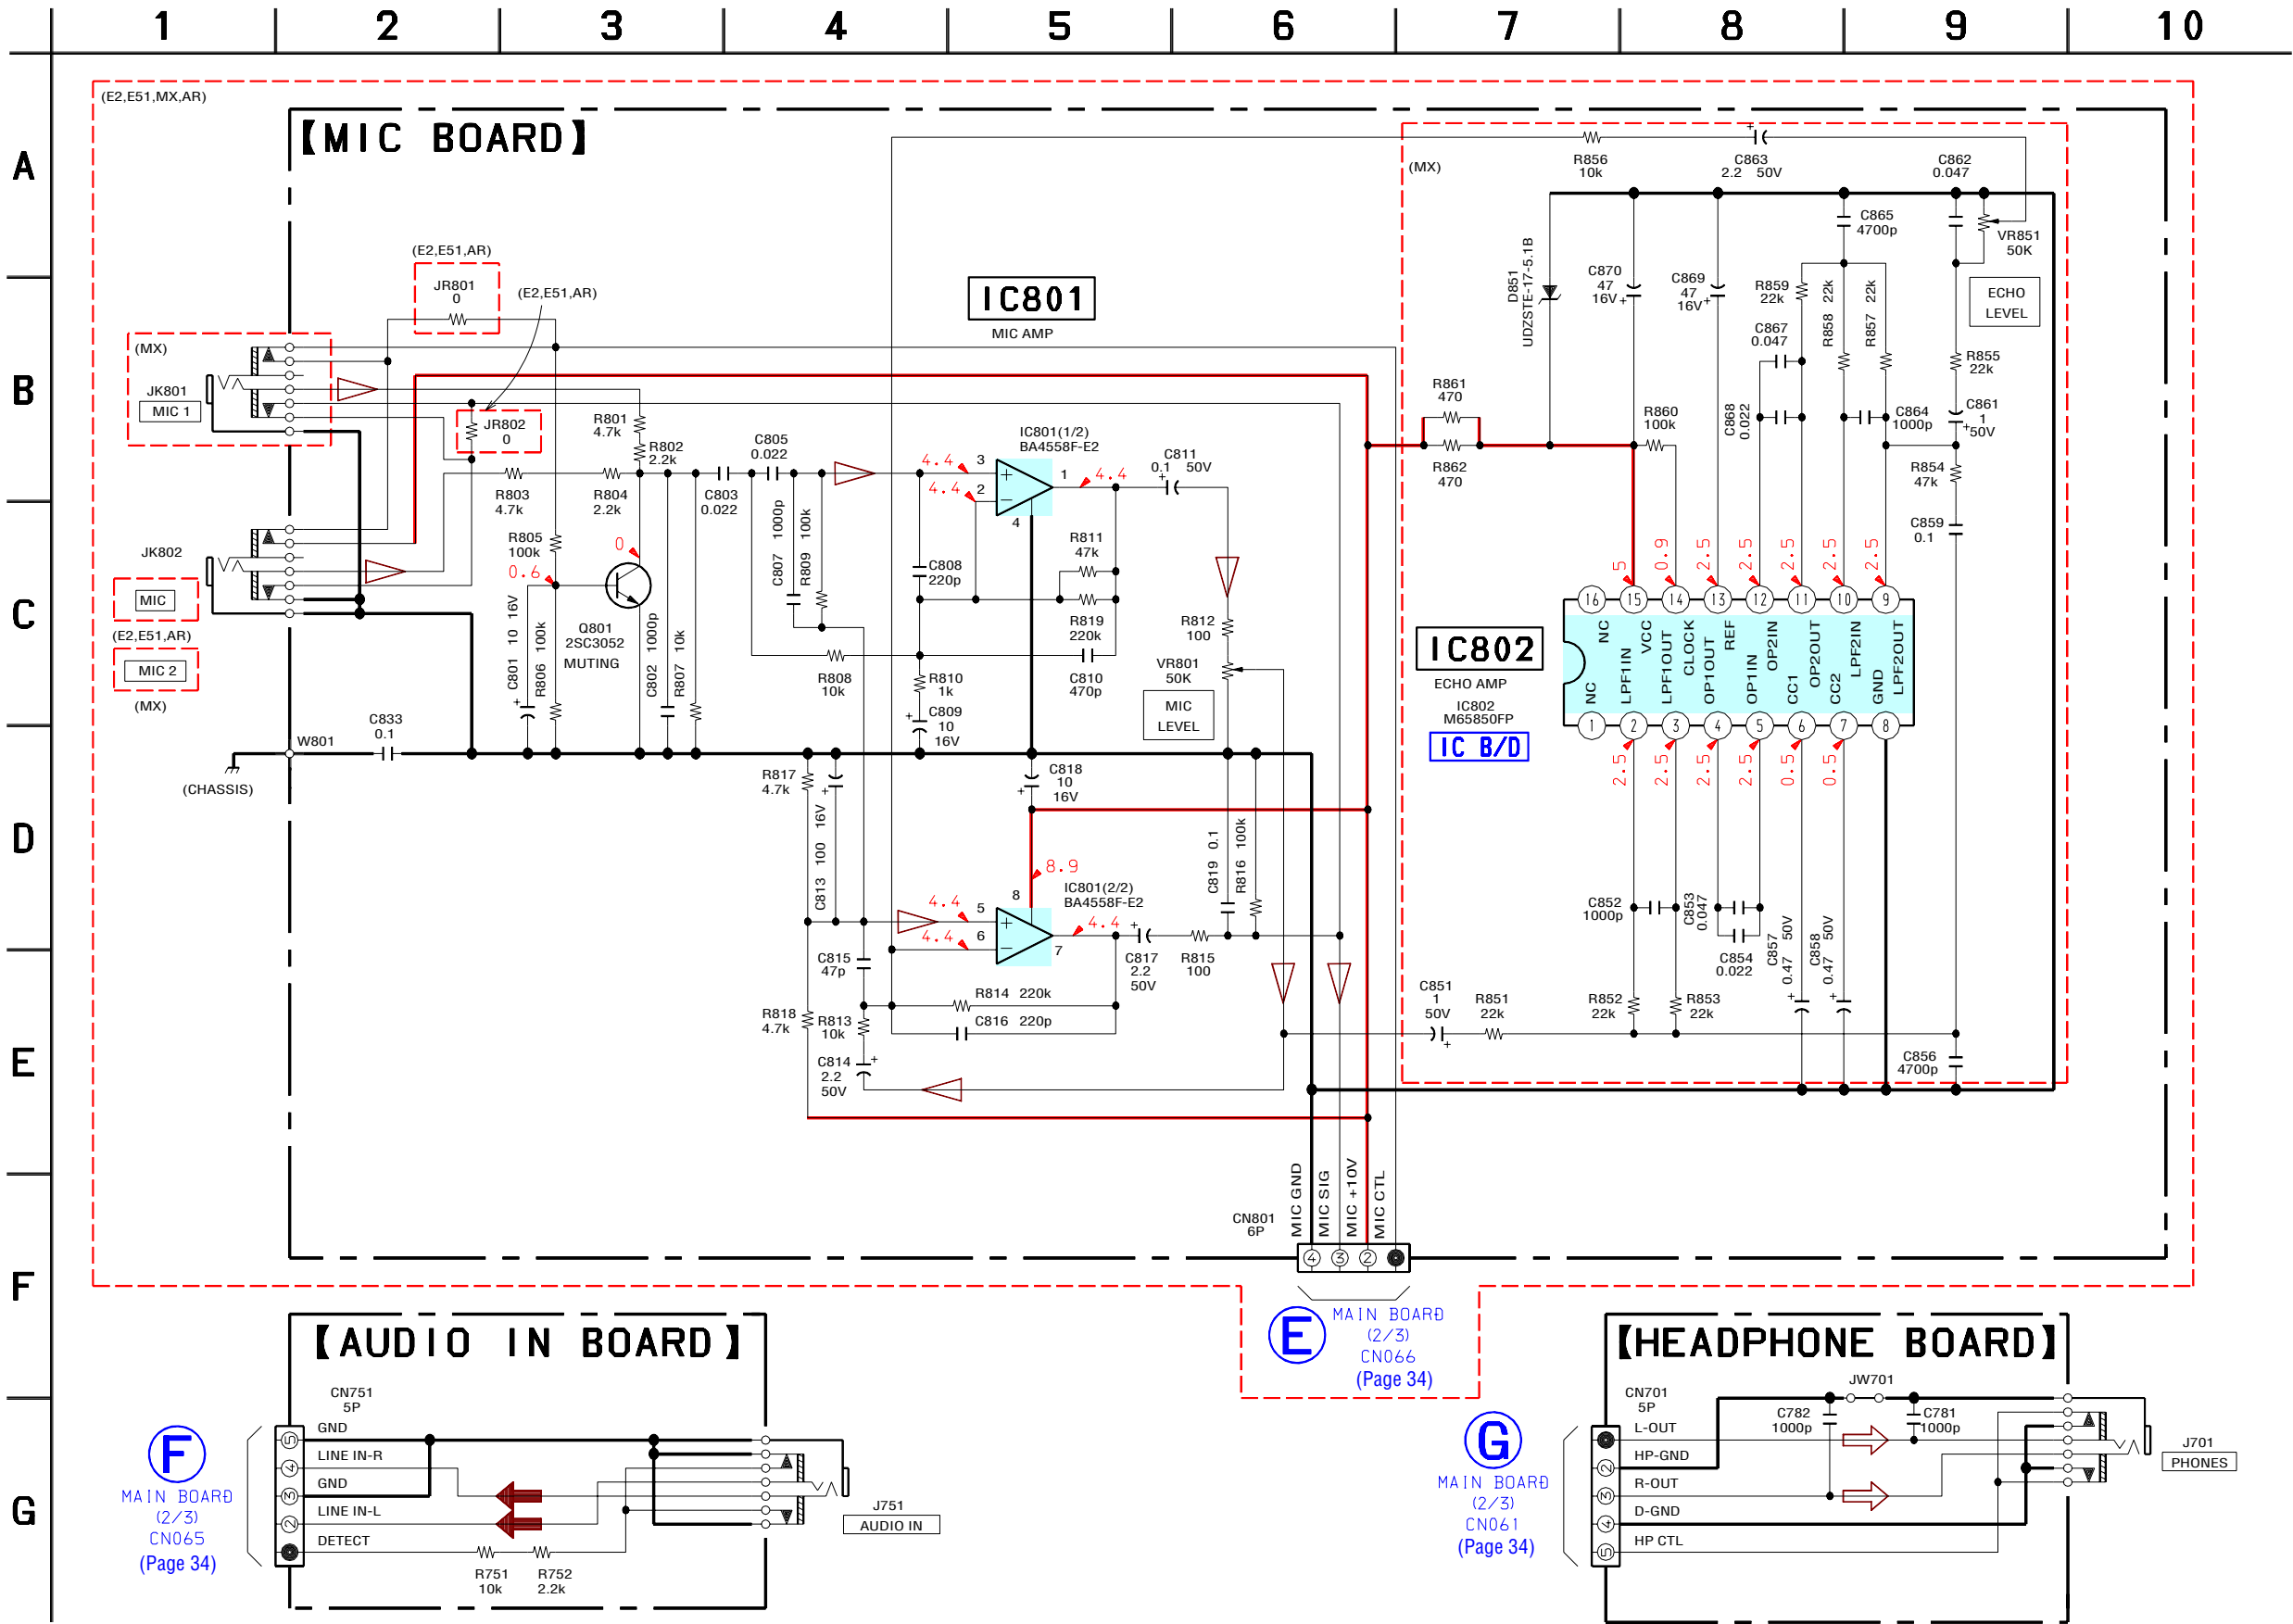

6-21. PRINTED WIRING BOARDS – CD-G Section – (MX model only) • See page 25 for Circuit Boards Location.  : Uses unleaded solder.

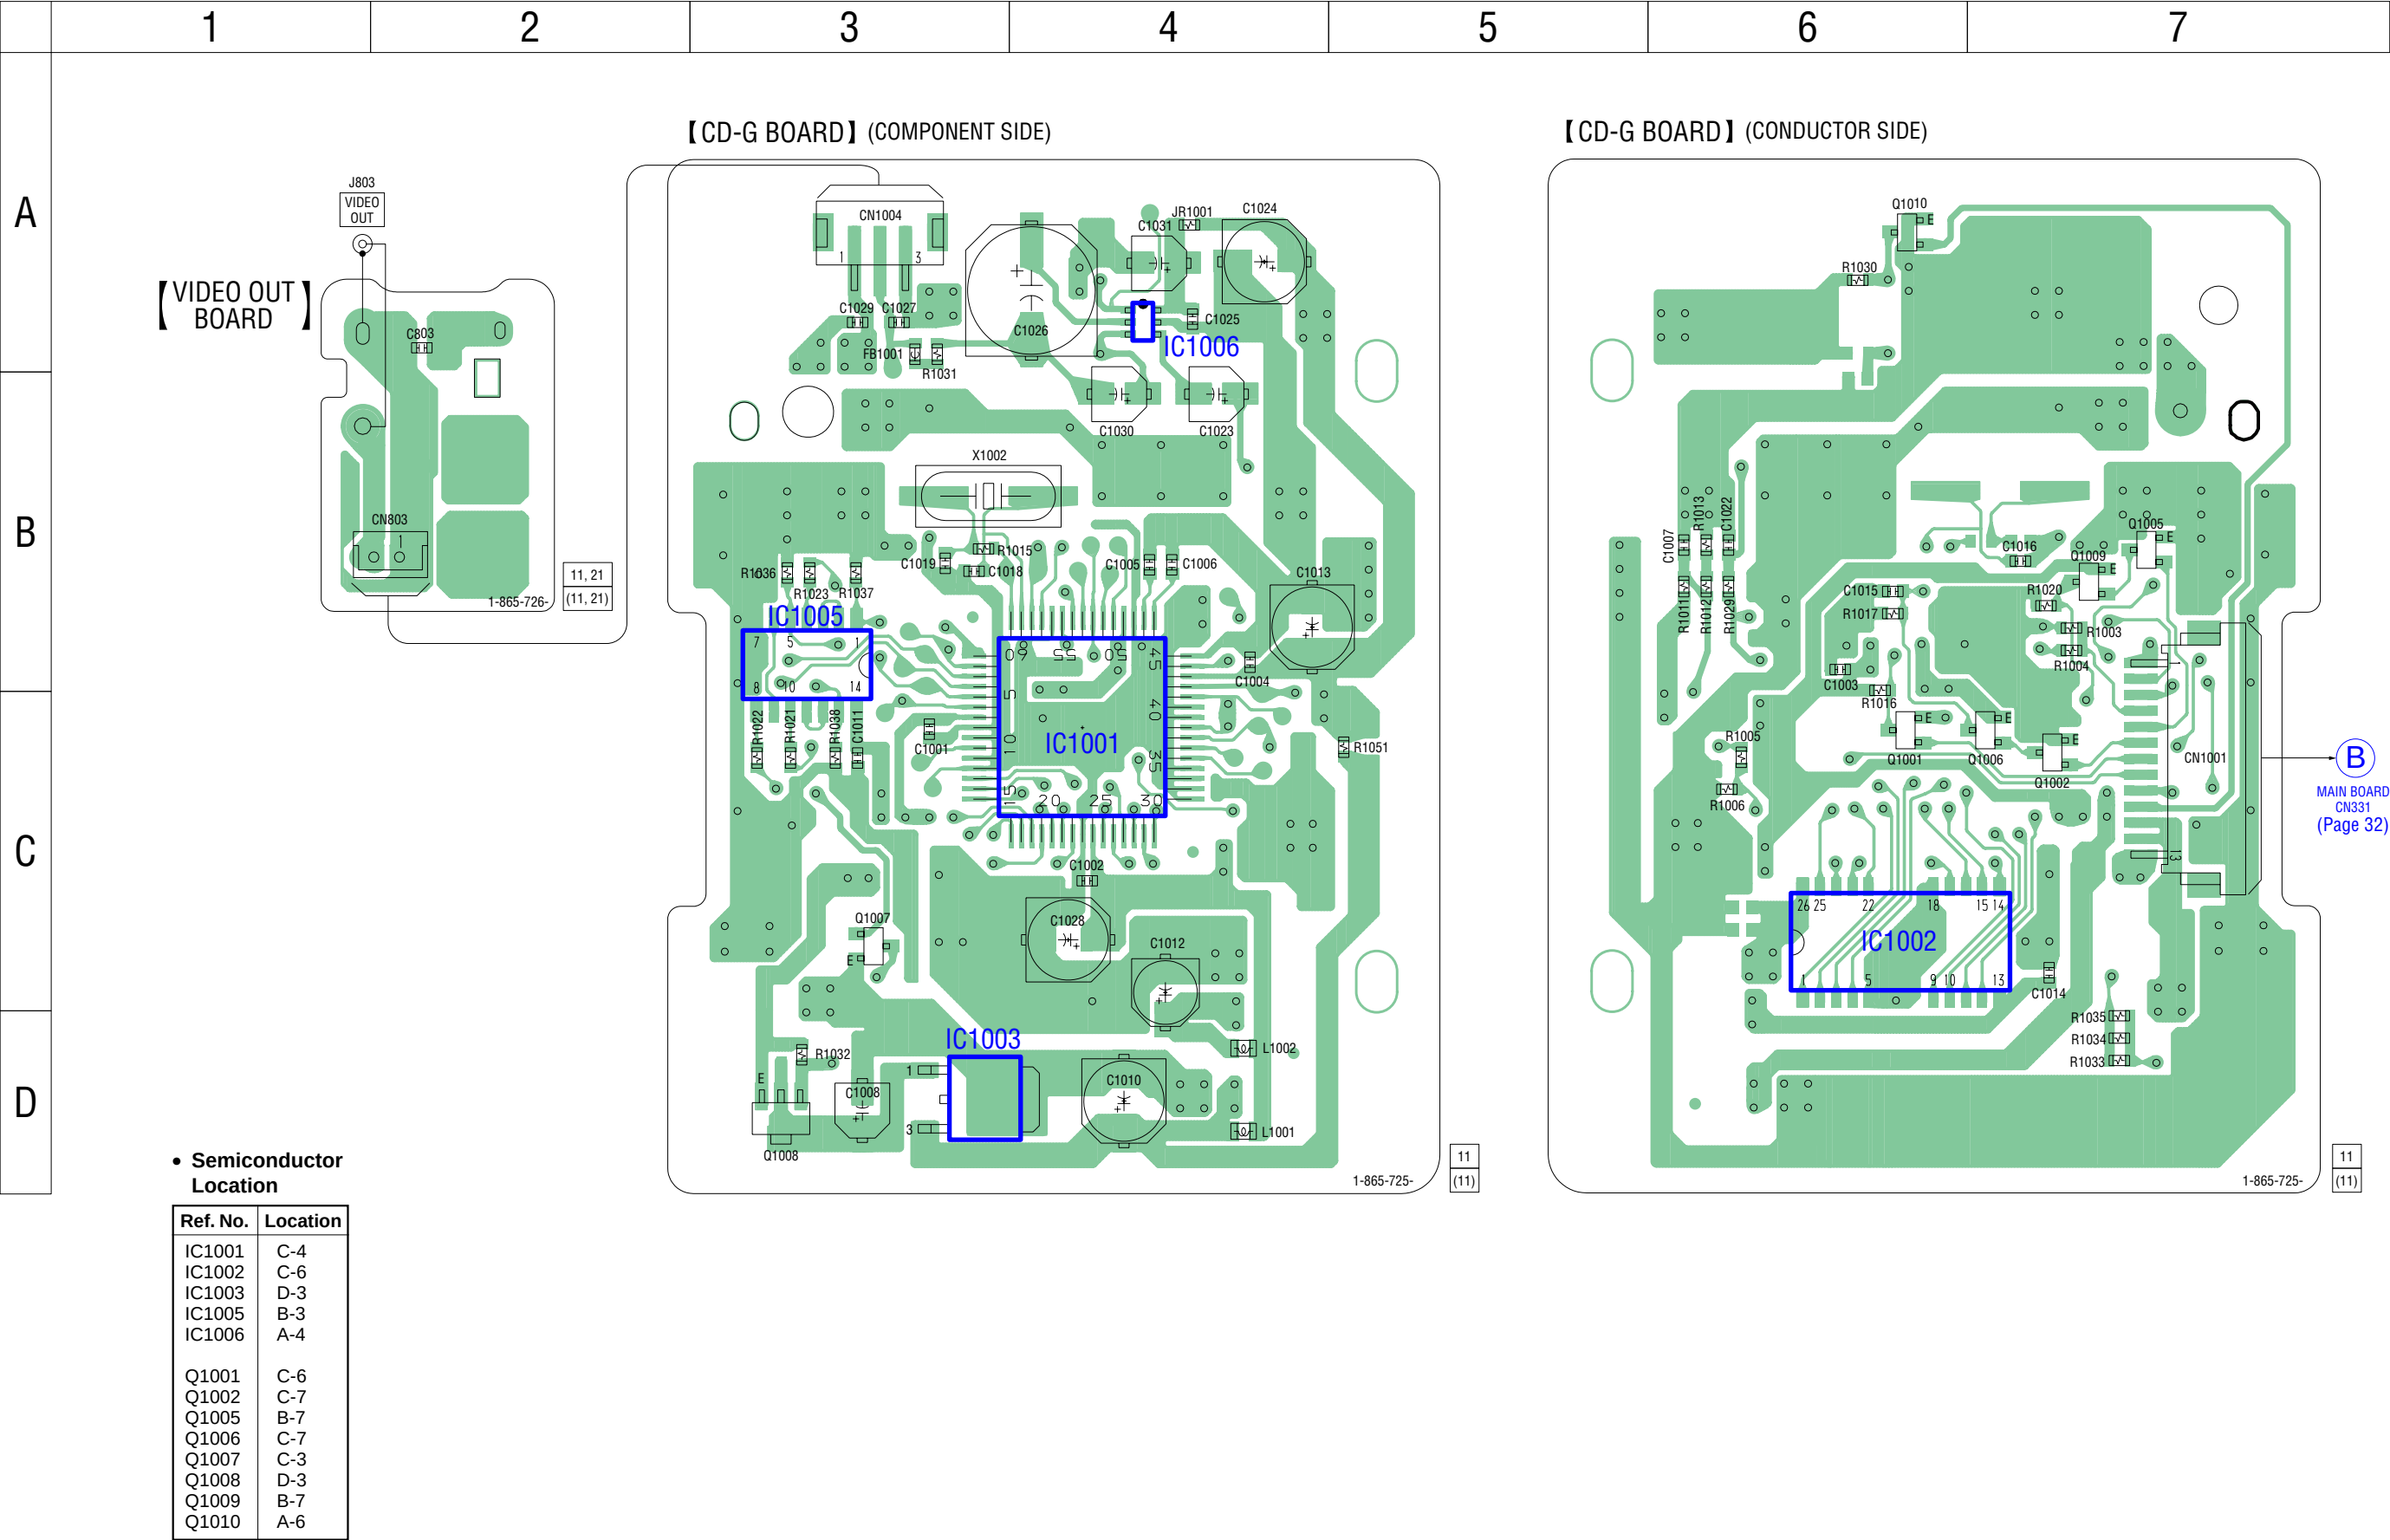

MAIN BOARD


CN331

Page 32


Semiconductor Location

Ref. No.	Location
IC1001	C-4
IC1002	C-6
IC1003	D-3
IC1005	B-3
IC1006	A-4
Q1001	C-6
Q1002	C-7
Q1005	B-7
Q1006	C-7
Q1007	C-3
Q1008	D-3
Q1009	B-7
Q1010	A-6

6-22. SCHEMATIC DIAGRAM – CD-G Section – (MX model only) • See page 50 for Waveforms. • See page 50 for IC Block Diagrams. • See page 60 for IC Pin Function Description.

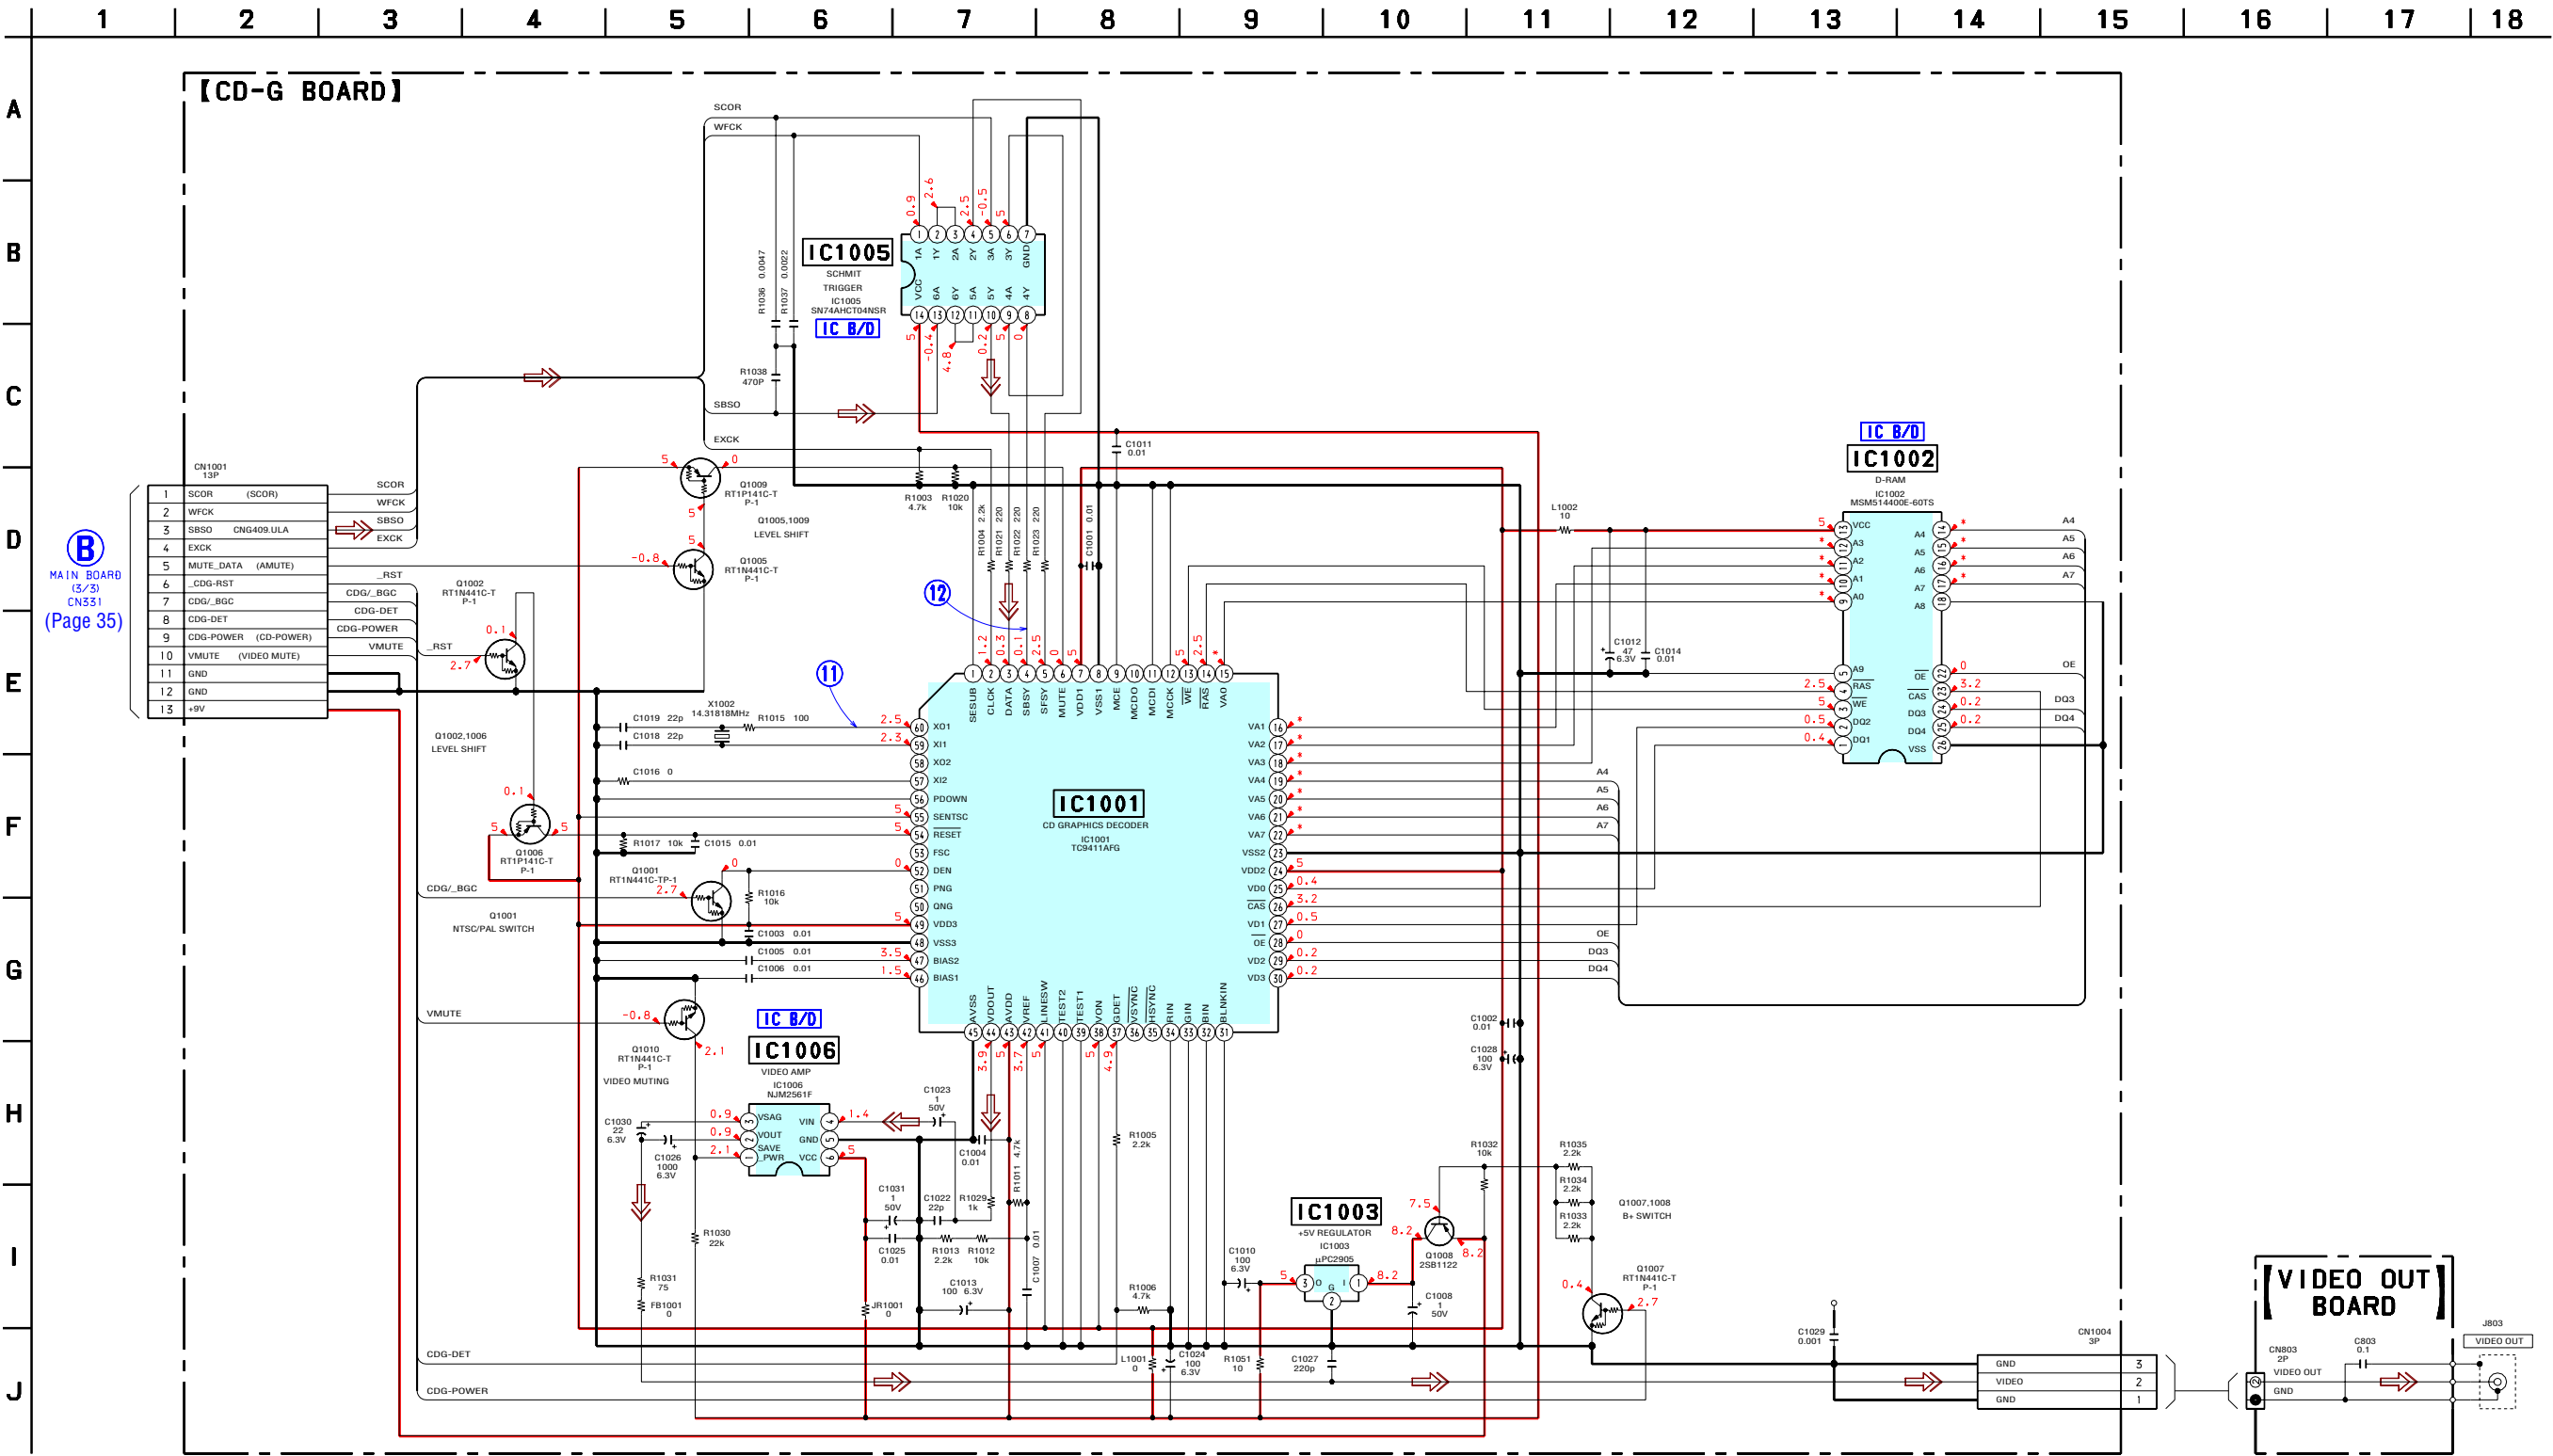


6-23. PRINTED WIRING BOARD – PANEL Section (1/2) – • See page 25 for Circuit Boards Location.  : Uses unleaded solder.

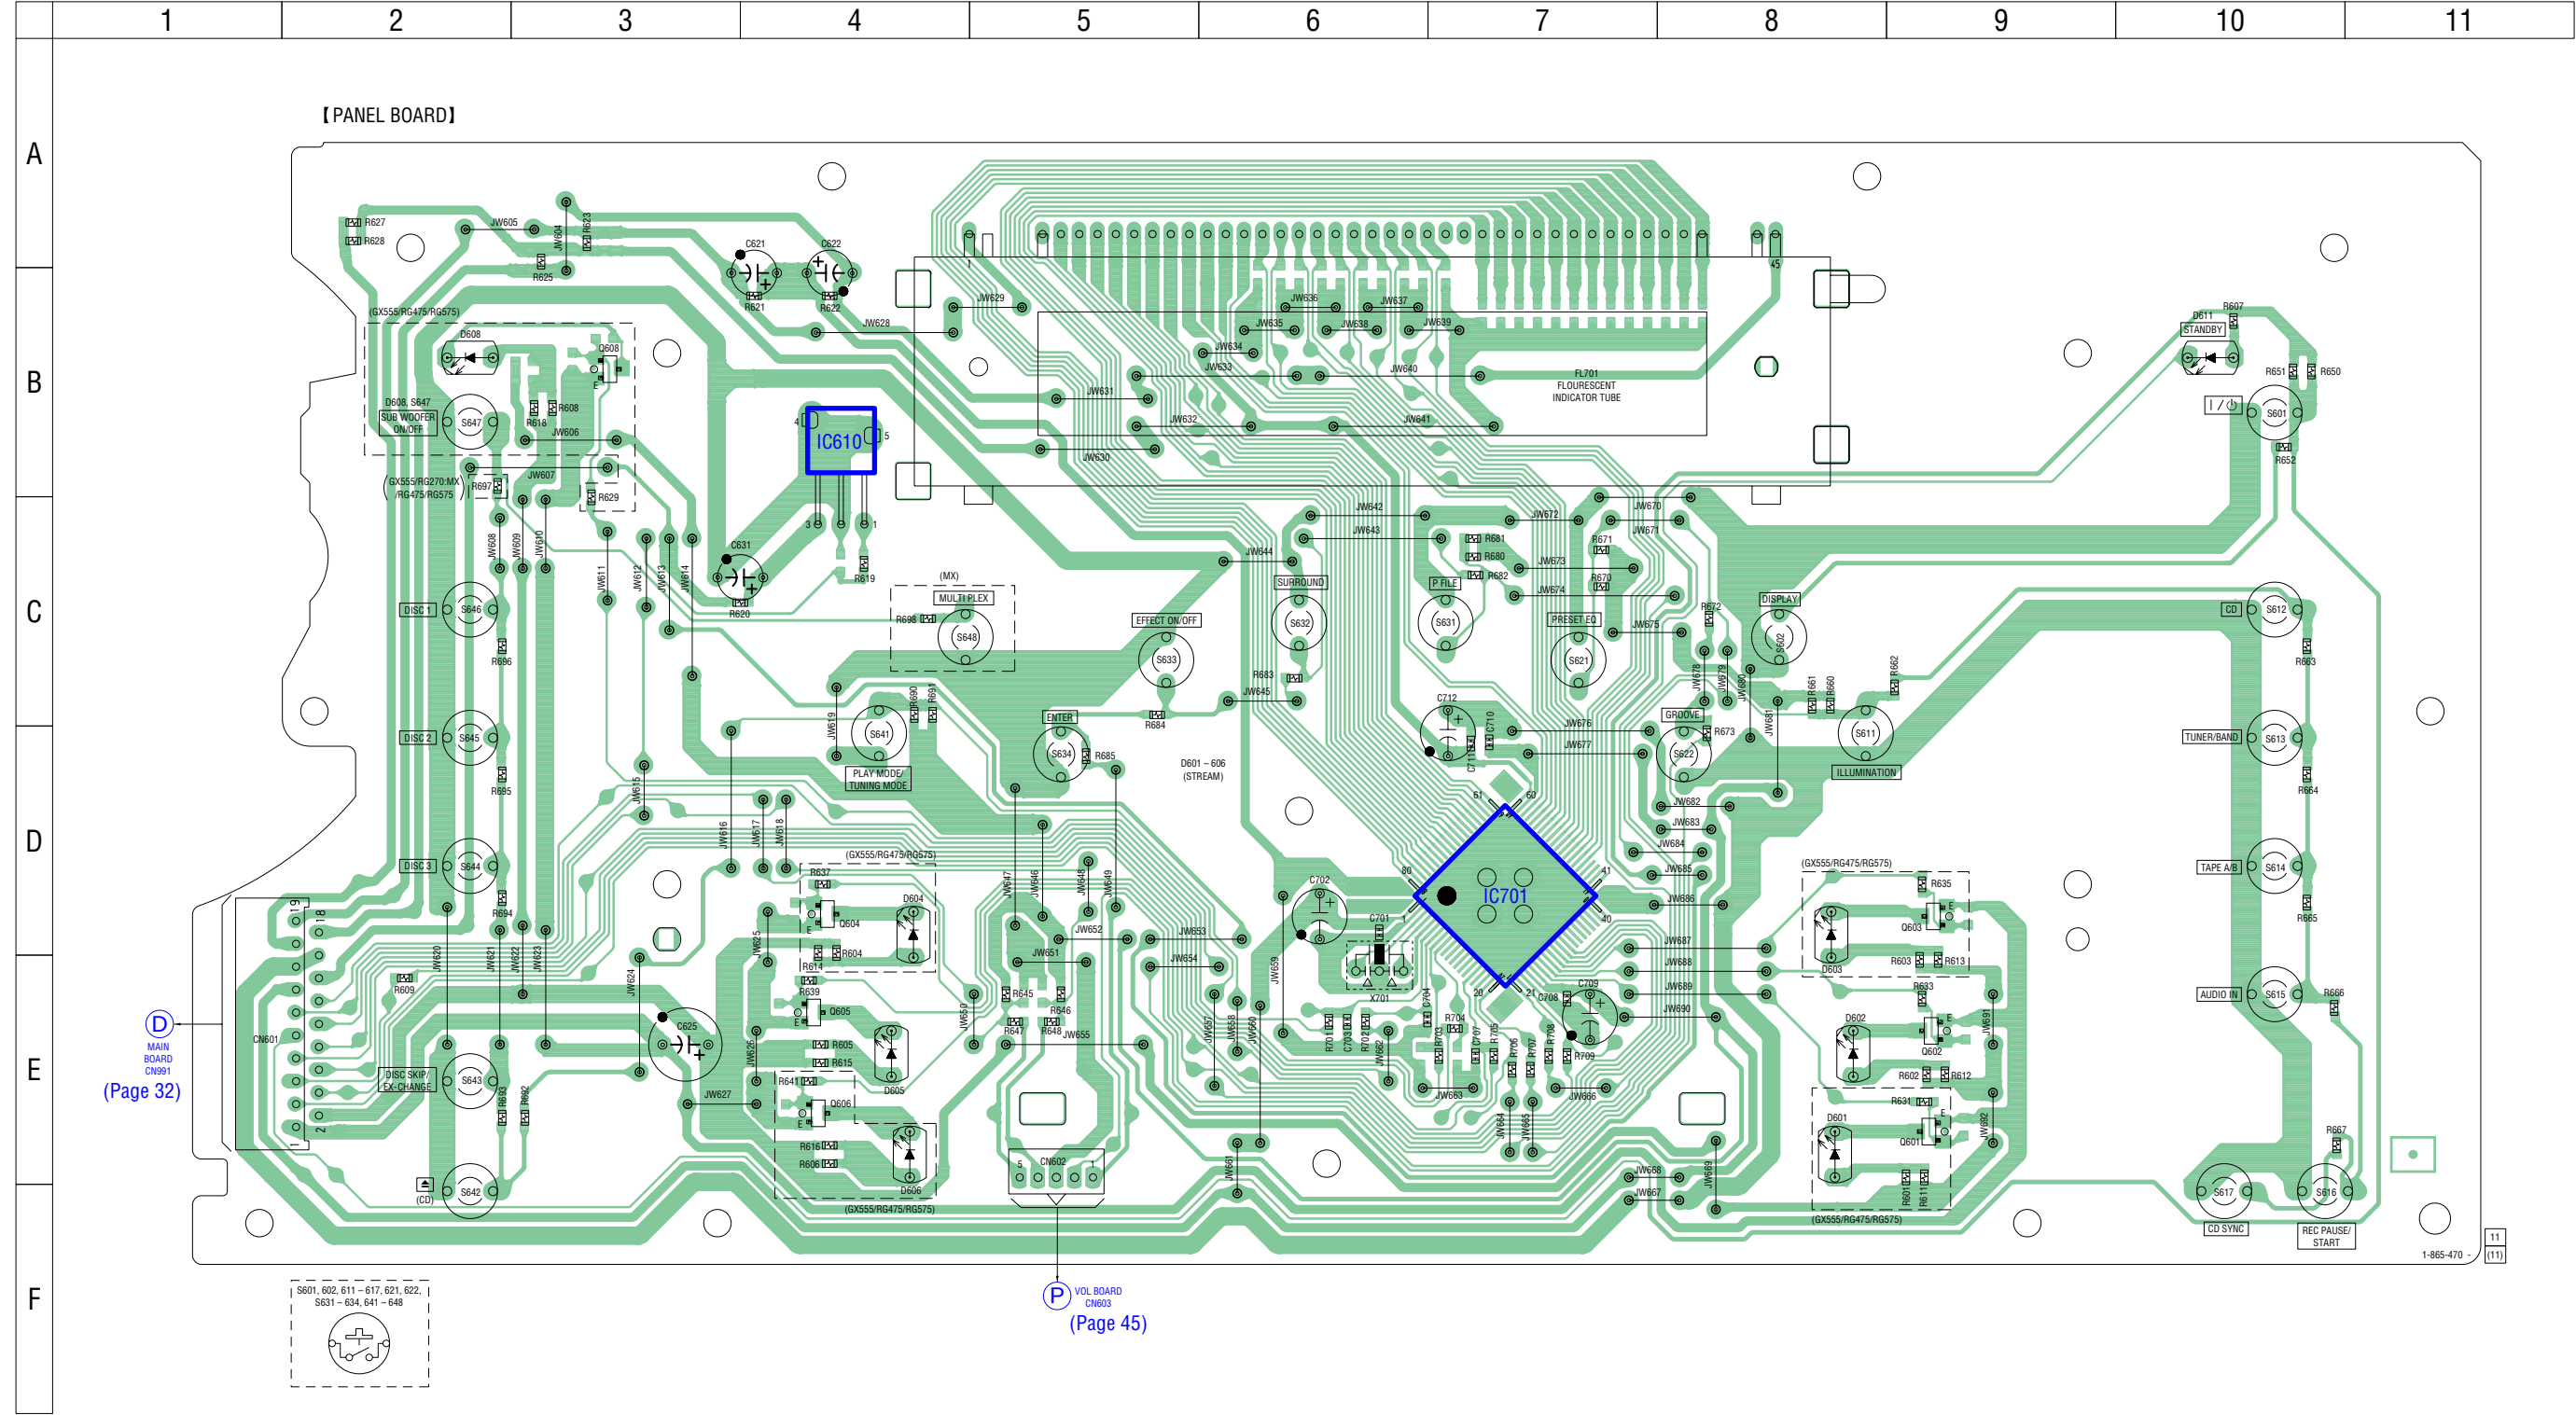


• Semiconductor Location

Ref. No.	Location	Ref. No.	Location
D601	E-8	Q601	E-9
D602	E-8	Q602	E-9
D603	D-8	Q603	D-9
D604	D-4	Q604	D-4
D605	E-4	Q605	E-4
D606	E-4	Q606	E-4
D608	B-2	Q608	B-3
D611	B-10		
IC610	B-4		
IC701	D-7		


6-24. PRINTED WIRING BOARD – PANEL Section (1/2) – • See page 25 for Circuit Boards Location.  : Uses unleaded solder.

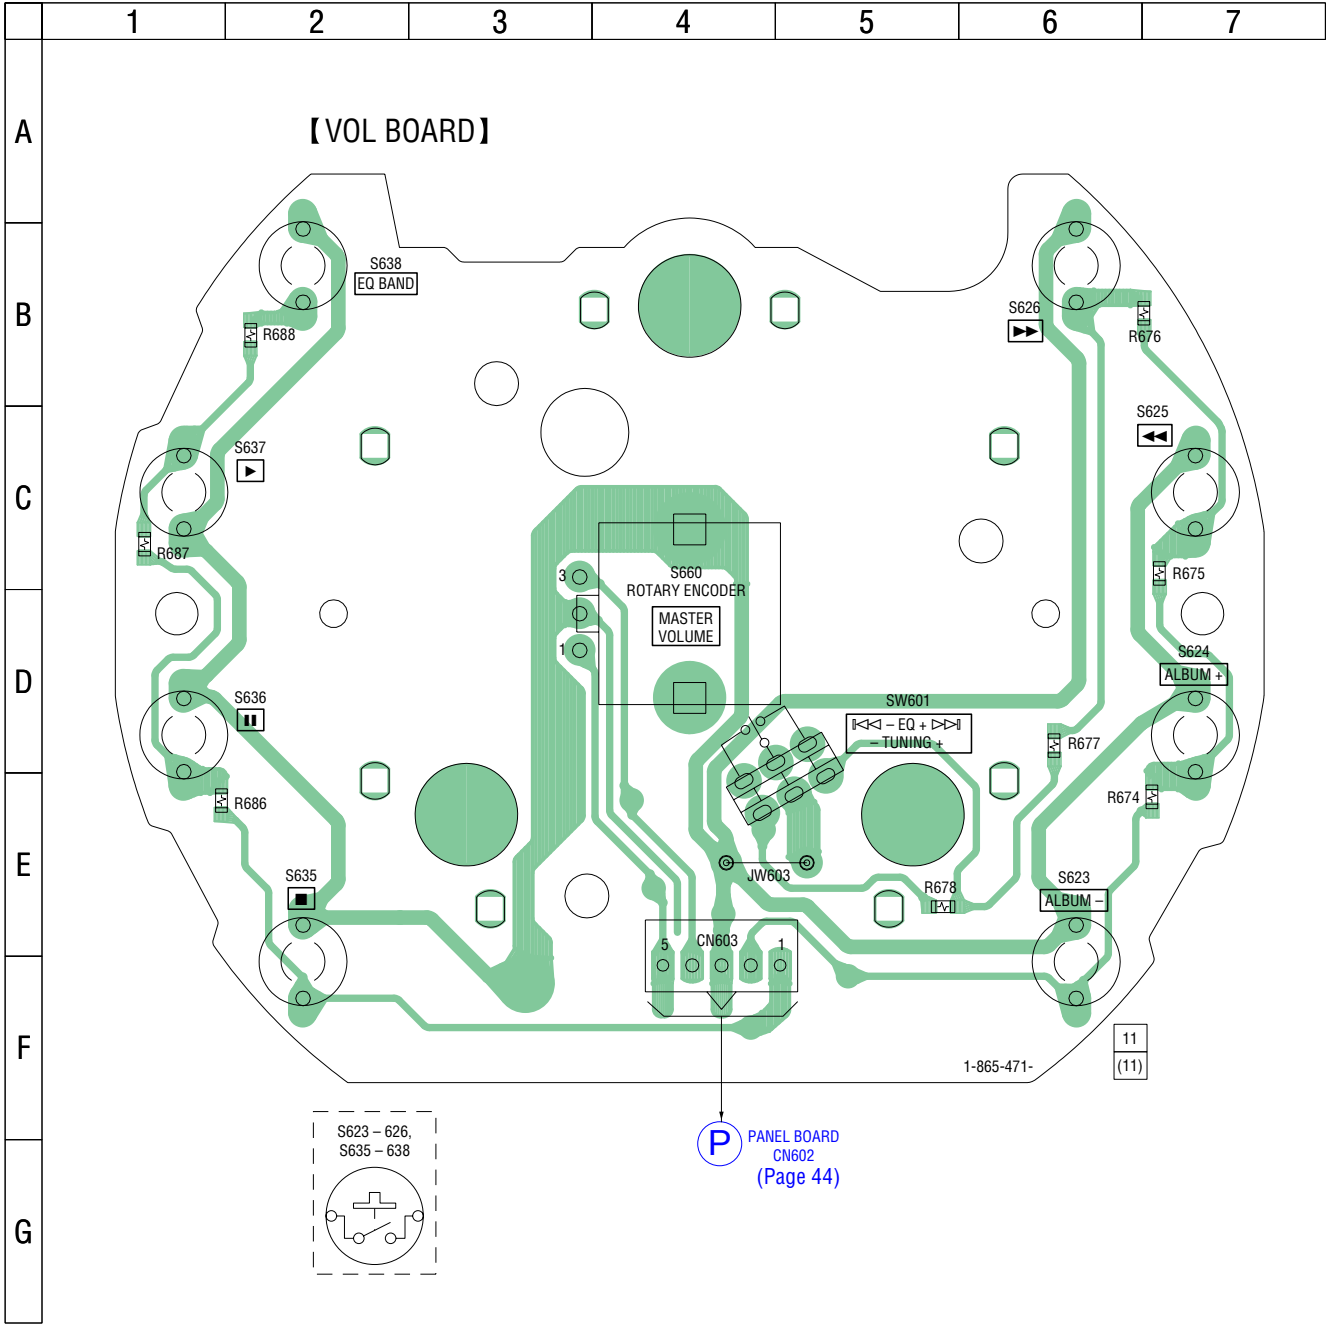

6-25. SCHEMATIC DIAGRAM – PANEL Section (1/2) – • See page 60 for IC Pin Function Description.

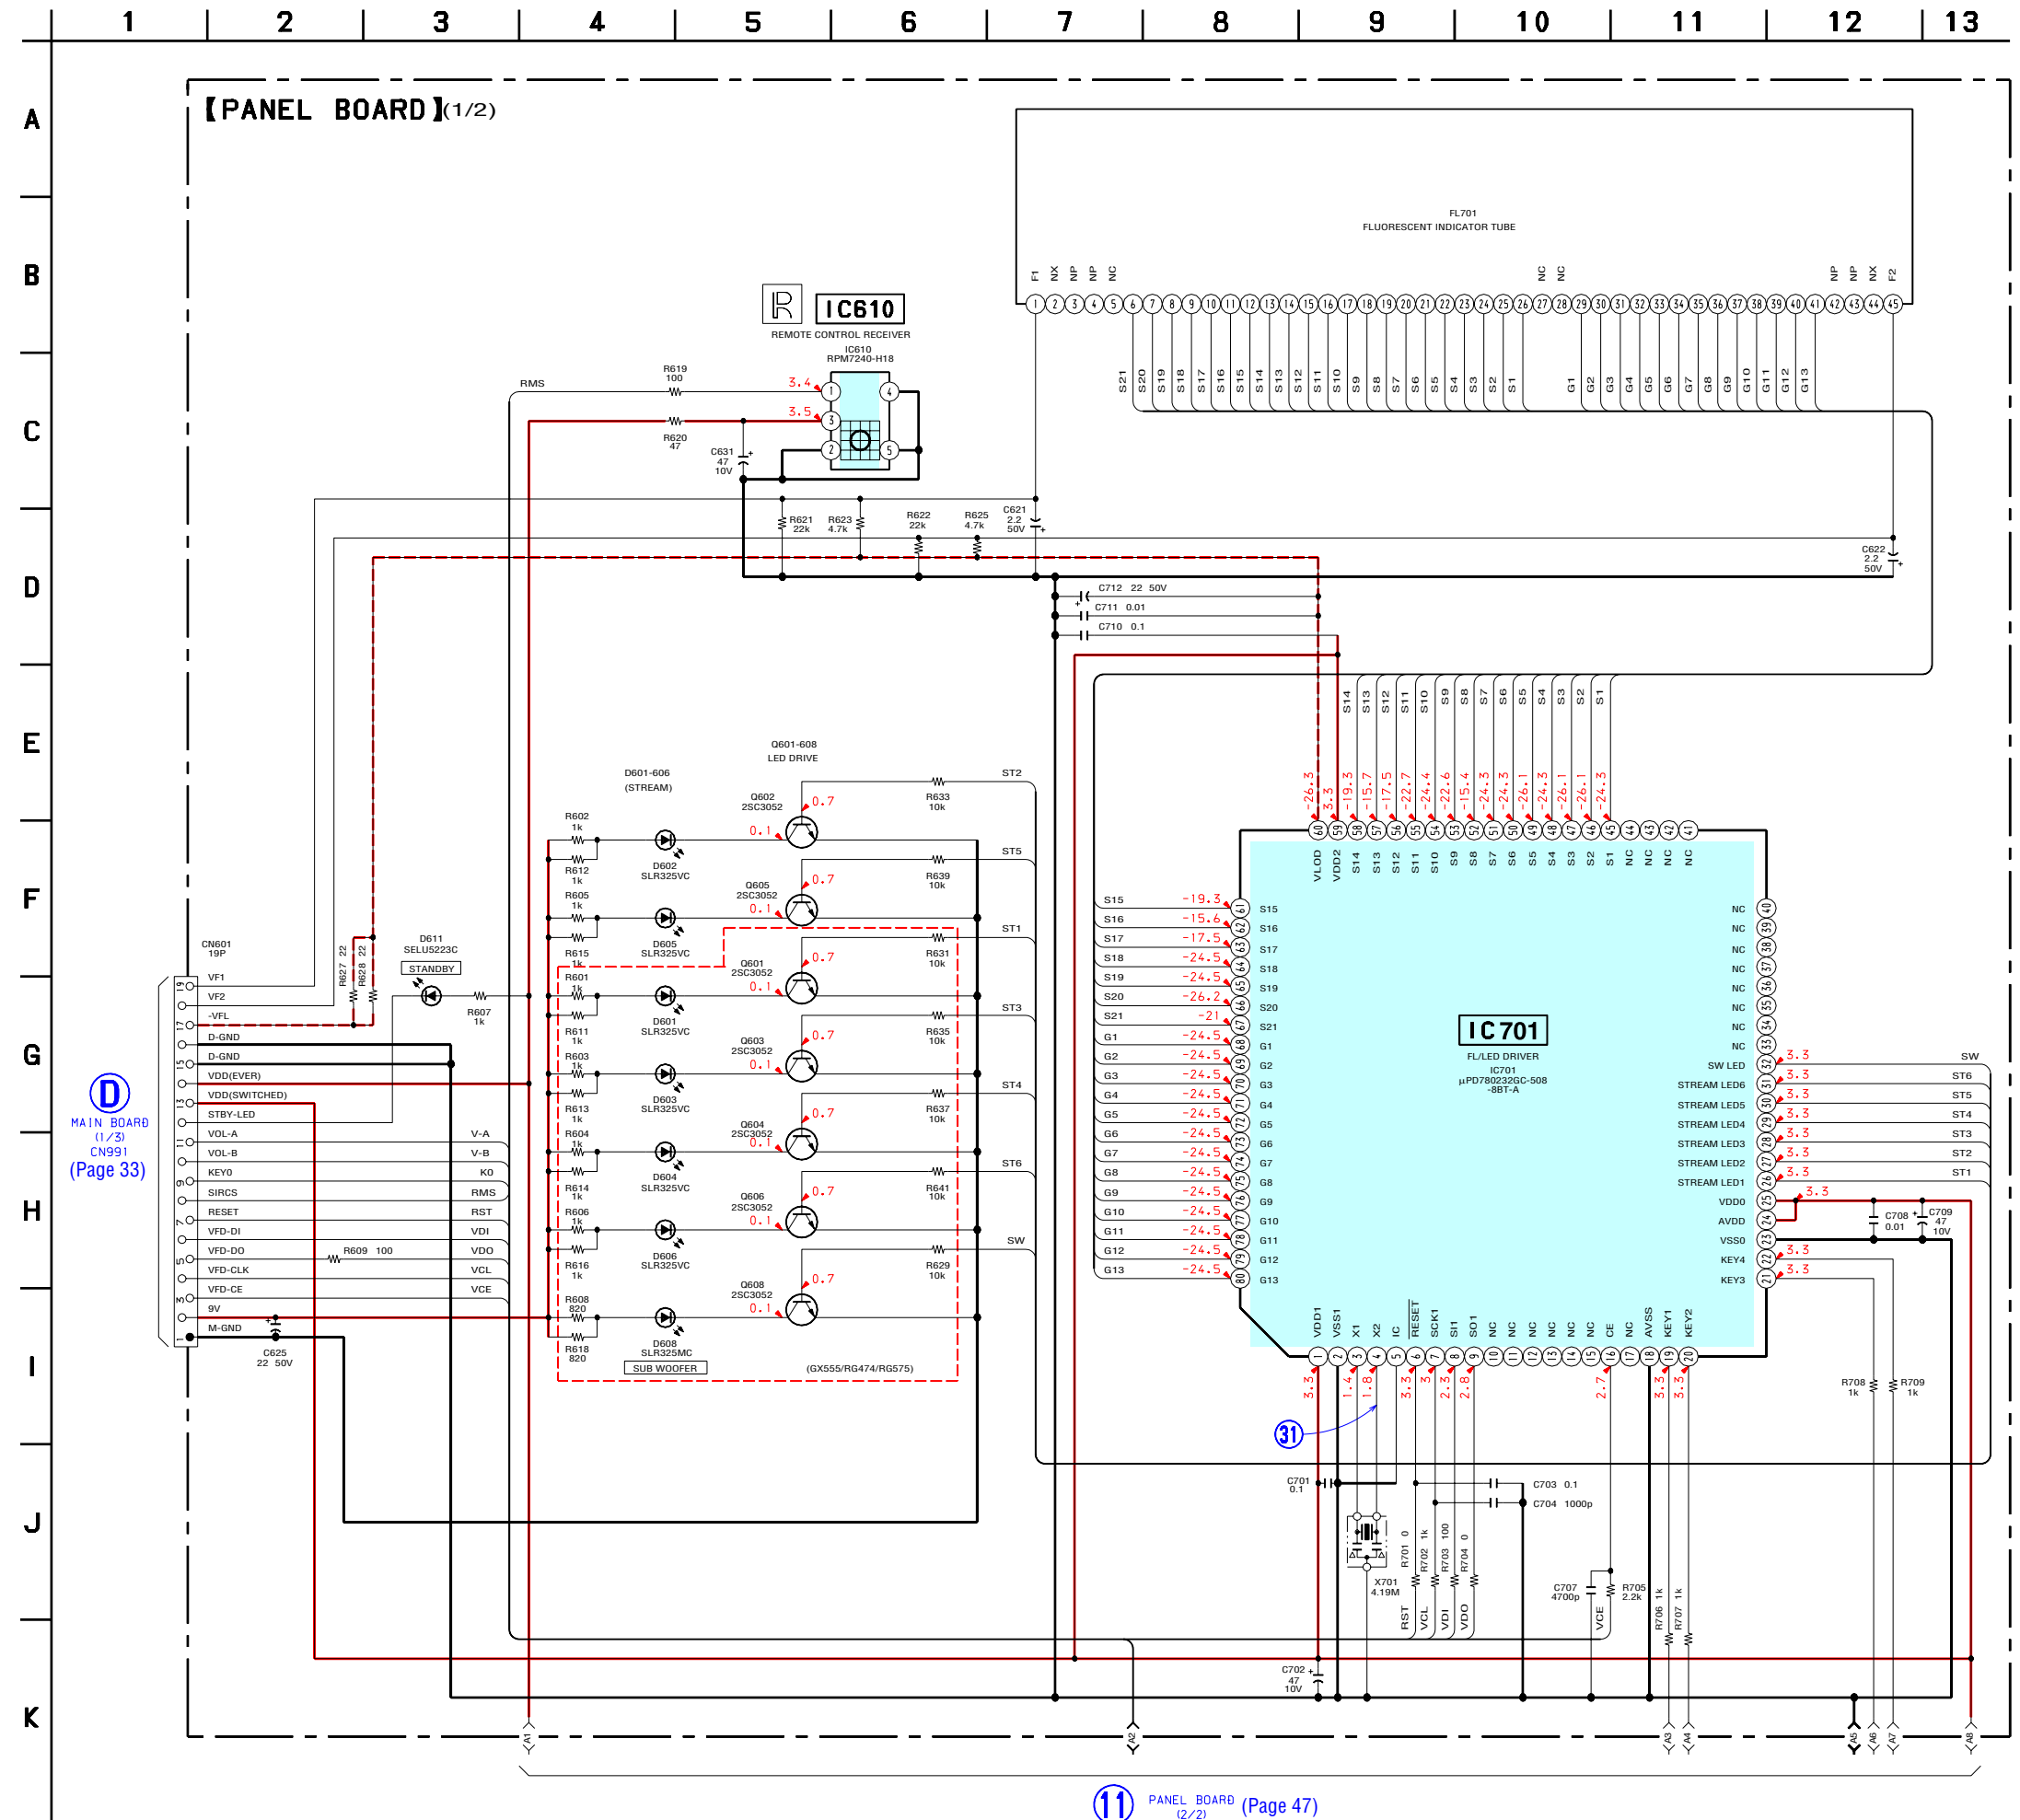


6-26. SCHEMATIC DIAGRAM – PANEL Section (2/2) –

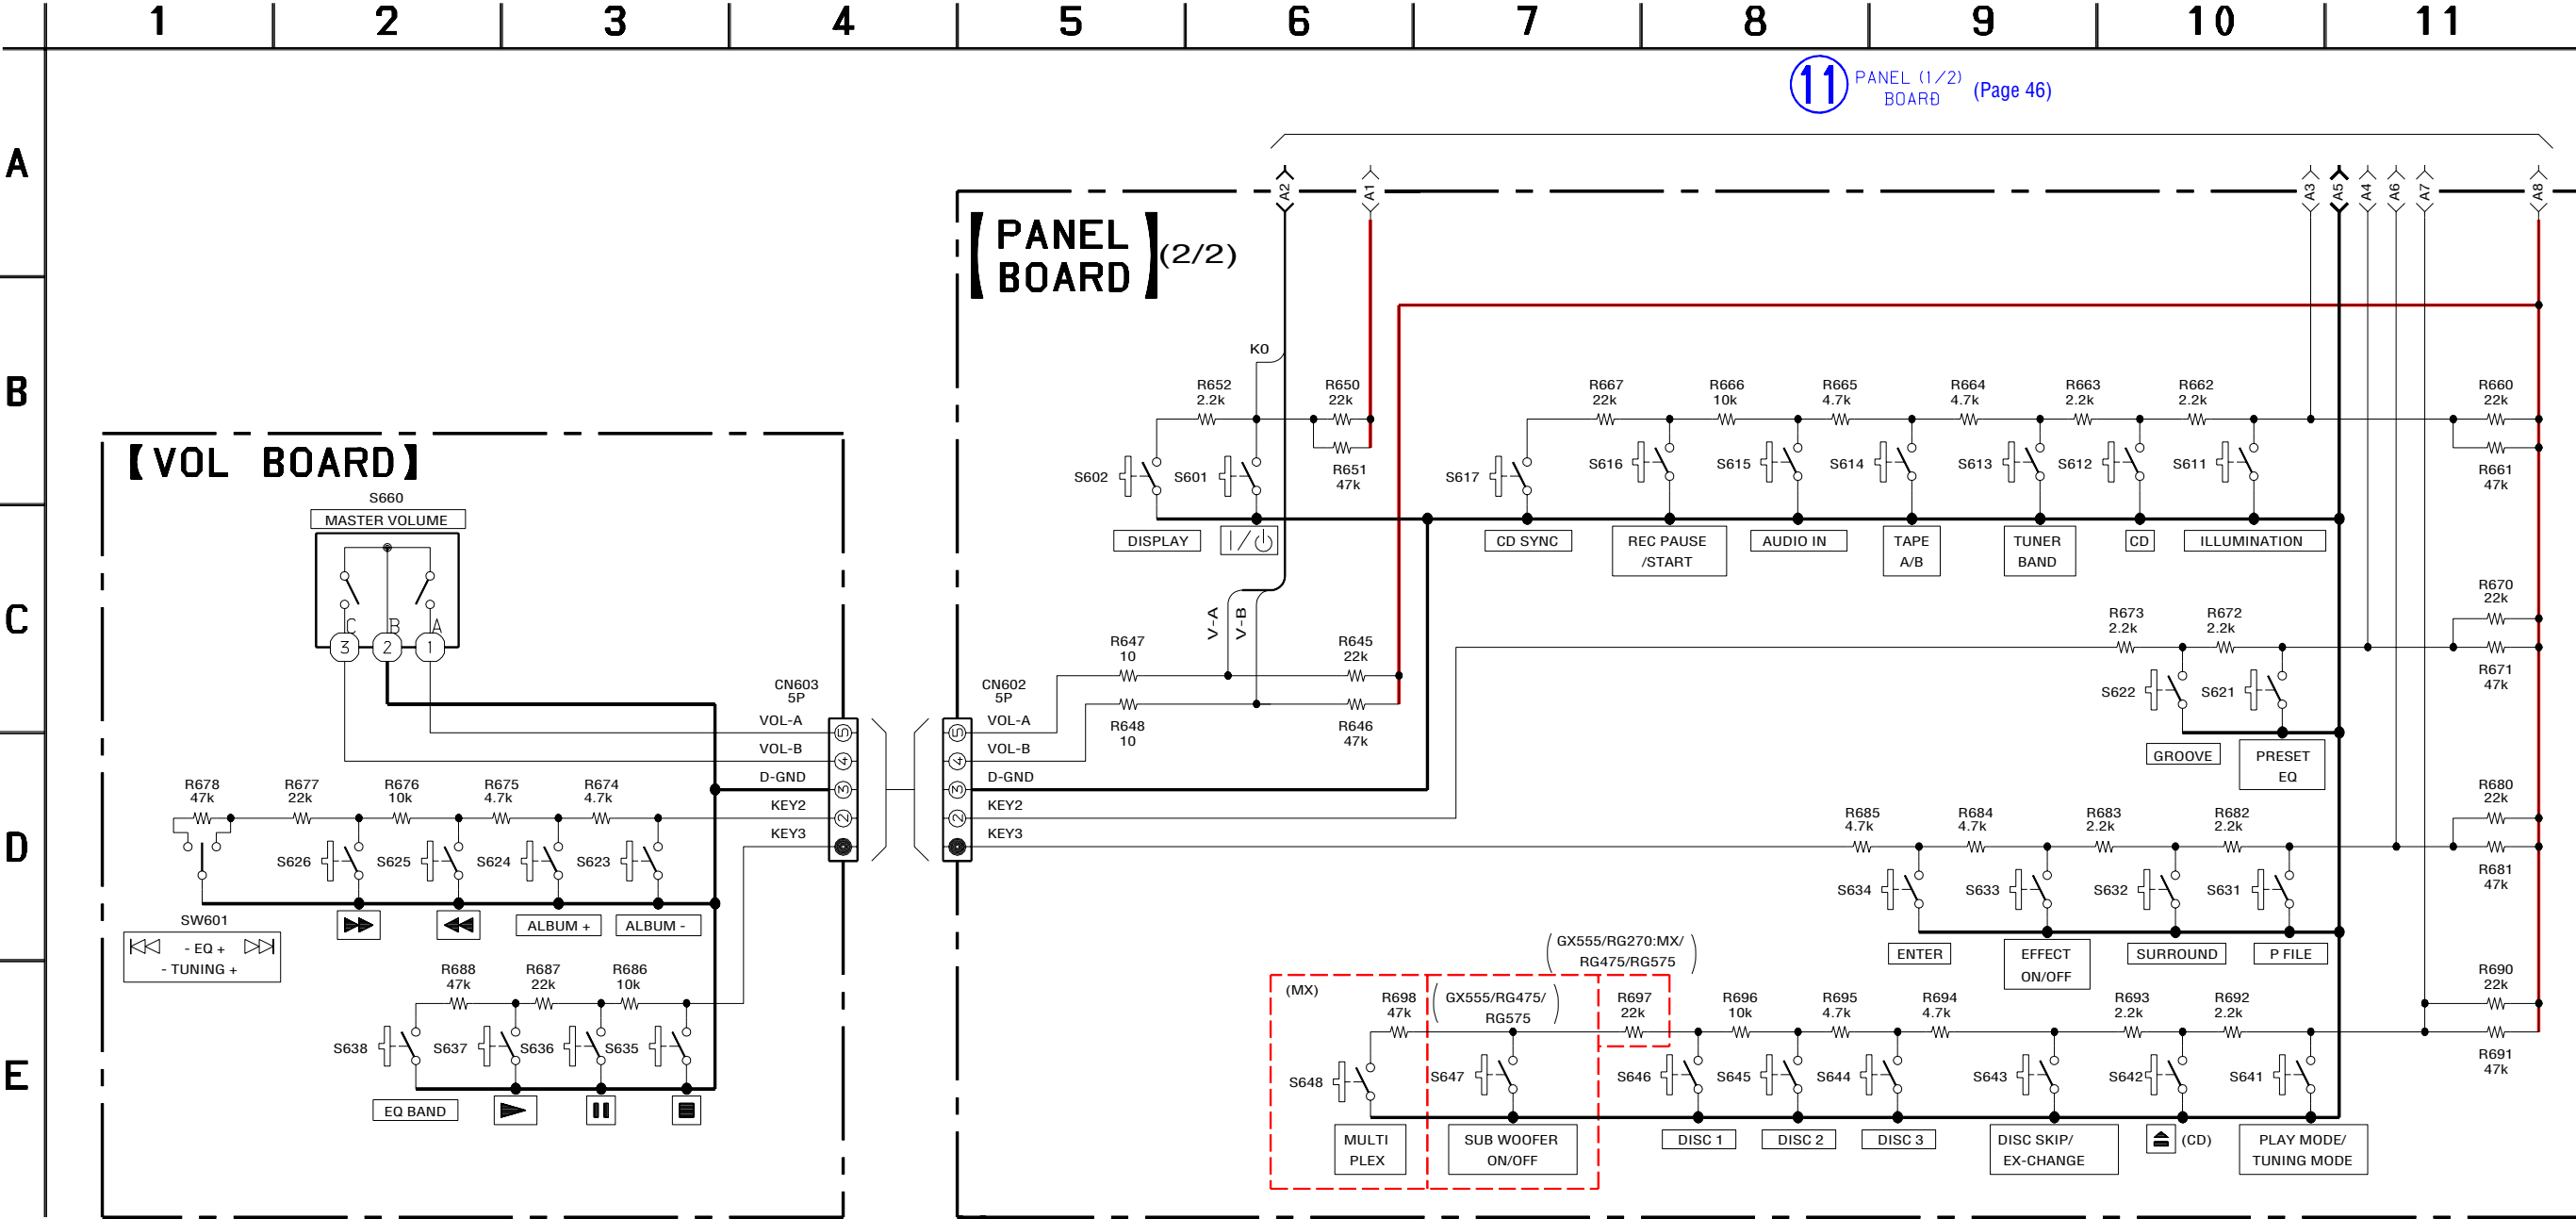


6-27. PRINTED WIRING BOARDS – TRANS Section – • See page 25 for Circuit Boards Location. : Uses unleaded solder.

- **Semiconductor Location**

Ref. No.	Location
D901	C-6
D902	B-6
D903	B-6
D904	B-6
D905	B-6
D906	E-8
D908	E-6
Q902	E-7




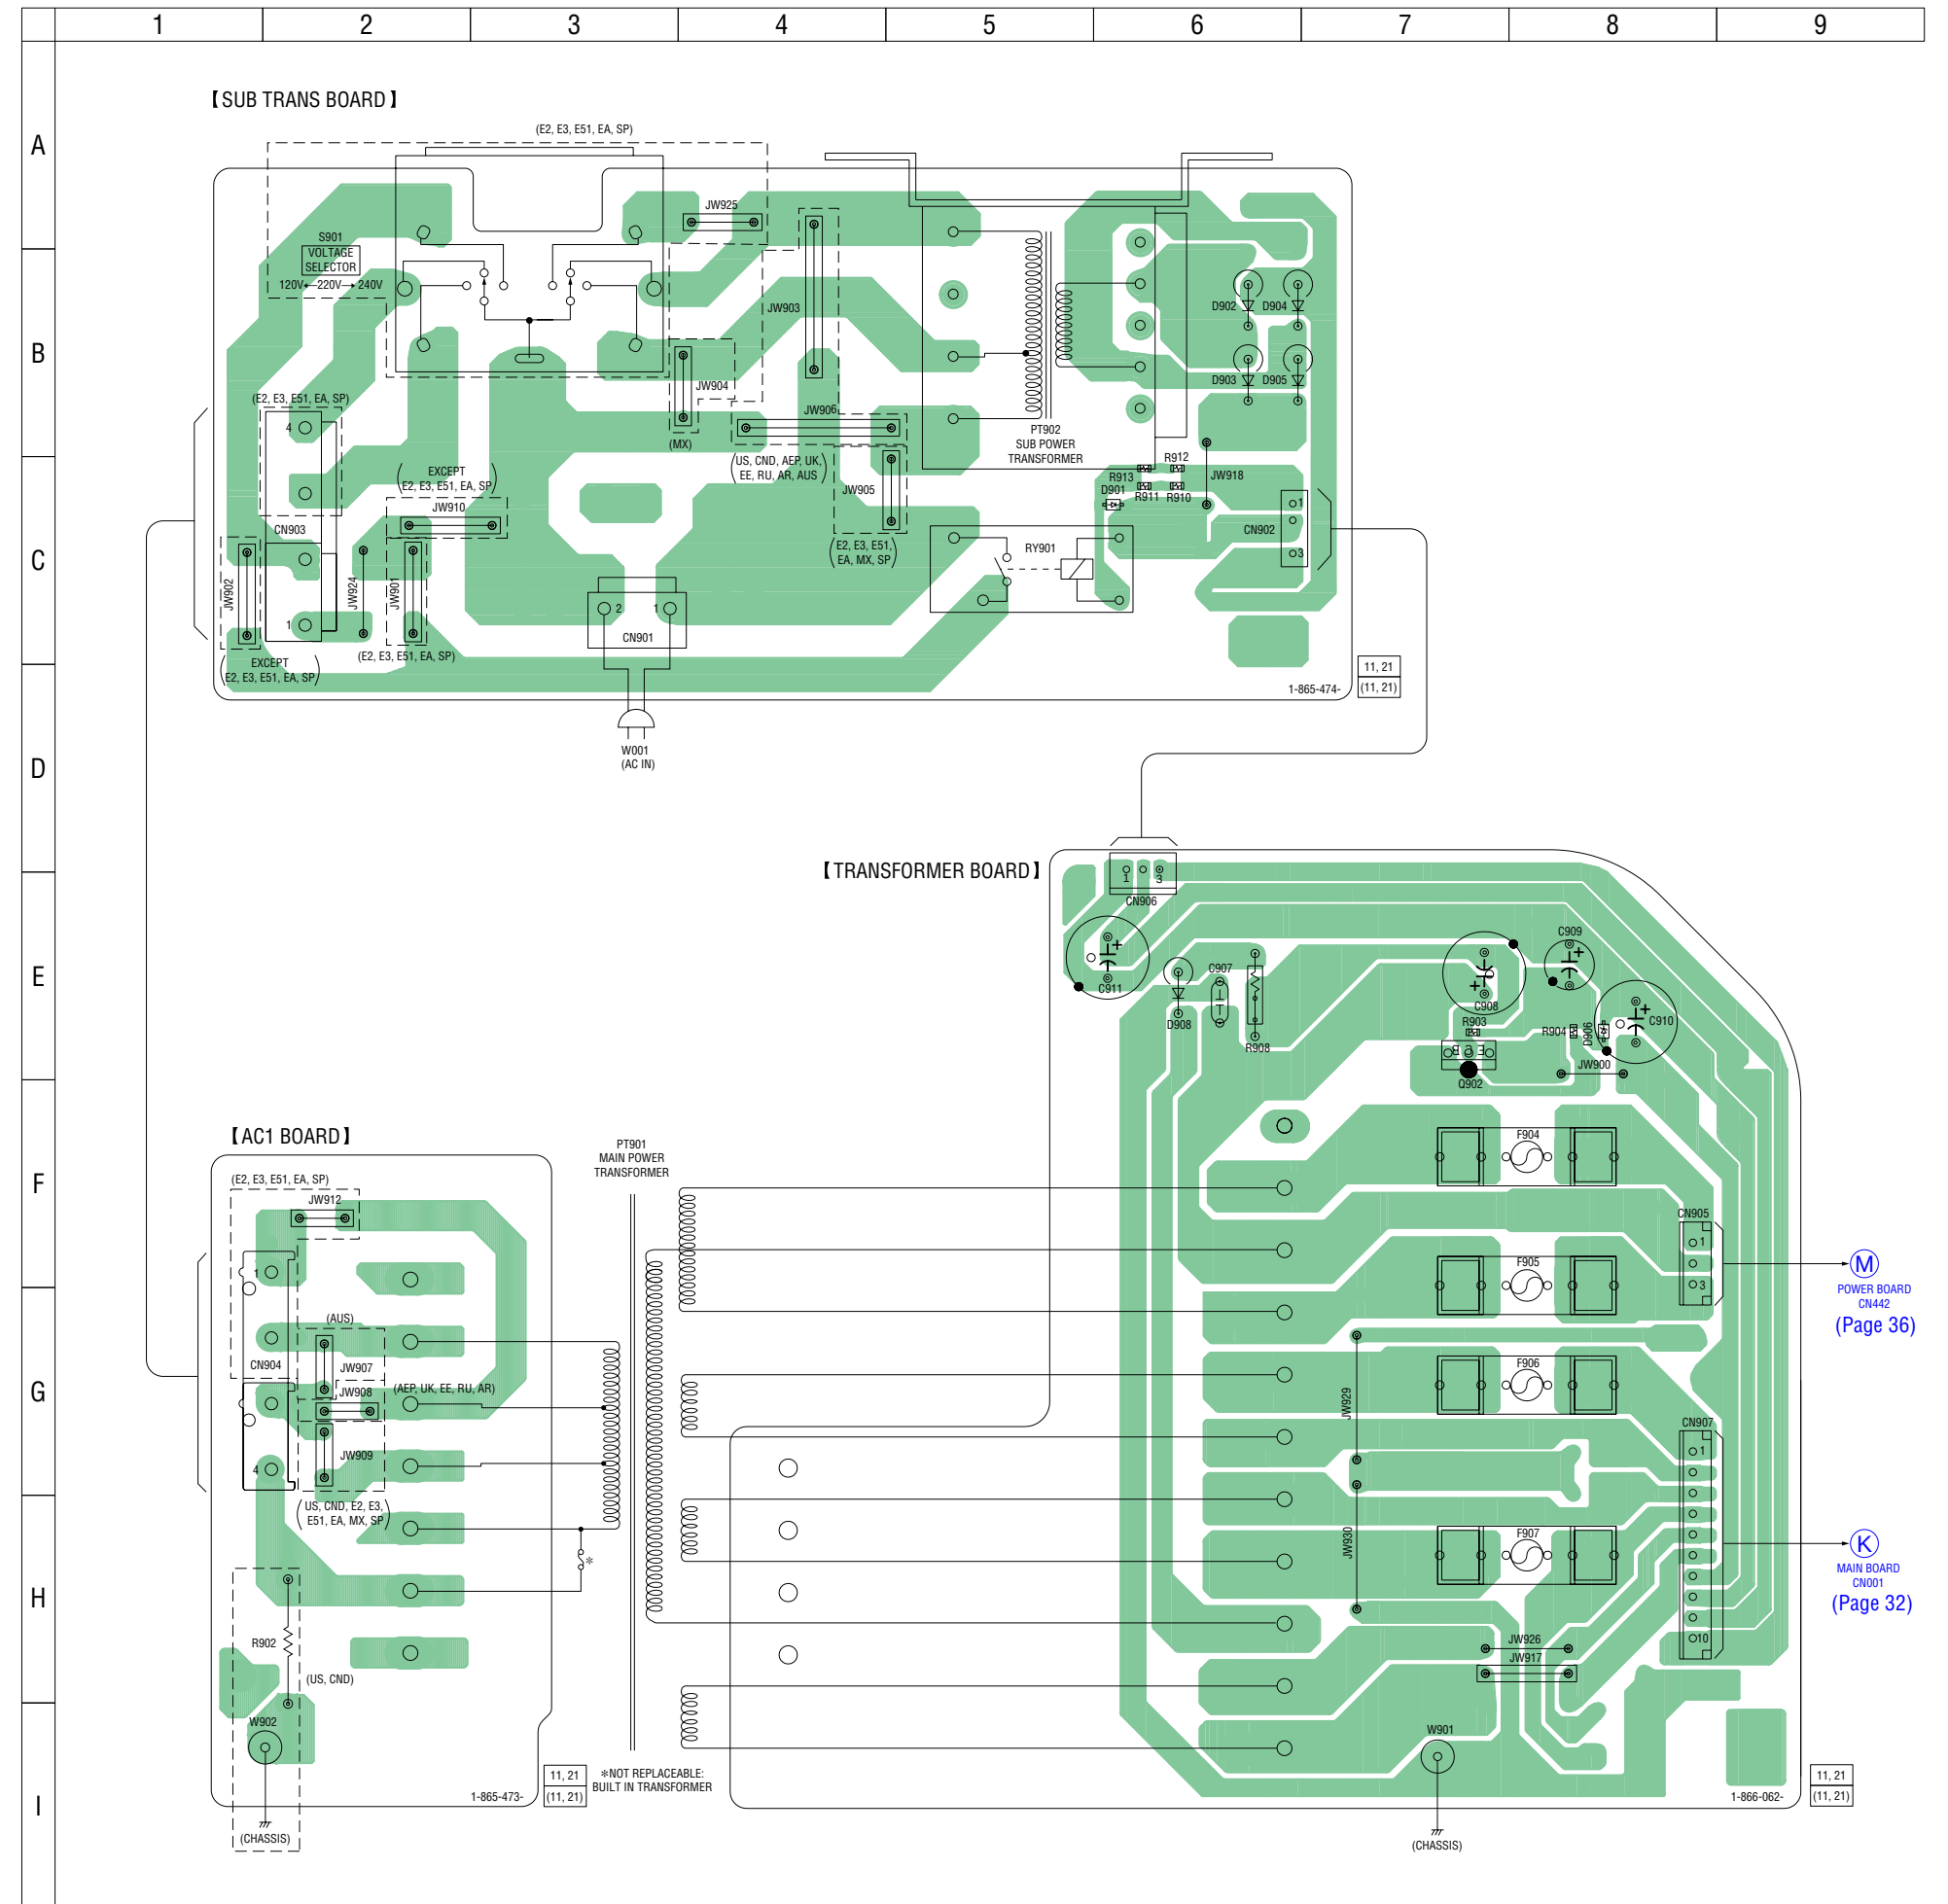


6-28. SCHEMATIC DIAGRAM – TRANS Section –




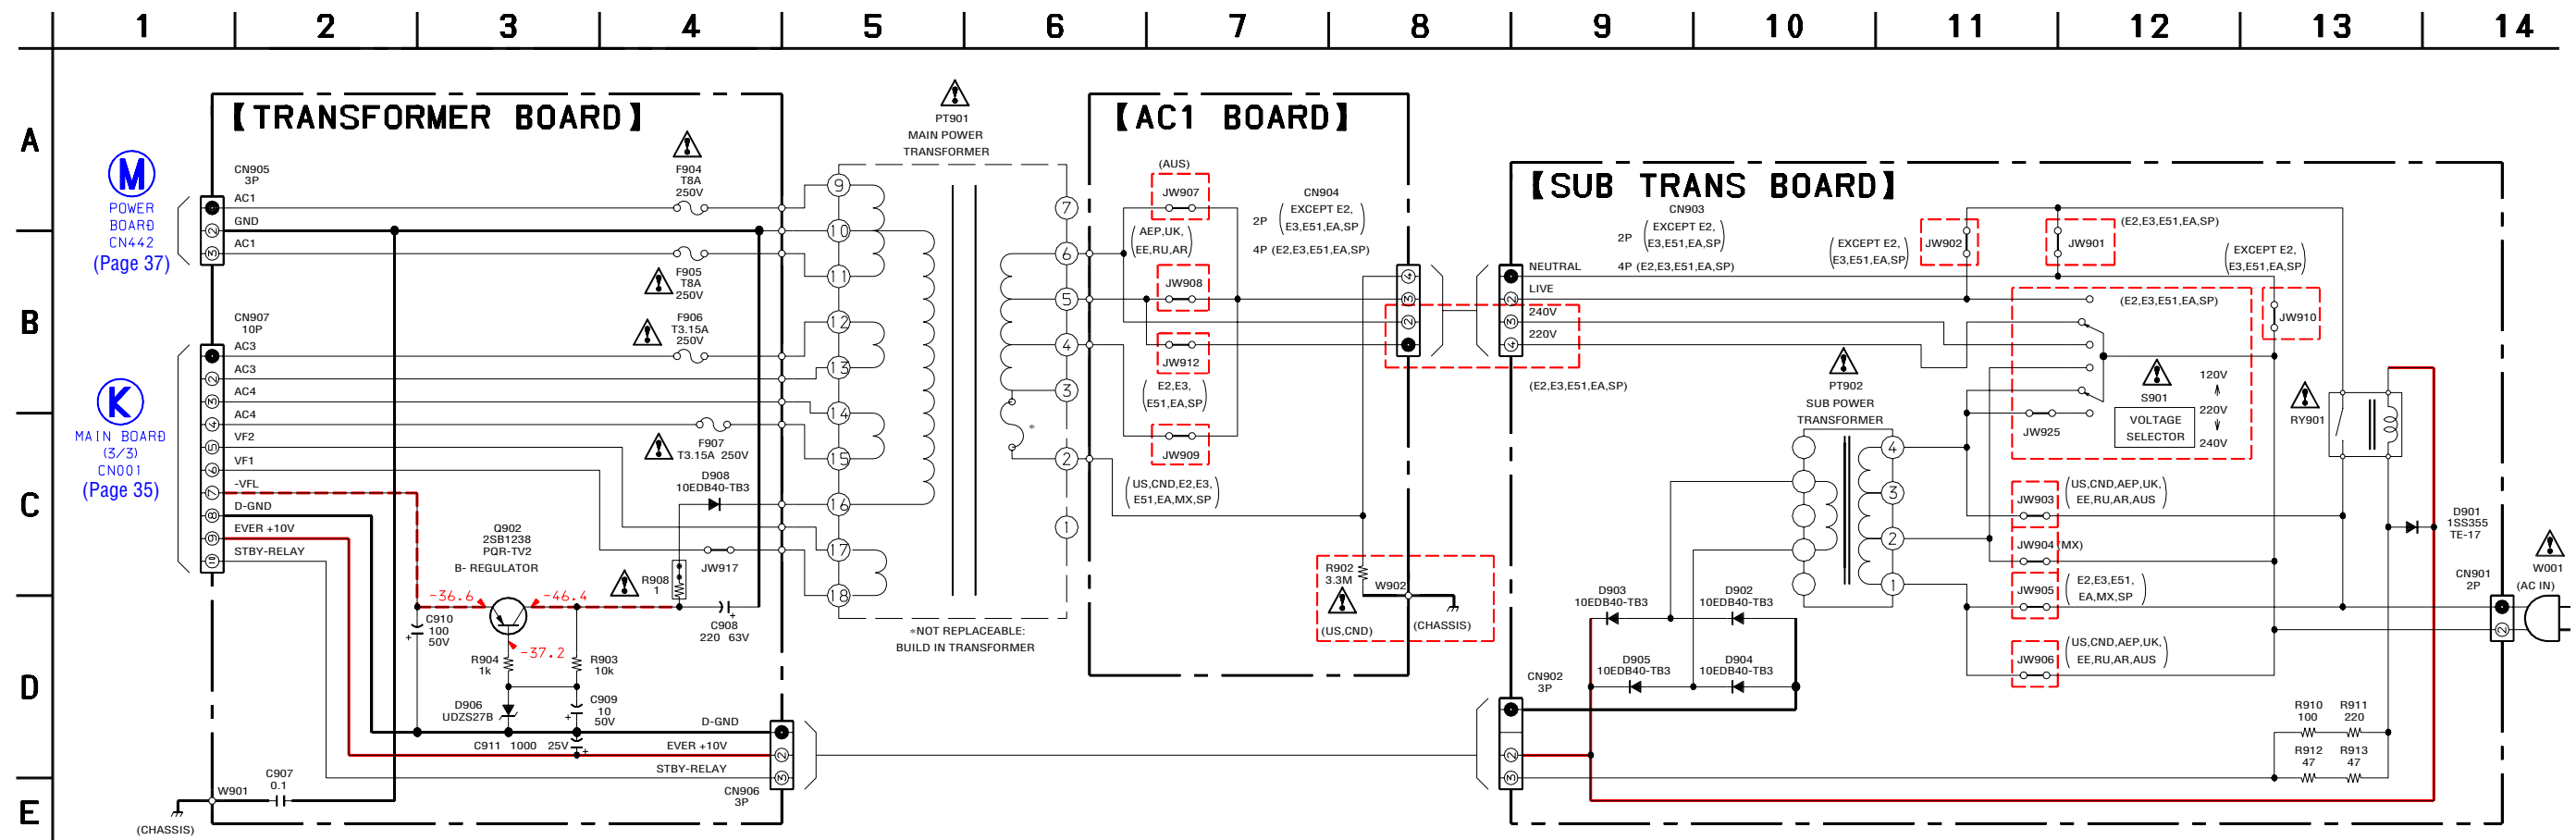


• Waveforms




– CD Board – (Except MX model)

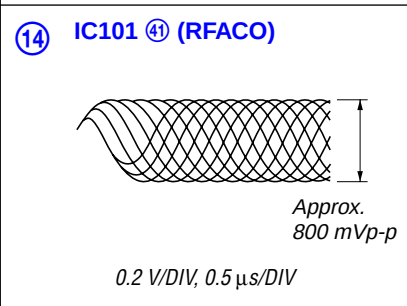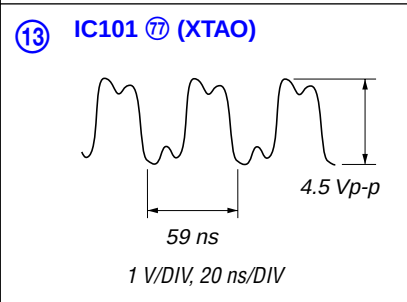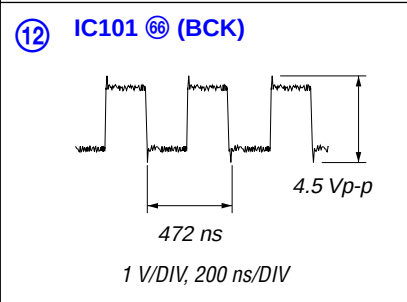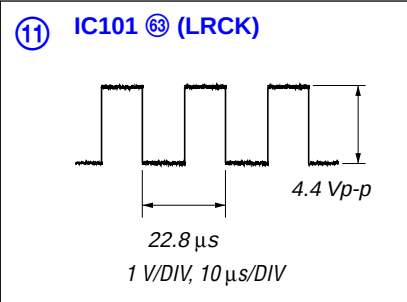



– BD Board – (MX model only)

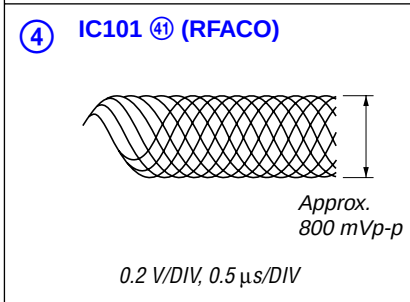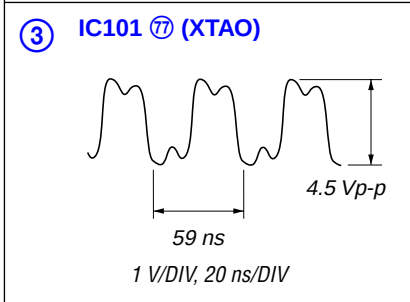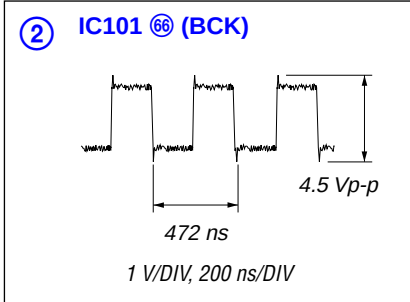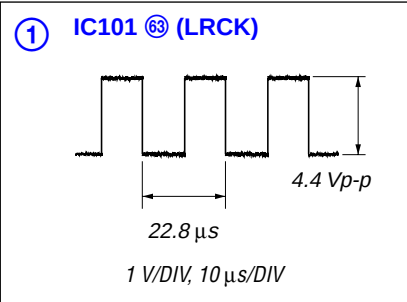


– MAIN Board –

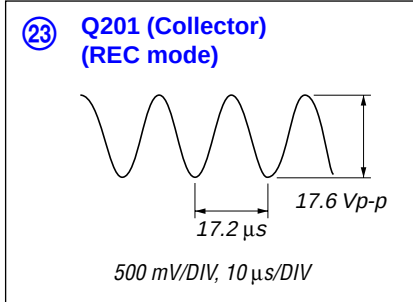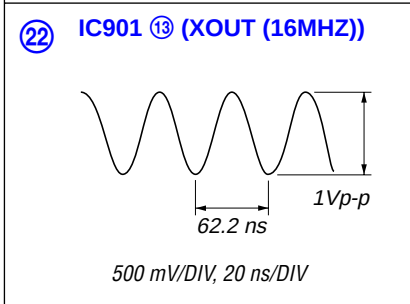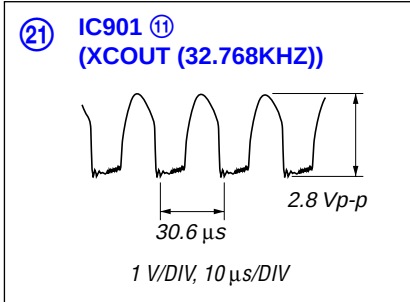

– CD-G Board –

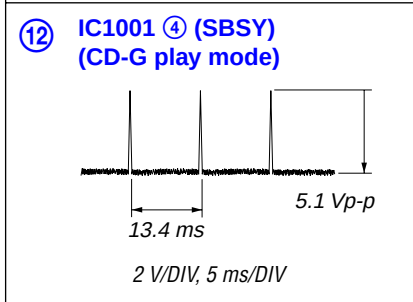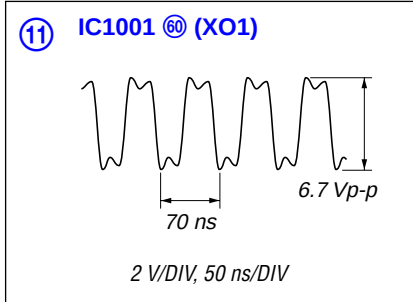


– PANEL Board –

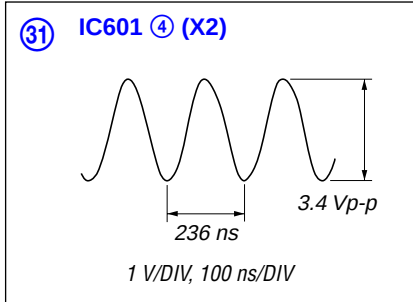


• IC Block Diagrams


– CD Board –

IC101 CXD3059AR

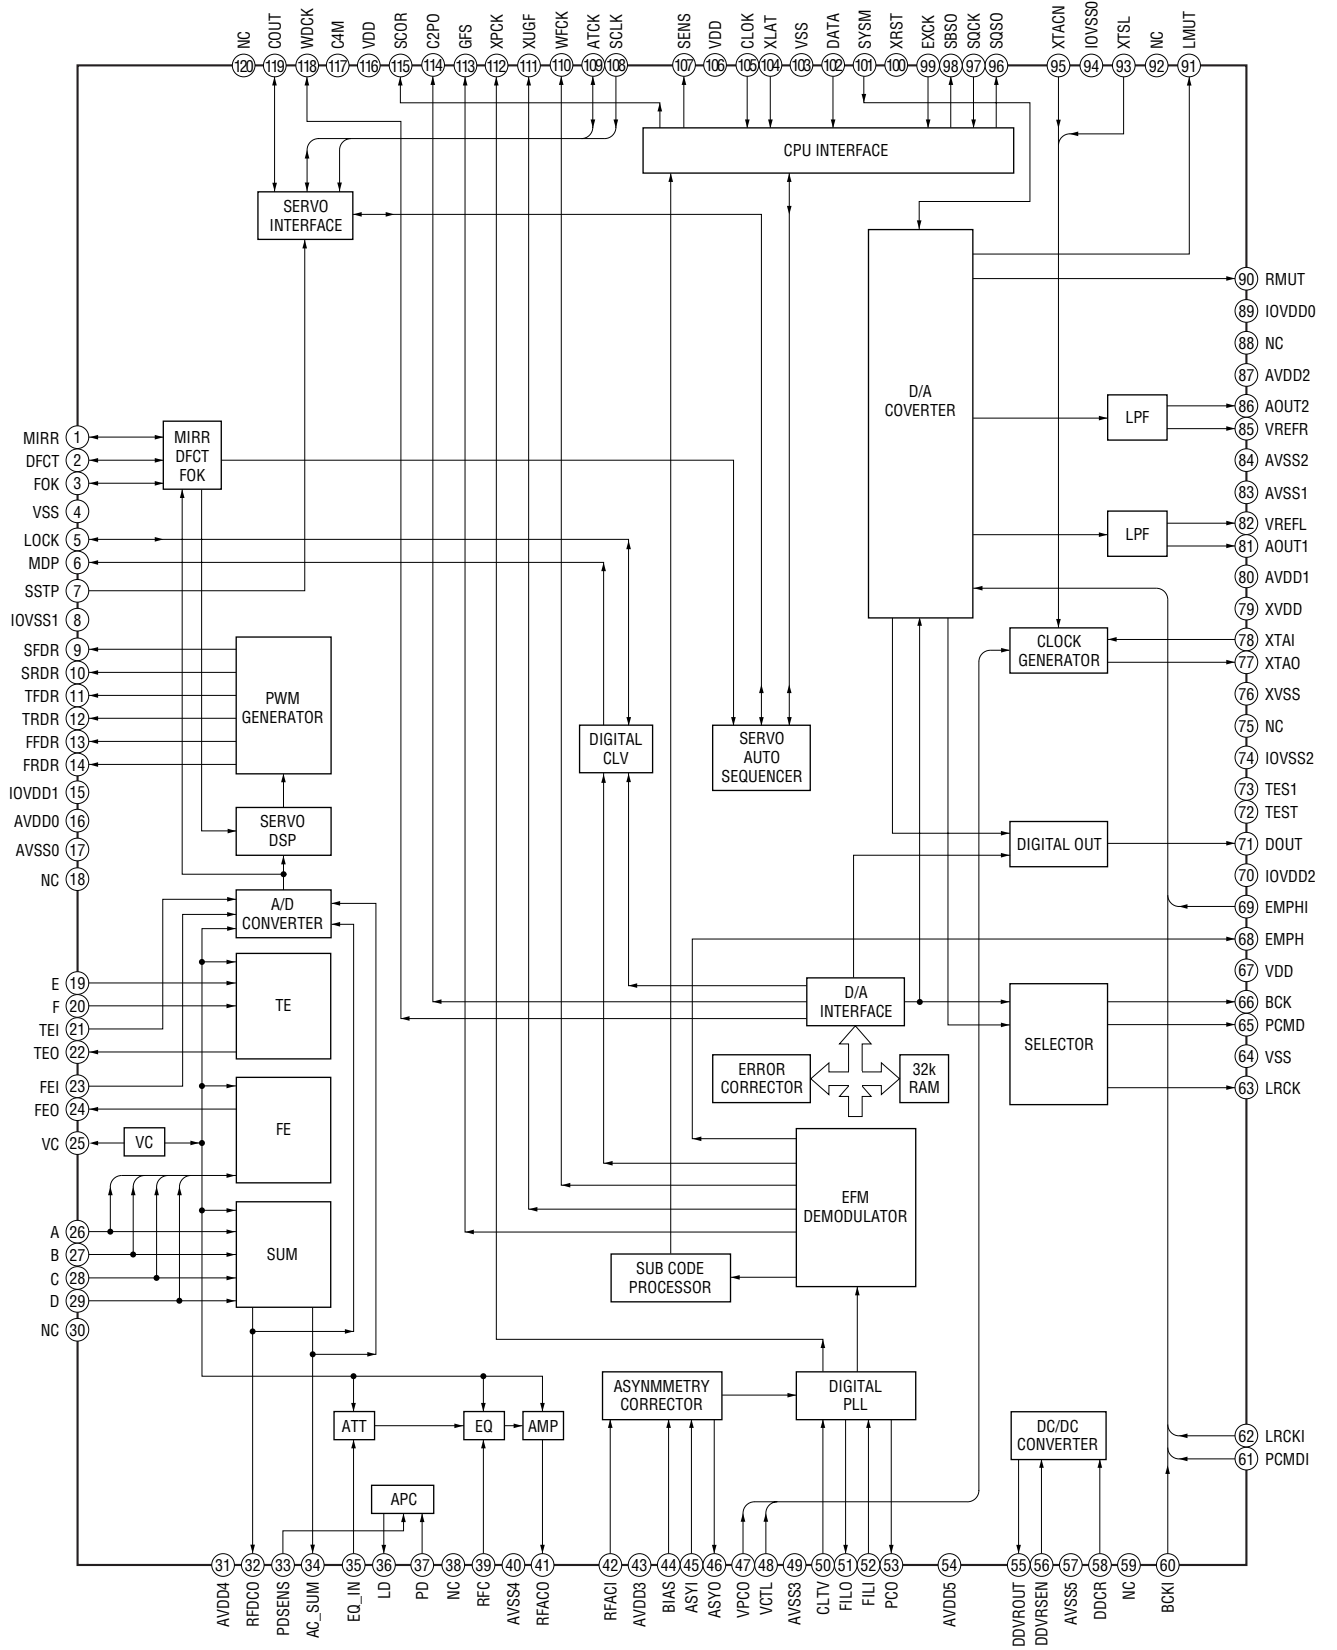


IC251 BA5947FM-E2

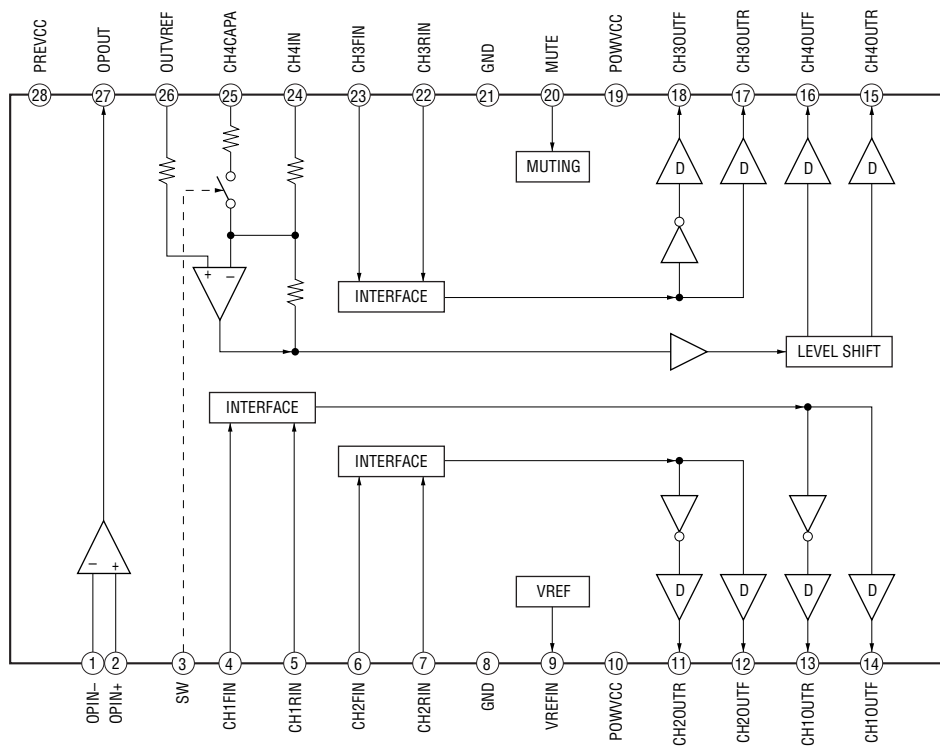


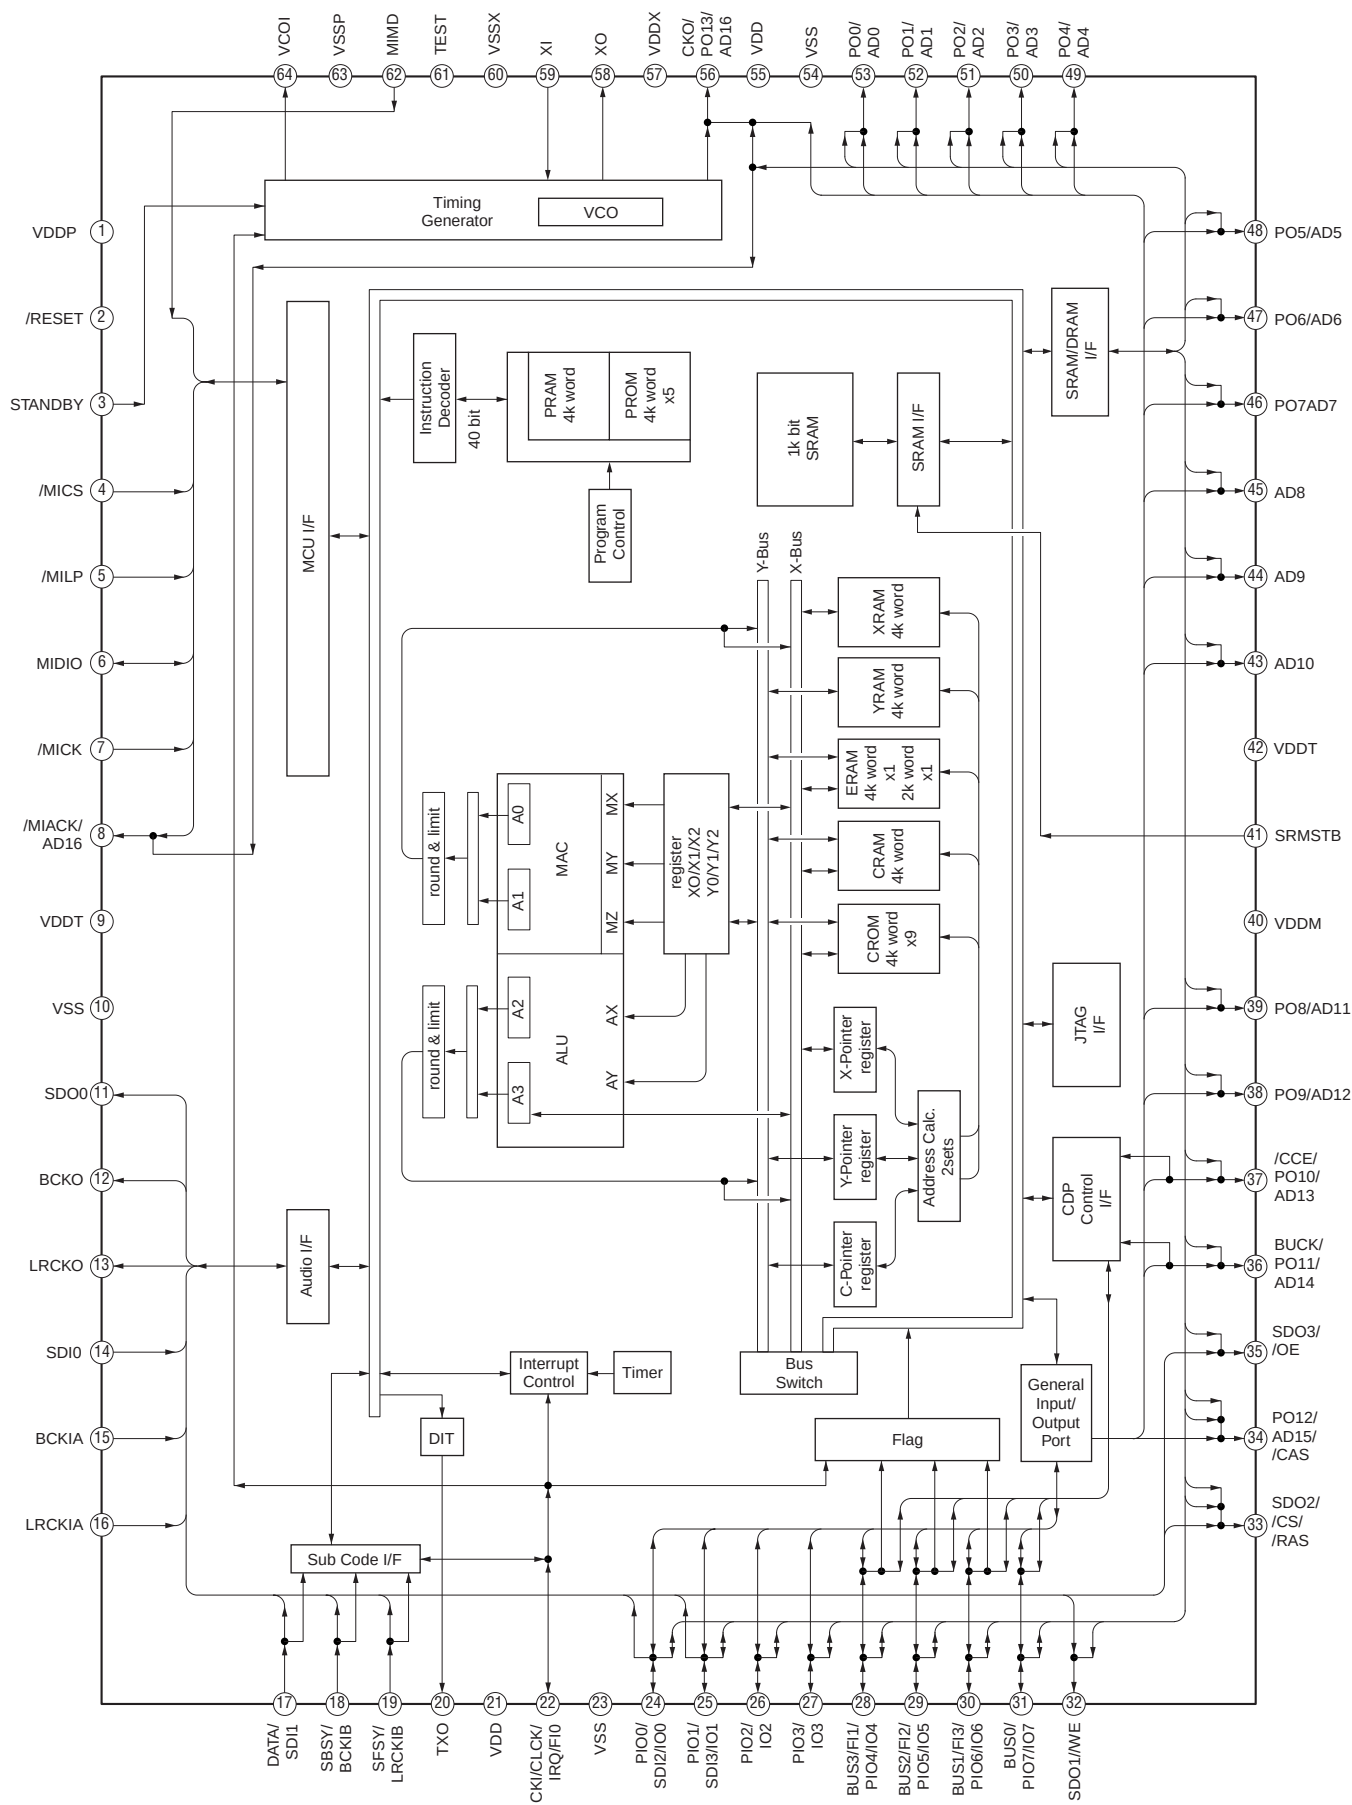


IC303 BH15FB1WG

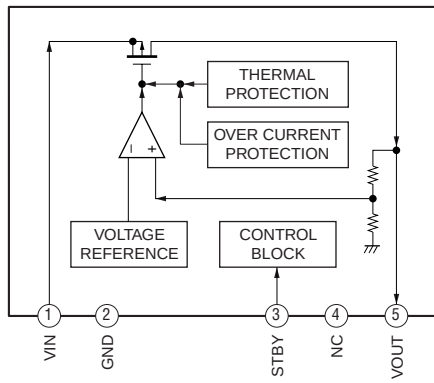


IC251 BA5947FM-E2

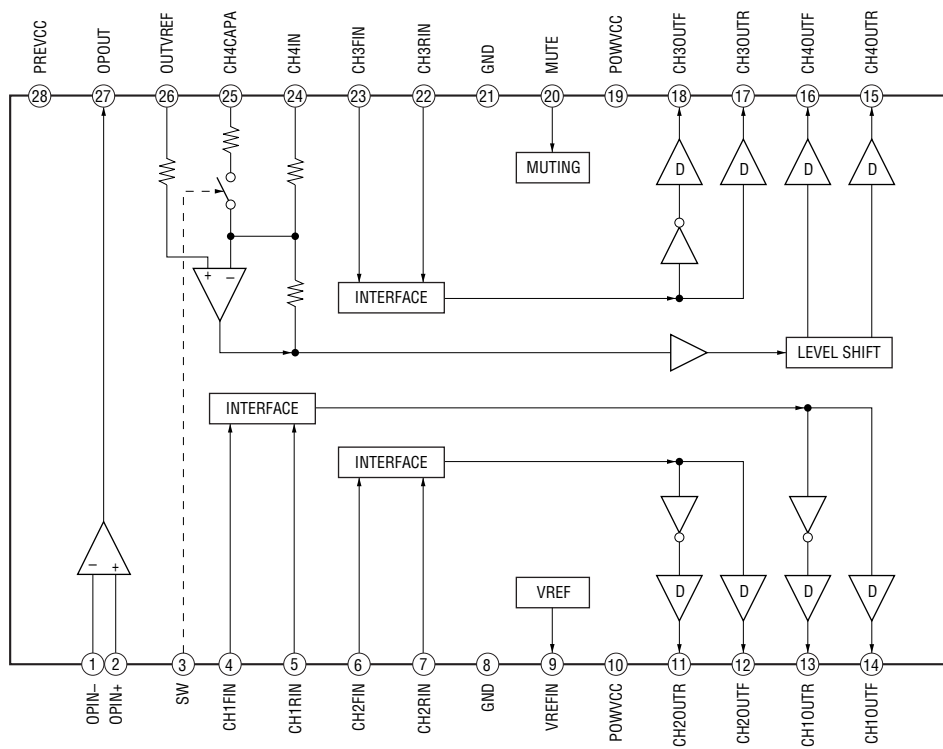

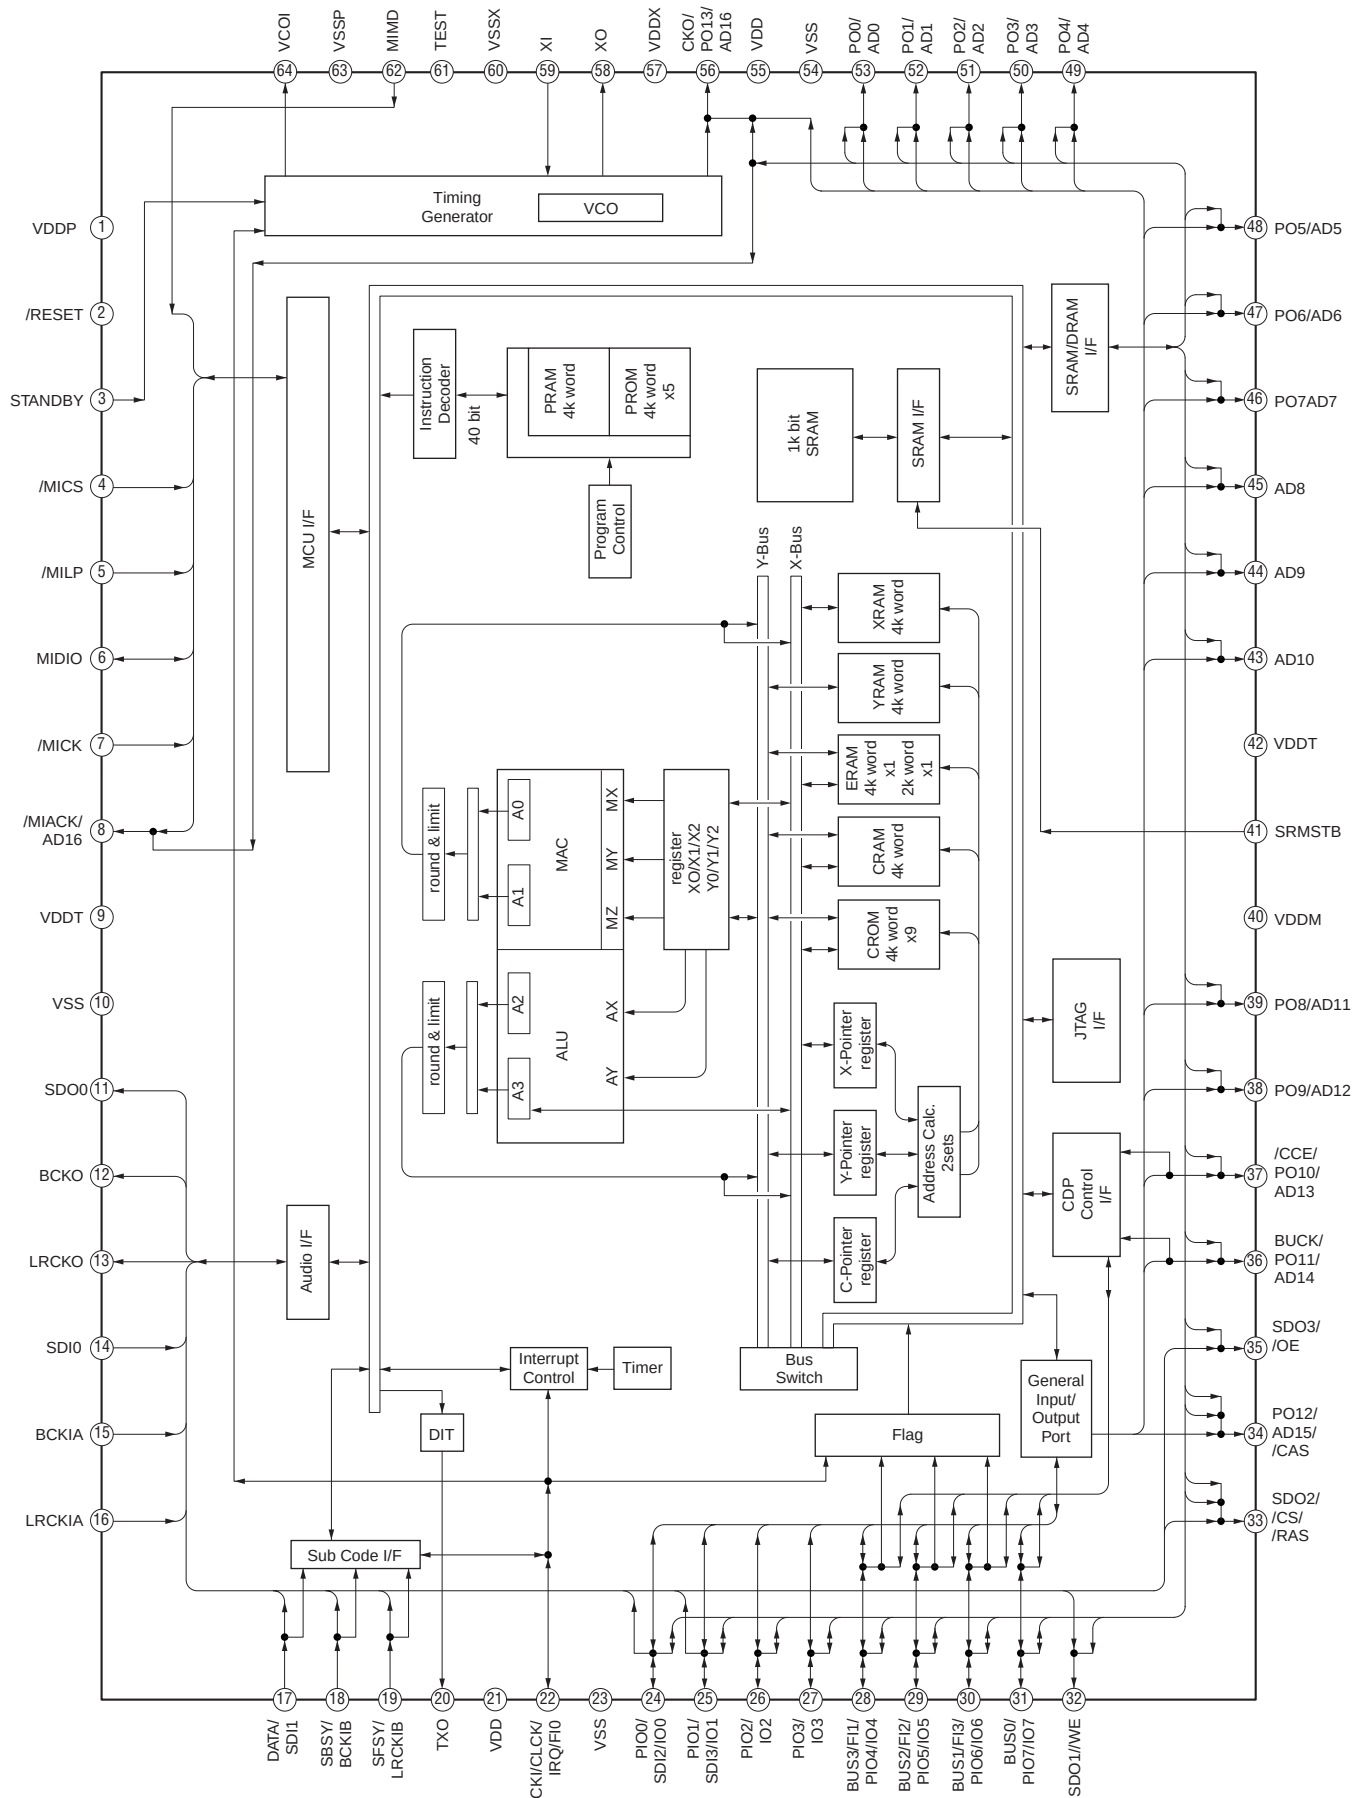


– DRIVER Board –

IC303 BH15FB1WG

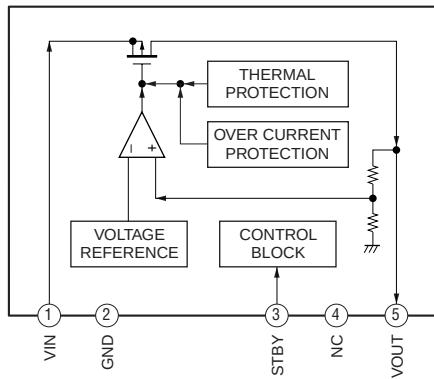


IC701, 712 BA6956AN

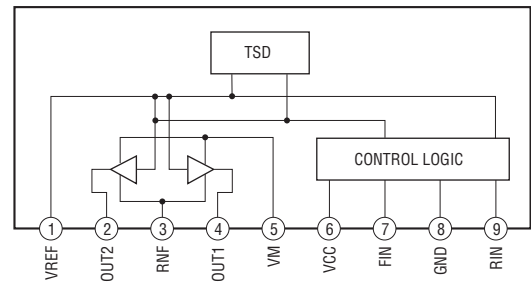


– CD-G Board –


IC1002 MSM514400E-60TS-K

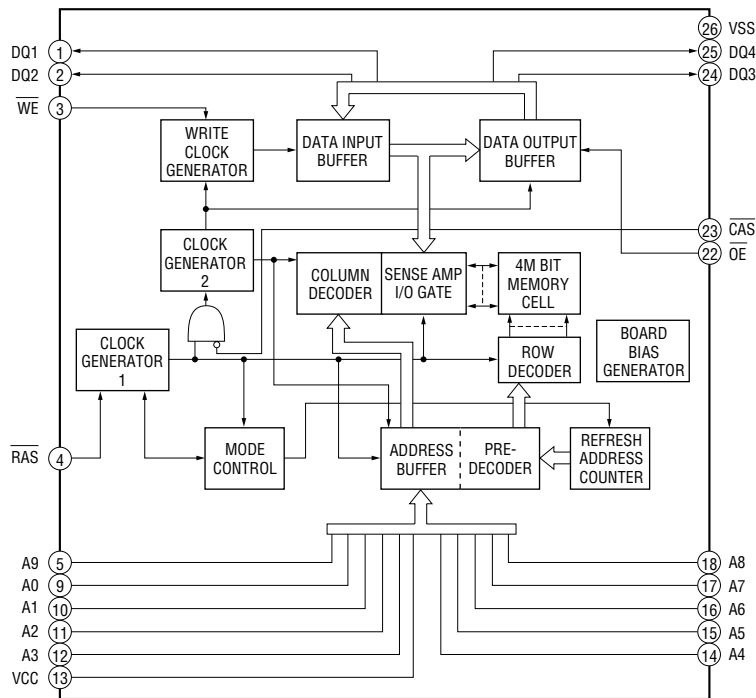

IC1005 SN74AHCT04NSR

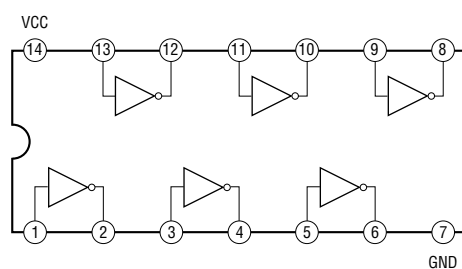


IC1006 NJM2561F1-TE2

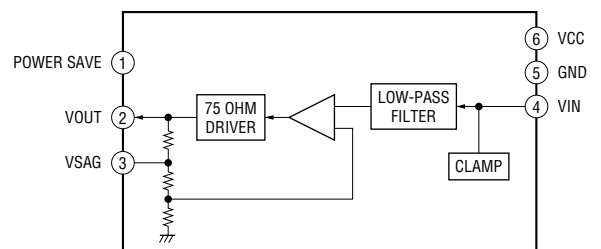


– MAIN Board –

IC101 BD3401KS2

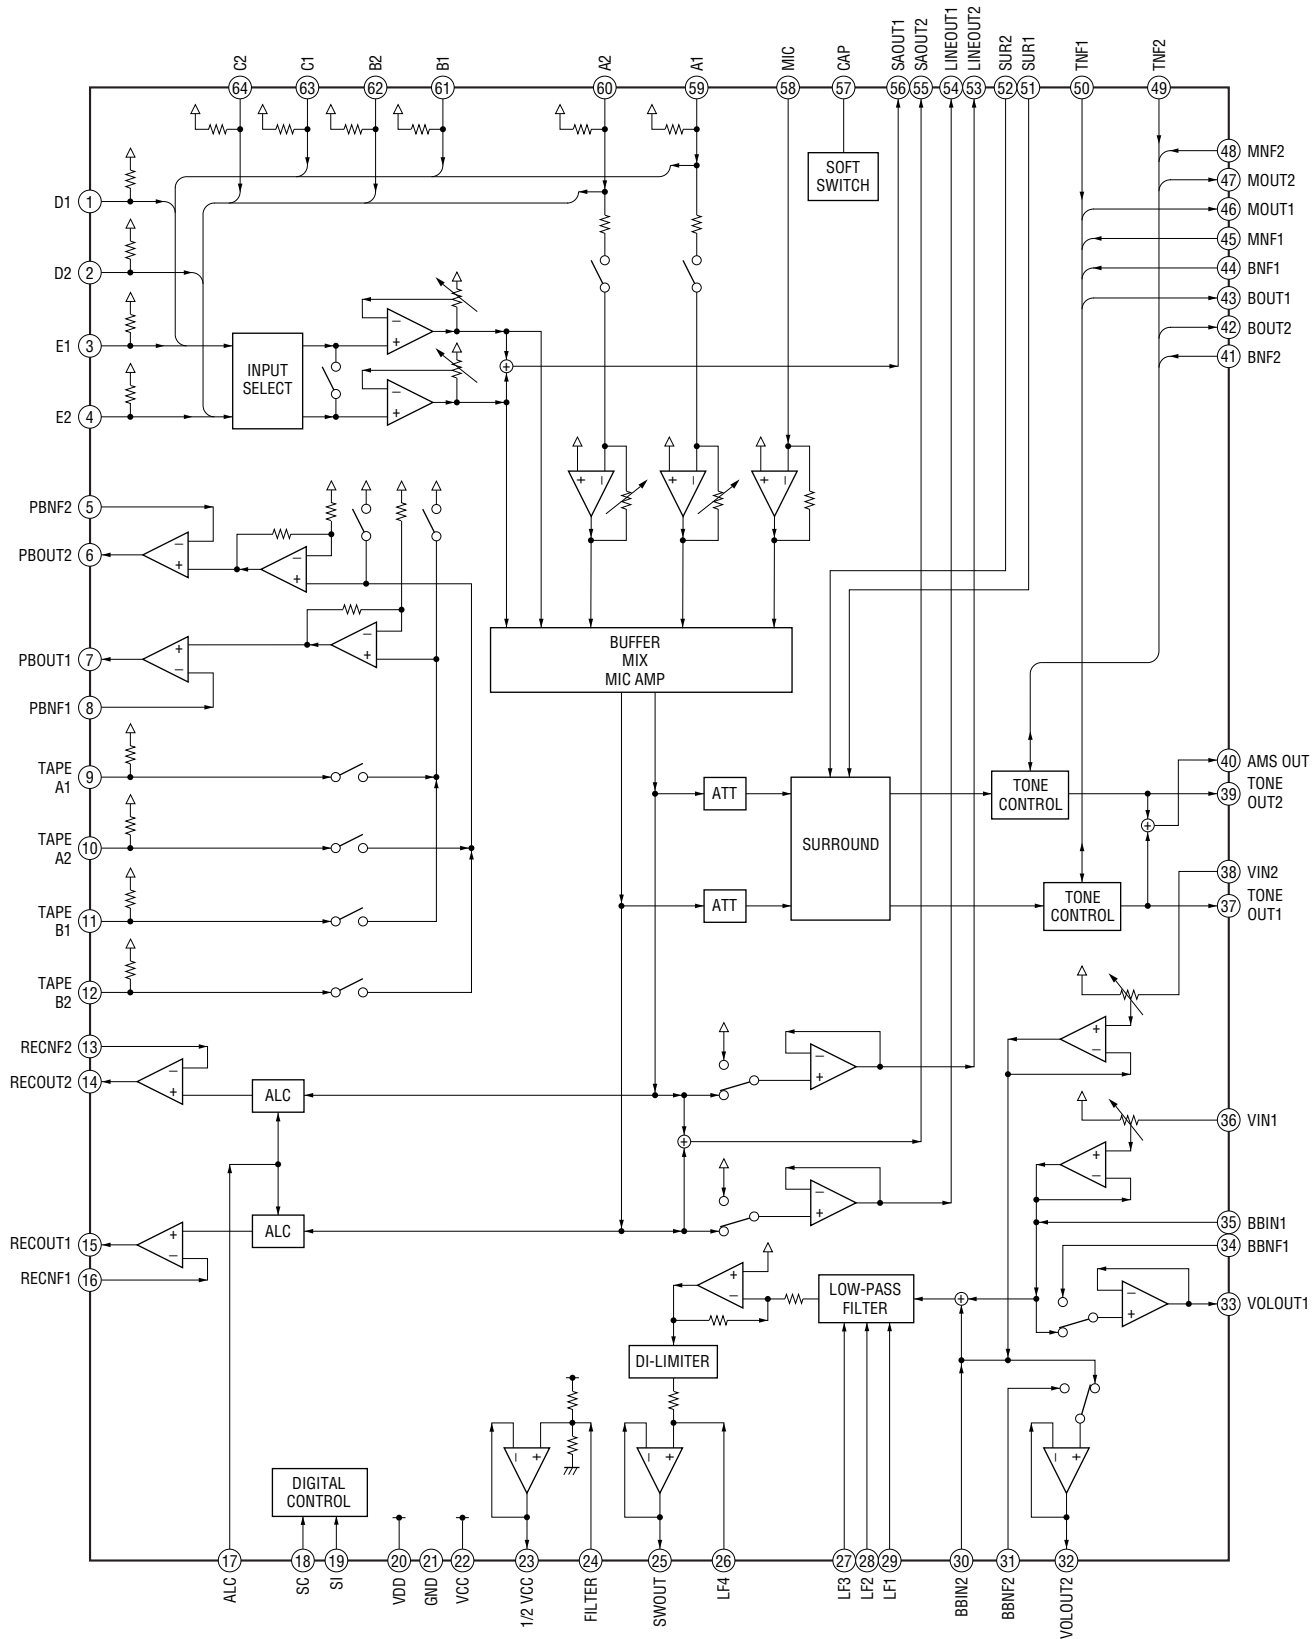

– MIC Board –

IC802 M65850FP-E1

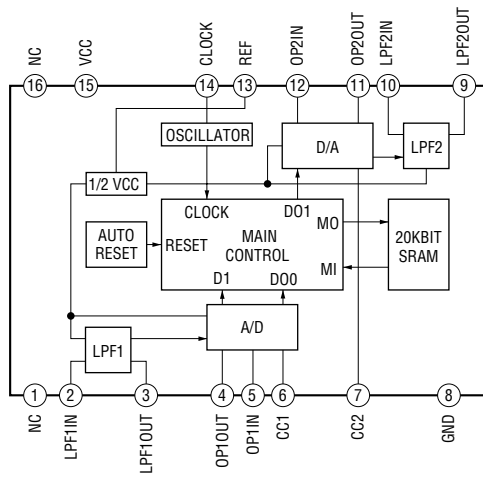

HCD-GX355/GX555/RG270/RG475/RG575

• IC Pin Function Description

MAIN BOARD M30302MCP-A02FPU0 (SYSTEM CONTROLLER)

Pin No.	Pin Name	I/O	Description
1	O-BD3401-DATA	O	Serial data output to the electrical volume
2	O-BD3401-CLK	O	Serial data transfer clock signal output to the electrical volume
3	O-VFD-RESET	O	System reset signal output to the FL/LED driver
4	O-VFD-CE	O	Chip enable signal output to the FL/LED driver
5	I-AC-CUT	I	AC power detection signal input terminal
6	I-VOL-A	I	Jog dial pulse input terminal
7	I-SIRCS-IN	I	SIRCS signal input terminal
8	BYTE	I	Mode setting terminal Normally not used
9	CNVSS	I	Mode setting terminal Normally not used
10	XCIN (32.768KHZ)	I	Sub system clock input terminal (32.768 kHz)
11	XCOUT (32.768KHZ)	O	Sub system clock output terminal (32.768 kHz)
12	I-RESET	I	System reset signal input from the reset signal generator "L": reset For several hundreds msec. after the power supply rises, "L" is input, then it changes to "H"
13	XOUT (16MHZ)	O	Main system clock output terminal (16 MHz)
14	VSS	-	Ground terminal
15	XIN (16MHZ)	I	Main system clock input terminal (16 MHz)
16	VCC1	-	Power supply terminal (+3.3V)
17	NMI	I	Non-maskable interrupt signal input terminal
18	I-RDS-CLK	I	RDS data transfer clock signal input terminal (AEP, UK, East European models)
19	I-SCOR	I	Subcode Q sync (SCOR) input from the CD DSP
20	I-AC-PULSE	I	AC main power detection signal input terminal
21	I-VOL-B	I	Jog dial pulse input terminal
22	O-STBY-LED	O	LED drive signal output terminal
23	O-SYS-MUTE	O	Muting on/off control signal output terminal
24	O-STK-MUTE	O	Standby signal output to the power amplifier (for front speaker output)
25	O-SWR	O	Relay drive signal output for surround output (GX555/RG475/RG575)
26	O-POWER-RELAY	O	Relay drive signal output for main power
27	O-FRONT-SP-RELAY	O	Power on/off control signal output for the fan motor and amplifier section
28	O-MP3-CLK	O	Serial data transfer clock signal output to the MP3 decoder
29	I-MP3-DI	I	Serial data input from the MP3 decoder
30	O-MP3-DATA	O	Serial data output to the MP3 decoder
31	O-CD-DATA	O	Serial data output to the CD DSP
32	I-CD-SENS	I	Internal status (SENSE) input from the CD DSP
33	O-CD-CLK	O	Serial data transfer clock signal output to the CD DSP
34	O-XTCN	O	Oscillator control signal output to the CD DSP
35	O-VFD-DATA	O	Serial data output to the FL/LED driver
36	I-VFD-DATA	I	Serial data input from the FL/LED driver
37	O-VFD-CLK	O	Serial data transfer clock signal output to the FL/LED driver
38	O-MP3-RESET	O	System reset signal output to the MP3 decoder
39	O-MP3-CS	O	Chip select signal output to the MP3 decoder
40	I-MP3-ACK	I	Acknowledge signal input from the MP3 decoder
41	xHOLD	I/O	Not used

Pin No.	Pin Name	I/O	Description
42	O-MP3-STB	O	Standby signal output to the MP3 decoder
43	I-MP3-REQ	I	Data send request signal input from the MP3 decoder
44	O-MP3-LP	O	Latch pulse signal output to the MP3 decoder
45	O-XLT	O	Latch pulse signal output to the CD DSP
46	xWR	I/O	Not used
47	O-XRST	O	System reset signal output to the CD DSP and motor/coil driver
48, 49	O-LM-R, O-LM-F	O	Loading motor control signal output terminal
50, 51	O-TM-R, O-TM-F	O	Table motor control signal output terminal
52 to 54	I-E-1 to I-E-3	I	Disc tray address sensor (rotary encoder) input terminal
55	I-CD NUMBER SENS	I	Table address sensor input terminal
56	I-OPEN-SW	I	Disc tray open/close detection switch input terminal
57	O-CDG-MUTE- DATA	O	Muting control signal output to the CD graphics decoder (Mexican model)
58	O-CDG-RST	O	System reset signal output to the CD graphics decoder (Mexican model)
59	O-CDG-BGC	O	NTSC/PAL switching control signal output terminal (Mexican model)
60	I-CDG-DET	I	CD-G detection signal input terminal (Mexican model)
61	O-CDG-POWER	O	Power on/off control signal output for CD-G section (Mexican model)
62	VCC2	-	Power supply terminal (+3.3V)
63	O-VMUTE	O	Video muting on/off control signal output terminal (Mexican model)
64	VSS	-	Ground terminal
65	O-LC72121-CLK	O	Serial data transfer clock signal output to the FM/AM tuner pack
66	I-LC72121-DI	I	Serial data input from the FM/AM tuner pack
67	O-LC72121-DO	O	Serial data output to the FM/AM tuner pack
68	O-LC72121-CE	O	Chip enable signal output to the FM/AM tuner pack
69	I-TUNED	I	Tuning detection signal input from the FM/AM tuner pack
70	I-STEREO	I	FM stereo detection signal input from the FM/AM tuner pack
71	O-ST-MUTE	O	Muting on/off control signal output to the FM/AM tuner pack
72	I-RDS-DATA	I	RDS data input from the terminal (AEP, UK, East European models)
73	I-MODEL1	I	Setting terminal for the destination and model type
74	I-KEY0	I	Front panel key input terminal (A/D input)
75 to 80	I-MODEL2 to I-MODEL7	I	Setting terminal for the destination and model type
81	I-HP/AUDIO IN	I	Headphone plug and audio in plug insert detection signal input
82	I-MIC	I	MIC plug insert detection signal input terminal (120 V AC area in E, Chilean, Peruvian, Argentina, Mexican models)
83	I-REAL-A	I	Deck-A tape reel rotating detection signal input terminal
84	I-REAL-B	I	Deck-B tape reel rotating detection signal input terminal
85	O-MOTOR	O	Capstan/reel motor drive signal output terminal
86	O-A-SOL	O	Deck-A plunger drive signal output terminal
87	O-B-SOL	O	Deck-B plunger drive signal output terminal
88	I-TAPE-A-STAT	I	Deck-A cassette detection signal, deck-A mode detection signal and recording (reverse direction) detection signal input terminal (A/D input)
89	I-TAPE-B-STAT	I	Deck-B cassette detection signal, deck-B mode detection signal and recording (forward direction) detection signal input terminal (A/D input)
90	O-REC/PB	O	REC/PB switching control signal output terminal

HCD-GX355/GX555/RG270/RG475/RG575

Pin No.	Pin Name	I/O	Description
91	O-BIAS	O	REC bias on/off control signal output terminal
92	I-TAPE-AMS	I	Auto music sensor detection signal input from the electrical volume "L": music is present, "H": music is not present
93	I-STREAM	I	Audio signal input for stream LED (A/D input)
94	I-VACS	I	VACS signal input terminal (A/D input)
95	I-PROTECTOR	I	Protector operating detection signal input terminal
96	AVSS	-	Ground terminal
97	I-POWER, DISPLAY	I	Front panel key input terminal (A/D input)
98	VREF	I	Reference voltage input terminal
99	AVCC	-	Power supply terminal (+3.3V)
100	NC	O	Not used

CD-G BOARD IC1001 TC9411AFG (BS, K) (CD GRAPHICS DECODER)

Pin No.	Pin Name	I/O	Description
1	SESUB	I	Not used
2	CLCK	O	Serial data transfer clock signal output to the CD DSP
3	DATA	I	Serial data input from the CD DSP
4	SBSY	I	Subcode Q sync (SCOR) input from the CD DSP
5	SFSY	I	WFCK signal input from the CD DSP
6	MUTE	I	Muting control signal input from the system controller
7	VDD1	-	Power supply terminal (+5V)
8	VSS1	-	Ground terminal
9	MCE	I	Chip enable signal input terminal Not used
10	MCDO	O	Serial data output terminal Not used
11	MCDI	I	Serial data input terminal Not used
12	MCCK	I	Serial data transfer clock signal input terminal Not used
13	$\overline{\text{WE}}$	O	Write enable signal output to the D-RAM
14	$\overline{\text{RAS}}$	O	Row address strobe signal output to the D-RAM
15 to 22	VA0 to VA7	O	Address signal output to the D-RAM
23	VSS2	-	Ground terminal
24	VDD2	-	Power supply terminal (+5V)
25	VD0	I/O	Two-way data bus with the D-RAM
26	$\overline{\text{CAS}}$	O	Column address strobe signal output to the D-RAM
27	VD1	I/O	Two-way data bus with the D-RAM
28	$\overline{\text{OE}}$	O	Data read strobe signal output to the D-RAM
29, 30	VD2, VD3	I/O	Two-way data bus with the D-RAM
31	BLANKIN	I	Blank signal input terminal Not used
32	BIN	I	RGB (B) signal input terminal Not used
33	GIN	I	RGB (G) signal input terminal Not used
34	RIN	I	RGB (R) signal input terminal Not used
35	$\overline{\text{HSYNC}}$	O	Horizontal synchronize signal output terminal Not used
36	$\overline{\text{VSYNC}}$	O	Vertical synchronize signal output terminal Not used
37	CDET	O	CD-G detection signal output terminal
38	VON	I	Video on control signal input terminal Not used
39, 40	TEST1, TEST2	I	Test mode setting terminal
41	LINESW	I	Line switch input terminal Not used
42	VREF	I	Reference voltage input terminal
43	AVDD	-	Power supply terminal (+5V)
44	VDOUT	O	Video signal output terminal
45	AVSS	-	Ground terminal
46, 47	BIAS1, BIAS2	I	For bias setting terminal
48	VSS3	-	Ground terminal
49	VDD3	-	Power supply terminal (+5V)
50	QNG	O	Not used
51	PNG	O	Not used
52	DEN	I	NTSC/PAL switching control signal input terminal
53	FSC	O	Not used
54	$\overline{\text{RESET}}$	I	System reset signal input from the system controller
55	SENTSC	I	Mode setting terminal
56	PDOWN	I	Mode setting terminal

HCD-GX355/GX555/RG270/RG475/RG575

Pin No.	Pin Name	I/O	Description
57	XI2	I	System clock input terminal (17.734475 MHz) (for PAL) Not used
58	XO2	O	System clock output terminal (17.734475 MHz) (for PAL) Not used
59	XI1	I	System clock input terminal (14.31818 MHz) (for NTSC)
60	XO1	O	System clock output terminal (14.31818 MHz) (for NTSC)

PANEL BOARD IC701 μ PD780232GC-508-8BT-A (FL/LED DRIVER)

Pin No.	Pin Name	I/O	Description
1	VDD1	-	Power supply terminal (+3.3V)
2	VSS1	-	Ground terminal
3	X1	I	System clock input terminal (4.19 MHz)
4	X2	O	System clock output terminal (4.19 MHz)
5	IC	I	Not used
6	RESET	I	System reset signal input from the system controller "L": reset
7	SCK1	I	Serial data transfer clock signal input from the system controller
8	SI1	O	Serial data output to the system controller
9	SO1	I	Serial data input from the system controller
10 to 15	NC	I	Not used
16	CE	I	Chip select signal input from the system controller
17	NC	I	Not used
18	AVSS	-	Ground terminal
19 to 22	KEY1 to KEY4	I	Front panel key input terminal (A/D input)
23	VSS0	-	Ground terminal
24	AVDD	-	Power supply terminal (+5V)
25	VDD0	-	Power supply terminal (+5V)
26 to 31	STREAM LED1 to STREAM LED6	O	LED drive signal output terminal
32	SW LED	O	LED drive signal output terminal
33 to 44	NC	I	Not used
45 to 58	S1 to S14	O	Segment drive signal output to the fluorescent indicator tube
59	VDD2	-	Power supply terminal (+5V)
60	VLOD	-	Power supply terminal (for fluorescent indicator tube drive)
61 to 67	S15 to S21	O	Segment drive signal output to the fluorescent indicator tube
68 to 80	G1 to G13	O	Grid drive signal output to the fluorescent indicator tube

SECTION 7

EXPLODED VIEWS

NOTE:

- XX and -X mean standardized parts, so they may have some difference from the original one.
- Color Indication of Appearance Parts
Example:
KNOB, BALANCE (WHITE) . . . (RED)

↑

↑


Parts Color

Cabinet's Color
- Abbreviation

AR : Argentine model	E3 : 240V AC Area in E model	MX : Mexican model
AUS : Australian model	E51 : Chilean and Peruvian models	RU : Russian model
CND : Canadian model	EA : Saudi Arabia model	SP : Singapore model
E2 : 120V AC Area in E model	EE : East European model	
- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Accessories are given in the last of the electrical parts list.


The components identified by mark $\triangle$ or dotted line with mark $\triangle$ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque $\triangle$ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

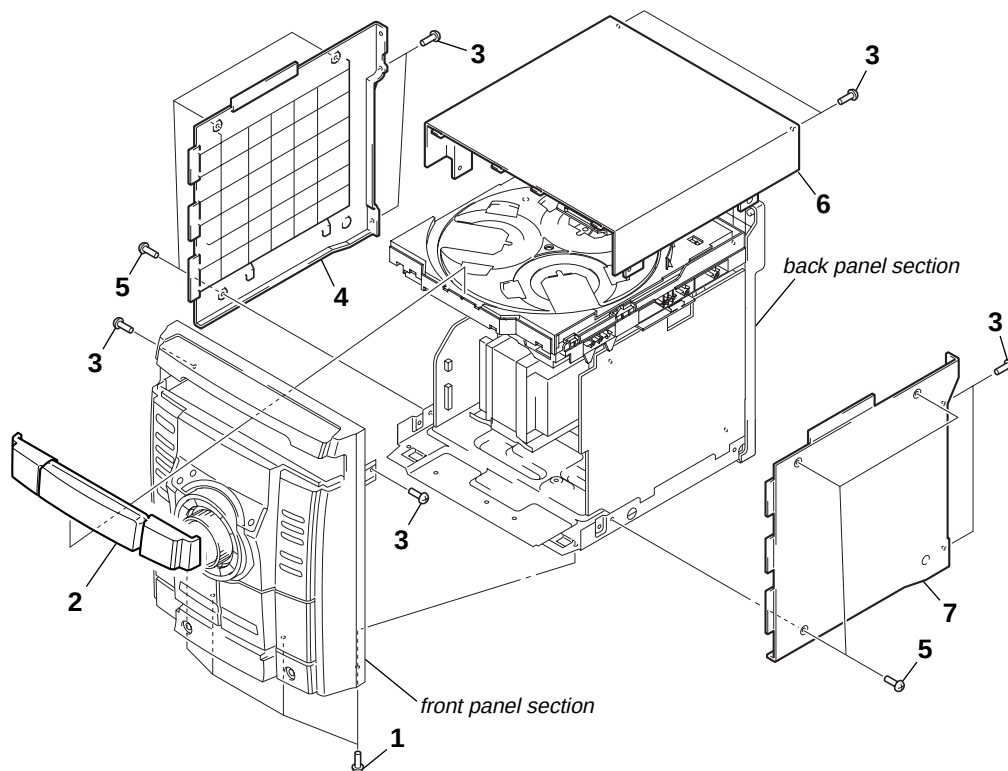7-1. OVERALL SECTION


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
1	3-252-829-01	SCREW (B3), (+) BV TAPPING		3	3-254-143-11	SCREW (B3), (+) BV TAPPING	
2	2-348-866-01	DOOR (CD) (GX555)		4	2-599-855-01	CASE (SIDE-L) (US)	
2	2-348-866-12	DOOR (CD) (RG475)		4	2-599-855-11	CASE (SIDE-L) (EXCEPT US)	
2	2-348-866-32	DOOR (CD) (GX355)		5	3-363-099-32	SCREW (CASE 3 TP2)	
2	2-348-866-42	DOOR (CD) (RG270: AEP, UK, EE, RU, E3, EA, AUS)		6	2-599-854-01	CASE (TOP) (US)	
2	2-348-866-52	DOOR (CD) (RG270: E2, E51, MX, AR)		6	2-599-854-11	CASE (TOP) (EXCEPT US)	
2	2-580-021-12	DOOR (CD) (RG575: SP)		7	2-599-856-01	CASE (SIDE-R) (US)	
2	2-580-021-22	DOOR (CD) (RG575: E2, E51, MX, AR)		7	2-599-856-11	CASE (SIDE-R) (EXCEPT US)	

7-2. BACK PANEL SECTION

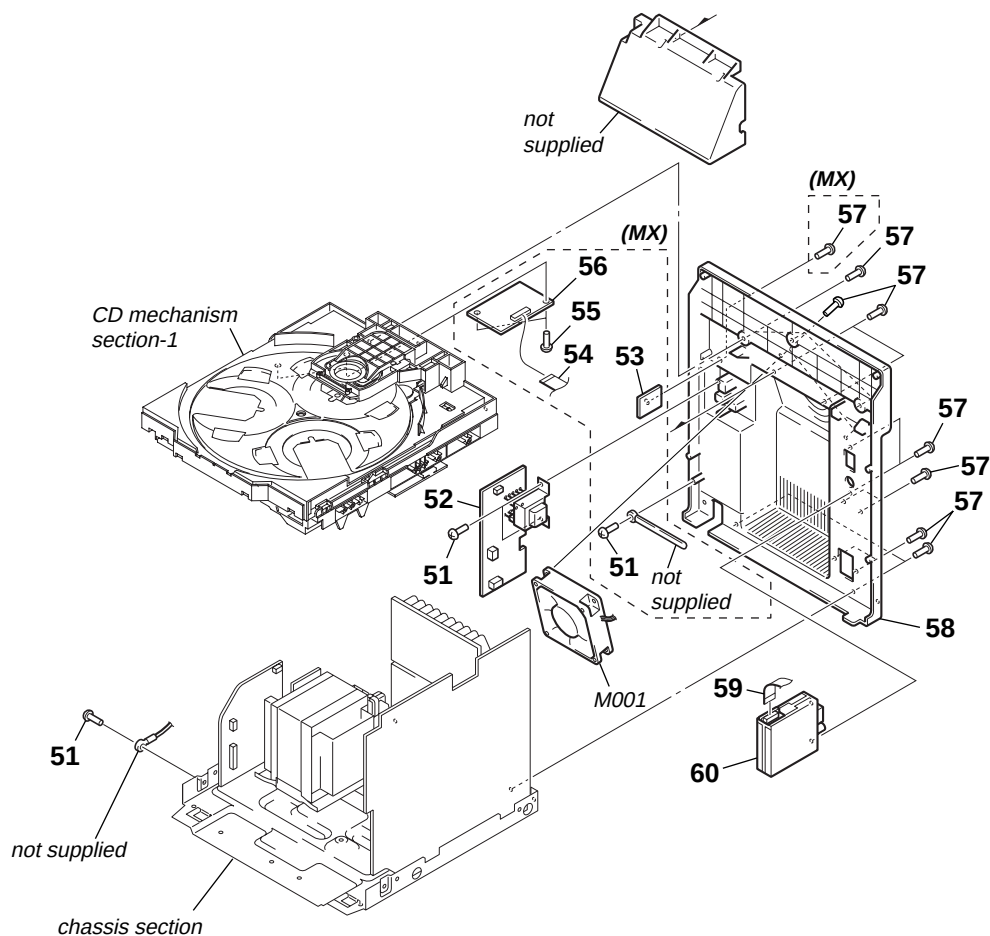

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
51	3-254-142-01	SCREW (B3), (+) BV TAPPING		57	3-254-143-11	SCREW (B3), (+) BV TAPPING	
52	A-1094-102-A	SUB TRANS BOARD, COMPLETE (GX555)		58	2-549-976-01	PANEL, BACK (GX555: US)	
52	A-1094-103-A	SUB TRANS BOARD, COMPLETE (RG475: AEP, UK, EE, RU)		58	2-549-976-11	PANEL, BACK (GX555: CND/ RG475 :AEP, UK, EE, RU, AUS/RG575: AR)	
52	A-1094-104-A	SUB TRANS BOARD, COMPLETE (AUS)		58	2-549-976-21	PANEL, BACK (RG475: E3, SP/RG575: E2, E51, SP)	
52	A-1094-105-A	SUB TRANS BOARD, COMPLETE (RG270: E2, E3, E51/RG475: E3, SP)		58	2-549-976-31	PANEL, BACK (GX355: US)	
52	A-1094-108-A	SUB TRANS BOARD, COMPLETE (GX355)		58	2-549-976-41	PANEL, BACK (GX355: CND/ RG270: AEP, UK, EE, RU, AR, AUS)	
52	A-1094-109-A	SUB TRANS BOARD, COMPLETE (RG270: AEP, UK, EE, RU)		58	2-549-976-51	PANEL, BACK (RG270: E2, E3, E51)	
52	A-1094-110-A	SUB TRANS BOARD, COMPLETE (EA)		58	2-549-976-61	PANEL, BACK (RG270: EA)	
52	A-1094-111-A	SUB TRANS BOARD, COMPLETE (RG270: MX)		58	2-549-976-71	PANEL, BACK (RG270: MX)	
52	A-1094-112-A	SUB TRANS BOARD, COMPLETE (RG270: AR)		58	2-549-977-31	PANEL, BACK (RG575: MX)	
52	A-1094-129-A	SUB TRANS BOARD, COMPLETE (RG575: E2, E51, SP)		59	1-828-963-11	WIRE (FLAT TYPE) (11 CORE) (EXCEPT AEP, UK, EE)	
52	A-1094-130-A	SUB TRANS BOARD, COMPLETE (RG575: MX)		59	1-828-980-11	WIRE (FLAT TYPE) (15 CORE) (AEP, UK, EE)	
52	A-1094-131-A	SUB TRANS BOARD, COMPLETE (RG575: AR)		60	1-693-615-11	TUNER (FM/AM) (E2, E3, E51, EA, MX, AR, AUS, SP)	
53	A-1124-118-A	VIDEO OUT BOARD, COMPLETE (RG575: MX)		60	1-693-616-11	TUNER (FM/AM) (AEP, UK, EE)	
53	A-1094-206-A	VIDEO OUT BOARD, COMPLETE (RG270: MX)		60	1-693-617-11	TUNER (FM/AM) (RU)	
54	1-828-975-11	WIRE (FLAT TYPE) (13 CORE) (MX)		60	1-693-631-31	TUNER (FM/AM) (US, CND)	
55	4-951-620-11	SCREW (2.6X10), +BVTP (MX)		M001	1-787-319-11	FAN, DC	
56	A-1094-204-A	CD-G BOARD, COMPLETE (MX)					


7-3. FRONT PANEL SECTION

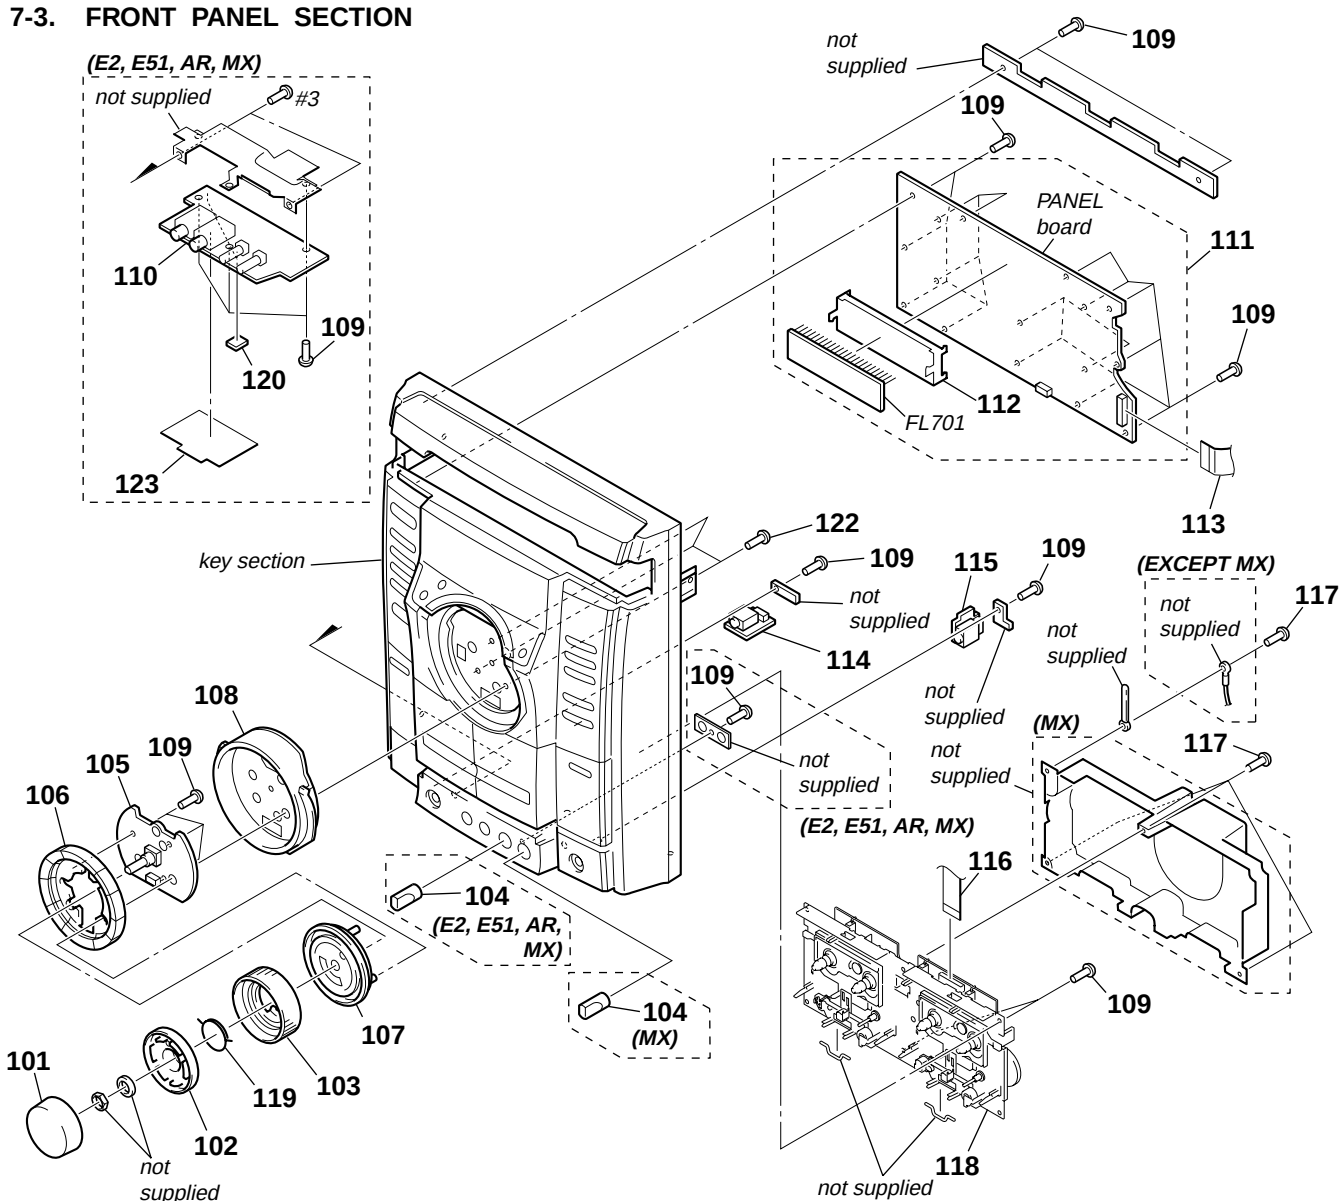

Ref. No.	Part No.	Description	Remark
101	4-252-214-01	KNOB, VOLUME	
102	2-348-884-01	RING (JOG)	
103	2-348-875-11	KNOB (JOG)	
104	2-638-220-01	KNOB (MIC) (E2, E51, MX, AR)	
105	A-1093-874-A	VOL BOARD, COMPLETE (GX355/RG270/GX555/RG475)	
105	A-1093-878-A	VOL BOARD, COMPLETE (RG575)	
106	2-348-870-02	KEY (PLAY) (ALBUM -, ALBUM +, <<, >>, <<< - EQ + >>> - TUNING +, EQ BAND, >>, >>>)	
107	2-348-874-01	COVER (CENTER)	
108	X-2067-233-1	WINDOW (CENTER) ASSY (GX555/RG475/RG575)	
108	X-2067-234-1	WINDOW (CENTER) ASSY (GX355/RG270)	
109	4-951-620-01	SCREW (2.6X8), +BVTP	
110	A-1094-194-A	MIC BOARD, COMPLETE (RG270: E2, E51, AR)	
110	A-1094-196-A	MIC BOARD, COMPLETE (RG270: MX)	
110	A-1094-199-A	MIC BOARD, COMPLETE (RG575: E2, E51, AR)	
110	A-1094-200-A	MIC BOARD, COMPLETE (RG575: MX)	
111	A-1093-848-A	PANEL BOARD, COMPLETE (GX555/RG475)	
111	A-1093-850-A	PANEL BOARD, COMPLETE (GX355/RG270: AEP, UK, EE, RU, E2, E3, E51, EA, AR, AUS)	


Ref. No.	Part No.	Description	Remark
111	A-1093-851-A	PANEL BOARD, COMPLETE (RG270: MX)	
111	A-1093-855-A	PANEL BOARD, COMPLETE (RG575: MX)	
111	A-1116-669-A	PANEL BOARD, COMPLETE (RG575: E2, E51, AR, SP)	
112	2-348-856-01	FL GUIDE	
113	1-829-003-11	WIRE (FLAT TYPE) (19 CORE)	
114	A-1094-028-A	AUDIO IN BOARD, COMPLETE (GX355/RG270/GX555/RG475)	
114	A-1094-031-A	AUDIO IN BOARD, COMPLETE (RG575)	
115	A-1094-404-A	HEADPHONE BOARD, COMPLETE (GX355/RG270/GX555/RG475)	
115	A-1094-407-A	HEADPHONE BOARD, COMPLETE (RG575)	
116	1-828-973-11	WIRE (FLAT TYPE) (13 CORE)	
117	4-951-620-01	SCREW (2.6X8), +BVTP (EXCEPT MX)	
117	4-951-620-11	SCREW (2.6X10), +BVTP (MX)	
118	1-796-485-51	DECK, MECHANICAL (CWM43FF13)	
119	4-252-223-01	SPRING, KNOB	
120	4-233-372-02	FOOT (FELT) (E2, E51, AR, MX)	
122	3-254-142-01	SCREW (B3), (+) BV TAPPING	
123	2-632-080-01	SHEET (MIC), SHIELD (E2, E51, AR, MX)	
FL701	1-518-976-31	INDICATOR TUBE, FLUORESCENT	
#3	7-685-134-19	SCREW +P 2.6X8 TYPE2 NON-SLIT	

7-4. KEY SECTION

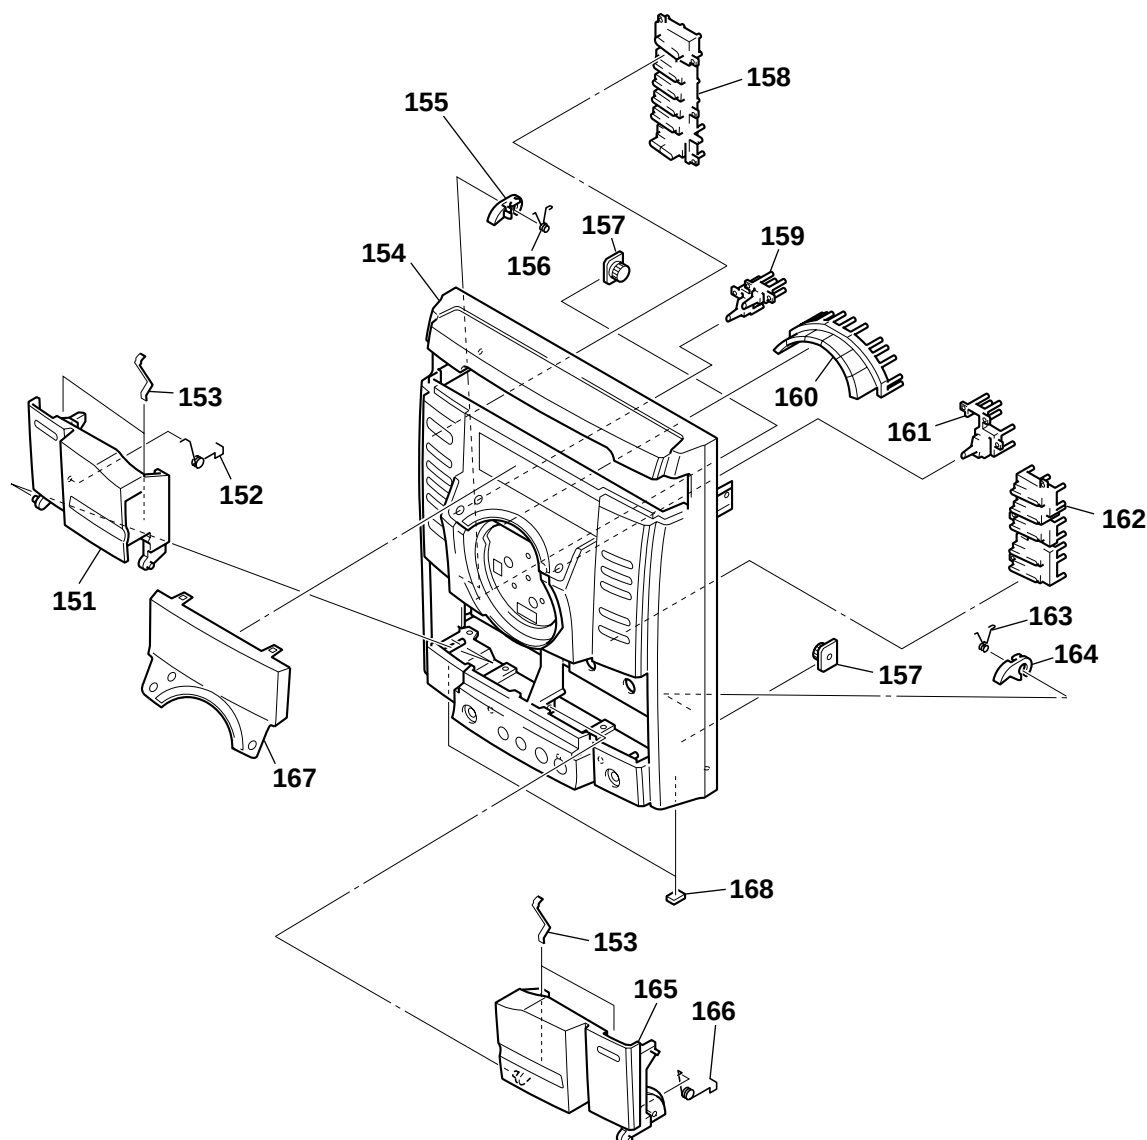


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
151	2-348-864-03	DOOR (A), CASSETTE		159	2-348-868-02	KEY (DISPLAY)	
152	2-549-974-01	SPRING (C-DOOR-L)		160	2-348-872-02	KEY (EQ) (GROOVE, PRESET EQ, P FILE, SURROUND, EFFECT ON/OFF, ENTER)	
153	4-238-631-11	TAPE SPRING		161	2-348-869-02	KEY (MODE) (MX)	
154	X-2067-223-1	PANEL (S) ASSY, FRONT (GX555: US)		161	2-348-869-12	KEY (MODE) (EXCEPT MX)	
154	X-2067-224-1	PANEL (S) ASSY, FRONT (GX555: CND/RG475/RG575: SP)		162	2-348-871-12	KEY (CD) (GX355/RG270)	
154	X-2067-225-1	PANEL (S) ASSY, FRONT (RG575: E2, E51, AR)		162	X-2067-232-1	KEY (CD) ASSY (GX555/RG475/RG575)	
154	X-2067-226-1	PANEL (S) ASSY, FRONT (GX355: US)		163	4-231-841-01	SPRING (HEART CAM-B)	
154	X-2067-227-1	PANEL (S) ASSY, FRONT (GX355: CND/RG270: AEP, EE, UK, RU, E3, EA, SP, AUS)		164	4-231-825-01	CAM (B), HEART	
154	X-2067-228-1	PANEL (S) ASSY, FRONT (RG270: E2, E51, AR)		165	2-348-865-03	DOOR (B), CASSETTE (EXCEPT E2, E51, MX, AR)	
154	X-2067-229-1	PANEL (S) ASSY, FRONT (RG270: MX)		165	2-348-865-13	DOOR (B), CASSETTE (E2, E51, MX, AR)	
154	X-2067-230-1	PANEL (S) ASSY, FRONT (RG575: MX)		166	2-549-975-01	SPRING (C-DOOR-R)	
155	4-231-824-01	CAM (A), HEART		167	2-348-859-01	WINDOW (DISPLAY-B) (MX)	
156	4-231-836-01	SPRING (HEART CAM-A)		167	2-348-862-01	WINDOW (DISPLAY-A) (EXCEPT AEP, UK, EE, MX)	
157	4-224-104-41	DAMPER		167	2-348-862-11	WINDOW (DISPLAY-A) (AEP, UK, EE)	
158	X-2067-231-1	KEY (POWER) ASSY		168	4-225-252-01	CUSHION (FOOT)	

7-5. CHASSIS SECTION

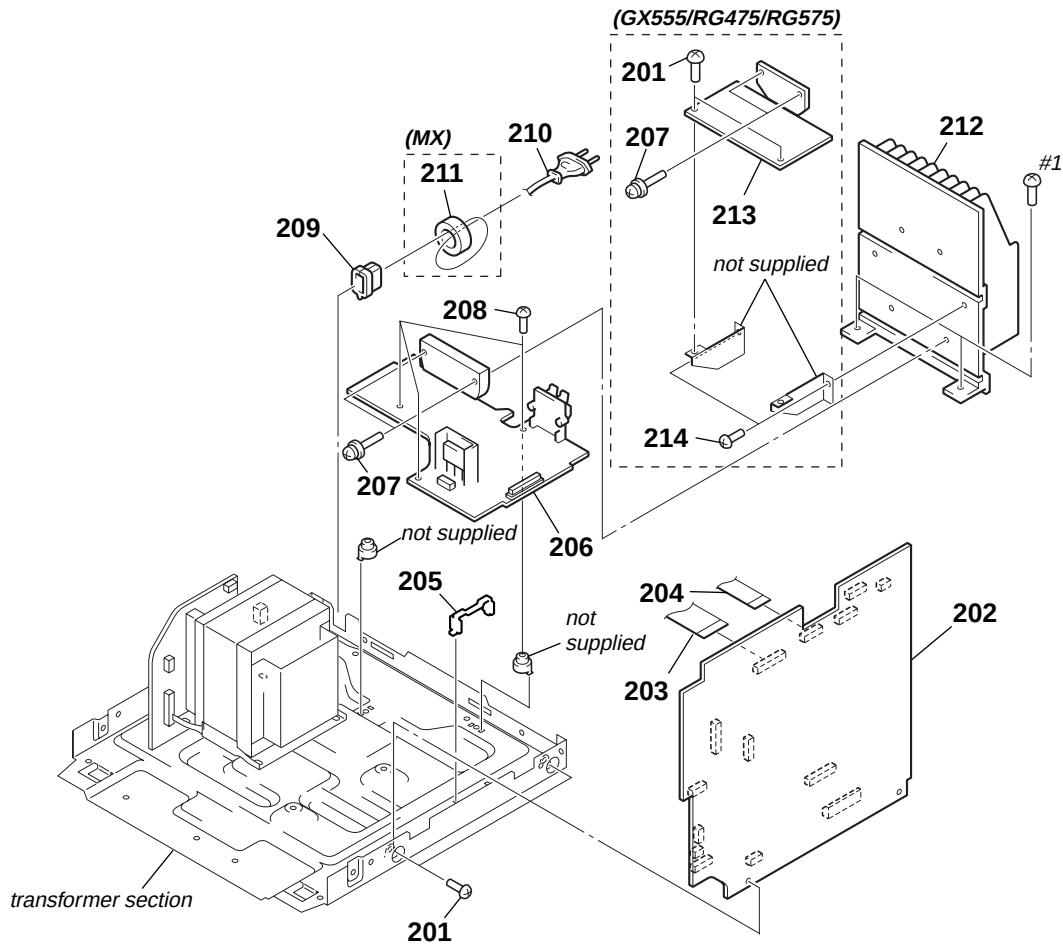


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
201	3-254-142-01	SCREW (B3), (+) BV TAPPING		206	A-1094-134-A	POWER BOARD, COMPLETE (RG475: E3, AUS)	
202	A-1093-929-A	MAIN BOARD, COMPLETE (GX555)		206	A-1094-136-A	POWER BOARD, COMPLETE (GX355)	
202	A-1093-930-A	MAIN BOARD, COMPLETE		206	A-1094-137-A	POWER BOARD, COMPLETE	
		(RG475: AEP, UK, EE)				(RG270: AEP, UK, EE, RU)	
202	A-1093-931-A	MAIN BOARD, COMPLETE (RG475: RU)		206	A-1094-138-A	POWER BOARD, COMPLETE	
202	A-1093-932-A	MAIN BOARD, COMPLETE				(RG270: E2, E3, E51, EA, MX, AR, AUS)	
		(RG475: E3, AUS, SP)					
202	A-1093-935-A	MAIN BOARD, COMPLETE (GX355)		206	A-1094-148-A	POWER BOARD, COMPLETE	
202	A-1093-936-A	MAIN BOARD, COMPLETE				(RG575: E2, E51, MX, AR)	
		(RG270: AEP, UK, EE)		206	A-1104-989-A	POWER BOARD, COMPLETE (RG475: SP)	
202	A-1093-937-A	MAIN BOARD, COMPLETE (RG270: RU)		206	A-1104-990-A	POWER BOARD, COMPLETE (RG575: SP)	
202	A-1093-938-A	MAIN BOARD, COMPLETE (EA)		207	3-905-609-41	SCREW (TRANSISTOR)	
202	A-1093-939-A	MAIN BOARD, COMPLETE (RG270: E3, AUS)		208	3-254-145-01	SCREW (B3), (+) BV TAPPING	
202	A-1093-940-A	MAIN BOARD, COMPLETE		* 209	3-703-571-12	BUSHING (S) (4516), CORD (E2, E3, MX)	
		(RG270: E2, E51, AR)		209	3-703-244-00	BUSHING (2104), CORD (EXCEPT E2, E3, MX)	
202	A-1093-941-A	MAIN BOARD, COMPLETE (RG270: MX)		△ 210	1-775-790-71	CORD, POWER (AUS)	
202	A-1093-956-A	MAIN BOARD, COMPLETE (RG575: SP)		△ 210	1-769-774-81	CORD, POWER (UK, EA)	
202	A-1093-957-A	MAIN BOARD, COMPLETE		△ 210	1-827-226-31	CORD, POWER (E2, E3, MX)	
		(RG575: E2, E51, AR)		△ 210	1-829-387-11	CORD, POWER (AR)	
202	A-1093-958-A	MAIN BOARD, COMPLETE (RG575: MX)		△ 210	1-830-188-11	CORD, POWER (AEP, EE, RU, E51, SP)	
				△ 210	1-830-190-11	CORD, POWER (US, CND)	
203	1-775-251-11	WIRE (FLAT TYPE) (27 CORE) (EXCEPT MX)		211	1-500-868-11	CORE, FERRITE (MX)	
203	1-775-285-11	WIRE (FLAT TYPE) (31 CORE) (MX)		212	2-549-972-01	HEAT SINK (H) (US, CND, AEP, UK, EE, RU)	
204	1-828-970-11	WIRE (FLAT TYPE) (13 CORE)		213	A-1094-189-A	SUB WOOFER BOARD, COMPLETE (GX555)	
205	4-988-533-01	HOLDER, PWB		213	A-1094-190-A	SUB WOOFER BOARD, COMPLETE (RG475)	
206	A-1094-132-A	POWER BOARD, COMPLETE (GX555)		213	A-1094-192-A	SUB WOOFER BOARD, COMPLETE (RG575)	
206	A-1094-133-A	POWER BOARD, COMPLETE		214	3-254-143-01	SCREW (B3), (+) BV TAPPING	
		(RG475: AEP, UK, EE, RU)		#1	7-685-881-09	SCREW +BVTT 4X8 (S)	

7-6. TRANSFORMER SECTION

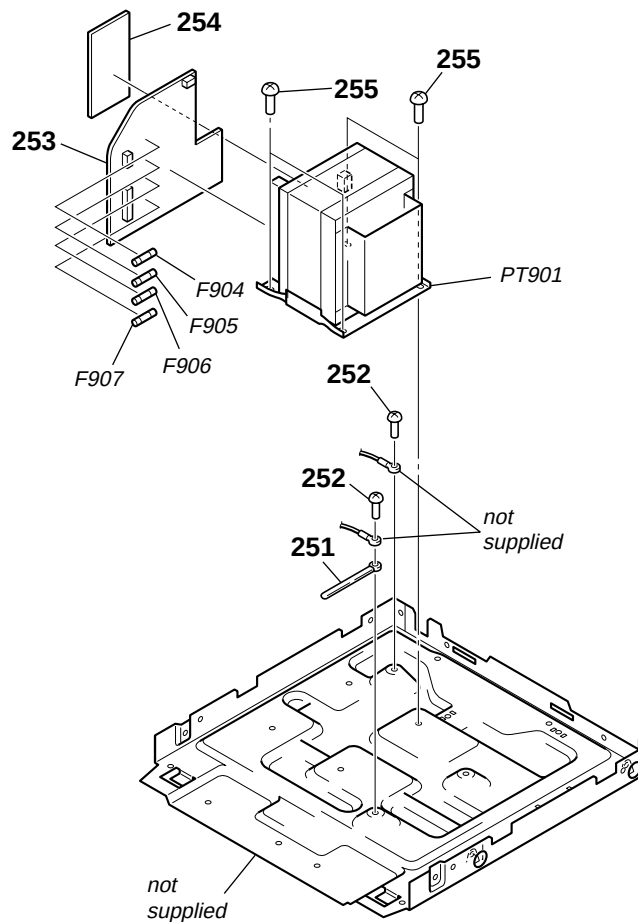


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
251	3-701-748-00	CLAMP (RG270: MX)		254	A-1102-772-A	AC1 BOARD, COMPLETE (RG270: AEP, UK, EE, RU)	
252	4-242-539-01	BVIT 3B+3-8R W/O SLOT		254	A-1102-773-A	AC1 BOARD, COMPLETE (EA)	
253	A-1094-068-A	TRANSFORMER BOARD, COMPLETE (GX555)		254	A-1102-774-A	AC1 BOARD, COMPLETE (RG270: AR)	
253	A-1094-069-A	TRANSFORMER BOARD, COMPLETE (RG475: AEP, UK, EE, RU)		254	A-1102-775-A	AC1 BOARD, COMPLETE (RG270: MX)	
253	A-1094-070-A	TRANSFORMER BOARD, COMPLETE (AUS)		254	A-1102-793-A	AC1 BOARD, COMPLETE (RG575: E2, E51, SP)	
253	A-1094-071-A	TRANSFORMER BOARD, COMPLETE (RG270: E2, E3, E51/RG475: E3, SP)		254	A-1102-794-A	AC1 BOARD, COMPLETE (RG575: MX)	
253	A-1094-074-A	TRANSFORMER BOARD, COMPLETE (GX355)		254	A-1102-795-A	AC1 BOARD, COMPLETE (RG575: AR)	
253	A-1094-075-A	TRANSFORMER BOARD, COMPLETE (RG270: AEP, UK, EE, RU)		255	4-900-386-01	SCREW	
253	A-1094-076-A	TRANSFORMER BOARD, COMPLETE (EA)		△F904	1-576-655-12	FUSE, GLASS TUBE (DIA. 5) (T8A/250V)	
253	A-1094-077-A	TRANSFORMER BOARD, COMPLETE (RG270: MX)		△F905	1-576-655-12	FUSE, GLASS TUBE (DIA. 5) (T8A/250V)	
253	A-1094-078-A	TRANSFORMER BOARD, COMPLETE (RG270: AR)		△F906	1-533-470-12	FUSE, GLASS TUBE (DIA. 5) (T3.15A/250V)	
253	A-1094-096-A	TRANSFORMER BOARD, COMPLETE (RG575: E2, E51, SP)		△F907	1-533-470-12	FUSE, GLASS TUBE (DIA. 5) (T3.15A/250V)	
253	A-1094-097-A	TRANSFORMER BOARD, COMPLETE (RG575: MX)		△PT901	1-443-601-21	TRANSFORMER, POWER (GX355)	
253	A-1094-098-A	TRANSFORMER BOARD, COMPLETE (RG575: AR)		△PT901	1-443-603-21	TRANSFORMER, POWER (GX555)	
254	A-1102-765-A	AC1 BOARD, COMPLETE (GX555)		△PT901	1-443-605-11	TRANSFORMER, POWER (RG270: AEP, UK, EE, RU)	
254	A-1102-766-A	AC1 BOARD, COMPLETE (RG475: AEP, UK, EE, RU)		△PT901	1-443-606-21	TRANSFORMER, POWER (RG475: AEP, UK, EE, RU)	
254	A-1102-767-A	AC1 BOARD, COMPLETE (RG270: E2, E3, E51/RG475: E3, SP)		△PT901	1-443-608-11	TRANSFORMER, POWER (RG270: AR/RG575: AR, SP)	
254	A-1102-768-A	AC1 BOARD, COMPLETE (AUS)		△PT901	1-443-608-21	TRANSFORMER, POWER (RG270: E2, E3, E51, AUS/RG475: E3, SP, AUS)	
254	A-1102-771-A	AC1 BOARD, COMPLETE (GX355)		△PT901	1-443-608-31	TRANSFORMER, POWER (RG575: E2, E51)	
				△PT901	1-443-610-11	TRANSFORMER, POWER (RG270: MX/RG575: MX)	
				△PT901	1-443-613-11	TRANSFORMER, POWER (RG270: EA)	

7-7. CD MECHANISM DECK SECTION-1
(CDM74KFS-F1BD81C) (EXCEPT MX model)/
(CDM74KFS-F1BD84) (MX model)

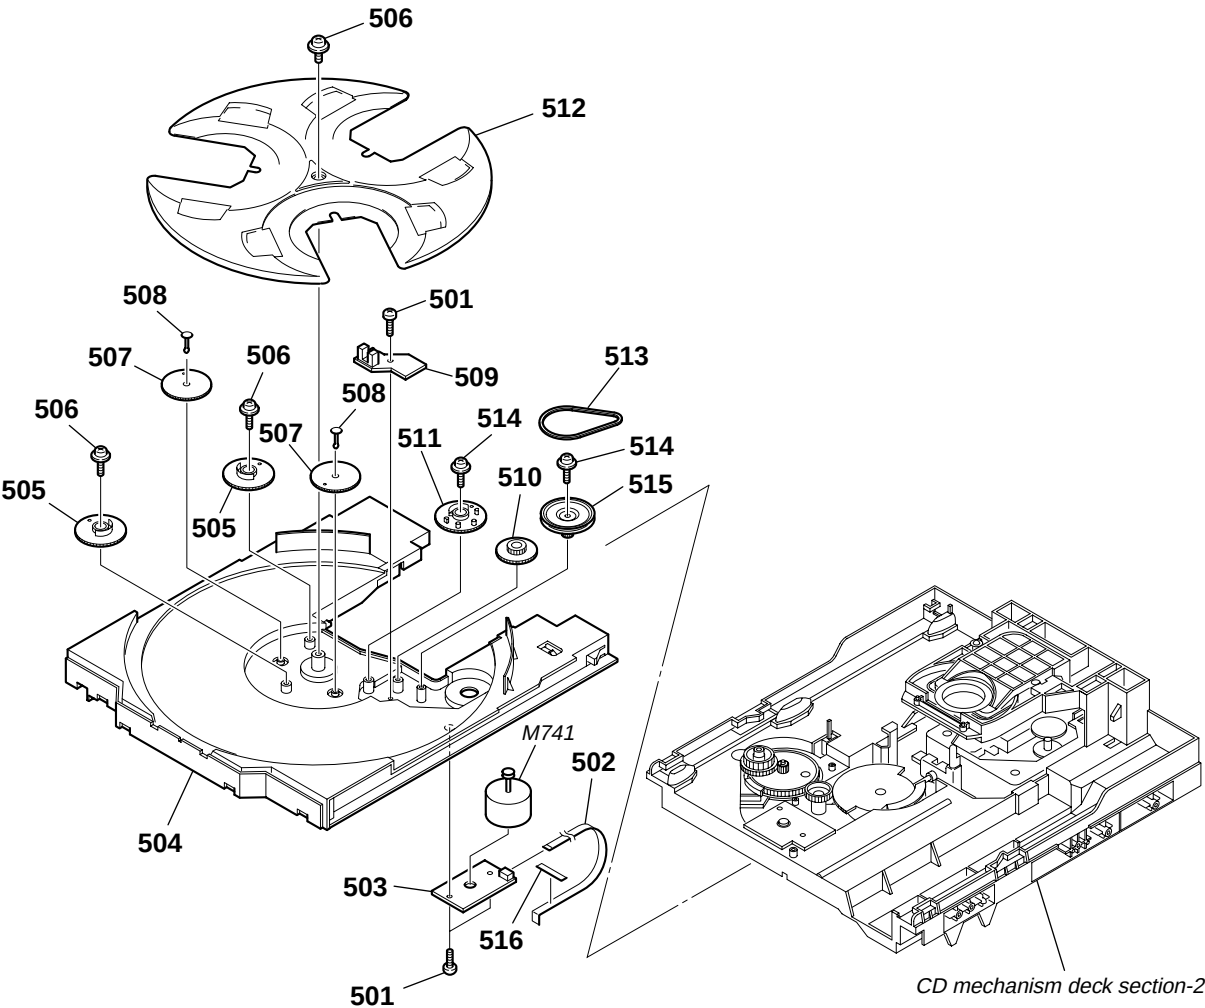

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
501	4-218-253-62	SCREW (M2.6), +BTTP		510	4-243-820-01	GEAR (TABLE)	
502	1-776-182-11	WIRE (FLAT TYPE) (5 CORE)		511	4-243-819-01	GEAR (GENEVA)	
503	1-687-134-12	MOTOR (TB) BOARD		512	4-243-816-11	TRAY	
504	4-243-815-11	TABLE (LOADING)		513	4-243-823-01	BELT (TABLE)	
505	4-245-571-02	GEAR (STOPPER)		514	4-985-672-01	SCREW (+PTPWH M2.6), FLOATING	
506	4-218-252-61	SCREW (+PTPWH M2.6), FLOATING		515	4-243-821-01	PULLEY (TABLE)	
507	4-245-570-01	GEAR (JOINT)		516	3-231-598-01	SHEET (BA)	
508	4-245-572-01	BUSHING (GEAR)		M741	A-1108-965-A	MOTOR ASSY, TABLE	
509	1-687-132-12	SENSOR BOARD					

7-8. CD MECHANISM DECK SECTION-2
(CDM74KFS-F1BD81C) (EXCEPT MX model)/
(CDM74KFS-F1BD84) (MX model)

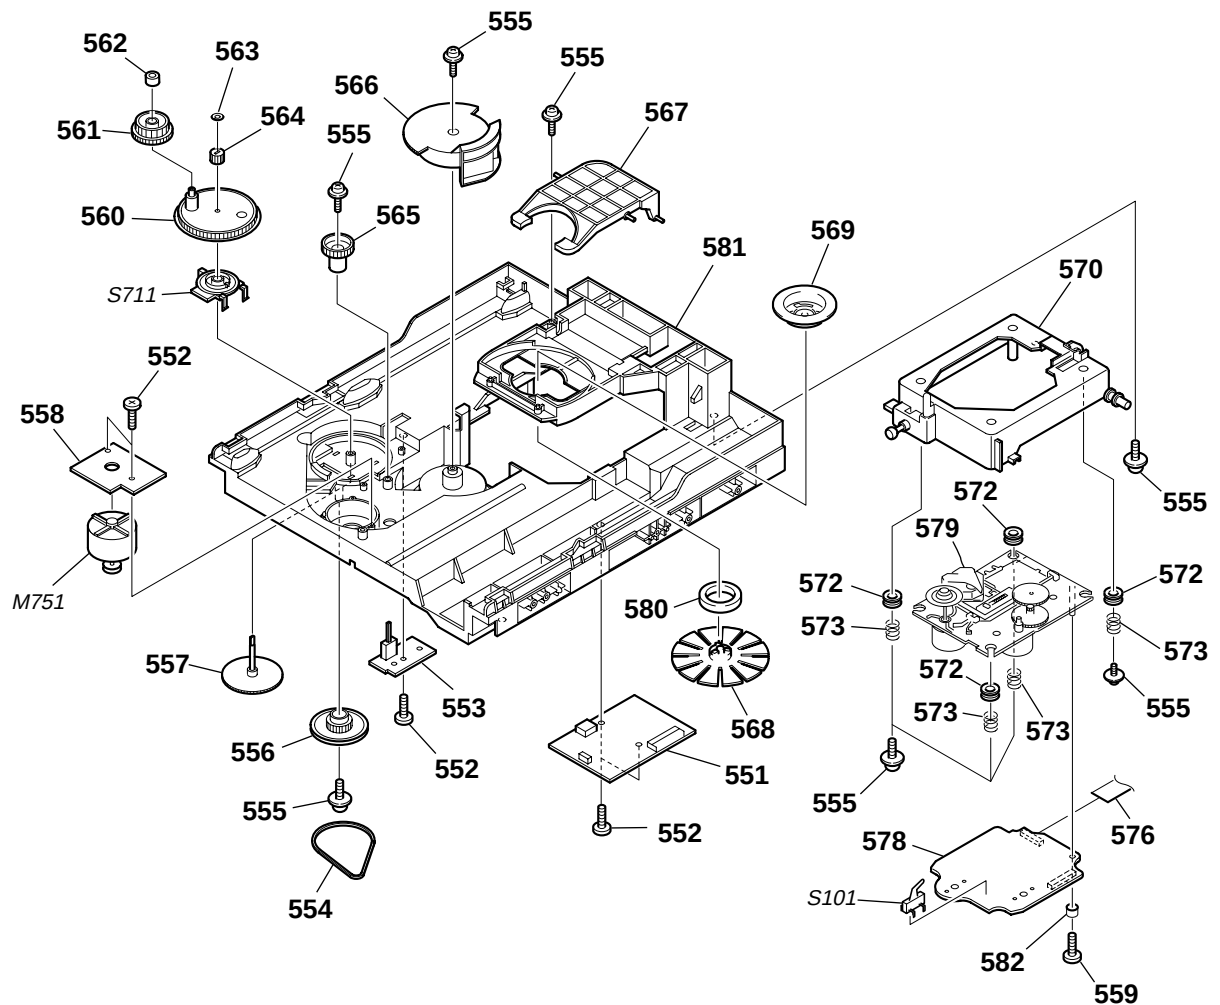

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
551	A-1103-756-A	DRIVER BOARD, COMPLETE		568	X-2102-809-1	PULLEY (KH) ASSY	
552	4-218-253-52	SCREW (M2.6), +BTTP		569	4-231-189-01	PULLEY (B), CHUCKING	
553	1-687-669-12	SW BOARD		570	X-2055-190-1	HOLDER (213) ASSY	
554	4-244-034-11	BELT (LOADING)		572	4-227-549-11	INSULATOR	
555	4-985-672-01	SCREW (+PTPWH M2.6), FLOATING		573	4-227-045-31	SPRING (INSULATOR), COIL	
556	4-225-844-01	GEAR (LOADING A)		576	1-827-992-11	WIRE (FLAT TYPE) (16 CORE)	
557	4-224-613-11	GEAR (SHAFT)		578	A-1095-982-A	BD BOARD, COMPLETE (MX)	
558	1-687-133-12	MOTOR (LD) BOARD		578	A-1091-086-A	CD BOARD, COMPLETE (EXCEPT MX)	
559	3-087-053-01	+BVTP2.6 (3CR)		△579	8-820-244-01	OPTICAL PICK-UP BLOCK KSM-215DCP/C2NP	
560	4-244-108-01	GEAR, SWING		580	1-471-035-21	MAGNET ASSY	
561	4-224-609-01	GEAR (LOADING C)		581	4-243-817-22	CHASSIS	
562	4-224-608-01	COLLAR, SWING		582	3-307-259-31	TUBE, GAP	
563	3-016-533-11	WASHER (FR), STOPPER		M751	A-1108-966-A	MOTOR ASSY, LOADING	
564	4-224-611-01	GEAR (LOADING B)		S711	1-477-680-12	ENCODER, ROTARY (DISC TRAY ADDRESS DETECT)	
565	4-224-606-01	GEAR (RV)		S101	1-771-853-11	SWITCH, DETECTION (LIMIT)	
566	4-243-818-01	GEAR (U/D)					
567	4-243-822-02	LEVER (LIFTER)					

SECTION 8

ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS**
All resistors are in ohms.
METAL: Metal-film resistor.
METAL OXIDE: Metal oxide-film resistor.
F: nonflammable
- Abbreviation
AR : Argentine model E3 : 240V AC Area in E model MX : Mexican model
AUS : Australian model E51 : Chilean and Peruvian models RU : Russian model
CND : Canadian model EA : Saudi Arabia model SP : Singapore model
E2 : 120V AC Area in E model EE : East European model
- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS**
In each case, u: μ , for example:
uA... : μ A... uPA... : μ PA...
uPB... : μ PB... uPC... : μ PC...
uPD... : μ PD...
- CAPACITORS**
uF: μ F
- COILS**
uH: μ H

The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
	A-1102-765-A	AC1 BOARD, COMPLETE (GX555)		C17	1-126-246-11	ELECT CHIP 220uF 20%	4V
	A-1102-766-A	AC1 BOARD, COMPLETE (RG475: AEP, UK, EE, RU)		C18	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V
	A-1102-767-A	AC1 BOARD, COMPLETE (RG270: E2, E3, E51/RG475: E3, SP)		C111	1-162-967-11	CERAMIC CHIP 0.0033uF 10%	50V
	A-1102-768-A	AC1 BOARD, COMPLETE (AUS)		C112	1-162-962-11	CERAMIC CHIP 470PF 10%	50V
	A-1102-771-A	AC1 BOARD, COMPLETE (GX355)		C113	1-162-967-11	CERAMIC CHIP 0.0033uF 10%	50V
	A-1102-772-A	AC1 BOARD, COMPLETE (RG270: AEP, UK, EE, RU)		C114	1-162-962-11	CERAMIC CHIP 470PF 10%	50V
	A-1102-773-A	AC1 BOARD, COMPLETE (EA)		C115	1-164-360-11	CERAMIC CHIP 0.1uF	16V
	A-1102-774-A	AC1 BOARD, COMPLETE (RG270: AR)		C116	1-128-995-21	ELECT CHIP 100uF 20%	10V
	A-1102-775-A	AC1 BOARD, COMPLETE (RG270: MX)		C122	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
	A-1102-793-A	AC1 BOARD, COMPLETE (RG575: E2, E51, SP)		C123	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
	A-1102-794-A	AC1 BOARD, COMPLETE (RG575: MX)		C124	1-162-959-11	CERAMIC CHIP 330PF 5%	50V
	A-1102-795-A	AC1 BOARD, COMPLETE (RG575: AR)		C125	1-164-360-11	CERAMIC CHIP 0.1uF	16V
		*****		C131	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
		< RESISTOR >		C132	1-117-863-11	CERAMIC CHIP 0.47uF 10%	6.3V
Δ R902	1-202-723-00	SOLID 2.2M 20% 1/2W (US, CND)		C133	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
		*****		C134	1-164-360-11	CERAMIC CHIP 0.1uF	16V
	A-1094-028-A	AUDIO IN BOARD, COMPLETE (GX355/GX555/RG270/RG475)		C141	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
	A-1094-031-A	AUDIO IN BOARD, COMPLETE (RG575)		C142	1-162-965-11	CERAMIC CHIP 0.0015uF 10%	50V
		*****		C143	1-164-360-11	CERAMIC CHIP 0.1uF	16V
		< JACK >		C151	1-128-995-21	ELECT CHIP 100uF 20%	10V
J751	1-793-829-11	JACK, HEADPHONE (AUDIO IN)		C161	1-164-360-11	CERAMIC CHIP 0.1uF	16V
		< RESISTOR >		C162	1-164-360-11	CERAMIC CHIP 0.1uF	16V
R751	1-216-833-11	METAL CHIP 10K 5% 1/10W		C163	1-164-360-11	CERAMIC CHIP 0.1uF	16V
R752	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		C171	1-162-919-11	CERAMIC CHIP 22PF 5%	50V
		*****		C172	1-162-920-11	CERAMIC CHIP 27PF 5%	50V
	A-1095-982-A	BD BOARD, COMPLETE (MX)		C174	1-164-360-11	CERAMIC CHIP 0.1uF	16V
		*****		C181	1-164-360-11	CERAMIC CHIP 0.1uF	16V
		< CAPACITOR >		C182	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C10	1-165-989-11	CERAMIC CHIP 10uF 10% 6.3V		C183	1-124-778-00	ELECT CHIP 22uF 20%	6.3V
C11	1-165-989-11	CERAMIC CHIP 10uF 10% 6.3V		C184	1-124-778-00	ELECT CHIP 22uF 20%	6.3V
C14	1-164-360-11	CERAMIC CHIP 0.1uF		C185	1-162-962-11	CERAMIC CHIP 470PF 10%	50V
C15	1-164-360-11	CERAMIC CHIP 0.1uF		C186	1-162-962-11	CERAMIC CHIP 470PF 10%	50V
C16	1-115-156-11	CERAMIC CHIP 1uF		C194	1-164-360-11	CERAMIC CHIP 0.1uF	16V
				C195	1-164-360-11	CERAMIC CHIP 0.1uF	16V
				C196	1-164-360-11	CERAMIC CHIP 0.1uF	16V
				C201	1-128-995-21	ELECT CHIP 100uF 20%	10V
				C203	1-128-995-21	ELECT CHIP 100uF 20%	10V
				C209	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
				C210	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
				C211	1-164-230-11	CERAMIC CHIP 220PF 5%	50V
				C212	1-162-919-11	CERAMIC CHIP 22PF 5%	50V
				C213	1-162-919-11	CERAMIC CHIP 22PF 5%	50V
				C251	1-162-969-11	CERAMIC CHIP 0.0068uF 10%	25V

Ver. 1.1

Ref. No.	Part No.	Description			Remark	Ref. No.	Part No.	Description			Remark
C252	1-164-360-11	CERAMIC CHIP	0.1uF		16V	R151	1-216-864-11	SHORT CHIP	0		
C255	1-164-360-11	CERAMIC CHIP	0.1uF		16V	R161	1-216-809-11	METAL CHIP	100	5%	1/10W
						R162	1-216-841-11	METAL CHIP	47K	5%	1/10W
C257	1-164-360-11	CERAMIC CHIP	0.1uF		16V	R163	1-216-809-11	METAL CHIP	100	5%	1/10W
C258	1-164-360-11	CERAMIC CHIP	0.1uF		16V	R165	1-216-864-11	SHORT CHIP	0		
C259	1-164-360-11	CERAMIC CHIP	0.1uF		16V						
C260	1-128-394-11	ELECT CHIP	220uF	20%	10V	R171	1-216-817-11	METAL CHIP	470	5%	1/10W
C302	1-164-360-11	CERAMIC CHIP	0.1uF		16V	R172	1-216-857-11	METAL CHIP	1M	5%	1/10W
						R173	1-216-295-00	SHORT CHIP	0		
C303	1-164-360-11	CERAMIC CHIP	0.1uF		16V	R181	1-216-809-11	METAL CHIP	100	5%	1/10W
C305	1-126-246-11	ELECT CHIP	220uF	20%	4V	R182	1-216-809-11	METAL CHIP	100	5%	1/10W
C306	1-164-360-11	CERAMIC CHIP	0.1uF		16V						
C307	1-164-360-11	CERAMIC CHIP	0.1uF		16V	R191	1-216-864-11	SHORT CHIP	0		
C308	1-126-208-21	ELECT CHIP	47uF	20%	4V	R201	1-500-445-21	FERRITE, EMI (SMD) (2012)			
						R203	1-216-864-11	SHORT CHIP	0		
C309	1-164-360-11	CERAMIC CHIP	0.1uF		16V	R204	1-216-864-11	SHORT CHIP	0		
C310	1-164-360-11	CERAMIC CHIP	0.1uF		16V	R205	1-216-864-11	SHORT CHIP	0		
C311	1-164-360-11	CERAMIC CHIP	0.1uF		16V						
C312	1-164-360-11	CERAMIC CHIP	0.1uF		16V	R251	1-216-833-11	METAL CHIP	10K	5%	1/10W
C313	1-164-360-11	CERAMIC CHIP	0.1uF		16V	R252	1-216-837-11	METAL CHIP	22K	5%	1/10W
						R253	1-216-833-11	METAL CHIP	10K	5%	1/10W
C314	1-126-208-21	ELECT CHIP	47uF	20%	4V	R301	1-216-845-11	METAL CHIP	100K	5%	1/10W
C315	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	R302	1-216-833-11	METAL CHIP	10K	5%	1/10W
C316	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V						
C317	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	R303	1-216-845-11	METAL CHIP	100K	5%	1/10W
C318	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	R305	1-216-845-11	METAL CHIP	100K	5%	1/10W
						R306	1-216-864-11	SHORT CHIP	0		
C320	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	R307	1-216-833-11	METAL CHIP	10K	5%	1/10W
		< CONNECTOR >				R313	1-216-813-11	METAL CHIP	220	5%	1/10W
CN101	1-770-425-11	CONNECTOR, FFC/FPC 16P				R351	1-216-809-11	METAL CHIP	100	5%	1/10W
CN201	1-784-879-21	CONNECTOR, FFC (LIF (NON-ZIF)) 31P				R352	1-216-809-11	METAL CHIP	100	5%	1/10W
		< FERRITE BEAD >				R353	1-216-809-11	METAL CHIP	100	5%	1/10W
						R354	1-216-809-11	METAL CHIP	100	5%	1/10W
FB301	1-500-445-21	FERRITE, EMI (SMD) (2012)				R401	1-216-809-11	METAL CHIP	100	5%	1/10W
		< IC >				R402	1-216-809-11	METAL CHIP	100	5%	1/10W
IC101	8-752-425-12	IC CXD3059AR				R403	1-216-809-11	METAL CHIP	100	5%	1/10W
IC251	6-705-808-01	IC BA5947FM-E2				R404	1-216-809-11	METAL CHIP	100	5%	1/10W
IC301	6-705-365-01	IC TC94A34FG-002				R405	1-216-809-11	METAL CHIP	100	5%	1/10W
IC303	6-705-807-01	IC BH15FB1WG		</							

HCD-GX355/GX555/RG270/RG475/RG575

Ver. 1.1

CD

Ref. No.	Part No.	Description					Remark	Ref. No.	Part No.	Description					Remark
C17	1-126-246-11	ELECT CHIP	220uF	20%	4V			C311	1-164-360-11	CERAMIC CHIP	0.1uF			16V	
C18	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V			C312	1-164-360-11	CERAMIC CHIP	0.1uF			16V	
C111	1-162-967-11	CERAMIC CHIP	0.0033uF	10%	50V			C313	1-164-360-11	CERAMIC CHIP	0.1uF			16V	
C112	1-164-315-11	CERAMIC CHIP	470PF	5%	50V			C314	1-126-208-21	ELECT CHIP	47uF	20%		4V	
C113	1-162-967-11	CERAMIC CHIP	0.0033uF	10%	50V			C315	1-107-826-11	CERAMIC CHIP	0.1uF	10%		16V	
								C316	1-162-966-11	CERAMIC CHIP	0.0022uF	10%		50V	
C114	1-164-315-11	CERAMIC CHIP	470PF	5%	50V			C317	1-162-970-11	CERAMIC CHIP	0.01uF	10%		25V	
C115	1-164-360-11	CERAMIC CHIP	0.1uF		16V			C318	1-162-970-11	CERAMIC CHIP	0.01uF	10%		25V	
C116	1-128-995-21	ELECT CHIP	100uF	20%	10V										
C122	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V			C320	1-162-964-11	CERAMIC CHIP	0.001uF	10%		50V	
C123	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V			C501	1-164-360-11	CERAMIC CHIP	0.1uF			16V	
										< CONNECTOR >					
C124	1-162-959-11	CERAMIC CHIP	330PF	5%	50V										
C125	1-164-360-11	CERAMIC CHIP	0.1uF		16V			CN101	1-770-425-11	CONNECTOR, FFC/FPC 16P					
C131	1-162-927-11	CERAMIC CHIP	100PF	5%	50V			CN201	1-818-350-11	CONNECTOR (FFC) 27P					
C132	1-117-863-11	CERAMIC CHIP	0.47uF	10%	6.3V					< FERRITE BEAD >					
C133	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V										
C134	1-164-360-11	CERAMIC CHIP	0.1uF		16V										
C141	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V			FB301	1-500-445-21	FERRITE, EMI (SMD) (2012)					
C142	1-162-965-11	CERAMIC CHIP	0.0015uF	10%	50V					< IC >					
C143	1-164-360-11	CERAMIC CHIP	0.1uF		16V										
C151	1-128-995-21	ELECT CHIP	100uF	20%	10V										
								IC101	8-752-425-12	IC CXD3059AR					
C161	1-164-360-11	CERAMIC CHIP	0.1uF		16V			IC251	6-705-808-01	IC BA5947FM-E2					
C162	1-164-360-11	CERAMIC CHIP	0.1uF		16V			IC301	6-705-365-01	IC TC94A34FG-002					
C163	1-164-360-11	CERAMIC CHIP	0.1uF		16V			IC303	6-705-807-01	IC BH15FB1WG					
C171	1-162-919-11	CERAMIC CHIP	22PF	5%	50V			IC501	8-759-058-62	IC TC7S08FU (TE85R)					
C172	1-162-920-11	CERAMIC CHIP	27PF	5%	50V					< TRANSISTOR >					
C174	1-164-360-11	CERAMIC CHIP	0.1uF		16V										
C181	1-164-360-11	CERAMIC CHIP	0.1uF		16V			Q10	6-551-120-01	TRANSISTOR	2SA2119K				
C182	1-164-360-11	CERAMIC CHIP	0.1uF		16V					< RESISTOR/FERRITE BEAD >					
C183	1-124-778-00	ELECT CHIP	22uF	20%	6.3V										
C184	1-124-778-00	ELECT CHIP	22uF	20%	6.3V										
								R10	1-216-791-11	METAL CHIP	3.3	5%		1/10W	
C185	1-164-315-11	CERAMIC CHIP	470PF	5%	50V			R11	1-216-864-11	SHORT CHIP	0				
C186	1-164-315-11	CERAMIC CHIP	470PF	5%	50V			R12	1-216-845-11	METAL CHIP	100K	5%		1/10W	
C194	1-164-360-11	CERAMIC CHIP	0.1uF		16V			R13	1-218-446-11	METAL CHIP	1	5%		1/10W	
C195	1-164-360-11	CERAMIC CHIP	0.1uF		16V			R111	1-216-821-11	METAL CHIP	1K	5%		1/10W	
C196	1-164-360-11	CERAMIC CHIP	0.1uF		16V										
								R112	1-216-835-11	METAL CHIP	15K	5%		1/10W	
C201	1-128-995-21	ELECT CHIP	100uF	20%	10V			R113	1-216-821-11	METAL CHIP	1K	5%		1/10W	
C203	1-128-995-21	ELECT CHIP	100uF	20%	10V			R114	1-216-835-11	METAL CHIP	15K	5%		1/10W	
C209	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V			R121	1-216-835-11	METAL CHIP	15K	5%		1/10W	
C210	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V			R131	1-216-857-11	METAL CHIP	1M	5%		1/10W	
C211	1-164-230-11	CERAMIC CHIP	220PF	5%	50V										
								R132	1-216-833-11	METAL CHIP	10K	5%		1/10W	
C212	1-162-919-11	CERAMIC CHIP	22PF	5%	50V			R133	1-216-848-11	METAL CHIP	180K	5%		1/10W	
C213	1-162-919-11	CERAMIC CHIP	22PF	5%	50V			R141	1-216-829-11	METAL CHIP	4.7K	5%		1/10W	
C251	1-162-969-11	CERAMIC CHIP	0.0068uF	10%	25V			R142	1-216-821-11	METAL CHIP	1K	5%		1/10W	
C252	1-164-360-11	CERAMIC CHIP	0.1uF		16V			R143	1-216-827-11	METAL CHIP	3.3K	5%		1/10W	
C255	1-164-360-11	CERAMIC CHIP	0.1uF		16V										
								R151	1-216-864-11	SHORT CHIP	0				
C257	1-164-360-11	CERAMIC CHIP	0.1uF		16V			R161	1-216-809-11	METAL CHIP	100	5%		1/10W	
C258	1-164-360-11	CERAMIC CHIP	0.1uF		16V			R162	1-216-841-11	METAL CHIP	47K	5%		1/10W	
C259	1-164-360-11	CERAMIC CHIP	0.1uF		16V			R163	1-216-809-11	METAL CHIP	100	5%		1/10W	
C260	1-128-394-11	ELECT CHIP	220uF	20%	10V			R165	1-216-864-11	SHORT CHIP	0				
C302	1-164-360-11	CERAMIC CHIP	0.1uF		16V										
								R171	1-216-817-11	METAL CHIP	470	5%		1/10W	
C303	1-164-360-11	CERAMIC CHIP	0.1uF		16V			R172	1-216-857-11	METAL CHIP	1M	5%		1/10W	
C305	1-126-246-11	ELECT CHIP	220uF	20%	4V			R173	1-216-295-00	SHORT CHIP	0				
C306	1-164-360-11	CERAMIC CHIP	0.1uF		16V			R181	1-216-809-11	METAL CHIP	100	5%		1/10W	
C307	1-164-360-11	CERAMIC CHIP	0.1uF		16V			R182	1-216-809-11	METAL CHIP	100	5%		1/10W	
C308	1-126-208-21	ELECT CHIP	47uF	20%	4V										
								R191	1-216-864-11	SHORT CHIP	0				
C309	1-164-360-11	CERAMIC CHIP	0.1uF		16V			R201	1-500-445-21	FERRITE, EMI (SMD) (2012)					
C310	1-164-360-11	CERAMIC CHIP	0.1uF		16V			R203	1-216-864-11	SHORT CHIP	0				

Ref. No.	Part No.	Description	Remark				Ref. No.	Part No.	Description	Remark			
R204	1-216-864-11	SHORT CHIP	0				C1024	1-126-206-11	ELECT CHIP	100uF	20%	6.3V	
R205	1-216-864-11	SHORT CHIP	0										
R251	1-216-833-11	METAL CHIP	10K	5%	1/10W		C1025	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	
R252	1-216-837-11	METAL CHIP	22K	5%	1/10W		C1026	1-110-530-11	ELECT CHIP	1000uF	20%	6.3V	
R253	1-216-833-11	METAL CHIP	10K	5%	1/10W		C1027	1-162-957-11	CERAMIC CHIP	220PF	5%	50V	
R301	1-216-845-11	METAL CHIP	100K	5%	1/10W		C1028	1-126-206-11	ELECT CHIP	100uF	20%	6.3V	
R302	1-216-833-11	METAL CHIP	10K	5%	1/10W		C1029	1-164-357-11	CERAMIC CHIP	0.001uF	5%	50V	
R303	1-216-845-11	METAL CHIP	100K	5%	1/10W		C1030	1-124-778-00	ELECT CHIP	22uF	20%	6.3V	
R305	1-216-845-11	METAL CHIP	100K	5%	1/10W		C1031	1-126-193-11	ELECT CHIP	1uF	20%	50V	
R306	1-216-864-11	SHORT CHIP	0						< CONNECTOR >				
R307	1-216-833-11	METAL CHIP	10K	5%	1/10W		CN1001	1-779-416-11	CONNECTOR, FFC (LIF (NON-ZIF)) 13P				
R313	1-216-813-11	METAL CHIP	220	5%	1/10W				< JUMPER RESISTOR >				
R351	1-216-809-11	METAL CHIP	100	5%	1/10W								
R352	1-216-809-11	METAL CHIP	100	5%	1/10W		FB1001	1-216-864-11	SHORT CHIP	0			
R353	1-216-809-11	METAL CHIP	100	5%	1/10W				< IC >				
R354	1-216-809-11	METAL CHIP	100	5%	1/10W								
R401	1-216-809-11	METAL CHIP	100	5%	1/10W								
R402	1-216-809-11	METAL CHIP	100	5%	1/10W		IC1001	6-707-420-01	IC TC9411AFG (BS, K)				
R403	1-216-809-11	METAL CHIP	100	5%	1/10W		IC1002	6-704-474-01	IC MSM514400E-60TS-K				
R404	1-216-809-11	METAL CHIP	100	5%	1/10W		IC1003	8-759-473-95	IC uPC2905T-E1				
R405	1-216-809-11	METAL CHIP	100	5%	1/10W		IC1005	8-759-584-98	IC SN74AHCT04NSR				
R406	1-216-809-11	METAL CHIP	100	5%	1/10W		IC1006	6-706-369-01	IC NJM2561F1-TE2				
R407	1-216-809-11	METAL CHIP	100	5%	1/10W				< JUMPER RESISTOR >				
R408	1-216-809-11	METAL CHIP	100	5%	1/10W								
R409	1-216-809-11	METAL CHIP	100	5%	1/10W		JR1001	1-216-864-11	SHORT CHIP	0			
R410	1-216-809-11	METAL CHIP	100	5%	1/10W				< COIL/RESISTOR >				
R411	1-216-809-11	METAL CHIP	100	5%	1/10W								
R412	1-216-809-11	METAL CHIP	100	5%	1/10W		L1001	1-216-864-11	SHORT CHIP	0			
R419	1-216-809-11	METAL CHIP	100	5%	1/10W		L1002	1-216-797-11	METAL CHIP	10	5%	1/10W	
R501	1-216-809-11	METAL CHIP	100	5%	1/10W				< TRANSISTOR >				
		< VIBRATOR >											
X171	1-767-408-21	VIBRATOR, CRYSTAL (16.9344MHz)					Q1001	8-729-027-59	TRANSISTOR	DTC144EKA-T146			
*****							Q1002	8-729-027-59	TRANSISTOR	DTC144EKA-T146			
		A-1094-204-A	CD-G BOARD, COMPLETE (MX)				Q1005	8-729-027-59	TRANSISTOR	DTC144EKA-T146			
			*****				Q1006	8-729-027-23	TRANSISTOR	DTA114EKA-T146			
			< CAPACITOR/JUMPER RESISTOR >				Q1007	8-729-027-59	TRANSISTOR	DTC144EKA-T146			
C1001	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V		Q1008	8-729-804-41	TRANSISTOR	2SB1122-S			
C1002	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V		Q1009	8-729-027-23	TRANSISTOR	DTA114EKA-T146			
C1003	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V		Q1010	8-729-027-59	TRANSISTOR	DTC144EKA-T146			
C1004	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V				< RESISTOR/CAPACITOR >				
C1005	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V		R1003	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	
C1006	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V		R1004	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	
C1007	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V		R1005	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	
C1008	1-126-193-11	ELECT CHIP	1uF	20%	50V		R1006	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	
C1010	1-126-206-11	ELECT CHIP	100uF	20%	6.3V		R1011	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	
C1011	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V								
C1012	1-126-205-11	ELECT CHIP	47uF	20%	6.3V		R1012	1-216-833-11	METAL CHIP	10K	5%	1/10W	
C1013	1-126-206-11	ELECT CHIP	100uF	20%	6.3V		R1013	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	
C1014	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V		R1015	1-216-809-11	METAL CHIP	100	5%	1/10W	
C1015	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V		R1016	1-216-833-11	METAL CHIP	10K	5%	1/10W	
C1016	1-216-864-11	SHORT CHIP	0				R1017	1-216-833-11	METAL CHIP	10K	5%	1/10W	
C1018	1-162-919-11	CERAMIC CHIP	22PF	5%	50V		R1020	1-216-833-11	METAL CHIP	10K	5%	1/10W	
C1019	1-162-919-11	CERAMIC CHIP	22PF	5%	50V		R1021	1-216-813-11	METAL CHIP	220	5%	1/10W	
C1022	1-162-919-11	CERAMIC CHIP	22PF	5%	50V		R1022	1-216-813-11	METAL CHIP	220	5%	1/10W	
C1023	1-126-193-11	ELECT CHIP	1uF	20%	50V		R1023	1-216-813-11	METAL CHIP	220	5%	1/10W	
							R1029	1-216-821-11	METAL CHIP	1K	5%	1/10W	
							R1030	1-216-837-11	METAL CHIP	22K	5%	1/10W	

HCD-GX355/GX555/RG270/RG475/RG575

Ver. 1.1

- CD-G
- DRIVER
- HEADPHONE
- MAIN

Ref. No.	Part No.	Description	Remark		
R1031	1-218-285-11	METAL CHIP	75	5%	1/10W
R1032	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1033	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R1034	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
< VIBRATOR >					
X1002	1-813-555-11	VIBRATOR, CRYSTAL (14.31818MHz)			

A-1103-756-A		DRIVER BOARD, COMPLETE			

< CAPACITOR >					
C715	1-126-933-11	ELECT	100uF	20%	16V
C731	1-126-964-11	ELECT	10uF	20%	50V
C735	1-164-159-21	CERAMIC	0.1uF		50V
C736	1-164-159-21	CERAMIC	0.1uF		50V
C737	1-164-159-21	CERAMIC	0.1uF		50V
C741	1-162-306-11	CERAMIC	0.01uF	20%	16V
C751	1-162-306-11	CERAMIC	0.01uF	20%	16V
C752	1-164-159-21	CERAMIC	0.1uF		50V
< CONNECTOR >					
CN701	1-784-735-11	CONNECTOR, FFC 13P			
CN702	1-784-766-11	CONNECTOR, FFC 5P			
* CN703	1-564-720-11	PIN, CONNECTOR (SMALL TYPE) 4P			
CN704	1-785-328-11	PIN, CONNECTOR (LIGHT ANGRE) 2P			
< DIODE >					
D701	8-719-921-42	DIODE MTZJ-5.1A			
D711	8-719-109-69	DIODE RD3.6ESB2			
< IC >					
IC701	8-759-598-69	IC BA6956AN			
IC712	8-759-598-69	IC BA6956AN			
< TRANSISTOR >					
Q731	8-729-029-66	TRANSISTOR DTC114ESA			
< RESISTOR >					
R701	1-249-413-11	CARBON	470	5%	1/4W
R702	1-247-807-31	CARBON	100	5%	1/4W
R711	1-249-417-11	CARBON	1K	5%	1/4W
R712	1-249-425-11	CARBON	4.7K	5%	1/4W
R713	1-249-433-11	CARBON	22K	5%	1/4W
R721	1-249-425-11	CARBON	4.7K	5%	1/4W
R722	1-249-425-11	CARBON	4.7K	5%	1/4W
R723	1-249-425-11	CARBON	4.7K	5%	1/4W
R731	1-247-807-31	CARBON	100	5%	1/4W
R732	1-249-429-11	CARBON	10K	5%	1/4W
R733	1-249-417-11	CARBON	1K	5%	1/4W
R734	1-249-430-11	CARBON	12K	5%	1/4W
R735	1-247-807-31	CARBON	100	5%	1/4W

Ref. No.	Part No.	Description	Remark		
R751	1-249-425-11	CARBON	4.7K	5%	1/4W

A-1094-404-A	HEADPHONE BOARD, COMPLETE				
	(GX355/GX555/RG270/RG475)				
A-1094-407-A	HEADPHONE BOARD, COMPLETE (RG575)				

< CAPACITOR >					
C781	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C782	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
< JACK >					
J701	1-793-829-11	JACK, HEADPHONE (PHONES)			

A-1093-929-A	MAIN BOARD, COMPLETE (GX555)				
A-1093-930-A	MAIN BOARD, COMPLETE				
	(RG475: AEP, UK, EE)				
A-1093-931-A	MAIN BOARD, COMPLETE (RG475: RU)				
A-1093-932-A	MAIN BOARD, COMPLETE				
	(RG475: E3, AUS, SP)				
A-1093-935-A	MAIN BOARD, COMPLETE (GX355)				
A-1093-936-A	MAIN BOARD, COMPLETE				
	(RG270: AEP, UK, EE)				
A-1093-937-A	MAIN BOARD, COMPLETE (RG270: RU)				
A-1093-938-A	MAIN BOARD, COMPLETE (EA)				
A-1093-939-A	MAIN BOARD, COMPLETE (RG270: E3, AUS)				
A-1093-940-A	MAIN BOARD, COMPLETE				
	(RG270: E2, E51, AR)				
A-1093-941-A	MAIN BOARD, COMPLETE (RG270: MX)				
A-1093-956-A	MAIN BOARD, COMPLETE (RG575: SP)				
A-1093-957-A	MAIN BOARD, COMPLETE				
	(RG575: E2, E51, AR)				
A-1093-958-A	MAIN BOARD, COMPLETE (RG575: MX)				

7-685-872-09	SCREW +BVT 3X8 (S)				
< CAPACITOR >					
C001	1-136-165-00	FILM	0.1uF	5%	50V
C002	1-136-165-00	FILM	0.1uF	5%	50V
C005	1-126-768-11	ELECT	2200uF	20%	16V
C007	1-126-965-11	ELECT	22uF	20%	50V
C011	1-136-165-00	FILM	0.1uF	5%	50V
C012	1-136-165-00	FILM	0.1uF	5%	50V
C013	1-126-943-11	ELECT	2200uF	20%	25V
C015	1-126-933-11	ELECT	100uF	20%	16V
C016	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C023	1-126-943-11	ELECT	2200uF	20%	25V
C025	1-126-933-11	ELECT	100uF	20%	16V
C026	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C027	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C028	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C031	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
	(AEP, UK, EE, RU)				
C032	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
	(AEP, UK, EE, RU)				
C041	1-126-947-11	ELECT	47uF	20%	35V
C042	1-126-963-11	ELECT	4.7uF	20%	50V
C043	1-164-156-11	CERAMIC CHIP	0.1uF		25V

Ref. No.	Part No.	Description				Remark	Ref. No.	Part No.	Description				Remark
C044	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V		C151	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
C045	1-164-156-11	CERAMIC CHIP	0.1uF		25V		C152	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V	
C063	1-164-156-11	CERAMIC CHIP	0.1uF		25V								(GX555/RG475/RG575)
C064	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V		C153	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V	
C065	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V								(GX555/RG475/RG575)
C066	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	(AEP, UK, EE, RU)	C155	1-126-947-11	ELECT	47uF	20%	35V	
						(AEP, UK, EE, RU)	C156	1-126-933-11	ELECT	100uF	20%	16V	
C068	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V		C158	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V	
C069	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	(AEP, UK, EE, RU)	C159	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	
						(AEP, UK, EE, RU)							(AEP, UK, EE, RU)
C070	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V		C160	1-126-933-11	ELECT	100uF	20%	16V	
						(AEP, UK, EE, RU)	C161	1-162-953-11	CERAMIC CHIP	100PF	5%	50V	
C101	1-126-960-11	ELECT	1uF	20%	50V		C162	1-162-953-11	CERAMIC CHIP	100PF	5%	50V	
C102	1-126-960-11	ELECT	1uF	20%	50V								
C103	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V		C163	1-126-965-11	ELECT	22uF	20%	50V	
C104	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V		C171	1-126-956-11	ELECT	0.1uF	20%	50V	
C105	1-126-960-11	ELECT	1uF	20%	50V		C172	1-126-956-11	ELECT	0.1uF	20%	50V	
C106	1-126-960-11	ELECT	1uF	20%	50V		C173	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V	
C109	1-126-960-11	ELECT	1uF	20%	50V		C174	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V	
C110	1-126-960-11	ELECT	1uF	20%	50V		C175	1-107-726-91	CERAMIC CHIP	0.01uF	10%	16V	
C111	1-126-965-11	ELECT	22uF	20%	50V		C176	1-107-726-91	CERAMIC CHIP	0.01uF	10%	16V	
C113	1-126-960-11	ELECT	1uF	20%	50V		C177	1-162-960-11	CERAMIC CHIP	220PF	10%	50V	
						(E2, E51, MX, AR)	C178	1-162-960-11	CERAMIC CHIP	220PF	10%	50V	
C114	1-126-960-11	ELECT	1uF	20%	50V		C179	1-126-964-11	ELECT	10uF	20%	50V	
C116	1-126-960-11	ELECT	1uF	20%	50V		C180	1-126-964-11	ELECT	10uF	20%	50V	
							C181	1-126-960-11	ELECT	1uF	20%	50V	
C117	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V		C182	1-126-960-11	ELECT	1uF	20%	50V	
C118	1-126-961-11	ELECT	2.2uF	20%	50V		C183	1-126-960-11	ELECT	1uF	20%	50V	
C119	1-126-961-11	ELECT	2.2uF	20%	50V		C184	1-126-960-11	ELECT	1uF	20%	50V	
C120	1-125-891-11	CERAMIC CHIP	0.47uF	10%	10V								
C121	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V		C187	1-164-362-11	CERAMIC CHIP	470PF	5%	50V	(AEP, UK, EE, RU)
C122	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V		C188	1-164-362-11	CERAMIC CHIP	470PF	5%	50V	(AEP, UK, EE, RU)
C123	1-107-726-91	CERAMIC CHIP	0.01uF	10%	16V								(AEP, UK, EE, RU)
C124	1-107-726-91	CERAMIC CHIP	0.01uF	10%	16V		C189	1-164-362-11	CERAMIC CHIP	470PF	5%	50V	(AEP, UK, EE, RU)
C125	1-107-726-91	CERAMIC CHIP	0.01uF	10%	16V		C190	1-164-362-11	CERAMIC CHIP	470PF	5%	50V	(AEP, UK, EE, RU)
C126	1-107-726-91	CERAMIC CHIP	0.01uF	10%	16V		C191	1-107-726-91	CERAMIC CHIP	0.01uF	10%	16V	
C127	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		C192	1-107-726-91	CERAMIC CHIP	0.01uF	10%	16V	
C128	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		C193	1-162-960-11	CERAMIC CHIP	220PF	10%	50V	
C129	1-126-964-11	ELECT	10uF	20%	50V		C194	1-162-960-11	CERAMIC CHIP	220PF	10%	50V	
C130	1-126-964-11	ELECT	10uF	20%	50V		C197	1-162-960-11	CERAMIC CHIP	220PF	10%	50V	
C131	1-126-956-11	ELECT	0.1uF	20%	50V		C198	1-162-960-11	CERAMIC CHIP	220PF	10%	50V	
C132	1-126-959-11	ELECT	0.47uF	20%	50V		C199	1-126-964-11	ELECT	10uF	20%	50V	
C133	1-126-959-11	ELECT	0.47uF	20%	50V		C200	1-126-964-11	ELECT	10uF	20%	50V	
C136	1-126-964-11	ELECT	10uF	20%	50V		C201	1-126-961-11	ELECT	2.2uF	20%	50V	
C137	1-126-964-11	ELECT	10uF	20%	50V		C202	1-126-961-11	ELECT	2.2uF	20%	50V	
C139	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		C205	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	
C140	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		C206	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	
C141	1-162-949-11	CERAMIC CHIP	47PF	5%	50V		C207	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	
C142	1-162-949-11	CERAMIC CHIP	47PF	5%	50V		C208	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	
C143	1-136-165-00	FILM	0.1uF	5%	50V		C209	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	
C144	1-136-165-00	FILM	0.1uF	5%	50V		C210	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	
C145	1-136-165-00	FILM	0.1uF	5%	50V		C211	1-131-679-31	FILM	0.01uF	5%	50V	
C146	1-136-165-00	FILM	0.1uF	5%	50V		C212	1-130-479-00	MYLAR	0.0047uF	5%	50V	
C147	1-164-362-11	CERAMIC CHIP	470PF	5%	50V		C213	1-131-679-31	FILM	0.01uF	5%	50V	
C148	1-164-362-11	CERAMIC CHIP	470PF	5%	50V		C214	1-130-479-00	MYLAR	0.0047uF	5%	50V	
C149	1-126-947-11	ELECT	47uF	20%	35V		C220	1-162-945-11	CERAMIC CHIP	22PF	5%	50V	(AEP, UK, EE, RU)

HCD-GX355/GX555/RG270/RG475/RG575

Ver. 1.1

MAIN

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
C222	1-126-947-11	ELECT	47uF 20% 35V	< CONNECTOR >			
C223	1-131-679-31	FILM	0.01uF 5% 50V	CN031	1-778-982-21	CONNECTOR, BOARD TO BOARD 13P	
C224	1-130-479-00	MYLAR	0.0047uF 5% 50V	CN041	1-564-506-11	PLUG, CONNECTOR 3P	
C225	1-130-479-00	MYLAR	0.0047uF 5% 50V	CN061	1-564-707-11	PIN, CONNECTOR (SMALL TYPE) 5P	
C229	1-126-963-11	ELECT	4.7uF 20% 50V	CN065	1-564-707-11	PIN, CONNECTOR (SMALL TYPE) 5P	
C253	1-162-949-11	CERAMIC CHIP	47PF 5% 50V	* CN066	1-564-706-11	PIN, CONNECTOR (SMALL TYPE) 4P	(E2, E51, MX, AR)
C254	1-162-949-11	CERAMIC CHIP	47PF 5% 50V				
C255	1-162-945-11	CERAMIC CHIP	22PF 5% 50V	* CN201	1-564-705-11	PIN, CONNECTOR (SMALL TYPE) 3P	
C256	1-162-945-11	CERAMIC CHIP	22PF 5% 50V	* CN203	1-564-710-11	PIN, CONNECTOR (SMALL TYPE) 8P	
C257	1-126-947-11	ELECT	47uF 20% 35V	CN301	1-779-295-11	CONNECTOR, FFC (LIF (NON-ZIF)) 27P	(EXCEPT MX)
C258	1-126-947-11	ELECT	47uF 20% 35V	CN301	1-779-299-11	CONNECTOR, FFC (LIF (NON-ZIF)) 31P (MX)	
C259	1-126-964-11	ELECT	10uF 20% 50V	CN331	1-784-774-11	CONNECTOR, FFC 13P (MX)	
C260	1-126-964-11	ELECT	10uF 20% 50V				
C263	1-126-947-11	ELECT	47uF 20% 35V	CN341	1-784-774-11	CONNECTOR, FFC 13P	
C264	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	CN381	1-568-830-11	CONNECTOR, FFC 11P (EXCEPT AEP, UK, EE)	
C265	1-126-963-11	ELECT	4.7uF 20% 50V	CN381	1-784-776-11	CONNECTOR, FFC 15P (AEP, UK, EE)	
C266	1-126-963-11	ELECT	4.7uF 20% 50V	CN391	1-784-774-11	CONNECTOR, FFC 13P	
C271	1-115-467-11	CERAMIC CHIP	0.22uF 10% 10V	CN991	1-784-780-11	CONNECTOR, FFC 19P	
C272	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	< DIODE >			
C273	1-115-467-11	CERAMIC CHIP	0.22uF 10% 10V	D001	6-500-522-21	DIODE 10EDB40-TB3	
C274	1-126-964-11	ELECT	10uF 20% 50V	D002	6-500-522-21	DIODE 10EDB40-TB3	
C275	1-164-362-11	CERAMIC CHIP	470PF 5% 50V	D003	6-500-522-21	DIODE 10EDB40-TB3	
C301	1-126-964-11	ELECT	10uF 20% 50V	D004	6-500-522-21	DIODE 10EDB40-TB3	
C302	1-126-964-11	ELECT	10uF 20% 50V	D006	8-719-988-61	DIODE 1SS355TE-17	
C305	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	D007	6-500-522-21	DIODE 10EDB40-TB3	
C311	1-164-156-11	CERAMIC CHIP	0.1uF 25V	D008	6-500-522-21	DIODE 10EDB40-TB3	
C317	1-126-926-11	ELECT	1000uF 20% 10V	D011	6-500-522-21	DIODE 10EDB40-TB3	
C384	1-162-953-11	CERAMIC CHIP	100PF 5% 50V	D012	6-500-522-21	DIODE 10EDB40-TB3	
C391	1-164-156-11	CERAMIC CHIP	0.1uF 25V	D013	6-500-522-21	DIODE 10EDB40-TB3	
C901	1-126-933-11	ELECT	100uF 20% 16V	D014	6-500-522-21	DIODE 10EDB40-TB3	
C902	1-126-964-11	ELECT	10uF 20% 50V	D021	6-500-522-21	DIODE 10EDB40-TB3	
C904	1-164-156-11	CERAMIC CHIP	0.1uF 25V	D022	6-500-522-21	DIODE 10EDB40-TB3	
C906	1-126-964-11	ELECT	10uF 20% 50V	D023	6-500-522-21	DIODE 10EDB40-TB3	
C908	1-164-156-11	CERAMIC CHIP	0.1uF 25V	D024	6-500-522-21	DIODE 10EDB40-TB3	
C909	1-164-156-11	CERAMIC CHIP	0.1uF 25V	D031	8-719-988-61	DIODE 1SS355TE-17	
C910	1-164-156-11	CERAMIC CHIP	0.1uF 25V	D035	8-719-000-08	DIODE MC2838	
C911	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	D041	8-719-083-63	DIODE UDZSTE-1713B	
C912	1-162-960-11	CERAMIC CHIP	220PF 10% 50V	D121	6-500-848-01	DIODE MC2840-T112-1	
C914	1-162-919-11	CERAMIC CHIP	22PF 5% 50V	D122	6-500-848-01	DIODE MC2840-T112-1	
C916	1-126-916-11	ELECT	1000uF 20% 6.3V	D301	6-500-522-21	DIODE 10EDB40-TB3	
C917	1-164-156-11	CERAMIC CHIP	0.1uF 25V	D302	6-500-522-21	DIODE 10EDB40-TB3	
C918	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	D303	8-719-083-60	DIODE UDZSTE-174.7B	
C919	1-164-156-11	CERAMIC CHIP	0.1uF 25V	D341	8-719-000-07	DIODE MC2836	
C921	1-126-961-11	ELECT	2.2uF 20% 50V	D901	8-719-083-60	DIODE UDZSTE-174.7B	
C922	1-126-963-11	ELECT	4.7uF 20% 50V	D902	8-719-000-07	DIODE MC2836	
C923	1-164-156-11	CERAMIC CHIP	0.1uF 25V	D903	8-719-988-61	DIODE 1SS355TE-17	
C924	1-164-156-11	CERAMIC CHIP	0.1uF 25V	D905	8-719-988-61	DIODE 1SS355TE-17	
C925	1-164-156-11	CERAMIC CHIP	0.1uF 25V	D910	8-719-988-61	DIODE 1SS355TE-17	
C927	1-162-919-11	CERAMIC CHIP	22PF 5% 50V	D921	6-500-848-01	DIODE MC2840-T112-1	
C928	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	D923	6-500-848-01	DIODE MC2840-T112-1	
C970	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	D943	8-719-000-08	DIODE MC2838	
				D947	8-719-988-61	DIODE 1SS355TE-17	
				< EARTH TERMINAL >			
				EP031	1-537-770-21	TERMINAL BOARD, GROUND	
				EP061	1-537-770-21	TERMINAL BOARD, GROUND	

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
< IC >				< RESISTOR >			
IC006	6-702-771-01	IC TA78033LS		Q344	8-729-037-13	TRANSISTOR KTA1271Y	
IC011	8-759-701-59	IC NJM78M09FA		Q345	6-551-276-01	TRANSISTOR RT1N431C-TP-1	
IC021	8-759-701-59	IC NJM78M09FA		Q346	8-729-037-13	TRANSISTOR KTA1271Y	
IC101	6-705-852-01	IC BD3401KS2		Q901	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
IC251	8-759-909-71	IC BA4558F		Q902	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
IC901	6-805-528-01	IC M30302MCP-A02FPU0		Q903	8-729-037-13	TRANSISTOR KTA1271Y	
IC902	8-759-713-61	IC PST3429UL		Q904	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
< JUMPER RESISTOR >				< RESISTOR >			
JR001	1-216-864-11	SHORT CHIP 0		R001	1-216-801-11	METAL CHIP 22 5% 1/10W	
JR005	1-216-864-11	SHORT CHIP 0		R002	1-216-864-11	SHORT CHIP 0	
JR006	1-216-864-11	SHORT CHIP 0		R005	1-216-829-11	METAL CHIP 4.7K 5% 1/10W	
JR009	1-216-864-11	SHORT CHIP 0		R006	1-216-829-11	METAL CHIP 4.7K 5% 1/10W	
JR010	1-216-864-11	SHORT CHIP 0		R007	1-216-833-11	METAL CHIP 10K 5% 1/10W	
JR171	1-216-864-11	SHORT CHIP 0		R032	1-216-821-11	METAL CHIP 1K 5% 1/10W	
JR172	1-216-864-11	SHORT CHIP 0		R033	1-216-837-11	METAL CHIP 22K 5% 1/10W	
JR174	1-216-864-11	SHORT CHIP 0		R034	1-216-837-11	METAL CHIP 22K 5% 1/10W	
< RESISTOR >				R035	1-216-829-11	METAL CHIP 4.7K 5% 1/10W	
JW033	1-249-401-11	CARBON 47 5% 1/4W (MX)		R036	1-216-829-11	METAL CHIP 4.7K 5% 1/10W	
< COIL >				R037	1-216-829-11	METAL CHIP 4.7K 5% 1/10W	
L201	1-424-849-11	COIL, OSCILLATION (BIAS)		R042	1-216-833-11	METAL CHIP 10K 5% 1/10W	
< TRANSISTOR >				R043	1-216-825-11	METAL CHIP 2.2K 5% 1/10W	
Q002	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R044	1-216-864-11	SHORT CHIP 0	
Q041	6-551-276-01	TRANSISTOR RT1N431C-TP-1		R045	1-216-821-11	METAL CHIP 1K 5% 1/10W	
Q042	8-729-037-13	TRANSISTOR KTA1271Y		R046	1-216-821-11	METAL CHIP 1K 5% 1/10W	
Q043	8-729-142-46	TRANSISTOR 2SC2001-LK		R047	1-216-829-11	METAL CHIP 4.7K 5% 1/10W	
Q044	8-729-142-46	TRANSISTOR 2SC2001-LK		R048	1-216-841-11	METAL CHIP 47K 5% 1/10W	
Q045	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R049	1-216-789-11	METAL CHIP 2.2 5% 1/10W	
Q111	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R050	1-216-841-11	METAL CHIP 47K 5% 1/10W	
Q112	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R052	1-216-853-11	METAL CHIP 470K 5% 1/10W	
Q141	8-729-120-28	TRANSISTOR 2SC1623-L5L6		△R059	1-215-869-11	METAL OXIDE 1K 5% 1W F (RG270: AEP, UK, EE, RU)	
Q142	8-729-120-28	TRANSISTOR 2SC1623-L5L6		△R059	1-215-892-11	METAL OXIDE 1K 5% 2W F (GX355/GX555/RG270: E2, E3, E51, EA, MX, AR, AUS/RG475/RG575)	
Q201	8-729-142-46	TRANSISTOR 2SC2001-LK		△R060	1-215-869-11	METAL OXIDE 1K 5% 1W F (RG270: AEP, UK, EE, RU)	
Q203	8-729-600-22	TRANSISTOR 2SA1235-F		△R060	1-215-892-11	METAL OXIDE 1K 5% 2W F (GX355/GX555/RG270: E2, E3, E51, EA, MX, AR, AUS/RG475/RG575)	
Q205	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R063	1-216-809-11	METAL CHIP 100 5% 1/10W	
Q206	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R064	1-216-809-11	METAL CHIP 100 5% 1/10W	
Q207	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R068	1-216-797-11	METAL CHIP 10 5% 1/10W (E2, E51, MX, AR)	
Q208	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R069	1-216-837-11	METAL CHIP 22K 5% 1/10W (E2, E51, MX, AR)	
Q209	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R070	1-216-833-11	METAL CHIP 10K 5% 1/10W	
Q210	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R103	1-216-821-11	METAL CHIP 1K 5% 1/10W	
Q231	6-551-276-01	TRANSISTOR RT1N431C-TP-1		R104	1-216-821-11	METAL CHIP 1K 5% 1/10W	
Q232	8-729-037-13	TRANSISTOR KTA1271Y		R106	1-216-821-11	METAL CHIP 1K 5% 1/10W (E2, E51, MX, AR)	
Q251	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R107	1-216-821-11	METAL CHIP 1K 5% 1/10W	
Q252	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R108	1-216-837-11	METAL CHIP 22K 5% 1/10W	
Q261	8-729-027-23	TRANSISTOR DTA114EKA-T146		R109	1-216-829-11	METAL CHIP 4.7K 5% 1/10W	
Q271	8-729-120-28	TRANSISTOR 2SC1623-L5L6 (GX555/RG475/RG575)		R110	1-216-841-11	METAL CHIP 47K 5% 1/10W	
Q274	6-551-276-01	TRANSISTOR RT1N431C-TP-1 (GX555/RG475/RG575)		R111	1-216-845-11	METAL CHIP 100K 5% 1/10W	
Q341	6-551-276-01	TRANSISTOR RT1N431C-TP-1		R112	1-216-817-11	METAL CHIP 470 5% 1/10W	
Q342	8-729-040-76	TRANSISTOR KTA1273-Y-AT					
Q343	6-551-276-01	TRANSISTOR RT1N431C-TP-1					

HCD-GX355/GX555/RG270/RG475/RG575

Ver. 1.1

MAIN

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
R113	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R175	1-216-821-11	METAL CHIP	1K	5%	1/10W
R114	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R176	1-216-821-11	METAL CHIP	1K	5%	1/10W
R116	1-216-809-11	METAL CHIP	100	5%	1/10W	R177	1-216-821-11	METAL CHIP	1K	5%	1/10W
R117	1-216-833-11	METAL CHIP	10K	5%	1/10W	R178	1-216-821-11	METAL CHIP	1K	5%	1/10W
						R179	1-216-853-11	METAL CHIP	470K	5%	1/10W
R119	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R180	1-216-853-11	METAL CHIP	470K	5%	1/10W
R120	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R181	1-216-845-11	METAL CHIP	100K	5%	1/10W
R121	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R182	1-216-845-11	METAL CHIP	100K	5%	1/10W
R122	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R183	1-216-849-11	METAL CHIP	220K	5%	1/10W
R128	1-216-833-11	METAL CHIP	10K	5%	1/10W	R184	1-216-849-11	METAL CHIP	220K	5%	1/10W
R129	1-216-845-11	METAL CHIP	100K	5%	1/10W	R185	1-216-841-11	METAL CHIP	47K	5%	1/10W
R130	1-216-864-11	SHORT CHIP	0			R186	1-216-841-11	METAL CHIP	47K	5%	1/10W
R131	1-216-849-11	METAL CHIP	220K	5%	1/10W	R187	1-216-845-11	METAL CHIP	100K	5%	1/10W
R132	1-216-849-11	METAL CHIP	220K	5%	1/10W	R188	1-216-845-11	METAL CHIP	100K	5%	1/10W
R133	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R189	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R134	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R190	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R135	1-216-821-11	METAL CHIP	1K	5%	1/10W	R191	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R136	1-216-821-11	METAL CHIP	1K	5%	1/10W	R192	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R137	1-216-841-11	METAL CHIP	47K	5%	1/10W	R203	1-216-841-11	METAL CHIP	47K	5%	1/10W
R138	1-216-841-11	METAL CHIP	47K	5%	1/10W	R204	1-216-841-11	METAL CHIP	47K	5%	1/10W
R139	1-216-837-11	METAL CHIP	22K	5%	1/10W	R205	1-216-833-11	METAL CHIP	10K	5%	1/10W
R140	1-216-837-11	METAL CHIP	22K	5%	1/10W	R206	1-216-833-11	METAL CHIP	10K	5%	1/10W
R141	1-216-849-11	METAL CHIP	220K	5%	1/10W	R207	1-216-837-11	METAL CHIP	22K	5%	1/10W
R142	1-216-849-11	METAL CHIP	220K	5%	1/10W	R208	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R143	1-216-841-11	METAL CHIP	47K	5%	1/10W	R212	1-216-797-11	METAL CHIP	10	5%	1/10W
R144	1-216-841-11	METAL CHIP	47K	5%	1/10W	R232	1-216-833-11	METAL CHIP	10K	5%	1/10W
R145	1-216-841-11	METAL CHIP	47K	5%	1/10W	R233	1-216-833-11	METAL CHIP	10K	5%	1/10W
R146	1-216-857-11	METAL CHIP	1M	5%	1/10W	R234	1-216-833-11	METAL CHIP	10K	5%	1/10W
R147	1-216-845-11	METAL CHIP	100K	5%	1/10W	R235	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R148	1-216-845-11	METAL CHIP	100K	5%	1/10W	R236	1-216-833-11	METAL CHIP	10K	5%	1/10W
R149	1-216-841-11	METAL CHIP	47K	5%	1/10W	R237	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R150	1-216-841-11	METAL CHIP	47K	5%	1/10W	R238	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R151	1-216-833-11	METAL CHIP	10K	5%	1/10W	R239	1-216-821-11	METAL CHIP	1K	5%	1/10W
				(GX555/RG475/RG575)		R240	1-216-821-11	METAL CHIP	1K	5%	1/10W
R152	1-216-833-11	METAL CHIP	10K	5%	1/10W	R244	1-216-837-11	METAL CHIP	22K	5%	1/10W
				(GX555/RG475/RG575)							
R153	1-216-837-11	METAL CHIP	22K	5%	1/10W	R245	1-216-833-11	METAL CHIP	10K	5%	1/10W
				(GX555/RG475/RG575)		R247	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R154	1-216-833-11	METAL CHIP	10K	5%	1/10W	R248	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
				(GX555/RG475/RG575)		R250	1-216-833-11	METAL CHIP	10K	5%	1/10W
R156	1-216-809-11	METAL CHIP	100	5%	1/10W	R251	1-216-817-11	METAL CHIP	470	5%	1/10W
R157	1-216-809-11	METAL CHIP	100	5%	1/10W					(RG270: AEP, UK, EE, RU/ RG475: AEP, UK, EE, RU/RG575)	
R158	1-216-809-11	METAL CHIP	100	5%	1/10W	R251	1-216-821-11	METAL CHIP	1K	5%	1/10W
R159	1-216-857-11	METAL CHIP	1M	5%	1/10W					(GX355/GX555/RG270: E2, E3, E51, EA, MX, AR, AUS/RG475: E3, AUS, SP)	
R160	1-216-797-11	METAL CHIP	10	5%	1/10W	R252	1-216-817-11	METAL CHIP	470	5%	1/10W
R161	1-216-825-11	METAL CHIP	2.2K	5%	1/10W					(RG270: AEP, UK, EE, RU/ RG475: AEP, UK, EE, RU/RG575)	
R162	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R252	1-216-821-11	METAL CHIP	1K	5%	1/10W
R163	1-216-833-11	METAL CHIP	10K	5%	1/10W					(GX355/GX555/RG270: E2, E3, E51, EA, MX, AR, AUS/RG475: E3, AUS, SP)	
R164	1-216-833-11	METAL CHIP	10K	5%	1/10W	R253	1-216-833-11	METAL CHIP	10K	5%	1/10W
R165	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R254	1-216-833-11	METAL CHIP	10K	5%	1/10W
R166	1-216-829-11	METAL CHIP	4.7K	5%	1/10W					(GX355/GX555/RG270: E2, E3, E51, EA, MX, AR, AUS/RG475/RG575)	
R167	1-216-849-11	METAL CHIP	220K	5%	1/10W	R254	1-216-837-11	METAL CHIP	22K	5%	1/10W
R168	1-216-849-11	METAL CHIP	220K	5%	1/10W					(RG270: AEP, UK, EE, RU)	
R169	1-216-845-11	METAL CHIP	100K	5%	1/10W	R257	1-216-833-11	METAL CHIP	10K	5%	1/10W
										(GX355/GX555/RG270: E2, E3, E51, EA, MX, AR, AUS/RG475/RG575)	
R170	1-216-845-11	METAL CHIP	100K	5%	1/10W						
R171	1-216-817-11	METAL CHIP	470	5%	1/10W						
R172	1-216-817-11	METAL CHIP	470	5%	1/10W						
R173	1-216-825-11	METAL CHIP	2.2K	5%	1/10W						
R174	1-216-825-11	METAL CHIP	2.2K	5%	1/10W						

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
R257	1-216-837-11	METAL CHIP	22K 5% 1/10W (RG270: AEP, UK, EE, RU)	R341	1-216-833-11	METAL CHIP	10K 5% 1/10W
R258	1-216-841-11	METAL CHIP	47K 5% 1/10W (GX355/GX555/RG270: AEP, UK, EE, RU/RG575)	R342	1-216-821-11	METAL CHIP	1K 5% 1/10W
R259	1-216-841-11	METAL CHIP	47K 5% 1/10W (GX355/GX555/RG270: AEP, UK, EE, RU/RG575)	R343	1-216-833-11	METAL CHIP	10K 5% 1/10W
R261	1-216-833-11	METAL CHIP	10K 5% 1/10W	R344	1-216-821-11	METAL CHIP	1K 5% 1/10W
R262	1-216-833-11	METAL CHIP	10K 5% 1/10W	R345	1-216-833-11	METAL CHIP	10K 5% 1/10W
R263	1-216-825-11	METAL CHIP	2.2K 5% 1/10W	R346	1-216-821-11	METAL CHIP	1K 5% 1/10W
R264	1-216-825-11	METAL CHIP	2.2K 5% 1/10W	R347	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
R265	1-216-809-11	METAL CHIP	100 5% 1/10W	R348	1-216-841-11	METAL CHIP	47K 5% 1/10W
R267	1-216-841-11	METAL CHIP	47K 5% 1/10W	R349	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
R268	1-216-829-11	METAL CHIP	4.7K 5% 1/10W	R350	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
R274	1-216-829-11	METAL CHIP	4.7K 5% 1/10W (GX555/RG475/RG575)	R351	1-216-841-11	METAL CHIP	47K 5% 1/10W
R275	1-216-841-11	METAL CHIP	47K 5% 1/10W (GX555/RG475/RG575)	R352	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
R276	1-216-845-11	METAL CHIP	100K 5% 1/10W (GX555/RG475/RG575)	R353	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
R277	1-216-829-11	METAL CHIP	4.7K 5% 1/10W (GX555/RG475/RG575)	R354	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
R278	1-216-833-11	METAL CHIP	10K 5% 1/10W (GX555/RG475/RG575)	R355	1-216-837-11	METAL CHIP	22K 5% 1/10W
R279	1-216-825-11	METAL CHIP	2.2K 5% 1/10W (GX555/RG475/RG575)	R356	1-216-837-11	METAL CHIP	22K 5% 1/10W
R280	1-216-829-11	METAL CHIP	4.7K 5% 1/10W (GX555/RG475/RG575)	R357	1-216-821-11	METAL CHIP	1K 5% 1/10W
R283	1-216-833-11	METAL CHIP	10K 5% 1/10W (GX555/RG475/RG575)	R358	1-216-821-11	METAL CHIP	1K 5% 1/10W
R301	1-216-821-11	METAL CHIP	1K 5% 1/10W	R359	1-216-833-11	METAL CHIP	10K 5% 1/10W
R302	1-216-821-11	METAL CHIP	1K 5% 1/10W	R360	1-216-833-11	METAL CHIP	10K 5% 1/10W
R303	1-216-833-11	METAL CHIP	10K 5% 1/10W	R361	1-216-837-11	METAL CHIP	22K 5% 1/10W
R304	1-216-833-11	METAL CHIP	10K 5% 1/10W	R362	1-216-837-11	METAL CHIP	22K 5% 1/10W
R314	1-216-809-11	METAL CHIP	100 5% 1/10W	R363	1-216-821-11	METAL CHIP	1K 5% 1/10W
R315	1-216-809-11	METAL CHIP	100 5% 1/10W	R364	1-216-821-11	METAL CHIP	1K 5% 1/10W
R316	1-216-809-11	METAL CHIP	100 5% 1/10W	R365	1-216-833-11	METAL CHIP	10K 5% 1/10W
R317	1-216-817-11	METAL CHIP	470 5% 1/10W	R366	1-216-833-11	METAL CHIP	10K 5% 1/10W
R318	1-216-809-11	METAL CHIP	100 5% 1/10W	R367	1-216-837-11	METAL CHIP	22K 5% 1/10W
R319	1-216-809-11	METAL CHIP	100 5% 1/10W	R368	1-216-837-11	METAL CHIP	22K 5% 1/10W
R320	1-216-809-11	METAL CHIP	100 5% 1/10W	R369	1-216-837-11	METAL CHIP	22K 5% 1/10W
R321	1-216-809-11	METAL CHIP	100 5% 1/10W	R370	1-216-837-11	METAL CHIP	22K 5% 1/10W
R322	1-216-817-11	METAL CHIP	470 5% 1/10W	R381	1-216-809-11	METAL CHIP	100 5% 1/10W
R323	1-216-809-11	METAL CHIP	100 5% 1/10W	R382	1-216-809-11	METAL CHIP	100 5% 1/10W
R330	1-216-821-11	METAL CHIP	1K 5% 1/10W (MX)	R383	1-216-809-11	METAL CHIP	100 5% 1/10W
R331	1-216-809-11	METAL CHIP	100 5% 1/10W (MX)	R384	1-216-809-11	METAL CHIP	100 5% 1/10W
R332	1-216-809-11	METAL CHIP	100 5% 1/10W (MX)	R901	1-216-845-11	METAL CHIP	100K 5% 1/10W
R333	1-216-809-11	METAL CHIP	100 5% 1/10W (MX)	R902	1-216-864-11	SHORT CHIP	0
R334	1-216-809-11	METAL CHIP	100 5% 1/10W (MX)	R903	1-216-833-11	METAL CHIP	10K 5% 1/10W
R337	1-216-809-11	METAL CHIP	100 5% 1/10W (MX)	R904	1-216-821-11	METAL CHIP	1K 5% 1/10W
R338	1-216-809-11	METAL CHIP	100 5% 1/10W (MX)	R905	1-216-833-11	METAL CHIP	10K 5% 1/10W
R339	1-216-821-11	METAL CHIP	1K 5% 1/10W (MX)	R907	1-216-841-11	METAL CHIP	47K 5% 1/10W
R340	1-216-821-11	METAL CHIP	1K 5% 1/10W (MX)	R908	1-216-841-11	METAL CHIP	47K 5% 1/10W
				R909	1-216-837-11	METAL CHIP	22K 5% 1/10W
				R910	1-216-833-11	METAL CHIP	10K 5% 1/10W
				R911	1-216-809-11	METAL CHIP	100 5% 1/10W (AEP, UK, EE)
				R912	1-216-821-11	METAL CHIP	1K 5% 1/10W
				R913	1-216-821-11	METAL CHIP	1K 5% 1/10W
				R914	1-216-809-11	METAL CHIP	100 5% 1/10W (AEP, UK, EE)
				R915	1-216-809-11	METAL CHIP	100 5% 1/10W
				R918	1-216-849-11	METAL CHIP	220K 5% 1/10W
				R919	1-216-864-11	SHORT CHIP	0
				R920	1-216-809-11	METAL CHIP	100 5% 1/10W
				R921	1-216-857-11	METAL CHIP	1M 5% 1/10W
				R922	1-216-849-11	METAL CHIP	220K 5% 1/10W
				R923	1-216-809-11	METAL CHIP	100 5% 1/10W
				R924	1-216-809-11	METAL CHIP	100 5% 1/10W
				R925	1-216-809-11	METAL CHIP	100 5% 1/10W

HCD-GX355/GX555/RG270/RG475/RG575

Ver. 1.1

MAIN MIC

Ref. No.	Part No.	Description	Remark		
R926	1-216-809-11	METAL CHIP	100	5%	1/10W
R927	1-216-809-11	METAL CHIP	100	5%	1/10W
R928	1-216-809-11	METAL CHIP	100	5%	1/10W
R929	1-216-809-11	METAL CHIP	100	5%	1/10W
R931	1-216-833-11	METAL CHIP	10K	5%	1/10W
R932	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R935	1-216-833-11	METAL CHIP	10K	5%	1/10W
R936	1-216-837-11	METAL CHIP	22K	5%	1/10W
R937	1-216-845-11	METAL CHIP	100K	5%	1/10W
R938	1-216-833-11	METAL CHIP	10K	5%	1/10W
R939	1-216-809-11	METAL CHIP	100	5%	1/10W
R940	1-216-833-11	METAL CHIP	10K	5%	1/10W
R941	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R942	1-216-833-11	METAL CHIP	10K	5%	1/10W
R943	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R944	1-216-849-11	METAL CHIP	220K	5%	1/10W
R945	1-216-813-11	METAL CHIP	220	5%	1/10W
R946	1-216-864-11	SHORT CHIP	0		
R947	1-216-849-11	METAL CHIP	220K	5%	1/10W
R948	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R949	1-216-833-11	METAL CHIP	10K	5%	1/10W
R950	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R951	1-216-813-11	METAL CHIP	220	5%	1/10W
R952	1-216-809-11	METAL CHIP	100	5%	1/10W
R953	1-216-833-11	METAL CHIP	10K	5%	1/10W
R954	1-216-809-11	METAL CHIP	100	5%	1/10W
R955	1-216-809-11	METAL CHIP	100	5%	1/10W
R956	1-216-809-11	METAL CHIP	100	5%	1/10W
R957	1-216-809-11	METAL CHIP	100	5%	1/10W
R958	1-216-833-11	METAL CHIP	10K	5%	1/10W
R959	1-216-809-11	METAL CHIP	100	5%	1/10W
R961	1-216-809-11	METAL CHIP	100	5%	1/10W
R963	1-216-809-11	METAL CHIP	100	5%	1/10W
R965	1-216-809-11	METAL CHIP	100	5%	1/10W
R967	1-216-809-11	METAL CHIP	100	5%	1/10W
R968	1-216-809-11	METAL CHIP	100	5%	1/10W
R969	1-216-809-11	METAL CHIP	100	5%	1/10W
		(MX)			
R970	1-216-821-11	METAL CHIP	1K	5%	1/10W
R971	1-216-833-11	METAL CHIP	10K	5%	1/10W
		(US, CND, RU, E3, EA, MX, AUS, SP)			
R972	1-216-833-11	METAL CHIP	10K	5%	1/10W
		(E3, EA, MX, AUS, SP)			
R973	1-216-833-11	METAL CHIP	10K	5%	1/10W
		(US, CND, E2, E3, E51, AR, AUS, SP)			
R974	1-216-833-11	METAL CHIP	10K	5%	1/10W
		(E3, EA, AUS, SP)			
R975	1-216-833-11	METAL CHIP	10K	5%	1/10W
R976	1-216-833-11	METAL CHIP	10K	5%	1/10W
		(GX355/RG270/RG575)			
R977	1-216-833-11	METAL CHIP	10K	5%	1/10W
		(GX555/RG475/RG575)			
R979	1-216-809-11	METAL CHIP	100	5%	1/10W
R980	1-216-809-11	METAL CHIP	100	5%	1/10W
R981	1-216-809-11	METAL CHIP	100	5%	1/10W
R982	1-216-809-11	METAL CHIP	100	5%	1/10W
R992	1-216-821-11	METAL CHIP	1K	5%	1/10W
R993	1-216-821-11	METAL CHIP	1K	5%	1/10W

Ref. No.	Part No.	Description	Remark		
R996	1-216-809-11	METAL CHIP	100	5%	1/10W
R997	1-216-809-11	METAL CHIP	100	5%	1/10W
R998	1-216-809-11	METAL CHIP	100	5%	1/10W
R999	1-216-809-11	METAL CHIP	100	5%	1/10W
R1971	1-216-833-11	METAL CHIP	10K	5%	1/10W
		(AEP, UK, EE, E2, E51, AR)			
R1972	1-216-833-11	METAL CHIP	10K	5%	1/10W
		(US, CND, AEP, UK, EE, RU, E2, E51, AR)			
R1973	1-216-833-11	METAL CHIP	10K	5%	1/10W
		(AEP, UK, EE, RU, EA, MX)			
R1974	1-216-833-11	METAL CHIP	10K	5%	1/10W
		(EXCEPT E3, EA, AUS, SP)			
R1976	1-216-833-11	METAL CHIP	10K	5%	1/10W
		(GX555/RG475)			
R1977	1-216-833-11	METAL CHIP	10K	5%	1/10W
		(GX355/RG270)			
< VIBRATOR >					
X901	1-760-252-12	VIBRATOR, CRYSTAL (32.768kHz)			
X902	1-795-482-11	VIBRATOR, CERAMIC (16MHz)			

	A-1094-194-A	MIC BOARD, COMPLETE (RG270: E2, E51, AR)			
	A-1094-196-A	MIC BOARD, COMPLETE (RG270: MX)			
	A-1094-199-A	MIC BOARD, COMPLETE (RG575: E2, E51, AR)			
	A-1094-200-A	MIC BOARD, COMPLETE (RG575: MX)			

< CAPACITOR >					
C801	1-126-157-11	ELECT	10uF	20%	16V
					(E2, E51, MX, AR)
C802	1-115-416-11	CERAMIC CHIP	0.001uF	5%	25V
					(E2, E51, MX, AR)
C803	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V
					(E2, E51, MX, AR)
C805	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V
					(E2, E51, MX, AR)
C807	1-115-416-11	CERAMIC CHIP	0.001uF	5%	25V
					(E2, E51, MX, AR)
C808	1-164-816-11	CERAMIC CHIP	220PF	2%	50V
					(E2, E51, MX, AR)
C809	1-126-157-11	ELECT	10uF	20%	16V
					(E2, E51, MX, AR)
C810	1-164-315-11	CERAMIC CHIP	470PF	5%	50V
					(E2, E51, MX, AR)
C811	1-124-463-00	ELECT	0.1uF	20%	50V
					(E2, E51, MX, AR)
C813	1-119-774-11	ELECT	100uF	20%	16V
					(E2, E51, MX, AR)
C814	1-124-257-00	ELECT	2.2uF	20%	50V
					(E2, E51, MX, AR)
C815	1-162-923-11	CERAMIC CHIP	47PF	5%	50V
					(E2, E51, MX, AR)
C816	1-164-816-11	CERAMIC CHIP	220PF	2%	50V
					(E2, E51, MX, AR)
C817	1-124-257-00	ELECT	2.2uF	20%	50V
					(E2, E51, MX, AR)
C818	1-126-157-11	ELECT	10uF	20%	16V
					(E2, E51, MX, AR)
C819	1-164-156-11	CERAMIC CHIP	0.1uF		25V
					(E2, E51, MX, AR)

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
C833	1-164-156-11	CERAMIC CHIP	0.1uF		25V (E2, E51, MX, AR)	R802	1-216-825-11	METAL CHIP	2.2K	5%	1/10W (E2, E51, MX, AR)
C851	1-126-160-11	ELECT	1uF	20%	50V (MX)	R803	1-216-829-11	METAL CHIP	4.7K	5%	1/10W (E2, E51, MX, AR)
C852	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V (MX)	R804	1-216-825-11	METAL CHIP	2.2K	5%	1/10W (E2, E51, MX, AR)
C853	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V (MX)	R805	1-216-845-11	METAL CHIP	100K	5%	1/10W (E2, E51, MX, AR)
C854	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V (MX)	R806	1-216-845-11	METAL CHIP	100K	5%	1/10W (E2, E51, MX, AR)
C856	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V (MX)	R807	1-216-833-11	METAL CHIP	10K	5%	1/10W (E2, E51, MX, AR)
C857	1-124-465-00	ELECT	0.47uF	20%	50V (MX)	R808	1-216-833-11	METAL CHIP	10K	5%	1/10W (E2, E51, MX, AR)
C858	1-124-465-00	ELECT	0.47uF	20%	50V (MX)	R809	1-216-845-11	METAL CHIP	100K	5%	1/10W (E2, E51, MX, AR)
C859	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V (MX)	R810	1-216-821-11	METAL CHIP	1K	5%	1/10W (E2, E51, MX, AR)
C861	1-126-160-11	ELECT	1uF	20%	50V (MX)	R811	1-216-841-11	METAL CHIP	47K	5%	1/10W (E2, E51, MX, AR)
C862	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V (MX)	R812	1-216-809-11	METAL CHIP	100	5%	1/10W (E2, E51, MX, AR)
C863	1-124-257-00	ELECT	2.2uF	20%	50V (MX)	R813	1-216-833-11	METAL CHIP	10K	5%	1/10W (E2, E51, MX, AR)
C864	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V (MX)	R814	1-216-849-11	METAL CHIP	220K	5%	1/10W (E2, E51, MX, AR)
C865	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V (MX)	R815	1-216-809-11	METAL CHIP	100	5%	1/10W (E2, E51, MX, AR)
C867	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V (MX)	R816	1-216-845-11	METAL CHIP	100K	5%	1/10W (E2, E51, MX, AR)
C868	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V (MX)	R817	1-216-829-11	METAL CHIP	4.7K	5%	1/10W (E2, E51, MX, AR)
C869	1-124-589-11	ELECT	47uF	20%	16V (MX)	R818	1-216-829-11	METAL CHIP	4.7K	5%	1/10W (E2, E51, MX, AR)
C870	1-124-589-11	ELECT	47uF	20%	16V (MX)	R819	1-216-849-11	METAL CHIP	220K	5%	1/10W (E2, E51, MX, AR)
< DIODE >						R851	1-216-837-11	METAL CHIP	22K	5%	1/10W (MX)
D851	8-719-069-54	DIODE	UDZSTE-175.1B (MX)			R852	1-216-837-11	METAL CHIP	22K	5%	1/10W (MX)
< IC >						R853	1-216-837-11	METAL CHIP	22K	5%	1/10W (MX)
IC801	8-759-909-71	IC	BA4558F (E2, E51, MX, AR)			R854	1-216-841-11	METAL CHIP	47K	5%	1/10W (MX)
IC802	8-759-496-41	IC	M65850FP-E1 (MX)			R855	1-216-837-11	METAL CHIP	22K	5%	1/10W (MX)
< JACK >						R856	1-216-833-11	METAL CHIP	10K	5%	1/10W (MX)
JK801	1-770-226-11	JACK (LARGE TYPE) (MIC 1) (MX)				R857	1-216-837-11	METAL CHIP	22K	5%	1/10W (MX)
JK802	1-770-226-11	JACK (LARGE TYPE) (MIC 2) (MX)				R858	1-216-837-11	METAL CHIP	22K	5%	1/10W (MX)
JK802	1-770-226-11	JACK (LARGE TYPE) (MIC) (E2, E51, AR)				R859	1-216-837-11	METAL CHIP	22K	5%	1/10W (MX)
< JUMPER RESISTOR >						R860	1-216-845-11	METAL CHIP	100K	5%	1/10W (MX)
JR801	1-216-864-11	SHORT CHIP	0 (E2, E51, AR)			R861	1-216-817-11	METAL CHIP	470	5%	1/10W (MX)
JR802	1-216-864-11	SHORT CHIP	0 (E2, E51, AR)			R862	1-216-817-11	METAL CHIP	470	5%	1/10W (MX)
< TRANSISTOR >											
Q801	8-729-120-28	TRANSISTOR	2SC1623-L5L6 (E2, E51, MX, AR)								
< RESISTOR >											
R801	1-216-829-11	METAL CHIP	4.7K	5%	1/10W (E2, E51, MX, AR)						

HCD-GX355/GX555/RG270/RG475/RG575

Ver. 1.1

- MIC
- MOTOR (LD)
- MOTOR (TB)
- PANEL

Ref. No.	Part No.	Description	Remark
< VARIABLE RESISTOR >			
VR801	1-223-983-11	RES, VAR, CARBON	50K (MIC LEVEL) (E2, E51, MX, AR)
VR851	1-223-983-11	RES, VAR, CARBON	50K (ECHO LEVEL) (MX)

1-687-133-12	MOTOR (LD) BOARD		

1-687-134-12	MOTOR (TB) BOARD		

< CONNECTOR >			
CN742	1-784-727-11	CONNECTOR, FFC 5P	

A-1093-848-A	PANEL BOARD, COMPLETE (GX555/RG475)		
A-1093-850-A	PANEL BOARD, COMPLETE (GX355/RG270: AEP, UK, EE, RU, E2, E3, E51, EA, AR, AUS)		
A-1093-851-A	PANEL BOARD, COMPLETE (RG270: MX)		
A-1093-855-A	PANEL BOARD, COMPLETE (RG575: MX)		
A-1116-669-A	PANEL BOARD, COMPLETE (RG575: E2, E51, AR, SP)		

2-348-856-01	FL GUIDE		
< CAPACITOR >			
C621	1-124-257-00	ELECT	2.2uF 20% 50V
C622	1-124-257-00	ELECT	2.2uF 20% 50V
C625	1-128-131-11	ELECT	22uF 20% 50V
C631	1-124-589-11	ELECT	47uF 20% 16V
C701	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C702	1-124-589-11	ELECT	47uF 20% 16V
C703	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C704	1-164-357-11	CERAMIC CHIP	0.001uF 5% 50V
C707	1-162-968-11	CERAMIC CHIP	0.0047uF 10% 50V
C708	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C709	1-124-589-11	ELECT	47uF 20% 16V
C710	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C711	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C712	1-128-131-11	ELECT	22uF 20% 50V
< CONNECTOR >			
CN601	1-784-741-11	CONNECTOR, FFC 19P	
CN602	1-564-721-11	PIN, CONNECTOR (SMALL TYPE) 5P	
< DIODE >			
D601	8-719-063-93	LED SLR325VC-N-T32 (STREAM)	(GX555/RG475/RG575)
D602	8-719-063-93	LED SLR325VC-N-T32 (STREAM)	
D603	8-719-063-93	LED SLR325VC-N-T32 (STREAM)	(GX555/RG475/RG575)
D604	8-719-063-93	LED SLR325VC-N-T32 (STREAM)	(GX555/RG475/RG575)
D605	8-719-063-93	LED SLR325VC-N-T32 (STREAM)	

Ref. No.	Part No.	Description	Remark
D606	8-719-063-93	LED SLR325VC-N-T32 (STREAM)	(GX555/RG475/RG575)
D608	8-719-063-92	LED SLR325MC-M-T31-NP	(SUB WOOFER ON/OFF) (GX555/RG475/RG575)
D611	6-500-809-01	LED SELU5223C-STP15 (STANDBY)	
< FLUORESCENT INDICATOR TUBE >			
FL701	1-518-976-21	INDICATOR TUBE, FLUORESCENT	
< IC >			
IC610	6-600-446-01	IC RPM7240-H18	
IC701	6-708-011-01	IC uPD780232GC-508-8BT-A	
< TRANSISTOR >			
Q601	8-729-120-28	TRANSISTOR	2SC1623-L5L6 (GX555/RG475/RG575)
Q602	8-729-120-28	TRANSISTOR	2SC1623-L5L6
Q603	8-729-120-28	TRANSISTOR	2SC1623-L5L6 (GX555/RG475/RG575)
Q604	8-729-120-28	TRANSISTOR	2SC1623-L5L6 (GX555/RG475/RG575)
Q605	8-729-120-28	TRANSISTOR	2SC1623-L5L6
Q606	8-729-120-28	TRANSISTOR	2SC1623-L5L6 (GX555/RG475/RG575)
Q608	8-729-120-28	TRANSISTOR	2SC1623-L5L6 (GX555/RG475/RG575)
< RESISTOR >			
R601	1-216-821-11	METAL CHIP	1K 5% 1/10W (GX555/RG475/RG575)
R602	1-216-821-11	METAL CHIP	1K 5% 1/10W
R603	1-216-821-11	METAL CHIP	1K 5% 1/10W (GX555/RG475/RG575)
R604	1-216-821-11	METAL CHIP	1K 5% 1/10W (GX555/RG475/RG575)
R605	1-216-821-11	METAL CHIP	1K 5% 1/10W (GX555/RG475/RG575)
R606	1-216-821-11	METAL CHIP	1K 5% 1/10W (GX555/RG475/RG575)
R607	1-216-821-11	METAL CHIP	1K 5% 1/10W
R608	1-216-820-11	METAL CHIP	820 5% 1/10W (GX555/RG475/RG575)
R609	1-216-809-11	METAL CHIP	100 5% 1/10W
R611	1-216-821-11	METAL CHIP	1K 5% 1/10W (GX555/RG475/RG575)
R612	1-216-821-11	METAL CHIP	1K 5% 1/10W
R613	1-216-821-11	METAL CHIP	1K 5% 1/10W (GX555/RG475/RG575)
R614	1-216-821-11	METAL CHIP	1K 5% 1/10W (GX555/RG475/RG575)
R615	1-216-821-11	METAL CHIP	1K 5% 1/10W
R616	1-216-821-11	METAL CHIP	1K 5% 1/10W (GX555/RG475/RG575)
R618	1-216-820-11	METAL CHIP	820 5% 1/10W (GX555/RG475/RG575)
R619	1-216-809-11	METAL CHIP	100 5% 1/10W
R620	1-216-805-11	METAL CHIP	47 5% 1/10W
R621	1-216-837-11	METAL CHIP	22K 5% 1/10W
R622	1-216-837-11	METAL CHIP	22K 5% 1/10W
R623	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
R625	1-216-829-11	METAL CHIP	4.7K 5% 1/10W

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
R627	1-216-801-11	METAL CHIP	22	5%	1/10W						
R628	1-216-801-11	METAL CHIP	22	5%	1/10W			< SWITCH >			
R629	1-216-833-11	METAL CHIP	10K	5%	1/10W						
					(GX555/RG475/RG575)	S601	1-762-875-21	SWITCH, KEYBOARD (I/⏮)			
R631	1-216-833-11	METAL CHIP	10K	5%	1/10W	S602	1-762-875-21	SWITCH, KEYBOARD (DISPLAY)			
					(GX555/RG475/RG575)	S611	1-762-875-21	SWITCH, KEYBOARD (ILLUMINATION)			
R633	1-216-833-11	METAL CHIP	10K	5%	1/10W	S612	1-762-875-21	SWITCH, KEYBOARD (CD)			
R635	1-216-833-11	METAL CHIP	10K	5%	1/10W	S613	1-762-875-21	SWITCH, KEYBOARD (TUNER BAND)			
					(GX555/RG475/RG575)	S614	1-762-875-21	SWITCH, KEYBOARD (TAPE A/B)			
R637	1-216-833-11	METAL CHIP	10K	5%	1/10W	S615	1-762-875-21	SWITCH, KEYBOARD (AUDIO IN)			
					(GX555/RG475/RG575)	S616	1-762-875-21	SWITCH, KEYBOARD (REC PAUSE/START)			
R639	1-216-833-11	METAL CHIP	10K	5%	1/10W	S617	1-762-875-21	SWITCH, KEYBOARD (CD SYNC)			
R641	1-216-833-11	METAL CHIP	10K	5%	1/10W	S621	1-762-875-21	SWITCH, KEYBOARD (PRESET EQ)			
					(GX555/RG475/RG575)	S622	1-762-875-21	SWITCH, KEYBOARD (GROOVE)			
R645	1-216-837-11	METAL CHIP	22K	5%	1/10W	S631	1-762-875-21	SWITCH, KEYBOARD (P FILE)			
R646	1-216-841-11	METAL CHIP	47K	5%	1/10W	S632	1-762-875-21	SWITCH, KEYBOARD (SURROUND)			
R647	1-216-797-11	METAL CHIP	10	5%	1/10W	S633	1-762-875-21	SWITCH, KEYBOARD (EFFECT ON/OFF)			
R648	1-216-797-11	METAL CHIP	10	5%	1/10W	S634	1-762-875-21	SWITCH, KEYBOARD (ENTER)			
R650	1-216-837-11	METAL CHIP	22K	5%	1/10W	S641	1-762-875-21	SWITCH, KEYBOARD			
R651	1-216-841-11	METAL CHIP	47K	5%	1/10W			(PLAY MODE/TUNING MODE)			
R652	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	S642	1-762-875-21	SWITCH, KEYBOARD (▲ (CD))			
R660	1-216-837-11	METAL CHIP	22K	5%	1/10W	S643	1-762-875-21	SWITCH, KEYBOARD (DISC SKIP/EX-CHANGE)			
R661	1-216-841-11	METAL CHIP	47K	5%	1/10W	S644	1-762-875-21	SWITCH, KEYBOARD (DISC 3)			
						S645	1-762-875-21	SWITCH, KEYBOARD (DISC 2)			
R662	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	S646	1-762-875-21	SWITCH, KEYBOARD (DISC 1)			
R663	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	S647	1-762-875-21	SWITCH, KEYBOARD (SUB WOOFER ON/OFF)			
R664	1-216-829-11	METAL CHIP	4.7K	5%	1/10W			(GX555/RG475/RG575)			
R665	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	S648	1-762-875-21	SWITCH, KEYBOARD (MULTI PLEX) (MX)			
R666	1-216-833-11	METAL CHIP	10K	5%	1/10W			< VIBRATOR >			
R667	1-216-837-11	METAL CHIP	22K	5%	1/10W	X701	1-795-054-21	VIBRATOR, CERAMIC (4.19MHz)			
R670	1-216-837-11	METAL CHIP	22K	5%	1/10W			*****			
R671	1-216-841-11	METAL CHIP	47K	5%	1/10W			A-1094-132-A	POWER BOARD, COMPLETE (GX555)		
R672	1-216-825-11	METAL CHIP	2.2K	5%	1/10W			A-1094-133-A	POWER BOARD, COMPLETE		
R673	1-216-825-11	METAL CHIP	2.2K	5%	1/10W				(RG475: AEP, UK, EE, RU)		
R680	1-216-837-11	METAL CHIP	22K	5%	1/10W			A-1094-134-A	POWER BOARD, COMPLETE (RG475: E3, AUS)		
R681	1-216-841-11	METAL CHIP	47K	5%	1/10W			A-1094-136-A	POWER BOARD, COMPLETE (GX355)		
R682	1-216-825-11	METAL CHIP	2.2K	5%	1/10W			A-1094-137-A	POWER BOARD, COMPLETE		
R683	1-216-825-11	METAL CHIP	2.2K	5%	1/10W				(RG270: AEP, UK, EE, RU)		
R684	1-216-829-11	METAL CHIP	4.7K	5%	1/10W			A-1094-138-A	POWER BOARD, COMPLETE		
									(RG270: E2, E3, E51, EA, MX, AR, AUS)		
R685	1-216-829-11	METAL CHIP	4.7K	5%	1/10W			A-1094-148-A	POWER BOARD, COMPLETE		
R690	1-216-837-11	METAL CHIP	22K	5%	1/10W				(RG575: E2, E51, MX, AR)		
R691	1-216-841-11	METAL CHIP	47K	5%	1/10W			A-1104-989-A	POWER BOARD, COMPLETE (RG475: SP)		
R692	1-216-825-11	METAL CHIP	2.2K	5%	1/10W			A-1104-990-A	POWER BOARD, COMPLETE (RG575: SP)		
R693	1-216-825-11	METAL CHIP	2.2K	5%	1/10W				*****		
R694	1-216-829-11	METAL CHIP	4.7K	5%	1/10W			7-685-872-09	SCREW +BVTT 3X8 (S)		
R695	1-216-829-11	METAL CHIP	4.7K	5%	1/10W				< CAPACITOR >		
R696	1-216-833-11	METAL CHIP	10K	5%	1/10W						
R697	1-216-837-11	METAL CHIP	22K	5%	1/10W						
					(GX555/RG270: MX/RG475/RG575)	C403	1-137-749-11	MYLAR	0.1uF	100V	
R698	1-216-841-11	METAL CHIP	47K	5%	1/10W						
					(MX)	C404	1-137-749-11	MYLAR	0.1uF	100V	
R701	1-216-864-11	SHORT CHIP	0			C405	1-135-928-21	ELECT	2200uF	20%	63V
R702	1-216-821-11	METAL CHIP	1K	5%	1/10W						
R703	1-216-809-11	METAL CHIP	100	5%	1/10W				(US, CND, AEP, UK, EE, RU)		
R704	1-216-864-11	SHORT CHIP	0			C405	1-137-840-11	ELECT	2200uF	20%	63V
R705	1-216-825-11	METAL CHIP	2.2K	5%	1/10W				(E2, E3, E51, EA, MX, AR, AUS, SP)		
R706	1-216-821-11	METAL CHIP	1K	5%	1/10W						
R707	1-216-821-11	METAL CHIP	1K	5%	1/10W						
R708	1-216-821-11	METAL CHIP	1K	5%	1/10W						
R709	1-216-821-11	METAL CHIP	1K	5%	1/10W						
						C406	1-135-928-21	ELECT	2200uF	20%	63V
									(US, CND, AEP, UK, EE, RU)		
						C406	1-137-840-11	ELECT	2200uF	20%	63V
									(E2, E3, E51, EA, MX, AR, AUS, SP)		

POWER

88

POWER

SENSOR

SUB TRANS

SUB WOOFER

Ref. No.	Part No.	Description			Remark
R461	1-216-797-11	METAL CHIP	10	5%	1/10W
R462	1-216-797-11	METAL CHIP	10	5%	1/10W
R465	1-216-841-11	METAL CHIP	47K	5%	1/10W
R466	1-216-845-11	METAL CHIP	100K	5%	1/10W
R480	1-216-845-11	METAL CHIP	100K	5%	1/10W
R481	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R482	1-216-833-11	METAL CHIP	10K	5%	1/10W
R483	1-216-801-11	METAL CHIP	22	5%	1/10W
R484	1-216-845-11	METAL CHIP	100K	5%	1/10W
R485	1-216-845-11	METAL CHIP	100K	5%	1/10W
R486	1-216-845-11	METAL CHIP	100K	5%	1/10W
R487	1-216-841-11	METAL CHIP	47K	5%	1/10W
R488	1-216-837-11	METAL CHIP	22K	5%	1/10W
R490	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R491	1-216-841-11	METAL CHIP	47K	5%	1/10W
R492	1-216-821-11	METAL CHIP	1K	5%	1/10W
R493	1-216-841-11	METAL CHIP	47K	5%	1/10W
△ R495	1-202-972-61	FUSIBLE	1	5%	1/4W F
△ R496	1-212-881-11	FUSIBLE	100	5%	1/4W F
R497	1-216-845-11	METAL CHIP	100K	5%	1/10W
R498	1-216-821-11	METAL CHIP	1K	5%	1/10W
R499	1-216-821-11	METAL CHIP	1K	5%	1/10W
< RELAY >					
RY441	1-755-373-11	RELAY			
< THERMISTOR >					
TH441	1-807-796-11	THERMISTOR			

	1-687-132-12	SENSOR BOARD			

< CONNECTOR >					
CN731	1-785-329-21	PIN, CONNECTOR (LIGHT ANGLE) 3P			
< IC >					
IC731	6-600-022-01	IC RPI-576			

Ref. No.	Part No.	Description	Remark
	A-1094-102-A	SUB TRANS BOARD, COMPLETE (GX555)	
	A-1094-103-A	SUB TRANS BOARD, COMPLETE	(RG475: AEP, UK, EE, RU)
	A-1094-104-A	SUB TRANS BOARD, COMPLETE (AUS)	
	A-1094-105-A	SUB TRANS BOARD, COMPLETE	(RG270: E2, E3, E51/RG475: E3, SP)
	A-1094-108-A	SUB TRANS BOARD, COMPLETE (GX355)	
	A-1094-109-A	SUB TRANS BOARD, COMPLETE	(RG270: AEP, UK, EE, RU)
	A-1094-110-A	SUB TRANS BOARD, COMPLETE (EA)	
	A-1094-111-A	SUB TRANS BOARD, COMPLETE (RG270: MX)	
	A-1094-112-A	SUB TRANS BOARD, COMPLETE (RG270: AR)	
	A-1094-129-A	SUB TRANS BOARD, COMPLETE	(RG575: E2, E51, SP)
	A-1094-130-A	SUB TRANS BOARD, COMPLETE (RG575: MX)	
	A-1094-131-A	SUB TRANS BOARD, COMPLETE (RG575: AR)	*****
		< CONNECTOR >	
CN901	1-564-321-00	PIN, CONNECTOR (3.96mm PITCH) 2P	
CN903	1-564-321-00	PIN, CONNECTOR (3.96mm PITCH) 2P	(EXCEPT E2, E3, E51, EA, SP)
CN903	1-568-106-11	PIN, CONNECTOR (3.96mm PITCH) 4P	(E2, E3, E51, EA, SP)
		< DIODE >	
D901	8-719-988-61	DIODE 1SS355TE-17	
D902	6-500-522-21	DIODE 10EDB40-TB3	
D903	6-500-522-21	DIODE 10EDB40-TB3	
D904	6-500-522-21	DIODE 10EDB40-TB3	
D905	6-500-522-21	DIODE 10EDB40-TB3	
		< TRANSFORMER >	
△ PT902	1-443-614-11	TRANSFORMER, POWER (GX355/GX555)	
△ PT902	1-443-615-11	TRANSFORMER, POWER (AEP, UK, EE, RU)	
△ PT902	1-443-616-11	TRANSFORMER, POWER	(E2, E3, E51, AR, AUS, SP)
△ PT902	1-443-617-11	TRANSFORMER, POWER (EA, MX)	
		< RESISTOR >	
R910	1-216-809-11	METAL CHIP	100 5% 1/10W
R911	1-216-813-11	METAL CHIP	220 5% 1/10W
R912	1-216-805-11	METAL CHIP	47 5% 1/10W
R913	1-216-805-11	METAL CHIP	47 5% 1/10W
		< RELAY >	
△ RY901	1-755-276-11	RELAY, POWER	
		< SWITCH >	
△ S901	1-786-055-21	SELECTOR, VOLTAGE (VOLTAGE SELECTOR)	(E2, E3, E51, EA, SP)

	A-1094-189-A	SUB WOOFER BOARD, COMPLETE (GX555)	
	A-1094-190-A	SUB WOOFER BOARD, COMPLETE (RG475)	
	A-1094-192-A	SUB WOOFER BOARD, COMPLETE (RG575)	*****
		< CAPACITOR >	
C502	1-162-960-11	CERAMIC CHIP	220PF 10% 50V

HCD-GX355/GX555/RG270/RG475/RG575

Ver. 1.1

SUB WOOFER SW TRANSFORMER

Ref. No.	Part No.	Description	Remark			
C503	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V	
C504	1-104-662-91	ELECT	22uF	20%	25V	
C505	1-162-915-11	CERAMIC CHIP	10PF	0.5PF	50V	
C506	1-104-665-11	ELECT	100uF	20%	25V	
C507	1-126-967-11	ELECT	47uF	20%	50V	
C508	1-164-230-11	CERAMIC CHIP	220PF	5%	50V	
C509	1-128-563-11	ELECT	100uF	20%	100V	
C510	1-128-582-11	ELECT	10uF	20%	100V	
C511	1-128-582-11	ELECT	10uF	20%	100V	
C512	1-136-165-00	FILM	0.1uF	5%	50V	
C513	1-136-165-00	FILM	0.1uF	5%	50V	
C514	1-126-948-11	ELECT	100uF	20%	35V	
C516	1-126-964-11	ELECT	10uF	20%	50V	
C517	1-126-964-11	ELECT	10uF	20%	50V	
< CONNECTOR >						
* CN501	1-564-705-11	PIN, CONNECTOR (SMALL TYPE) 3P				
CN502	1-564-509-11	PLUG, CONNECTOR 6P				
< DIODE >						
D501	8-719-083-82	DIODE UDZS-TE17-12B				
D502	8-719-988-61	DIODE 1SS355TE-17				
D503	8-719-988-61	DIODE 1SS355TE-17				
D504	8-719-988-61	DIODE 1SS355TE-17				
D507	8-719-988-61	DIODE 1SS355TE-17				
< IC >						
IC501	6-600-091-01	IC STK404-130S				
< JACK >						
JK501	1-780-242-11	TERMINAL BOARD, PUSH (ANTENNA) 2P (SUB WOOFER OUT, IMPEDANCE USE 6-16Ω)				
< JUMPER RESISTOR >						
JR501	1-216-864-11	SHORT CHIP	0			
JR502	1-216-864-11	SHORT CHIP	0			
< TRANSISTOR >						
Q501	6-551-268-01	TRANSISTOR	2SC5625			
Q502	8-729-600-22	TRANSISTOR	2SA1235-F			
Q503	8-729-120-28	TRANSISTOR	2SC1623-L5L6			
Q505	8-729-120-28	TRANSISTOR	2SC1623-L5L6			
Q506	8-729-120-28	TRANSISTOR	2SC1623-L5L6			
Q507	8-729-120-28	TRANSISTOR	2SC1623-L5L6			
< RESISTOR >						
R501	1-216-841-11	METAL CHIP	47K	5%	1/10W	
R502	1-216-841-11	METAL CHIP	47K	5%	1/10W	
R503	1-216-821-11	METAL CHIP	1K	5%	1/10W	
R504	1-216-841-11	METAL CHIP	47K	5%	1/10W	
△ R505	1-215-873-00	METAL OXIDE	4.7K	5%	1W F	
△ R506	1-202-972-61	FUSIBLE	1	5%	1/4W F	
△ R507	1-215-873-00	METAL OXIDE	4.7K	5%	1W F	
△ R508	1-215-873-00	METAL OXIDE	4.7K	5%	1W F	
△ R509	1-212-881-11	FUSIBLE	100	5%	1/4W F	
△ R510	1-217-156-00	METAL	0.22	10%	5W F	
△ R511	1-217-156-00	METAL	0.22	10%	5W F	

Ref. No.	Part No.	Description	Remark		
R512	1-216-797-11	METAL CHIP	10	5%	1/10W
R513	1-216-821-11	METAL CHIP	1K	5%	1/10W
R514	1-216-837-11	METAL CHIP	22K	5%	1/10W
R515	1-216-841-11	METAL CHIP	47K	5%	1/10W
R516	1-216-813-11	METAL CHIP	220	5%	1/10W
R517	1-216-833-11	METAL CHIP	10K	5%	1/10W
R518	1-216-833-11	METAL CHIP	10K	5%	1/10W
R520	1-216-845-11	METAL CHIP	100K	5%	1/10W
R521	1-216-809-11	METAL CHIP	100	5%	1/10W
R522	1-216-809-11	METAL CHIP	100	5%	1/10W
R523	1-216-809-11	METAL CHIP	100	5%	1/10W
R524	1-216-841-11	METAL CHIP	47K	5%	1/10W
R525	1-216-797-11	METAL CHIP	10	5%	1/10W
R526	1-216-797-11	METAL CHIP	10	5%	1/10W
R527	1-216-797-11	METAL CHIP	10	5%	1/10W
R529	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R530	1-216-837-11	METAL CHIP	22K	5%	1/10W
R531	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R532	1-216-837-11	METAL CHIP	22K	5%	1/10W
R533	1-216-837-11	METAL CHIP	22K	5%	1/10W
△ R534	1-202-972-61	FUSIBLE	1	5%	1/4W F
< RELAY >					
RY501	1-755-373-11	RELAY			

	1-687-669-12	SW BOARD			

< SWITCH >					
S751	1-786-514-11	SWITCH, LEVER (SLIDE)			
(OPEN/CLOSE DETECT)					

	A-1094-068-A	TRANSFORMER BOARD, COMPLETE (GX555)			
	A-1094-069-A	TRANSFORMER BOARD, COMPLETE			
		(RG475: AEP, UK, EE, RU)			
	A-1094-070-A	TRANSFORMER BOARD, COMPLETE (AUS)			
	A-1094-071-A	TRANSFORMER BOARD, COMPLETE			
		(RG270: E2, E3, E51/RG475: E3, SP)			
	A-1094-074-A	TRANSFORMER BOARD, COMPLETE (GX355)			
	A-1094-075-A	TRANSFORMER BOARD, COMPLETE			
		(RG270: AEP, UK, EE, RU)			
	A-1094-076-A	TRANSFORMER BOARD, COMPLETE (EA)			
	A-1094-077-A	TRANSFORMER BOARD, COMPLETE			
		(RG270: MX)			
	A-1094-078-A	TRANSFORMER BOARD, COMPLETE			
		(RG270: AR)			
	A-1094-096-A	TRANSFORMER BOARD, COMPLETE			
		(RG575: E2, E51, SP)			
	A-1094-097-A	TRANSFORMER BOARD, COMPLETE			
		(RG575: MX)			
	A-1094-098-A	TRANSFORMER BOARD, COMPLETE			
		(RG575: AR)			

	1-533-233-31	FUSE HOLDER			
< CAPACITOR >					
C907	1-136-165-00	FILM	0.1uF	5%	50V

TRANSFORMER

VIDEO OUT

VOL

Ref. No.	Part No.	Description	Remark		
C908	1-128-553-11	ELECT	220uF	20%	63V
C909	1-126-964-11	ELECT	10uF	20%	50V
C910	1-126-968-11	ELECT	100uF	20%	50V
C911	1-126-942-61	ELECT	1000uF	20%	25V
< CONNECTOR >					
CN905	1-564-506-11	PLUG, CONNECTOR 3P			
* CN906	1-564-705-11	PIN, CONNECTOR (SMALL TYPE) 3P			
* CN907	1-764-333-11	PLUG, CONNECTOR 10P			
< DIODE >					
D906	8-719-083-70	DIODE UDZSTE-1727B			
D908	6-500-522-21	DIODE 10EDB40-TB3			
< TRANSISTOR >					
Q902	8-729-048-66	TRANSISTOR	2SB1238-PQR-TV2		
< RESISTOR >					
R903	1-216-833-11	METAL CHIP	10K	5%	1/10W
R904	1-216-821-11	METAL CHIP	1K	5%	1/10W
△ R908	1-202-972-61	FUSIBLE	1	5%	1/4W F

A-1094-206-A		VIDEO OUT BOARD, COMPLETE (RG270: MX)			
A-1124-118-A		VIDEO OUT BOARD, COMPLETE (RG575: MX)			

< CAPACITOR >					
C803	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V
< JACK >					
J803	1-774-227-11	JACK, PIN 1P (VIDEO OUT)			

A-1093-874-A		VOL BOARD, COMPLETE			
		(GX355/GX555/RG270/RG475)			
A-1093-878-A		VOL BOARD, COMPLETE (RG575)			

< RESISTOR >					
R674	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R675	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R676	1-216-833-11	METAL CHIP	10K	5%	1/10W
R677	1-216-837-11	METAL CHIP	22K	5%	1/10W
R678	1-216-841-11	METAL CHIP	47K	5%	1/10W
R686	1-216-833-11	METAL CHIP	10K	5%	1/10W
R687	1-216-837-11	METAL CHIP	22K	5%	1/10W
R688	1-216-841-11	METAL CHIP	47K	5%	1/10W
< SWITCH >					
S623	1-762-875-21	SWITCH, KEYBOARD (ALBUM -)			
S624	1-762-875-21	SWITCH, KEYBOARD (ALBUM +)			
S625	1-762-875-21	SWITCH, KEYBOARD (◀▶)			
S626	1-762-875-21	SWITCH, KEYBOARD (▶▶)			
S635	1-762-875-21	SWITCH, KEYBOARD (■)			
S636	1-762-875-21	SWITCH, KEYBOARD (■)			
S637	1-762-875-21	SWITCH, KEYBOARD (▶)			
S638	1-762-875-21	SWITCH, KEYBOARD (EQ BAND)			
S660	1-478-473-11	ENCODER, ROTARY (MASTER VOLUME)			

Ref. No.	Part No.	Description	Remark
SW601	1-786-289-31	SWITCH, DETECTION (<<< - EQ + >>> , - TUNING +)	

MISCELLANEOUS			

54	1-828-975-11	WIRE (FLAT TYPE) (13 CORE) (MX)	
59	1-828-963-11	WIRE (FLAT TYPE) (11 CORE) (EXCEPT AEP, UK, EE)	
59	1-828-980-11	WIRE (FLAT TYPE) (15 CORE) (AEP, UK, EE)	
60	1-693-615-11	TUNER (FM/AM) (E2, E3, E51, EA, MX, AR, AUS, SP)	
60	1-693-616-11	TUNER (FM/AM) (AEP, UK, EE)	
60	1-693-617-11	TUNER (FM/AM) (RU)	
60	1-693-631-31	TUNER (FM/AM) (US, CND)	
113	1-829-003-11	WIRE (FLAT TYPE) (19 CORE)	
116	1-828-973-11	WIRE (FLAT TYPE) (13 CORE)	
118	1-796-485-51	DECK, MECHANICAL (CWM43FF13)	
203	1-775-251-11	WIRE (FLAT TYPE) (27 CORE) (EXCEPT MX)	
203	1-775-285-11	WIRE (FLAT TYPE) (31 CORE) (MX)	
204	1-828-970-11	WIRE (FLAT TYPE) (13 CORE)	
△ 210	1-769-744-81	CORD, POWER (UK, EA)	
△ 210	1-775-790-71	CORD, POWER (AUS)	
△ 210	1-827-226-31	CORD, POWER (E2, E3, MX)	
△ 210	1-829-387-11	CORD, POWER (AR)	
△ 210	1-830-188-11	CORD, POWER (AEP, EE, RU, E51, SP)	
△ 210	1-830-190-11	CORD, POWER (US, CND)	
211	1-500-868-11	CORE, FERRITE (MX)	
502	1-776-182-11	WIRE (FLAT TYPE) (5 CORE)	
576	1-827-992-11	WIRE (FLAT TYPE) (16 CORE)	
△ 579	8-820-244-01	OPTICAL PICK-UP BLOCK KSM-215DCP/C2NP	
580	1-471-035-21	MAGNET ASSY	
△ F904	1-576-655-12	FUSE, GLASS TUBE (DIA. 5) (T8A/250V)	
△ F905	1-576-655-12	FUSE, GLASS TUBE (DIA. 5) (T8A/250V)	
△ F906	1-533-470-12	FUSE, GLASS TUBE (DIA. 5) (T3.15A/250V)	
△ F907	1-533-470-12	FUSE, GLASS TUBE (DIA. 5) (T3.15A/250V)	
M001	1-787-319-11	FAN, DC	
M741	A-1108-965-A	MOTOR ASSY, TABLE	
M751	A-1108-966-A	MOTOR ASSY, LOADING	
△ PT901	1-443-601-21	TRANSFORMER, POWER (GX355)	
△ PT901	1-443-603-21	TRANSFORMER, POWER (GX555)	
△ PT901	1-443-605-11	TRANSFORMER, POWER (RG270: AEP, UK, EE, RU)	
△ PT901	1-443-606-21	TRANSFORMER, POWER (RG475: AEP, UK, EE, RU)	
△ PT901	1-443-608-11	TRANSFORMER, POWER (RG270: AR/RG575: AR, SP)	
△ PT901	1-443-608-21	TRANSFORMER, POWER (RG270: E2, E3, E51, AUS/RG475: E3, SP, AUS)	
△ PT901	1-443-608-31	TRANSFORMER, POWER (RG575: E2, E51)	
△ PT901	1-443-610-11	TRANSFORMER, POWER (RG270: MX/RG575: MX)	
△ PT901	1-443-613-11	TRANSFORMER, POWER (RG270: EA)	
S101	1-771-853-11	SWITCH, DETECTION (LIMIT)	
S711	1-477-680-12	ENCODER, ROTARY (DISC TRAY ADDRESS DETECT)	

HCD-GX355/GX555/RG270/RG475/RG575

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remark</u>
		ACCESSORIES	

△	1-770-019-61	ADAPTOR, CONVERSION PLUG (UK, EA)	
△	1-573-856-12	ADAPTOR, CONVERSION 2P (E3)	
△	1-569-008-21	ADAPTOR, CONVERSION (E51, SP)	

SONY®

SERVICE MANUAL

Ver. 1.3 2005.09

US Model
Canadian Model
HCD-GX355/GX555
AEP Model
UK Model
Australian Model
HCD-RG270/RG475
E Model
HCD-RG270/RG475/RG575

SUPPLEMENT-1

Subject:

- Change of CD Mechanism Block (CDM74KF-K6BD83S)
- Change of MAIN board
- Change of HEADPHONE board

Changing Destination

HCD-GX355/GX555 : US, CND models
HCD-RG270 : AEP, UK, EE, RU, E2, E51 models
HCD-RG475 : AEP, UK, EE, RU models
HCD-RG575 : E2, E51 models

- Abbreviation
 - CND : Canadian model
 - E2 : 120V AC area in E model
 - E51 : Chilean and Peruvian models
 - EE : East European model
 - RU : Russian model

In this set, CD mechanism block, MAIN board and HEADPHONE board have been changed in the midway of production simultaneously. CD mechanism block, MAIN board and HEADPHONE board of new type are described in this supplement-1.
Refer to original service manual for other information.
Also, repair after confirming the type by discrimination without fail, because there is no interchangeability between new type and former type.

TABLE OF CONTENTS

1. NEW/FORMER TYPE DISCRIMINATION 3

2. ELECTRICAL ADJUSTMENT 4

3. DIAGRAMS

3-1. Printed Wiring Board – CD Board – 6

3-2. Schematic Diagram – CD Board – 7

3-3. Printed Wiring Board – MAIN Board – 8

3-4. Schematic Diagram – MAIN Board (1/3) – 9

3-5. Schematic Diagram – MAIN Board (2/3) – 10

3-6. Schematic Diagram – MAIN Board (3/3) – 11

3-7. Printed Wiring Board – HEADPHONE Board – 12

3-8. Schematic Diagram – HEADPHONE Board – 12

4. EXPLODED VIEWS

4-1. Front Panel Section 21

4-2. Chassis Section 22

4-3. CD Mechanism Deck Section-1
(CDM74KF-K6BD83S) 23

4-4. CD Mechanism Deck Section-2
(CDM74KF-K6BD83S) 24

5. ELECTRICAL PARTS LIST 25

1. NEW/FORMER TYPE DISCRIMINATION

• Method to Distinguished by Test Mode

New/former type can be distinguished in the version display mode of the test mode.

Procedure:

1. Press the  button to turn the power on.
2. Press three buttons of , **ILLUMINATION** and **DISC 2** simultaneously.
3. When this mode is activated, model and destination is displayed on the fluorescent indicator tube.
4. Press the **DISPLAY** button to display software version and year, month, day of the software creation display mode.
Former type : G01.08A:050225
New type : G02.03A:050707
5. To release this mode, press three buttons of , **ILLUMINATION** and **DISC 2** simultaneously.

• Method to Distinguished by Serial No.

The set since serial No. of the following table is new type.

Model	Destination	Serial No.
HCD-GX355	US	Since 8174583
	Canadian	Since 4104151
HCD-GX555	US	Since 8175542
	Canadian	Since 4102400
HCD-RG270	AEP	Since 5141136
	UK	Since 6114646
	East European	Since 7115807
	Russian	Since 3168001
	120V AC area in E	Since 4147253
	Chilean and Peruvian	Since 9173098
HCD-RG475	AEP	Since 5109694
	UK	Since 6108534
	East European	Since 7107140
	Russian	Since 3165831
HCD-RG575	120V AC area in E	Since 4137961
	Chilean and Peruvian	Since 9166756


2. ELECTRICAL ADJUSTMENT

CD SECTION

Note:

1. CD Block is basically constructed to operate without adjustment.
2. Use YEDS-18 disc (3-702-101-01) unless otherwise indicated.
3. Use an oscilloscope with more than 10 MΩ impedance.
4. Clean the object lens by an applicator with neutral detergent when the signal level is low than specified value with the following checks.
5. Check the focus bias check when optical pick-up block is replaced.


FOCUS BIAS CHECK

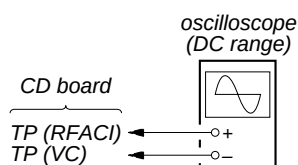

Procedure :


1. Connect oscilloscope to TP (RFACI) and TP (VC) on the CD board.
2. Press the  button to turn the power ON, and press the  button to open the CD disc table.
3. Set disc (YEDS-18) on the tray and press the  button to playback.
4. Confirm that oscilloscope waveform is as shown in the figure below. (eye pattern)

A good eye pattern means that the diamond shape (◇) in the center of the waveform can be clearly distinguished.

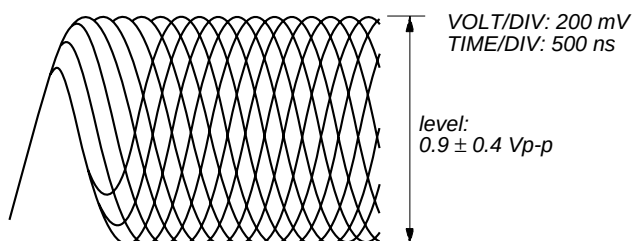

Checking Location:

– CD Board (Conductor Side) –

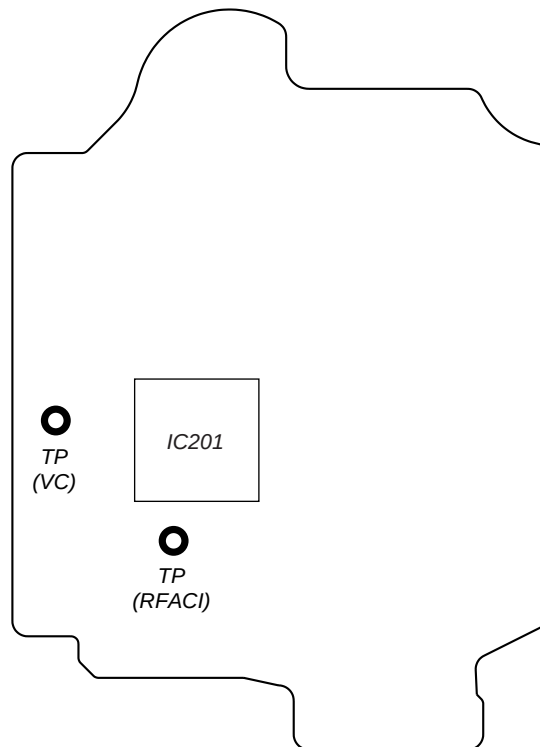

3. DIAGRAMS

• Note For Printed Wiring Boards and Schematic Diagrams

Note on Printed Wiring Board:

- — : parts extracted from the component side.
- : parts extracted from the conductor side.
- △ : internal component.
- : Pattern from the side which enables seeing.



(The other layers' patterns are not indicated.)

Caution:

Pattern face side: Parts on the pattern face side seen from the pattern face are indicated.

Parts face side: Parts on the parts face side seen from the parts face are indicated.

• Indication of transistor

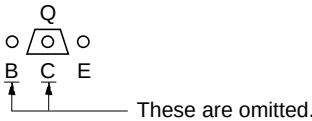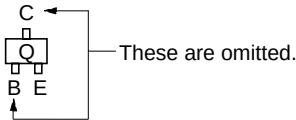

Note on Schematic Diagram:

- All capacitors are in μF unless otherwise noted. (p: pF) 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $\frac{1}{4} \text{ W}$ or less unless otherwise specified.
- △ : internal component.
- : nonflammable resistor.
- : fusible resistor.
- : panel designation.

Note:

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Note:

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

- : B+ Line.
- : B- Line.
- Voltages and waveforms are dc with respect to ground under no-signal conditions.
- CD Board —
no mark : CD PLAY
- MAIN Board —
no mark : FM
- () : CD PLAY
- << >> : TAPE PLAY
- [] : REC
- * : Impossible to measure
- Voltages are taken with a VOM (Input impedance 10 M Ω). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Signal path.
- ⇨ : TUNER (FM/AM)
- ⇨ : TAPE PLAY (DECK-A)
- ⇨ : TAPE PLAY (DECK-B)
- ⇨ : REC
- ⇨ : CD PLAY
- ⇨ : AUX IN
- ⇨ : MIC
- Abbreviation
- CND : Canadian model
- E2 : 120 V AC area in E model
- E51 : Chilean and Peruvian models
- EE : East European model
- RU : Russian model

• Waveforms

— CD Board —

① IC201 ① (LRCK), ② (LRCKI) (CD play mode)

22.8 μs 3.3 Vp-p
1 V/DIV, 10 μs /DIV

② IC201 ⑤ (BCK), ⑥ (BCKI) (CD play mode)

472 ns 3.3 Vp-p
1 V/DIV, 200 ns/DIV

③ IC201 ⑦ (RFAC) (CD play mode)

0.5 to 1.3 Vp-p
200 mV/DIV, 500 ns/DIV

④ IC201 ⑩ (XTAO) (CD play mode)

59.4 ns 2.3 Vp-p
1 V/DIV, 20 ns/DIV

— MAIN Board —

⑪ IC901 ⑪ (XCOUT (32.768KHZ))

30.6 μs 2.8 Vp-p
1 V/DIV, 10 μs /DIV


⑫ IC901 ⑬ (XOUT (16MHZ))

62.2 ns 1 Vp-p
500 mV/DIV, 20 ns/DIV


⑬ Q201 (Collector) (REC mode)

17.2 μs 17.6 Vp-p
500 mV/DIV, 10 μs /DIV

3-1. PRINTED WIRING BOARD – CD Board – : Uses unleaded solder.

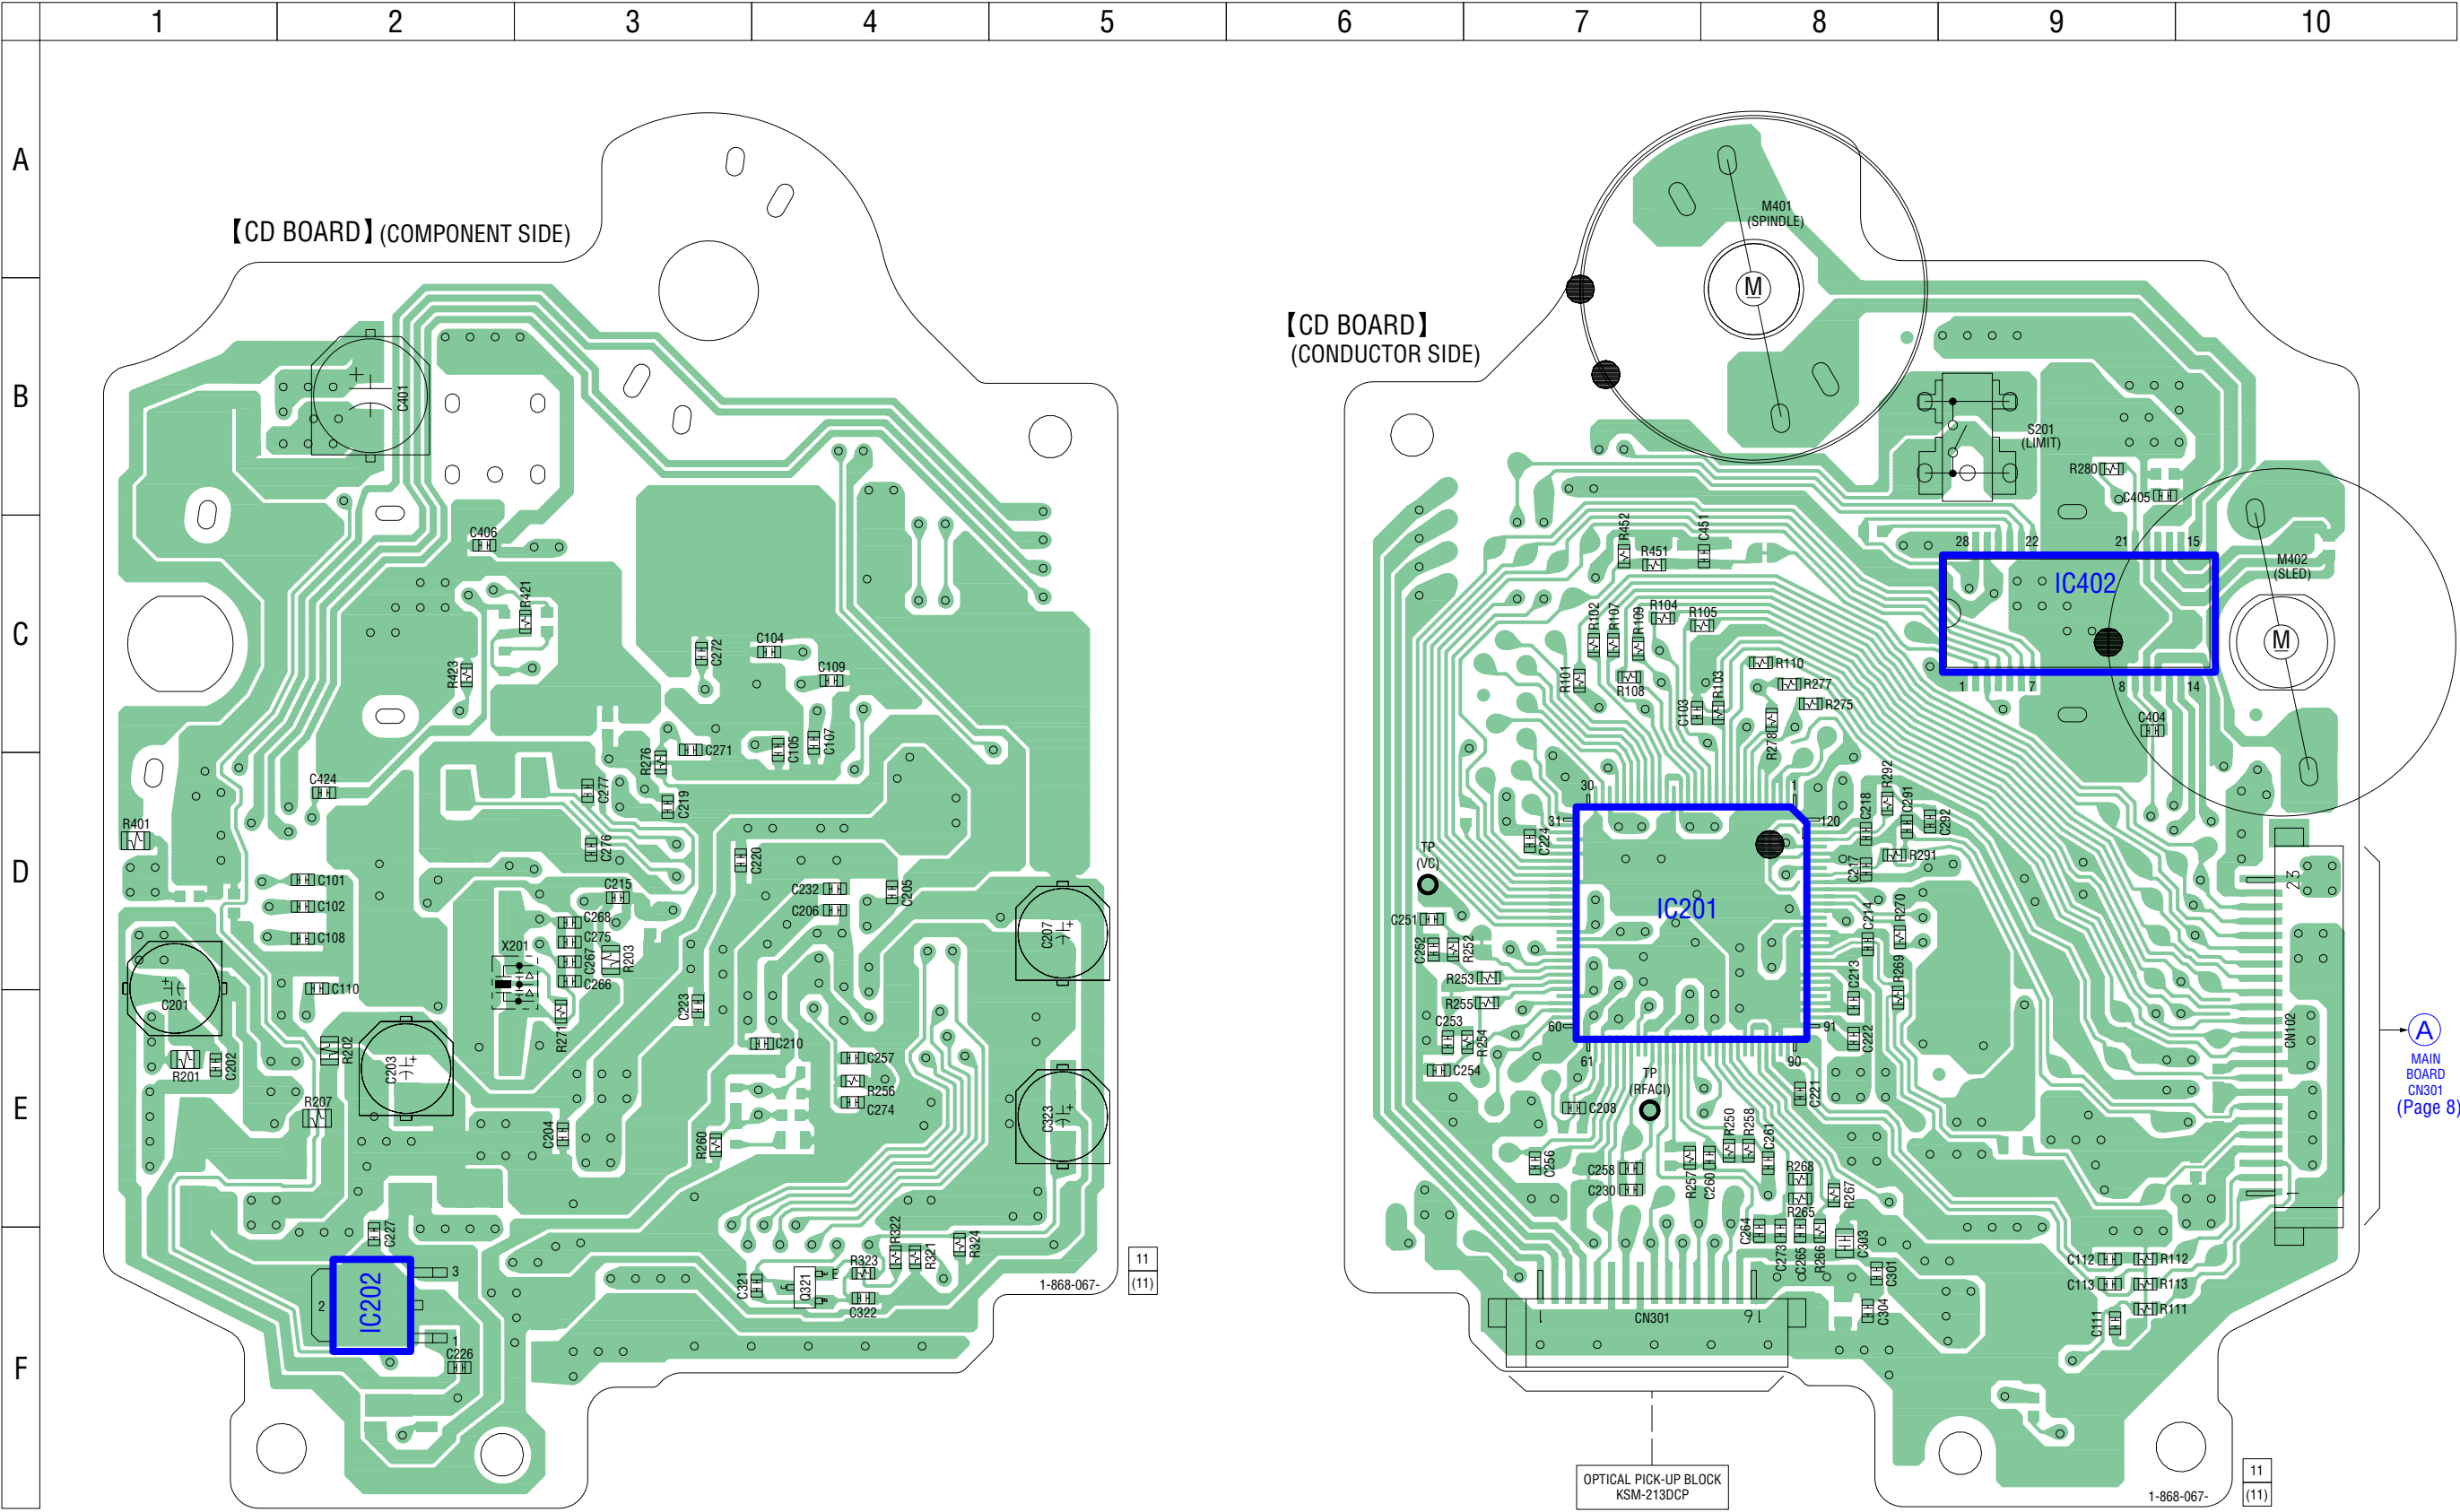


3-2. SCHEMATIC DIAGRAM – CD Board – • See page 5 for Waveforms. • See page 13 for IC Block Diagrams. • See page 15 for IC Pin Function Description.

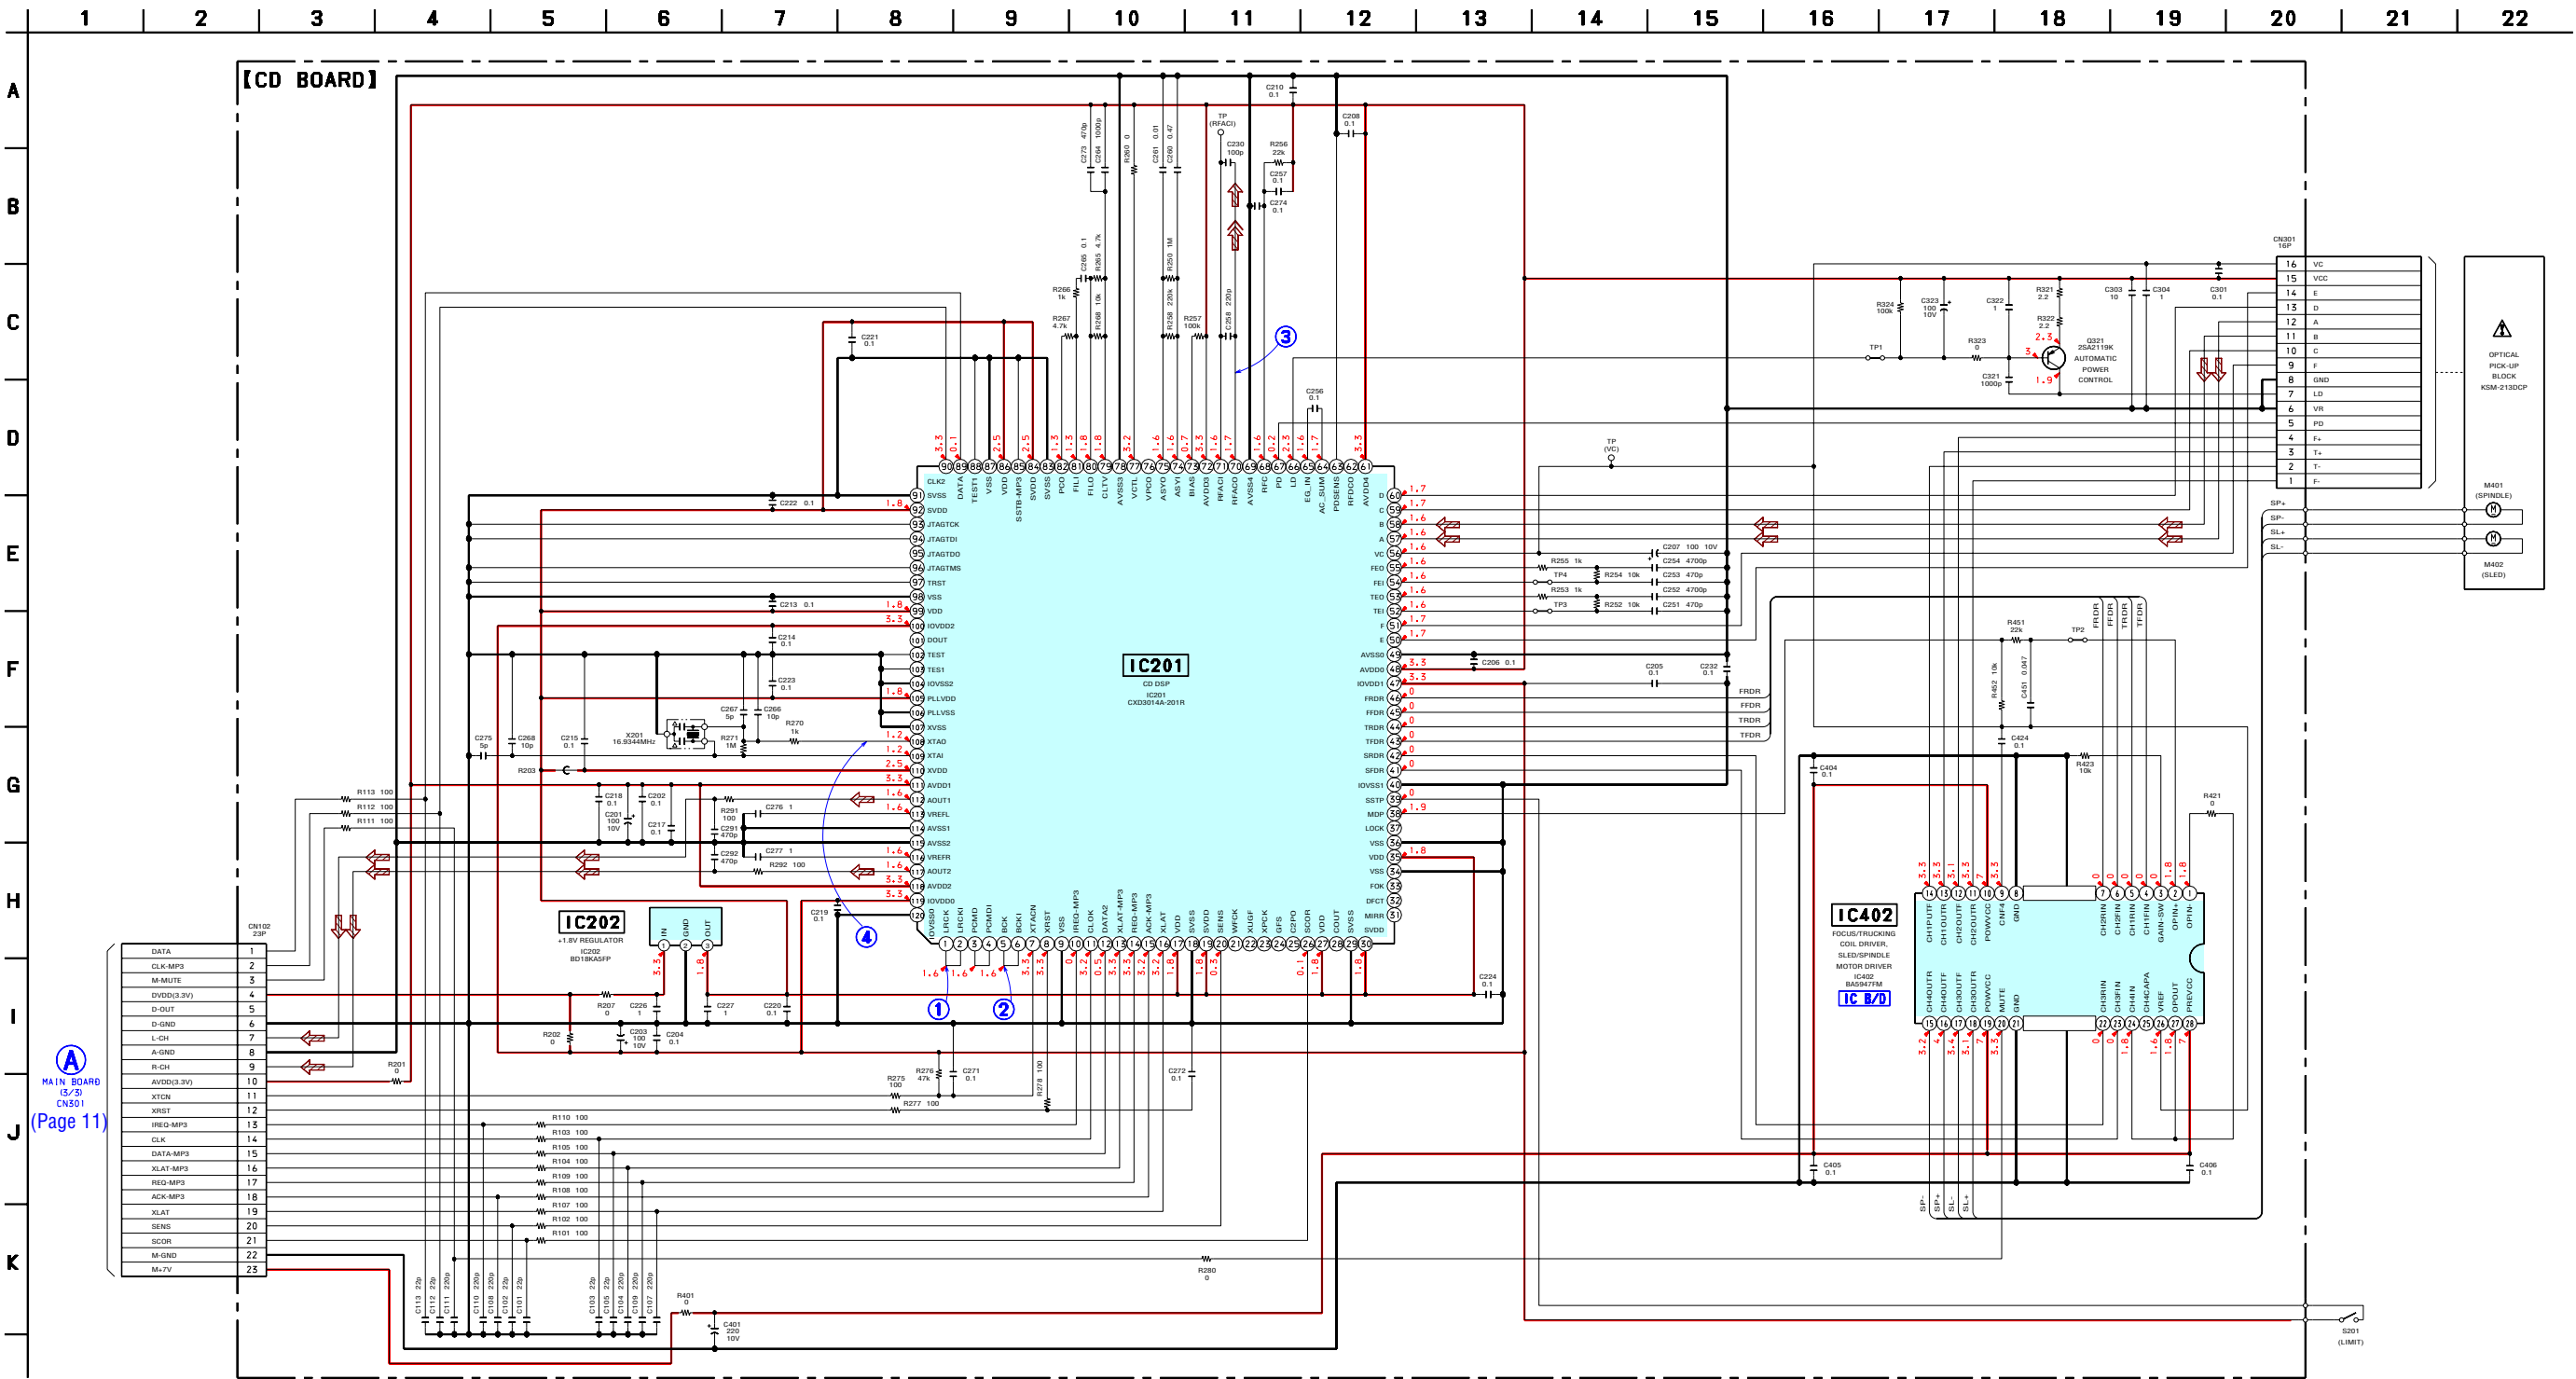


3-3. PRINTED WIRING BOARD – MAIN Board – : Uses unleaded solder.

• Semiconductor Location

Ref. No.	Location
D001	I-11
D002	I-11
D003	I-11
D004	I-11
D006	J-10
D007	J-12
D008	J-12
D011	I-10
D012	I-10
D013	I-10
D014	I-10
D021	I-9
D022	I-9
D023	I-9
D024	I-9
D031	J-13
D035	K-12
D041	D-13
D121	I-6
D122	I-7
D301	C-6
D302	C-6
D341	G-5
D901	E-5
D902	D-3
D910	F-2
D921	F-4
D923	G-4
D943	G-3
D947	G-3
IC006	G-11
IC011	G-10
IC021	G-9
IC101	I-5
IC251	K-9
IC901	C-4
IC902	F-3
Q002	G-12
Q041	D-13
Q042	D-13
Q043	C-13
Q044	C-13
Q045	D-14
Q111	H-5
Q112	H-5
Q141	J-7
Q142	K-7
Q201	L-6
Q203	L-4
Q205	L-4
Q206	K-4
Q207	L-4
Q208	K-4
Q209	K-2
Q210	K-3
Q231	L-5
Q232	L-5
Q251	L-10
Q252	L-10
Q261	L-9
Q271	F-13
Q274	G-13
Q341	G-5
Q342	G-5
Q343	G-4
Q344	G-5
Q345	G-4
Q346	G-5
Q901	F-2
Q902	D-3
Q903	F-5
Q904	E-5
Q933	E-6

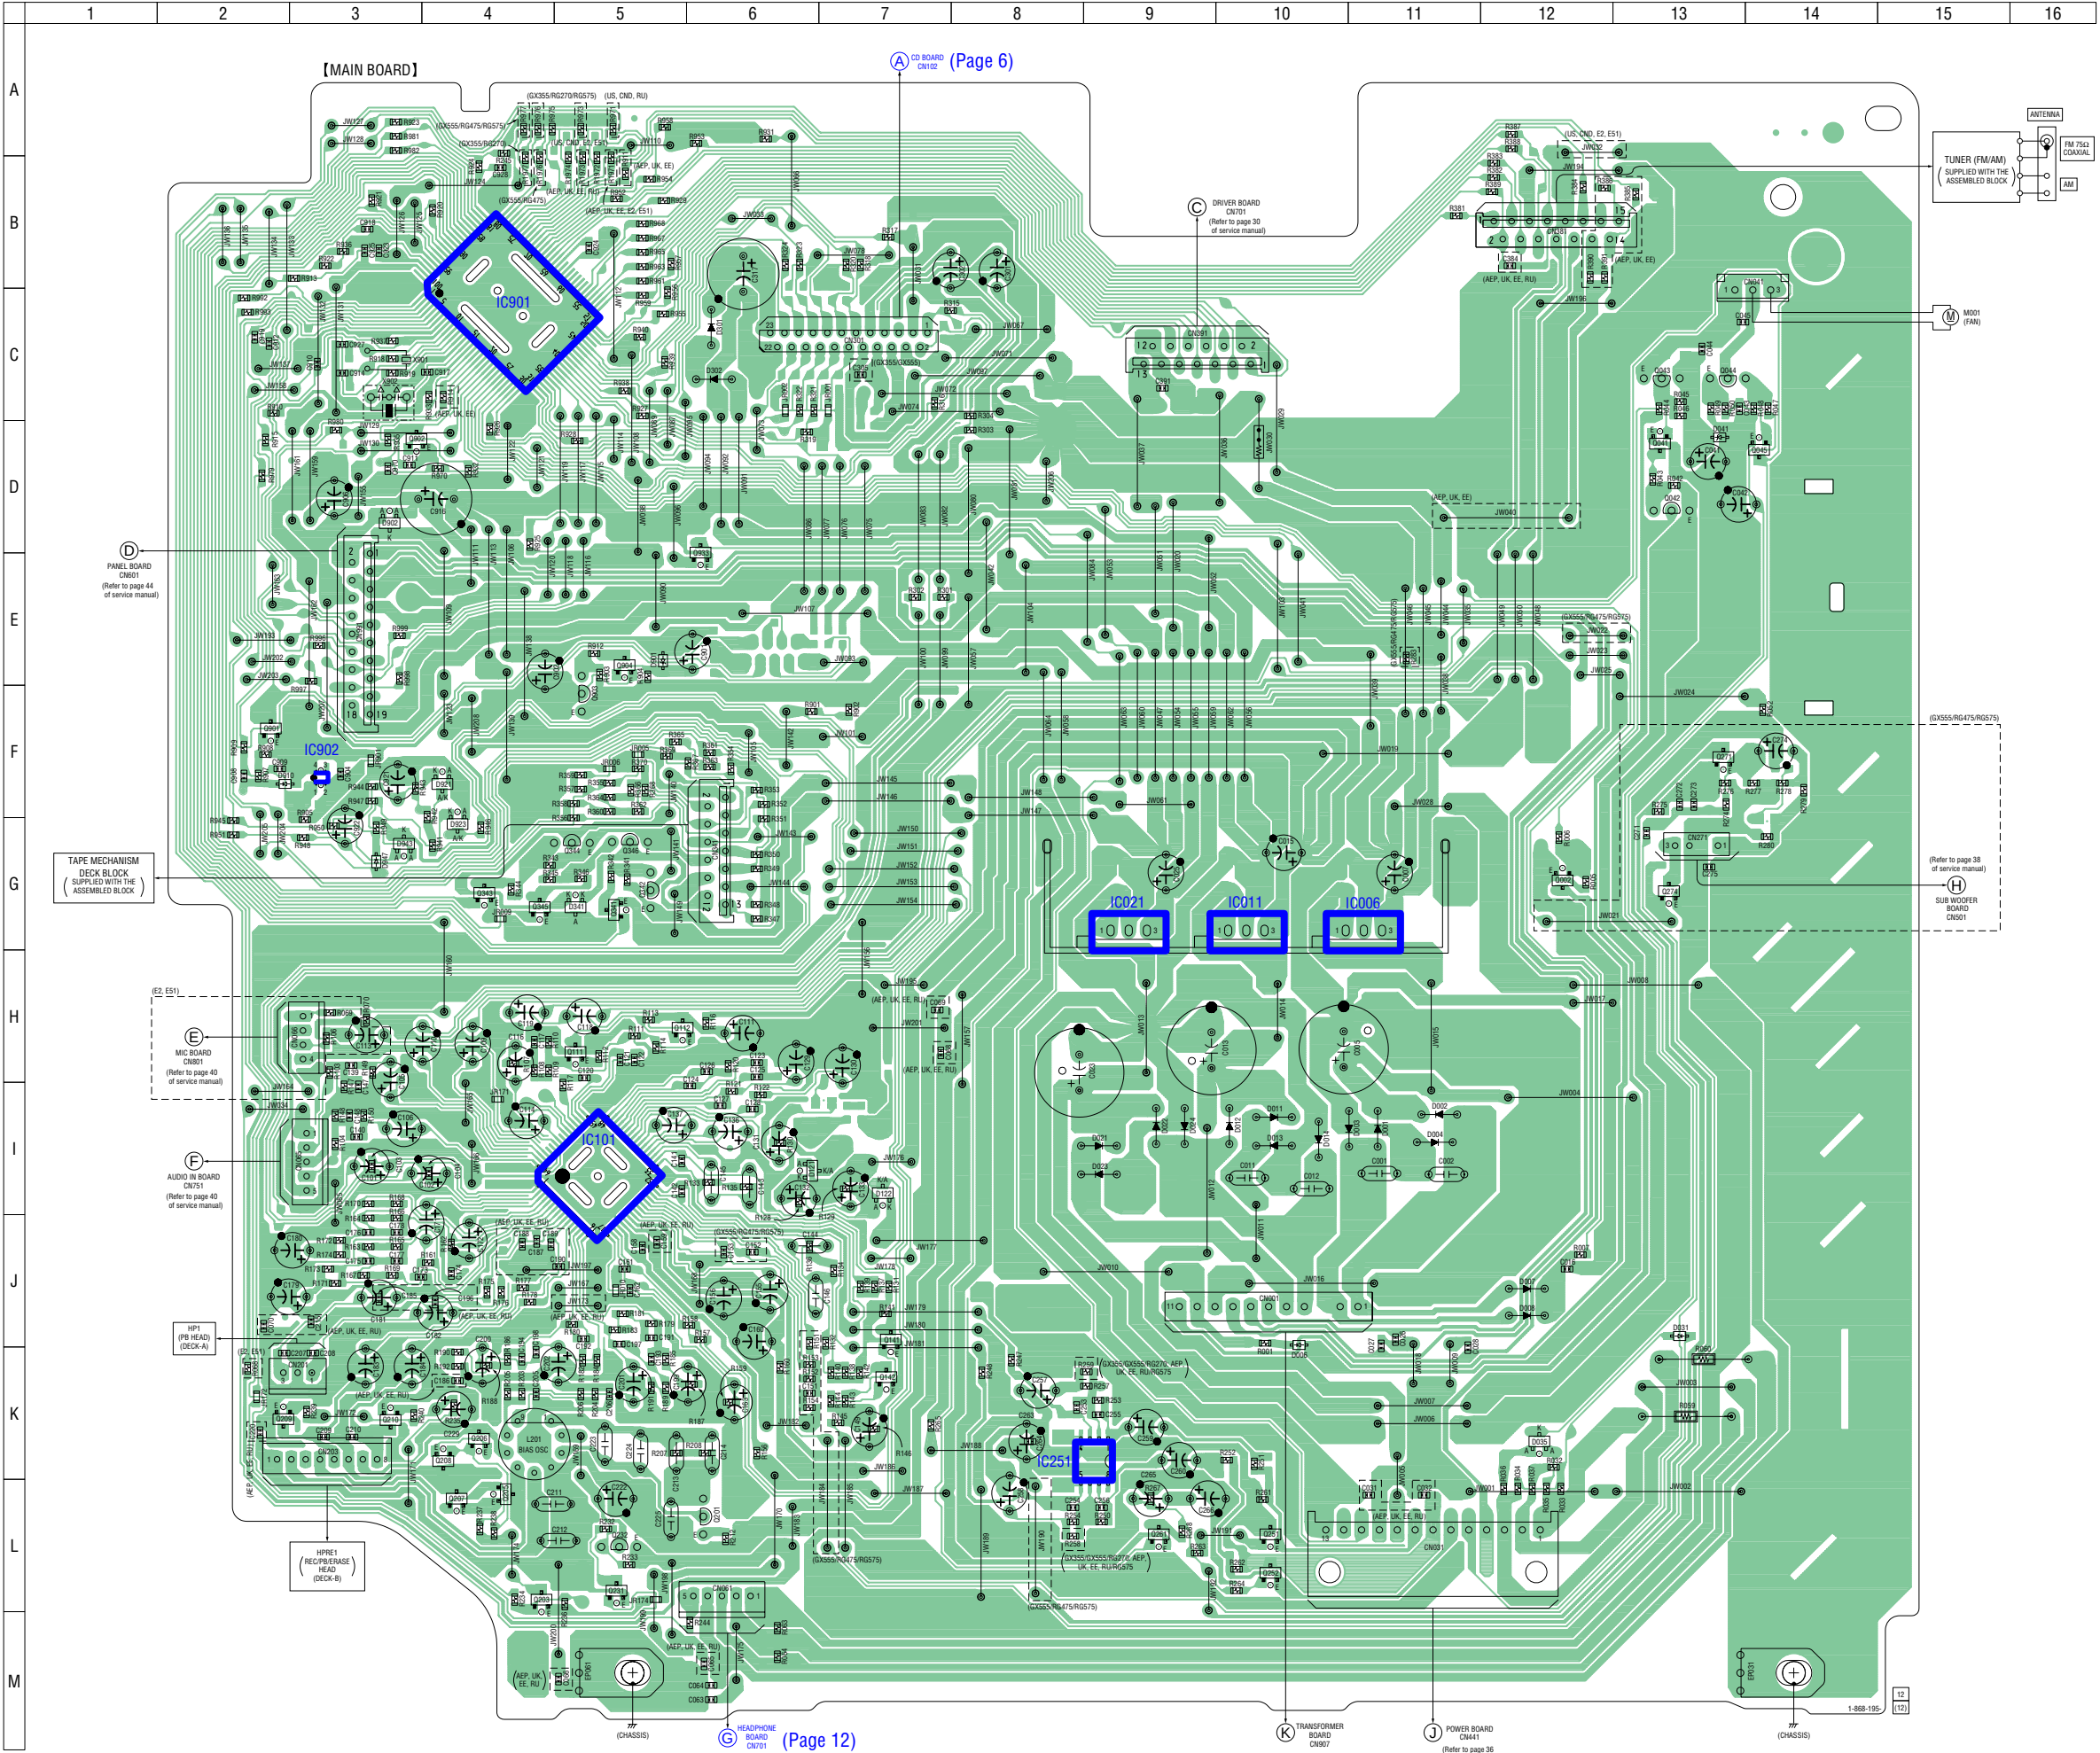


3-4. SCHEMATIC DIAGRAM – MAIN Board (1/3) – • See page 5 for Waveforms. • See page 15 for IC Pin Function Description.

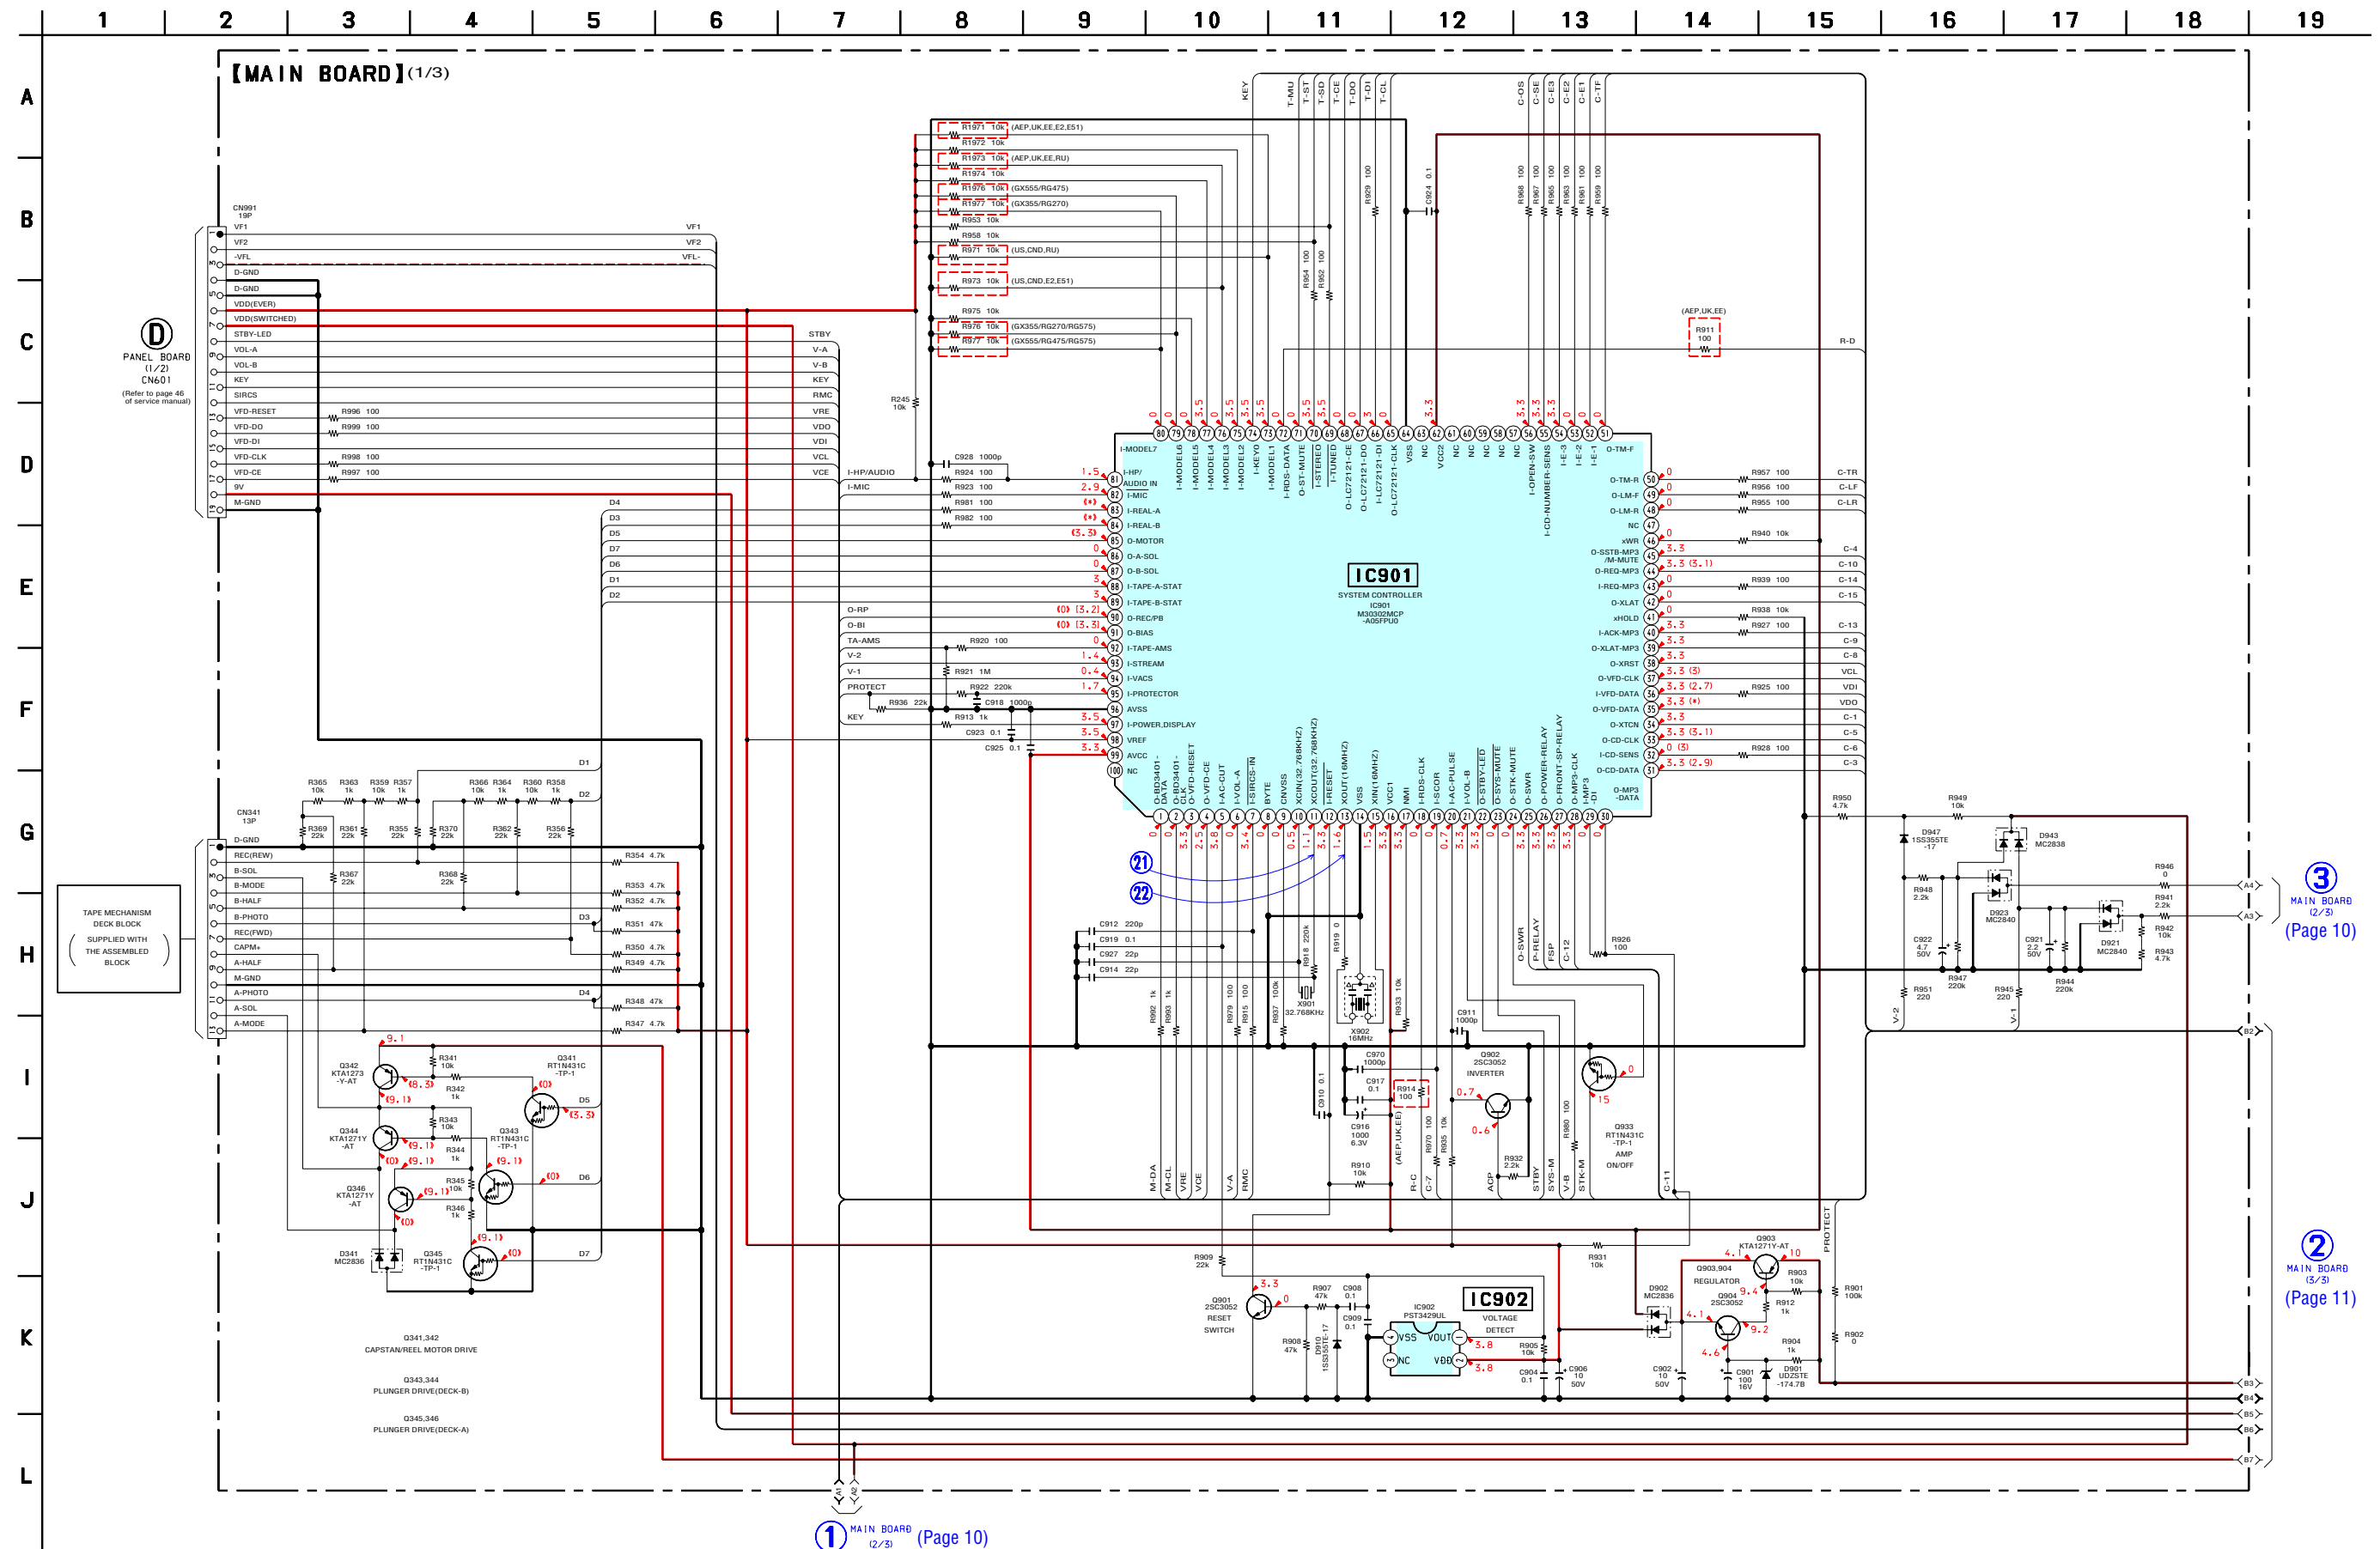

10 10




3-6. SCHEMATIC DIAGRAM – MAIN Board (3/3) –

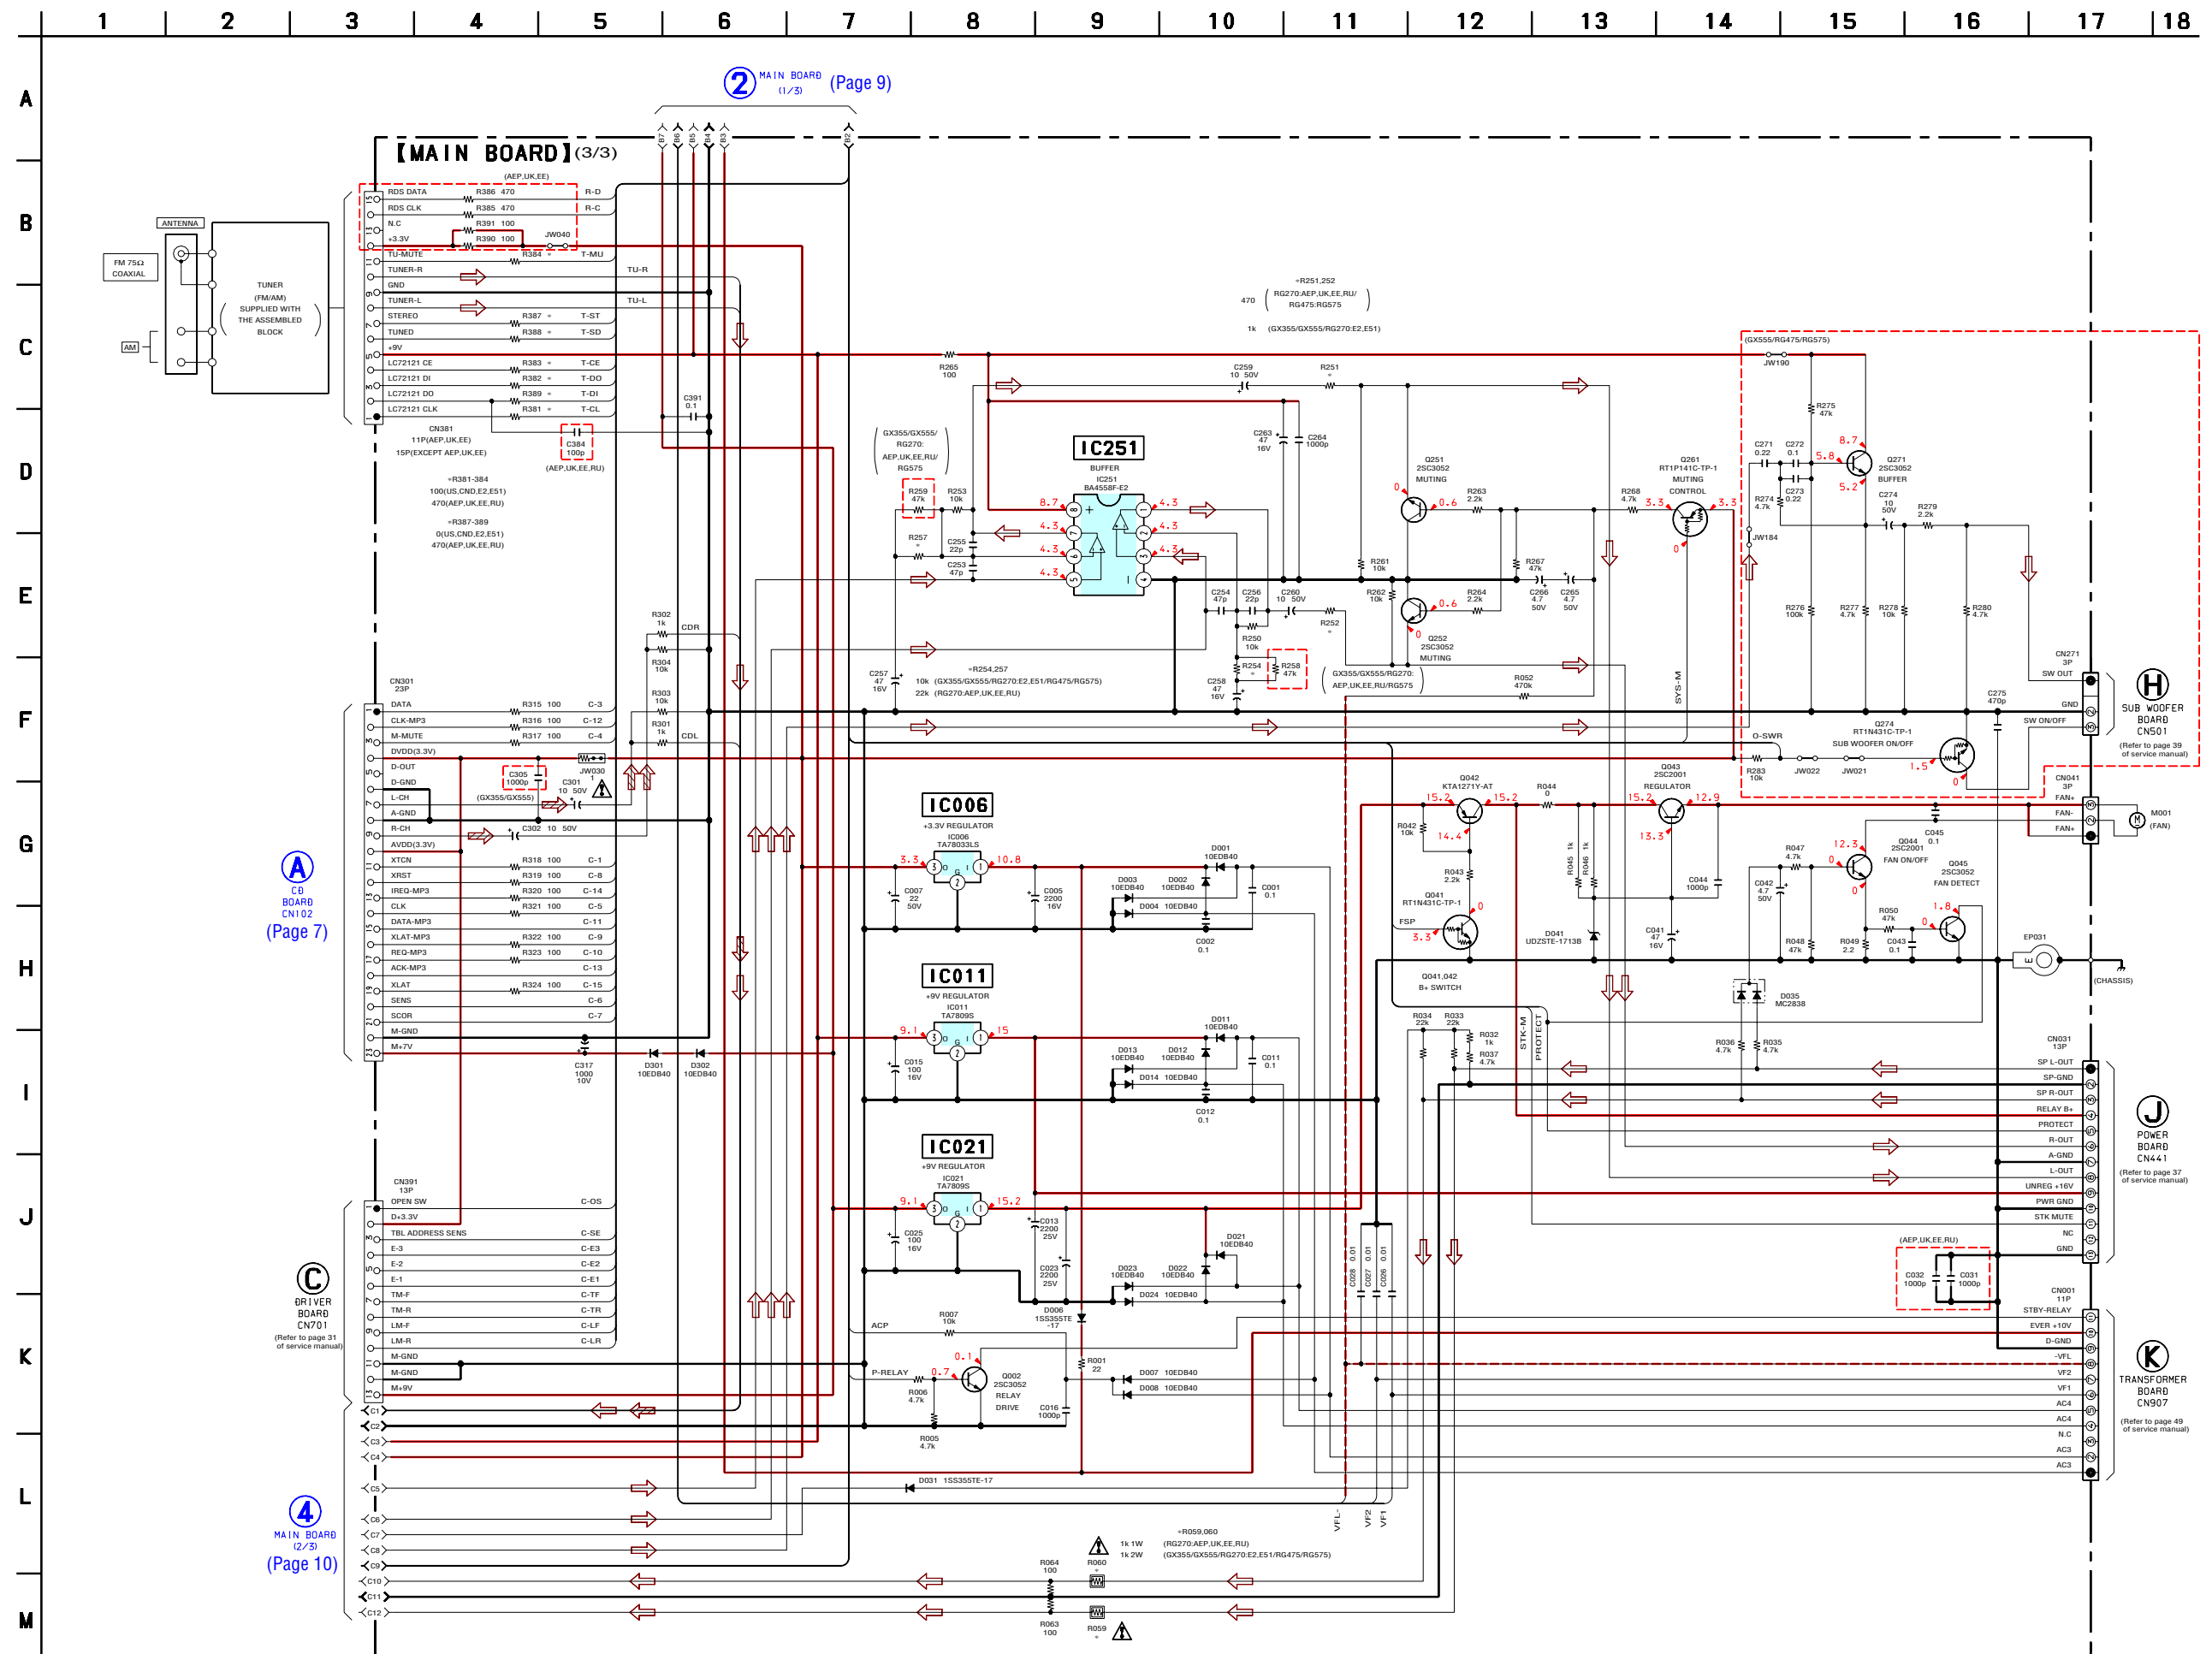


3-7. PRINTED WIRING BOARD – HEADPHONE Board –

 : Uses unleaded solder.

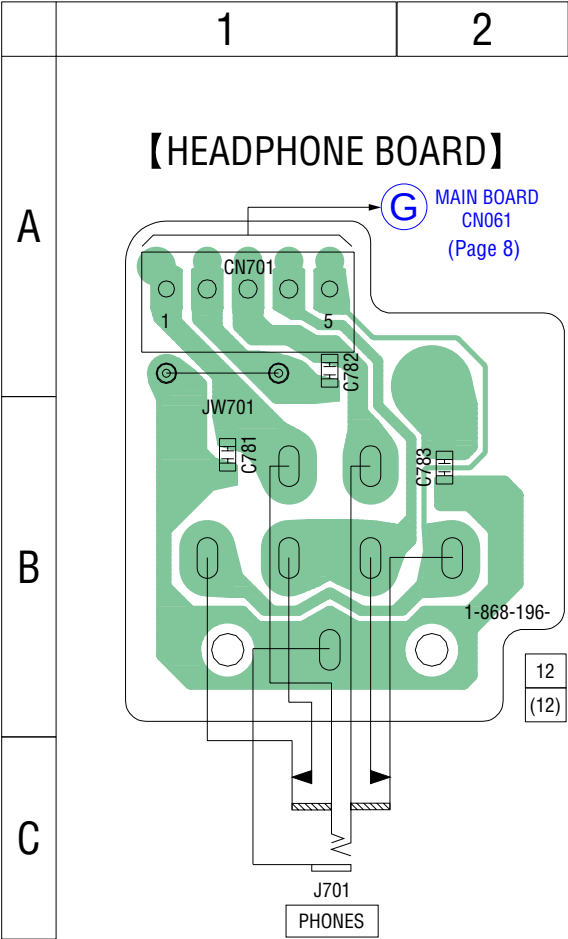


3-8. SCHEMATIC DIAGRAM – HEADPHONE Board –

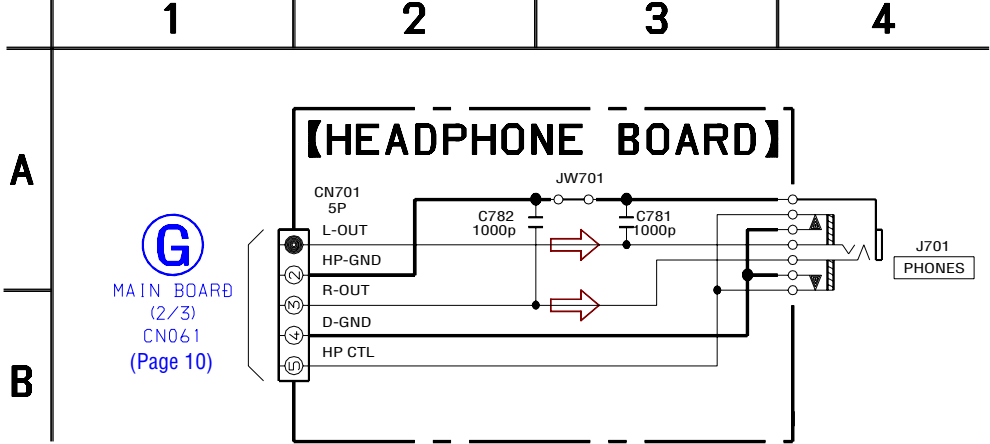


- IC Block Diagram
- CD Board –

IC402 BA5947FM-E2

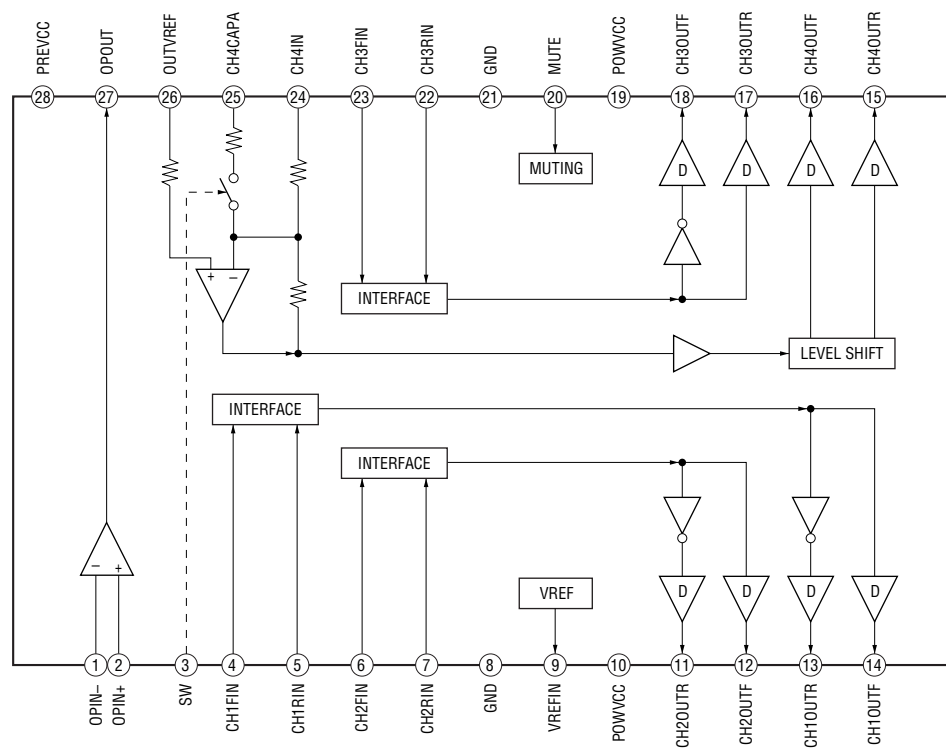

– MAIN Board –

IC101 BD3401KS2

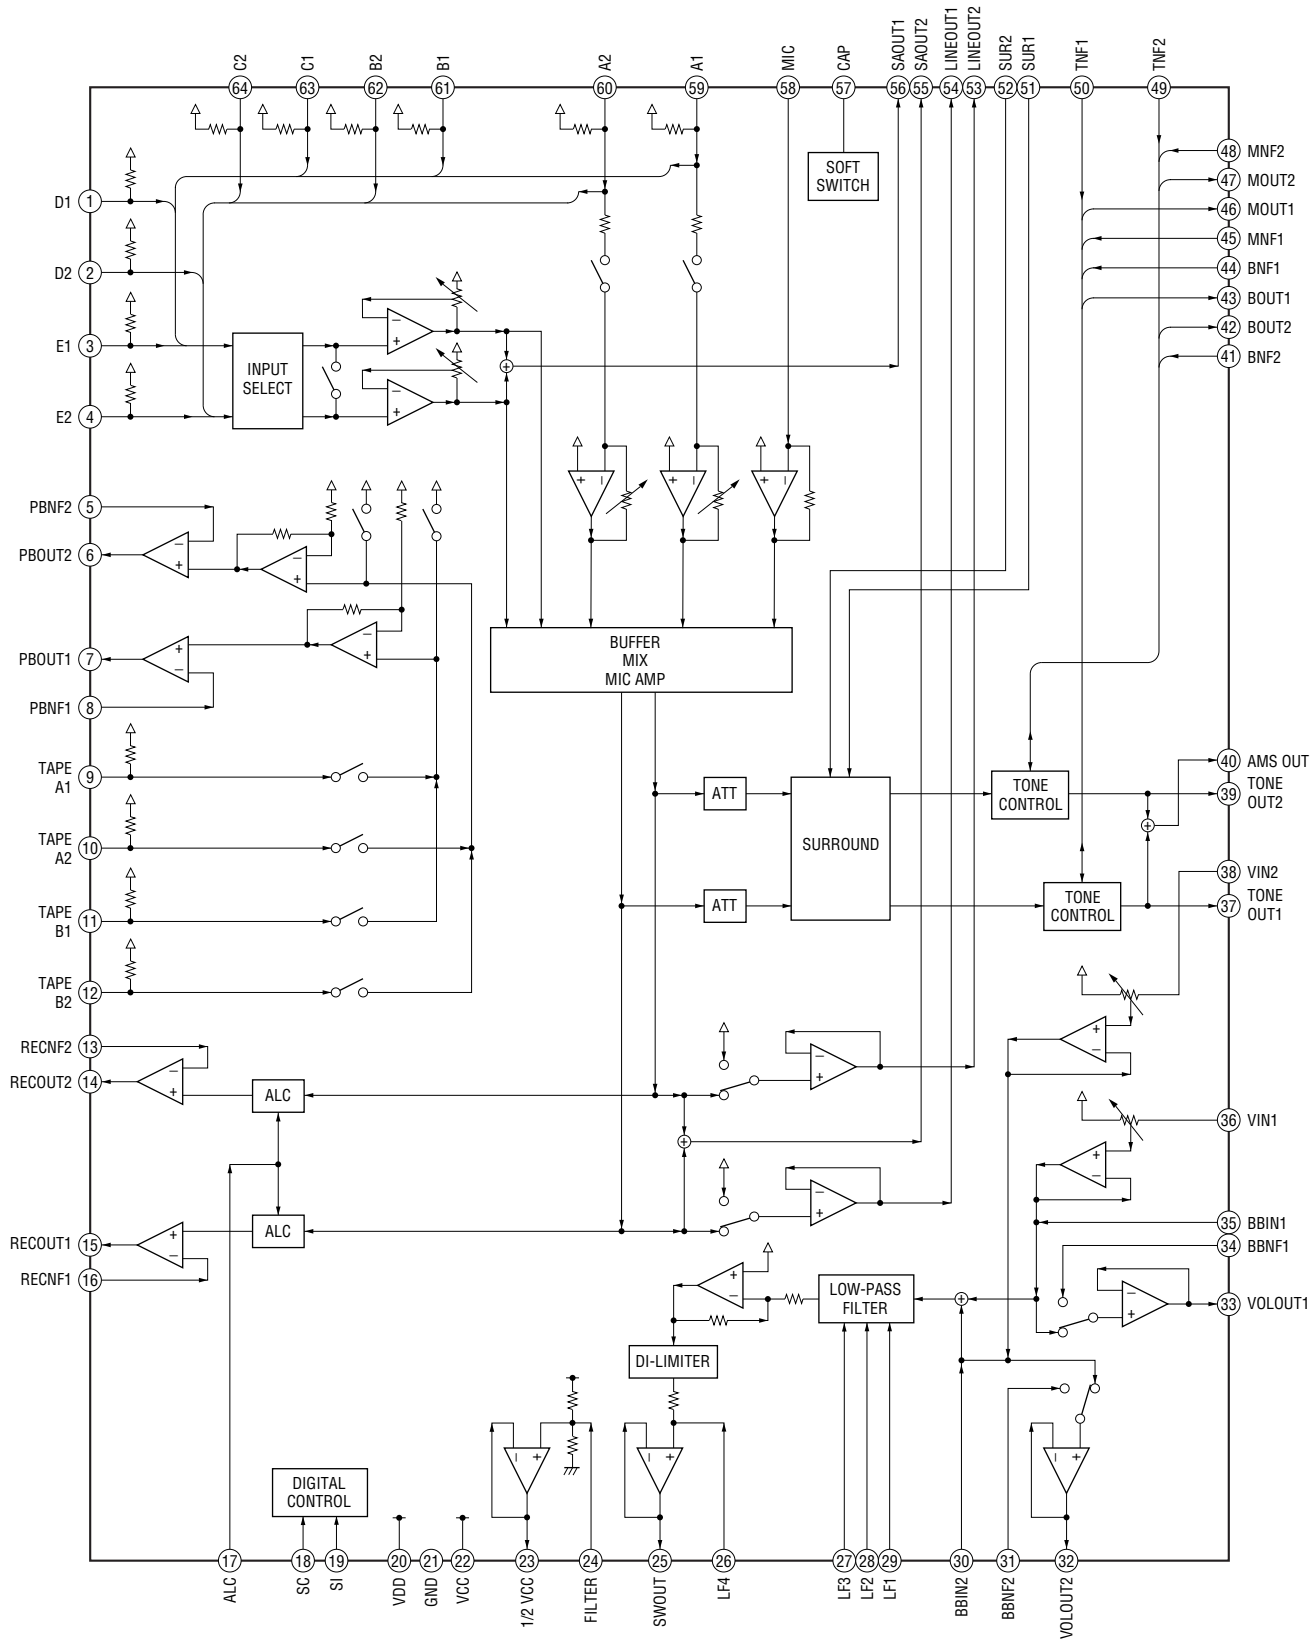

• IC Pin Function Description

CD BOARD IC201 CXD3014A-201R (CD DSP)

Pin No.	Pin Name	I/O	Description
1	LRCK	O	L/R sampling clock signal output terminal
2	LRCKI	I	L/R sampling clock signal input terminal
3	PCMD	O	Serial data output terminal
4	PCMDI	I	Serial data input terminal
5	BCK	O	Bit clock signal output terminal
6	BCKI	I	Bit clock signal input terminal
7	XTACN	I	Oscillation circuit on/off switch control signal input from the system controller "L": oscillation stop, "H": self-oscillation
8	XRST	I	System reset signal input from the system controller "L": reset
9	VSS	-	Ground terminal
10	IREQ-MP3	O	MP3 data request signal output to the system controller
11	CLOK	I	CD serial data transfer clock signal input from the system controller
12	DATA2	I	MP3 serial data input from the system controller
13	XLAT-MP3	I	MP3 serial data latch pulse signal input from the system controller
14	REQ-MP3	I	MP3 data request signal input from the system controller
15	ACK-MP3	O	MP3 acknowledge signal output to the system controller
16	XLAT	I	CD serial data latch pulse signal input from the system controller
17	VDD	-	Power supply terminal (+1.8V)
18	SVSS	-	Ground terminal
19	SVDD	-	Power supply terminal (+1.8V)
20	SENS	O	Internal status (SENSE) signal output to the system controller
21	WFCK	-	Not used
22	XUGF	-	Not used
23	XPCK	-	Not used
24	GFS	-	Not used
25	C2PO	-	Not used
26	SCOR	O	Subcode sync (S0+S1) detection signal output to the system controller
27	VDD	-	Power supply terminal (+1.8V)
28	COUT	-	Not used
29	SVSS	-	Ground terminal
30	SVDD	-	Power supply terminal (+1.8V)
31	MIRR	-	Not used
32	DFCT	-	Not used
33	FOK	-	Not used
34	VSS	-	Ground terminal
35	VDD	-	Power supply terminal (+1.8V)
36	VSS	-	Ground terminal
37	MIRR	-	Not used
38	MDP	O	Spindle motor servo control signal output terminal
39	SSTP	I	Disc inner position detection signal input terminal
40	IOVSS1	-	Ground terminal
41	SFDR	O	Sled servo drive signal (+) output to the coil/motor driver
42	SRDR	O	Sled servo drive signal (-) output to the coil/motor driver
43	TFDR	O	Tracking servo drive signal (+) output to the coil/motor driver
44	TRDR	O	Tracking servo drive signal (-) output to the coil/motor driver

HCD-GX355/GX555/RG270/RG475/RG575

Pin No.	Pin Name	I/O	Description
45	FFDR	O	Focus servo drive signal (+) output to the coil/motor driver
46	FRDR	O	Focus servo drive signal (-) output to the coil/motor driver
47	IOVDD1	-	Power supply terminal (+3.3V)
48	AVDD0	-	Power supply terminal (+3.3V)
49	AVSS0	-	Ground terminal
50	E	I	E signal input from the optical pick-up block
51	F	I	F signal input from the optical pick-up block
52	TEI	I	Tracking error signal input terminal
53	TEO	O	Tracking error signal output terminal
54	FEI	I	Focus error signal input terminal
55	FEO	O	Focus error signal output terminal
56	VC	O	Middle point voltage output terminal
57	A	I	A signal input from the optical pick-up block
58	B	I	B signal input from the optical pick-up block
59	C	I	C signal input from the optical pick-up block
60	D	I	D signal input from the optical pick-up block
61	AVDD4	-	Power supply terminal (+3.3V)
62	RFDCO	O	Not used
63	PDSENS	I	Not used
64	AC_SUM	O	RFAC summing amplifier signal output terminal
65	EQ_IN	I	RF equalizer circuit input terminal
66	LD	O	Laser diode on/off control signal output to the automatic power control circuit "L": laser off, "H": laser on
67	PD	I	Light amount monitor input from the optical pick-up block laser diode
68	RFC	I	Equalizer cut off frequency adjustment terminal
69	AVSS4	-	Ground terminal
70	RFACO	O	EFM signal output terminal
71	RFACI	I	EFM signal input terminal
72	AVDD3	-	Power supply terminal (+3.3V)
73	BIAS	I	Asymmetry circuit constant current input terminal
74	ASYI	I	Playback EFM asymmetry comparator voltage input terminal
75	ASYO	O	Playback EFM full-swing output terminal
76	VPCO	O	Charge pump output terminal for broad-band EFM PLL
77	VCTL	I	VCO2 control voltage input terminal for broad-band EFM PLL
78	AVSS3	-	Ground terminal
79	CLTV	I	VCO1 control voltage input terminal for multiplier
80	FILO	O	Filter output terminal for master PLL
81	FILI	I	Filter input terminal for master PLL
82	PCO	O	Charge pump output terminal for master PLL
83	SVSS	-	Ground terminal
84	SVDD	-	Power supply terminal (+1.8V)
85	SSTB-MP3	I	MP3 standby on/off control signal input terminal "L": standby Not used
86	VDD	-	Power supply terminal (+1.8V)
87	VSS	-	Ground terminal
88	TEST1	I	Test terminal Normally: fixed at "L"
89	DATA	I	CD serial data input from the system controller

Pin No.	Pin Name	I/O	Description
90	CLK2	I	MP3 serial data transfer clock signal input from the system controller
91	SVSS	-	Ground terminal
92	SVDD	-	Power supply terminal (+2.5V)
93	JTAGTCK	-	Not used
94	JTAGTDI	-	Not used
95	JTAGTDO	-	Not used
96	JTAGTMS	-	Not used
97	TRST	-	Not used
98	VSS	-	Ground terminal
99	VDD	-	Power supply terminal (+1.8V)
100	IOVDD2	-	Power supply terminal (+3.3V)
101	DOUT	O	Digital audio signal output terminal Not used
102	TEST	I	Test terminal Normally: fixed at "L"
103	TES1	I	Test terminal Normally: fixed at "L"
104	IOVSS2	-	Ground terminal
105	PLLVD	-	Power supply terminal (+1.8V)
106	PLLVSS	-	Ground terminal
107	XVSS	-	Ground terminal
108	XTAO	O	System clock output terminal (16.9344 MHz)
109	XTAI	I	System clock input terminal (16.9344 MHz)
110	XVDD	-	Power supply terminal (+1.8V)
111	AVDD1	-	Power supply terminal (+3.3V)
112	AOUT1	O	L-ch analog audio signal output terminal
113	VREFL	O	L-ch reference voltage output terminal
114	AVSS1	-	Ground terminal
115	AVSS2	-	Ground terminal
116	VREFR	O	R-ch reference voltage output terminal
117	AOUT2	O	R-ch analog audio signal output terminal
118	AVDD1	-	Power supply terminal (+3.3V)
119	IOVDD0	-	Power supply terminal (+3.3V)
120	IOVSS0	-	Ground terminal

HCD-GX355/GX555/RG270/RG475/RG575

MAIN BOARD M30302MCP-A05FPU0 (SYSTEM CONTROLLER)

Pin No.	Pin Name	I/O	Description
1	O-BD3401-DATA	O	Serial data output to the electrical volume
2	O-BD3401-CLK	O	Serial data transfer clock signal output to the electrical volume
3	O-VFD-RESET	O	System reset signal output to the FL/LED driver
4	O-VFD-CE	O	Chip enable signal output to the FL/LED driver
5	I-AC-CUT	I	AC power detection signal input terminal
6	I-VOL-A	I	Jog dial pulse input terminal
7	I-SIRCS-IN	I	SIRCS signal input terminal
8	BYTE	I	Mode setting terminal Normally not used
9	CNVSS	I	Mode setting terminal Normally not used
10	XCIN (32.768KHZ)	I	Sub system clock input terminal (32.768 kHz)
11	XCOUT (32.768KHZ)	O	Sub system clock output terminal (32.768 kHz)
12	I-RESET	I	System reset signal input from the reset signal generator "L": reset For several hundreds msec. after the power supply rises, "L" is input, then it changes to "H"
13	XOUT (16MHZ)	O	Main system clock output terminal (16 MHz)
14	VSS	-	Ground terminal
15	XIN (16MHZ)	I	Main system clock input terminal (16 MHz)
16	VCC1	-	Power supply terminal (+3.3V)
17	NMI	I	Non-maskable interrupt signal input terminal
18	I-RDS-CLK	I	RDS data transfer clock signal input terminal (AEP, UK and East European models)
19	I-SCOR	I	Subcode sync (S0+S1) detection signal input from the CD DSP
20	I-AC-PULSE	I	AC main power detection signal input terminal
21	I-VOL-B	I	Jog dial pulse input terminal
22	O-STBY-LED	O	LED drive signal output terminal
23	O-SYS-MUTE	O	Muting on/off control signal output terminal
24	O-STK-MUTE	O	Standby signal output to the power amplifier (for front speaker output)
25	O-SWR	O	Relay drive signal output for surround output (GX555/RG475/RG575)
26	O-POWER-RELAY	O	Relay drive signal output for main power
27	O-FRONT-SP-RELAY	O	Power on/off control signal output for the fan motor and amplifier section
28	O-MP3-CLK	O	MP3 serial data transfer clock signal output to the CD DSP
29	I-MP3-DI	I	MP3 serial data input terminal
30	O-MP3-DATA	O	MP3 serial data output to the CD DSP
31	O-CD-DATA	O	CD serial data output to the CD DSP
32	I-CD-SENS	I	Internal status (SENSE) signal input from the CD DSP
33	O-CD-CLK	O	CD serial data transfer clock signal output to the CD DSP
34	O-XTCN	O	Oscillator control signal output to the CD DSP
35	O-VFD-DATA	O	Serial data output to the FL/LED driver
36	I-VFD-DATA	I	Serial data input from the FL/LED driver
37	O-VFD-CLK	O	Serial data transfer clock signal output to the FL/LED driver
38	O-XRST	O	System reset signal output to the CD DSP "L": reset
39	O-XLAT-MP3	O	MP3 serial data latch pulse signal output to the CD DSP
40	I-ACK-MP3	I	MP3 acknowledge signal input from the CD DSP
41	xHOLD	I/O	Not used

Pin No.	Pin Name	I/O	Description
42	O-XLAT	O	CD serial data latch pulse signal output to the CD DSP
43	I-REQ-MP3	I	MP3 data request signal input from the CD DSP
44	O-REQ-MP3	O	MP3 data request signal output to the CD DSP
45	O-SSTB-MP3 /M-MUTE	O	Muting on/off control signal output to the motor/coil driver "L": muting on
46	xWR	I/O	Not used
47	NC	I/O	Not used
48, 49	O-LM-R, O-LM-F	O	Loading motor control signal output terminal
50, 51	O-TM-R, O-TM-F	O	Table motor control signal output terminal
52 to 54	I-E-1 to I-E-3	I	Disc tray address sensor (rotary encoder) input terminal
55	I-CD NUMBER SENS	I	Table address sensor input terminal
56	I-OPEN-SW	I	Disc tray open/close detection switch input terminal
57 to 61	NC	I/O	Not used
62	VCC2	-	Power supply terminal (+3.3V)
63	NC	I/O	Not used
64	VSS	-	Ground terminal
65	O-LC72121-CLK	O	Serial data transfer clock signal output to the tuner (FM/AM)
66	I-LC72121-DI	I	Serial data input from the tuner (FM/AM)
67	O-LC72121-DO	O	Serial data output to the tuner (FM/AM)
68	O-LC72121-CE	O	Chip enable signal output to the tuner (FM/AM)
69	$\overline{\text{I-TUNED}}$	I	Tuning detection signal input from the tuner (FM/AM)
70	$\overline{\text{I-STEREO}}$	I	FM stereo detection signal input from the tuner (FM/AM)
71	O-ST-MUTE	O	Muting on/off control signal output to the tuner (FM/AM)
72	I-RDS-DATA	I	RDS data input from the terminal (AEP, UK and East European models)
73	I-MODEL1	I	Setting terminal for the destination and model type
74	I-KEY0	I	Front panel key input terminal (A/D input)
75 to 80	I-MODEL2 to I-MODEL7	I	Setting terminal for the destination and model type
81	I-HP/AUDIO IN	I	Headphone plug and audio in plug insert detection signal input
82	I-MIC	I	MIC plug insert detection signal input terminal (120 V AC area in E, Chilean and Peruvian models)
83	I-REAL-A	I	Deck-A tape reel rotating detection signal input terminal
84	I-REAL-B	I	Deck-B tape reel rotating detection signal input terminal
85	O-MOTOR	O	Capstan/reel motor drive signal output terminal
86	O-A-SOL	O	Deck-A plunger drive signal output terminal
87	O-B-SOL	O	Deck-B plunger drive signal output terminal
88	I-TAPE-A-STAT	I	Deck-A cassette detection signal, deck-A mode detection signal and recording (reverse direction) detection signal input terminal (A/D input)
89	I-TAPE-B-STAT	I	Deck-B cassette detection signal, deck-B mode detection signal and recording (forward direction) detection signal input terminal (A/D input)
90	O-REC/PB	O	REC/PB switching control signal output terminal
91	O-BIAS	O	REC bias on/off control signal output terminal
92	I-TAPE-AMS	I	Auto music sensor detection signal input from the electrical volume "L": music is present, "H": music is not present
93	I-STREAM	I	Audio signal input for stream LED (A/D input)
94	I-VACS	I	VACS signal input terminal (A/D input)

HCD-GX355/GX555/RG270/RG475/RG575

Pin No.	Pin Name	I/O	Description
95	I-PROTECTOR	I	Protector operating detection signal input terminal
96	AVSS	-	Ground terminal
97	I-POWER, DISPLAY	I	Front panel key input terminal (A/D input)
98	VREF	I	Reference voltage input terminal
99	AVCC	-	Power supply terminal (+3.3V)
100	NC	O	Not used

4. EXPLODED VIEWS

NOTE:

- -XX and -X mean standardized parts, so they may have some difference from the original one.
- Color Indication of Appearance Parts
Example:
KNOB, BALANCE (WHITE) . . . (RED)

↑
Parts Color

↑
Cabinet's Color
- Abbreviation
CND : Canadian model
E2 : 120V AC Area in E model
E51 : Chilean and Peruvian models
EE : East European model
RU : Russian model

- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Accessories are given in the last of the electrical parts list.
- Changed sections only are described in this supplement-1.
Refer to original service manual for other information.


The components identified by mark  or dotted line with mark are critical for safety.

Replace only with part number specified.

Les composants identifiés par une
marque  sont critiques pour la
sécurité.


Ne les remplacer que par une pièce portant le numéro spécifié.

4-1. FRONT PANEL SECTION

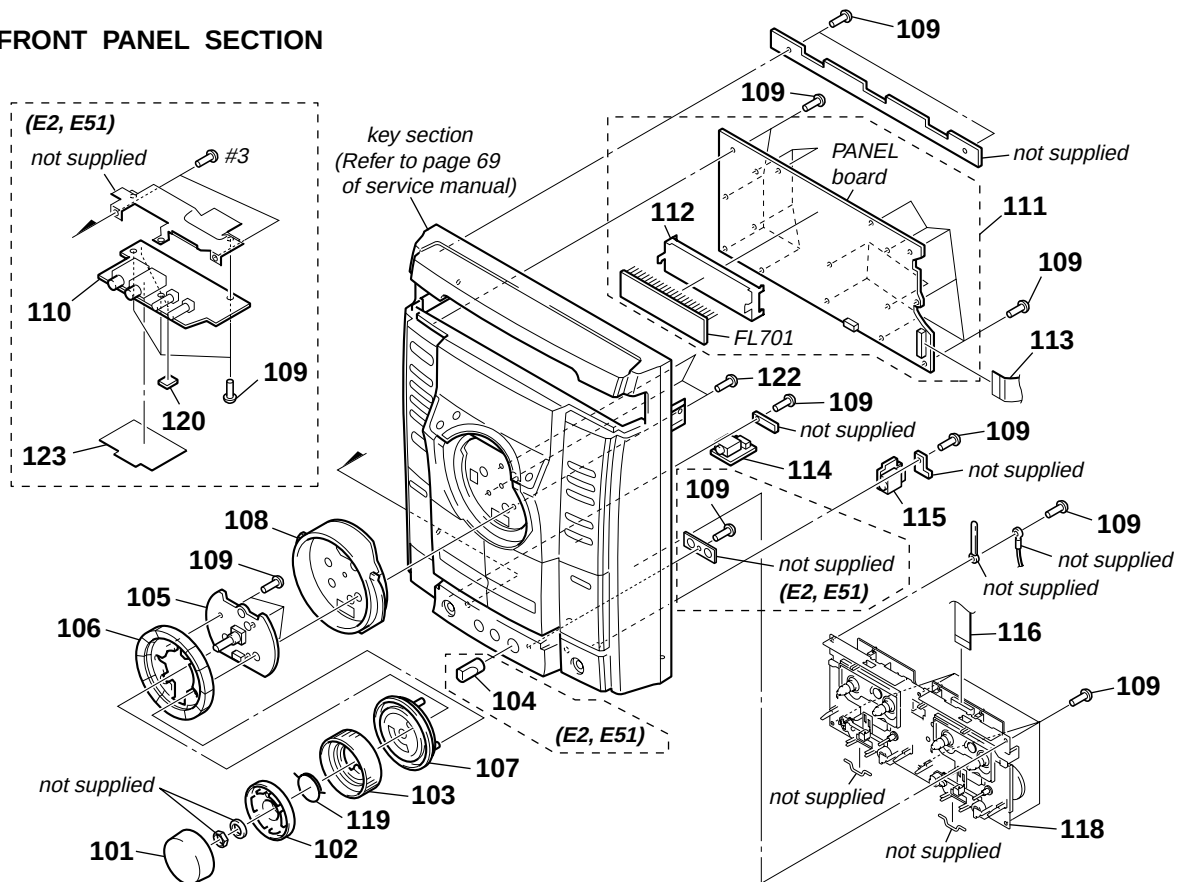


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
101	4-252-214-01	KNOB, VOLUME		111	A-1116-669-A	PANEL BOARD, COMPLETE (RG575)	
102	2-348-884-01	RING (JOG)		112	2-348-856-01	FL GUIDE	
103	2-348-875-11	KNOB (JOG)		113	1-829-003-11	WIRE (FLAT TYPE) (19 CORE)	
104	2-638-220-01	KNOB (MIC) (E2, E51)		114	A-1094-028-A	AUDIO IN BOARD, COMPLETE	
105	A-1093-874-A	VOL BOARD, COMPLETE				(GX355/RG270/GX555/RG475)	
		(GX355/RG270/GX555/RG475)		114	A-1094-031-A	AUDIO IN BOARD, COMPLETE (RG575)	
105	A-1093-878-A	VOL BOARD, COMPLETE (RG575)		115	A-1138-327-A	HEADPHONE BOARD, COMPLETE	
106	2-348-870-02	KEY (PLAY) (ALBUM -, ALBUM +, ◀▶, ▶◀, ▶◀ - EQ + ▶▶ - TUNING +, EQ BAND, ▶, ■, ■)				(GX355/GX555/RG270/RG475)	
107	2-348-874-01	COVER (CENTER)		115	A-1138-328-A	HEADPHONE BOARD, COMPLETE (RG575)	
108	X-2067-233-1	WINDOW (CENTER) ASSY		116	1-828-973-11	WIRE (FLAT TYPE) (13 CORE)	
		(GX555/RG475/RG575)		118	1-796-485-51	DECK, MECHANICAL (CWM43FF13)	
108	X-2067-234-1	WINDOW (CENTER) ASSY (GX355/RG270)		119	4-252-223-01	SPRING, KNOB	
109	4-951-620-01	SCREW (2.6X8), +BVTP		120	4-233-372-02	FOOT (FELT) (E2, E51)	
110	A-1094-194-A	MIC BOARD, COMPLETE (RG270: E2, E51)		122	3-254-142-01	SCREW (B3), (+) BV TAPPING	
110	A-1094-199-A	MIC BOARD, COMPLETE (RG575)		123	2-632-080-01	SHEET (MIC), SHIELD (E2, E51)	
111	A-1093-848-A	PANEL BOARD, COMPLETE (GX555/RG475)		FL701	1-518-976-31	INDICATOR TUBE, FLUORESCENT	
111	A-1093-850-A	PANEL BOARD, COMPLETE (GX355/RG270)		#3	7-685-134-19	SCREW +P 2.6X8 TYPE2 NON-SLIT	

4-2. CHASSIS SECTION

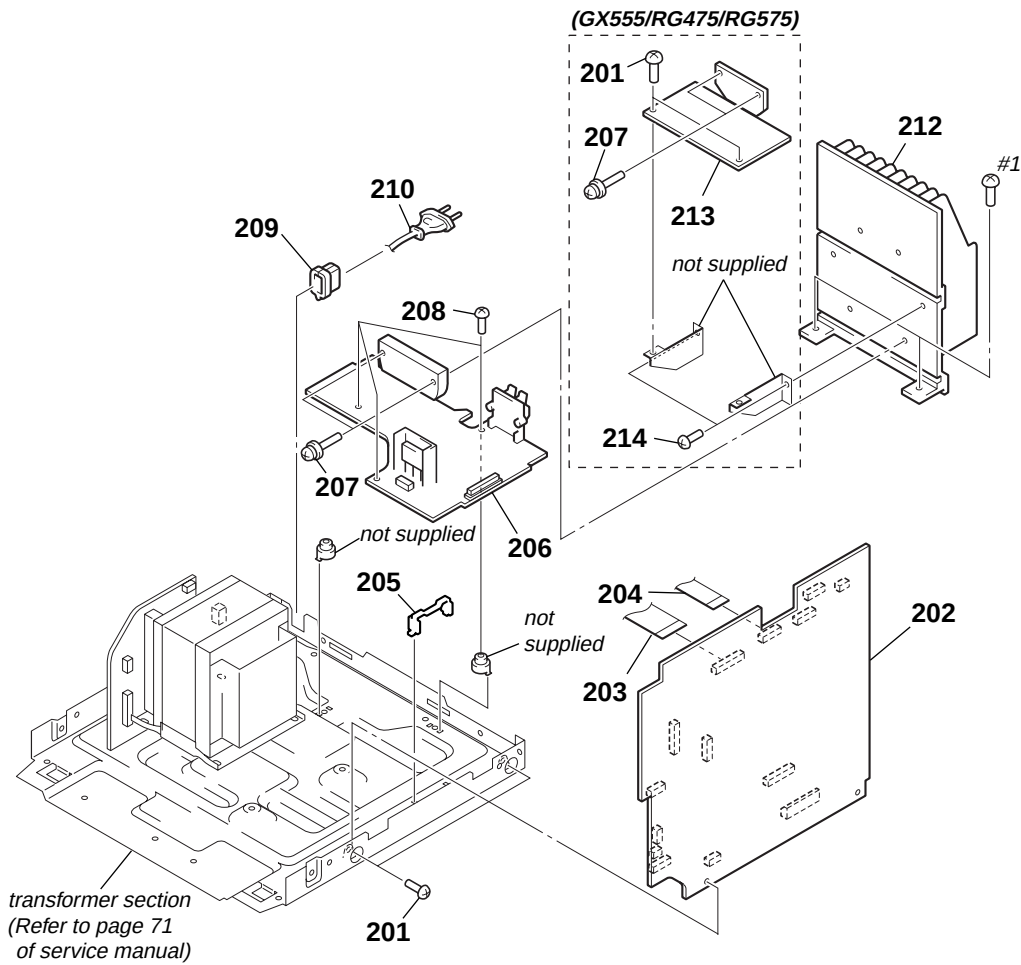


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
201	3-254-142-01	SCREW (B3), (+) BV TAPPING		206	A-1094-138-A	POWER BOARD, COMPLETE (RG270: E2, E51)	
202	A-1138-291-A	MAIN BOARD, COMPLETE (GX555)		206	A-1094-148-A	POWER BOARD, COMPLETE (RG575)	
202	A-1138-292-A	MAIN BOARD, COMPLETE (RG475: AEP, UK, EE)		207	3-905-609-41	SCREW (TRANSISTOR)	
202	A-1138-293-A	MAIN BOARD, COMPLETE (RG475: RU)		208	3-254-145-01	SCREW (B3), (+) BV TAPPING	
202	A-1138-294-A	MAIN BOARD, COMPLETE (GX355)		* 209	3-703-571-12	BUSHING (S) (4516), CORD (E2)	
202	A-1138-295-A	MAIN BOARD, COMPLETE (RG270: AEP, UK, EE)		209	3-703-244-00	BUSHING (2104), CORD (EXCEPT E2)	
202	A-1138-296-A	MAIN BOARD, COMPLETE (RG270: RU)		△ 210	1-827-226-31	CORD, POWER (E2)	
202	A-1138-297-A	MAIN BOARD, COMPLETE (RG270: E2, E51)		△ 210	1-830-188-11	CORD, POWER (AEP, EE, RU, E51)	
202	A-1138-305-A	MAIN BOARD, COMPLETE (RG575)		△ 210	1-830-190-11	CORD, POWER (US, CND)	
203	1-775-217-11	WIRE (FLAT TYPE) (23 CORE)		212	2-549-972-01	HEAT SINK (H) (EXCEPT E2, E51)	
204	1-828-970-11	WIRE (FLAT TYPE) (13 CORE)		213	A-1094-189-A	SUB WOOFER BOARD, COMPLETE (GX555)	
205	4-988-533-01	HOLDER, PWB		213	A-1094-190-A	SUB WOOFER BOARD, COMPLETE (RG475)	
206	A-1094-132-A	POWER BOARD, COMPLETE (GX555)		213	A-1094-192-A	SUB WOOFER BOARD, COMPLETE (RG575)	
206	A-1094-133-A	POWER BOARD, COMPLETE (RG475)		214	3-254-143-01	SCREW (B3), (+) BV TAPPING	
206	A-1094-136-A	POWER BOARD, COMPLETE (GX355)		#1	7-685-881-09	SCREW +BVTT 4X8 (S)	
206	A-1094-137-A	POWER BOARD, COMPLETE (RG270: AEP, UK, EE, RU)					

4-3. CD MECHANISM DECK SECTION-1 (CDM74KF-K6BD83S)

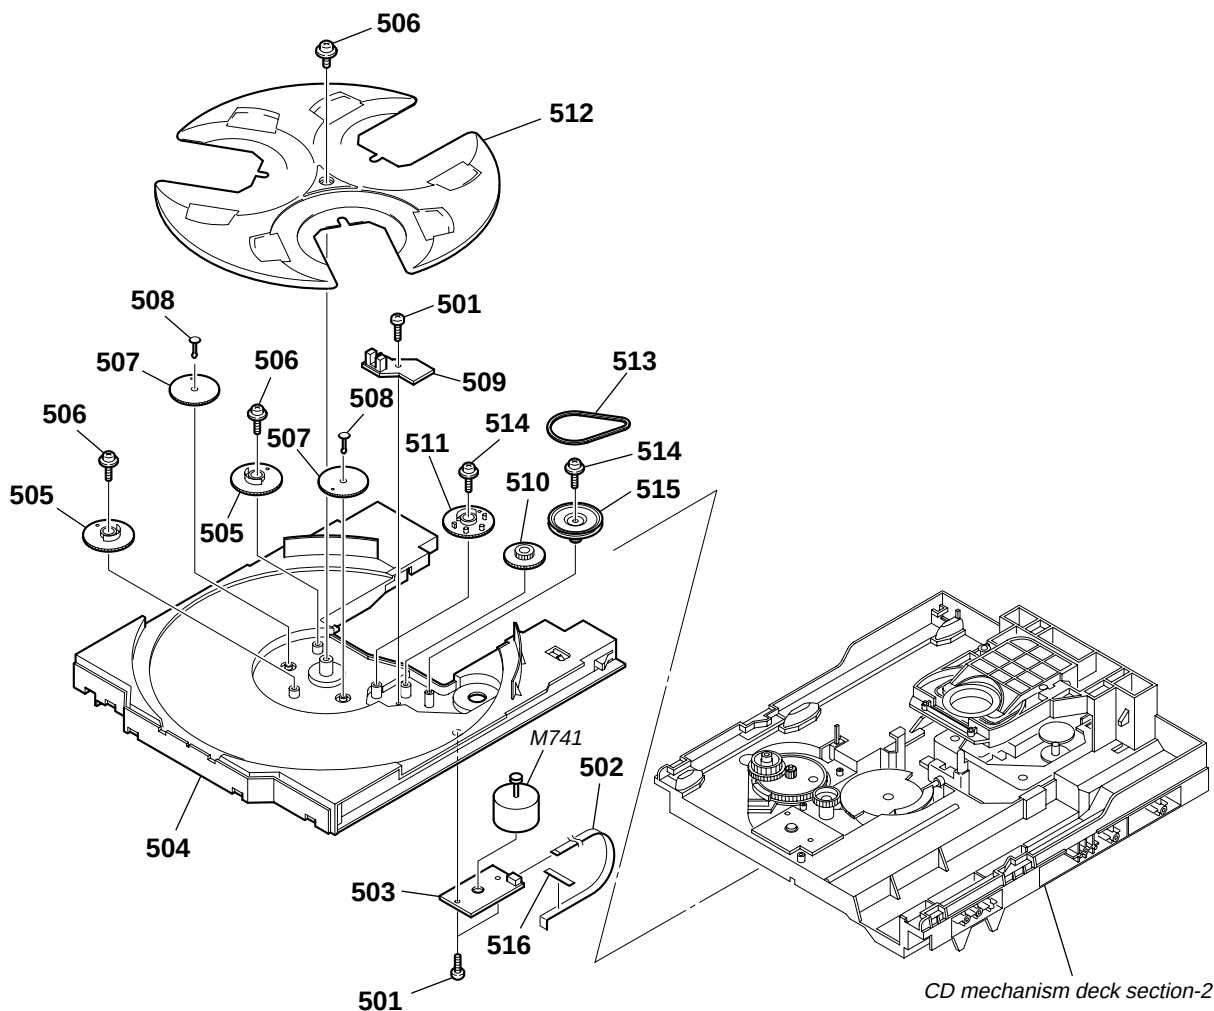

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
501	4-218-253-62	SCREW (M2.6), +BTTP		510	4-243-820-01	GEAR (TABLE)	
502	1-776-182-11	WIRE (FLAT TYPE) (5 CORE)		511	4-243-819-01	GEAR (GENEVA)	
503	1-687-134-12	MOTOR (TB) BOARD		512	4-243-816-11	TRAY	
504	4-243-815-11	TABLE (LOADING)		513	4-243-823-11	BELT (TABLE)	
505	4-245-571-02	GEAR (STOPPER)		514	4-985-672-01	SCREW (+PTPWH M2.6), FLOATING	
506	4-218-252-61	SCREW (+PTPWH M2.6), FLOATING		515	4-243-821-01	PULLEY (TABLE)	
507	4-245-570-01	GEAR (JOINT)		516	3-231-598-01	SHEET (BA)	
508	4-245-572-01	BUSHING (GEAR)		M741	A-1108-965-A	MOTOR ASSY, TABLE	
509	1-687-132-12	SENSOR BOARD					

4-4. CD MECHANISM DECK SECTION-2 (CDM74KF-K6BD83S)

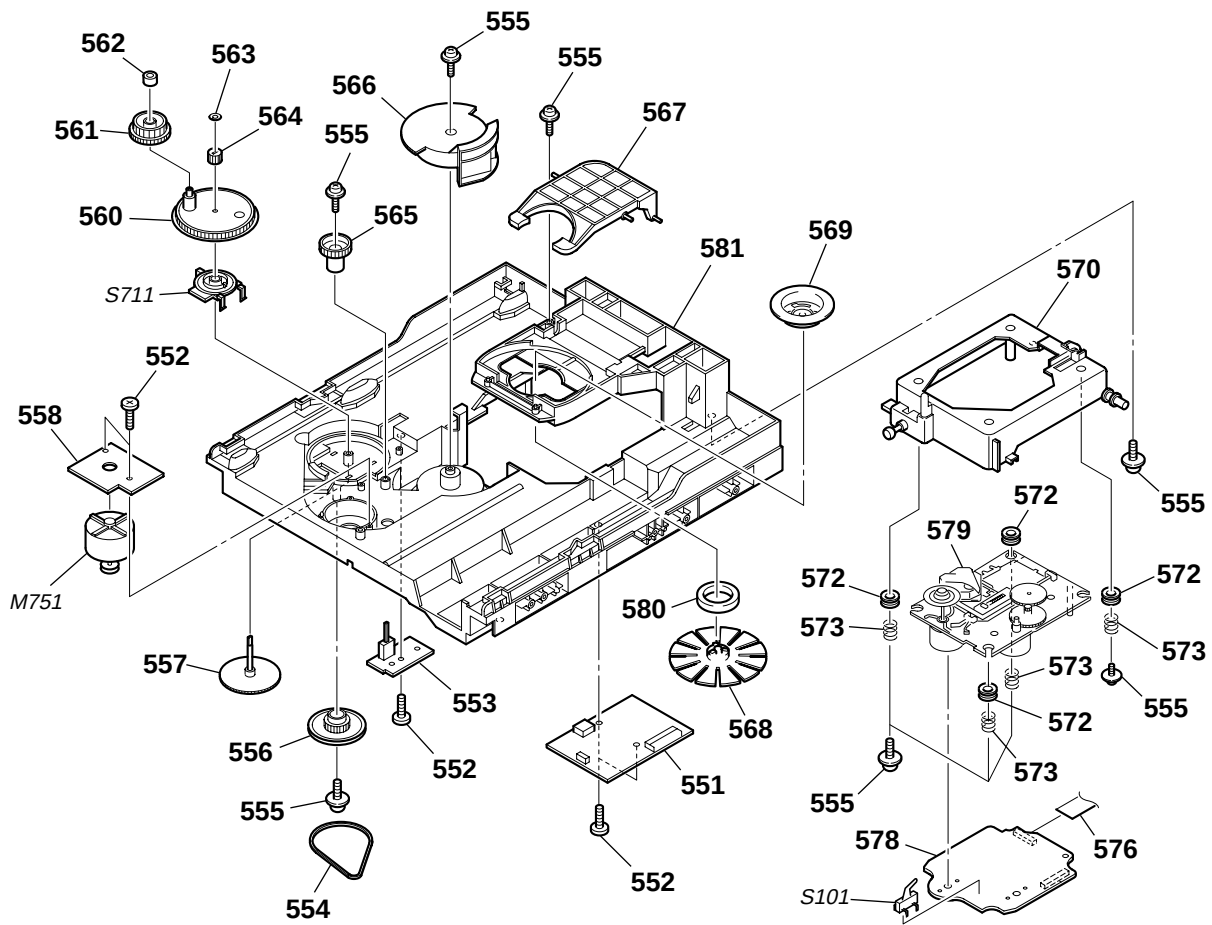

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
551	A-1103-756-A	DRIVER BOARD, COMPLETE		567	4-243-822-02	LEVER (LIFTER)	
552	4-218-253-52	SCREW (M2.6), +BTTP		568	X-2102-809-1	PULLEY (KH) ASSY	
553	1-687-669-12	SW BOARD		569	4-231-189-01	PULLEY (B), CHUCKING	
554	4-244-034-11	BELT (LOADING)		570	X-2055-190-1	HOLDER (213) ASSY	
555	4-985-672-01	SCREW (+PTPWH M2.6), FLOATING		572	4-227-549-11	INSULATOR	
556	4-225-844-01	GEAR (LOADING A)		573	4-227-045-31	SPRING (INSULATOR), COIL	
557	4-224-613-11	GEAR (SHAFT)		576	1-827-992-11	WIRE (FLAT TYPE) (16 CORE)	
558	1-687-133-12	MOTOR (LD) BOARD		578	A-1134-279-A	CD BOARD, COMPLETE	
560	4-244-108-01	GEAR, SWING		△ 579	A-4735-357-A	OPTICAL PICK-UP BLOCK (KSM-213D)	
561	4-224-609-01	GEAR (LOADING C)		580	1-471-035-21	MAGNET ASSY	
562	4-224-608-01	COLLAR, SWING		581	4-243-817-22	CHASSIS	
563	3-016-533-11	WASHER (FR), STOPPER		M751	A-1108-966-A	MOTOR ASSY, LOADING	
564	4-224-611-01	GEAR (LOADING B)		S711	1-477-680-12	ENCODER, ROTARY (DISC TRAY ADDRESS DETECT)	
565	4-224-606-01	GEAR (RV)		S101	1-771-853-11	SWITCH, DETECTION (LIMIT)	
566	4-243-818-01	GEAR (U/D)					

5. ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
All resistors are in ohms.
METAL: Metal-film resistor.
METAL OXIDE: Metal oxide-film resistor.
F: nonflammable
- Abbreviation
CND : Canadian model EE : East European model
E2 : 120V AC area in E model RU: Russian model
E51 : Chilean and Peruvian models
- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
In each case, u: μ , for example:
uA... : μ A... uPA... : μ PA...
uPB... : μ PB... uPC... : μ PC...
uPD... : μ PD...
- CAPACITORS
uF: μ F
- COILS
uH: μ H

The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
	A-1134-279-A	CD BOARD, COMPLETE *****		C253	1-164-315-11	CERAMIC CHIP 470PF 5%	50V
		< CAPACITOR >		C254	1-162-968-11	CERAMIC CHIP 0.0047uF 10%	50V
C101	1-162-919-11	CERAMIC CHIP 22PF 5%	50V	C256	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C102	1-162-919-11	CERAMIC CHIP 22PF 5%	50V	C257	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C103	1-162-919-11	CERAMIC CHIP 22PF 5%	50V	C258	1-164-230-11	CERAMIC CHIP 220PF 5%	50V
C104	1-164-230-11	CERAMIC CHIP 220PF 5%	50V	C260	1-117-863-11	CERAMIC CHIP 0.47uF 10%	6.3V
C105	1-162-919-11	CERAMIC CHIP 22PF 5%	50V	C261	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
C107	1-164-230-11	CERAMIC CHIP 220PF 5%	50V	C264	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V
C108	1-164-230-11	CERAMIC CHIP 220PF 5%	50V	C265	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C109	1-164-230-11	CERAMIC CHIP 220PF 5%	50V	C266	1-162-915-11	CERAMIC CHIP 10PF 0.5PF	50V
C110	1-164-230-11	CERAMIC CHIP 220PF 5%	50V	C267	1-162-910-11	CERAMIC CHIP 5PF 0.25PF	50V
C111	1-164-230-11	CERAMIC CHIP 220PF 5%	50V	C268	1-162-915-11	CERAMIC CHIP 10PF 0.5PF	50V
C112	1-162-919-11	CERAMIC CHIP 22PF 5%	50V	C271	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C113	1-162-919-11	CERAMIC CHIP 22PF 5%	50V	C272	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C201	1-128-995-21	ELECT CHIP 100uF 20%	10V	C273	1-164-315-11	CERAMIC CHIP 470PF 5%	50V
C202	1-164-360-11	CERAMIC CHIP 0.1uF	16V	C274	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C203	1-128-995-21	ELECT CHIP 100uF 20%	10V	C275	1-162-910-11	CERAMIC CHIP 5PF 0.25PF	50V
C204	1-164-360-11	CERAMIC CHIP 0.1uF	16V	C276	1-165-908-11	CERAMIC CHIP 1uF 10%	10V
C205	1-164-360-11	CERAMIC CHIP 0.1uF	16V	C277	1-165-908-11	CERAMIC CHIP 1uF 10%	10V
C206	1-164-360-11	CERAMIC CHIP 0.1uF	16V	C291	1-164-315-11	CERAMIC CHIP 470PF 5%	50V
C207	1-128-995-21	ELECT CHIP 100uF 20%	10V	C292	1-164-315-11	CERAMIC CHIP 470PF 5%	50V
C208	1-164-360-11	CERAMIC CHIP 0.1uF	16V	C301	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C210	1-164-360-11	CERAMIC CHIP 0.1uF	16V	C303	1-137-710-11	CERAMIC CHIP 10uF 20%	6.3V
C213	1-164-360-11	CERAMIC CHIP 0.1uF	16V	C304	1-165-908-11	CERAMIC CHIP 1uF 10%	10V
C214	1-164-360-11	CERAMIC CHIP 0.1uF	16V	C321	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V
C215	1-164-360-11	CERAMIC CHIP 0.1uF	16V	C322	1-165-908-11	CERAMIC CHIP 1uF 10%	10V
C217	1-164-360-11	CERAMIC CHIP 0.1uF	16V	C323	1-128-995-21	ELECT CHIP 100uF 20%	10V
C218	1-164-360-11	CERAMIC CHIP 0.1uF	16V	C401	1-128-394-11	ELECT CHIP 220uF 20%	10V
C219	1-164-360-11	CERAMIC CHIP 0.1uF	16V	C404	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C220	1-164-360-11	CERAMIC CHIP 0.1uF	16V	C405	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C221	1-164-360-11	CERAMIC CHIP 0.1uF	16V	C406	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C222	1-164-360-11	CERAMIC CHIP 0.1uF	16V	C424	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C223	1-164-360-11	CERAMIC CHIP 0.1uF	16V	C451	1-165-176-11	CERAMIC CHIP 0.047uF 10%	16V
C224	1-164-360-11	CERAMIC CHIP 0.1uF	16V			< CONNECTOR >	
C226	1-165-908-11	CERAMIC CHIP 1uF 10%	10V	CN102	1-770-706-11	CONNECTOR, FFC/FPC 23P	
C227	1-165-908-11	CERAMIC CHIP 1uF 10%	10V	CN301	1-770-425-11	CONNECTOR, FFC/FPC 16P	
C230	1-162-927-11	CERAMIC CHIP 100PF 5%	50V			< IC >	
C232	1-164-360-11	CERAMIC CHIP 0.1uF	16V	IC201	8-753-246-30	IC CXD3014A-201R	
C251	1-164-315-11	CERAMIC CHIP 470PF 5%	50V	IC202	6-708-736-01	IC BD18KA5FP-E2	
C252	1-162-968-11	CERAMIC CHIP 0.0047uF 10%	50V				

HCD-GX355/GX555/RG270/RG475/RG575

CD	HEADPHONE	MAIN
----	-----------	------

Ref. No.	Part No.	Description	Remark		
IC402	6-705-808-01	IC BA5947FM-E2			
< TRANSISTOR >					
Q321	6-551-120-01	TRANSISTOR	2SA2119K		
< RESISTOR/FERRITE BEAD >					
R101	1-216-809-11	METAL CHIP	100	5%	1/10W
R102	1-216-809-11	METAL CHIP	100	5%	1/10W
R103	1-216-809-11	METAL CHIP	100	5%	1/10W
R104	1-216-809-11	METAL CHIP	100	5%	1/10W
R105	1-216-809-11	METAL CHIP	100	5%	1/10W
R107	1-216-809-11	METAL CHIP	100	5%	1/10W
R108	1-216-809-11	METAL CHIP	100	5%	1/10W
R109	1-216-809-11	METAL CHIP	100	5%	1/10W
R110	1-216-809-11	METAL CHIP	100	5%	1/10W
R111	1-216-809-11	METAL CHIP	100	5%	1/10W
R112	1-216-809-11	METAL CHIP	100	5%	1/10W
R113	1-216-809-11	METAL CHIP	100	5%	1/10W
R201	1-216-295-00	SHORT CHIP	0		
R202	1-216-295-00	SHORT CHIP	0		
R203	1-500-445-21	FERRITE, EMI (SMD) (2012)			
R207	1-216-295-00	SHORT CHIP	0		
R250	1-216-857-11	METAL CHIP	1M	5%	1/10W
R252	1-216-833-11	METAL CHIP	10K	5%	1/10W
R253	1-216-821-11	METAL CHIP	1K	5%	1/10W
R254	1-216-833-11	METAL CHIP	10K	5%	1/10W
R255	1-216-821-11	METAL CHIP	1K	5%	1/10W
R256	1-216-837-11	METAL CHIP	22K	5%	1/10W
R257	1-216-845-11	METAL CHIP	100K	5%	1/10W
R258	1-216-849-11	METAL CHIP	220K	5%	1/10W
R260	1-216-864-11	SHORT CHIP	0		
R265	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R266	1-216-821-11	METAL CHIP	1K	5%	1/10W
R267	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R268	1-216-833-11	METAL CHIP	10K	5%	1/10W
R270	1-216-821-11	METAL CHIP	1K	5%	1/10W
R271	1-216-857-11	METAL CHIP	1M	5%	1/10W
R275	1-216-809-11	METAL CHIP	100	5%	1/10W
R276	1-216-841-11	METAL CHIP	47K	5%	1/10W
R277	1-216-809-11	METAL CHIP	100	5%	1/10W
R278	1-216-809-11	METAL CHIP	100	5%	1/10W
R280	1-216-864-11	SHORT CHIP	0		
R291	1-216-809-11	METAL CHIP	100	5%	1/10W
R292	1-216-809-11	METAL CHIP	100	5%	1/10W
R321	1-216-789-11	METAL CHIP	2.2	5%	1/10W
R322	1-216-789-11	METAL CHIP	2.2	5%	1/10W
R323	1-216-864-11	SHORT CHIP	0		
R324	1-216-845-11	METAL CHIP	100K	5%	1/10W
R401	1-216-295-00	SHORT CHIP	0		
R421	1-216-864-11	SHORT CHIP	0		
R423	1-216-833-11	METAL CHIP	10K	5%	1/10W
R451	1-216-837-11	METAL CHIP	22K	5%	1/10W
R452	1-216-833-11	METAL CHIP	10K	5%	1/10W
< VIBRATOR >					
X201	1-795-101-21	VIBRATOR, CERAMIC (16.9344MHz)			

Ref. No.	Part No.	Description	Remark		
	A-1138-327-A	HEADPHONE BOARD, COMPLETE (GX355/GX555/RG270/RG475)			
	A-1138-328-A	HEADPHONE BOARD, COMPLETE (RG575) *****			
< CAPACITOR >					
C781	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C782	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
< JACK >					
J701	1-785-448-21	JACK (PHONES)			

	A-1138-291-A	MAIN BOARD, COMPLETE (GX555)			
	A-1138-292-A	MAIN BOARD, COMPLETE(RG475: AEP, UK, EE)			
	A-1138-293-A	MAIN BOARD, COMPLETE (RG475: RU)			
	A-1138-294-A	MAIN BOARD, COMPLETE (GX355)			
	A-1138-295-A	MAIN BOARD, COMPLETE(RG270: AEP, UK, EE)			
	A-1138-296-A	MAIN BOARD, COMPLETE (RG270: RU)			
	A-1138-297-A	MAIN BOARD, COMPLETE (RG270: E2, E51)			
	A-1138-305-A	MAIN BOARD, COMPLETE (RG575) *****			
	7-685-872-09	SCREW +BVT 3X8 (S)			
< CAPACITOR >					
C001	1-136-497-11	FILM	0.1uF	5%	50V
C002	1-136-497-11	FILM	0.1uF	5%	50V
C005	1-126-768-11	ELECT	2200uF	20%	16V
C007	1-126-965-11	ELECT	22uF	20%	50V
C011	1-136-497-11	FILM	0.1uF	5%	50V
C012	1-136-497-11	FILM	0.1uF	5%	50V
C013	1-126-943-11	ELECT	2200uF	20%	25V
C015	1-126-933-11	ELECT	100uF	20%	16V
C016	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C023	1-126-943-11	ELECT	2200uF	20%	25V
C025	1-126-933-11	ELECT	100uF	20%	16V
C026	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C027	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C028	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C031	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V (AEP, UK, EE, RU)
C032	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V (AEP, UK, EE, RU)
C041	1-126-947-11	ELECT	47uF	20%	35V
C042	1-126-963-11	ELECT	4.7uF	20%	50V
C043	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C044	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C045	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C063	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C064	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C065	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V (AEP, UK, EE, RU)
C066	1-162-915-11	CERAMIC CHIP	10PF	0.5PF	50V (AEP, UK, EE, RU)
C068	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V (AEP, UK, EE, RU)
C069	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V (AEP, UK, EE, RU)

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
C070	1-162-915-11	CERAMIC CHIP	10PF	0.5PF	50V (AEP, UK, EE, RU)	C163	1-126-965-11	ELECT	22uF	20%	50V
C101	1-126-960-11	ELECT	1uF	20%	50V	C171	1-126-956-11	ELECT	0.1uF	20%	50V
C102	1-126-960-11	ELECT	1uF	20%	50V	C172	1-126-956-11	ELECT	0.1uF	20%	50V
C103	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	C173	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
C104	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	C174	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
C105	1-126-960-11	ELECT	1uF	20%	50V	C175	1-107-726-91	CERAMIC CHIP	0.01uF	10%	16V
C106	1-126-960-11	ELECT	1uF	20%	50V	C176	1-107-726-91	CERAMIC CHIP	0.01uF	10%	16V
C109	1-126-960-11	ELECT	1uF	20%	50V	C177	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
C110	1-126-960-11	ELECT	1uF	20%	50V	C178	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
C111	1-126-965-11	ELECT	22uF	20%	50V	C179	1-126-964-11	ELECT	10uF	20%	50V
C113	1-126-960-11	ELECT	1uF	20%	50V (E2, E51)	C180	1-126-964-11	ELECT	10uF	20%	50V
C114	1-126-960-11	ELECT	1uF	20%	50V	C181	1-126-960-11	ELECT	1uF	20%	50V
C116	1-126-960-11	ELECT	1uF	20%	50V	C182	1-126-960-11	ELECT	1uF	20%	50V
C117	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	C183	1-126-960-11	ELECT	1uF	20%	50V
C118	1-126-961-11	ELECT	2.2uF	20%	50V	C184	1-126-960-11	ELECT	1uF	20%	50V
C119	1-126-961-11	ELECT	2.2uF	20%	50V	C185	1-162-915-11	CERAMIC CHIP	10PF	0.5PF	50V (AEP, UK, EE, RU)
C120	1-125-891-11	CERAMIC CHIP	0.47uF	10%	10V	C186	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V (AEP, UK, EE, RU)
C121	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V	C187	1-164-362-11	CERAMIC CHIP	470PF	5%	50V (AEP, UK, EE, RU)
C122	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V	C188	1-164-362-11	CERAMIC CHIP	470PF	5%	50V (AEP, UK, EE, RU)
C123	1-107-726-91	CERAMIC CHIP	0.01uF	10%	16V	C189	1-164-362-11	CERAMIC CHIP	470PF	5%	50V (AEP, UK, EE, RU)
C124	1-107-726-91	CERAMIC CHIP	0.01uF	10%	16V	C190	1-164-362-11	CERAMIC CHIP	470PF	5%	50V (AEP, UK, EE, RU)
C125	1-107-726-91	CERAMIC CHIP	0.01uF	10%	16V	C191	1-107-726-91	CERAMIC CHIP	0.01uF	10%	16V
C126	1-107-726-91	CERAMIC CHIP	0.01uF	10%	16V	C192	1-107-726-91	CERAMIC CHIP	0.01uF	10%	16V
C127	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C193	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
C128	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C194	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
C129	1-126-964-11	ELECT	10uF	20%	50V	C196	1-162-915-11	CERAMIC CHIP	10PF	0.5PF	50V (AEP, UK, EE, RU)
C130	1-126-964-11	ELECT	10uF	20%	50V	C197	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
C131	1-126-956-11	ELECT	0.1uF	20%	50V	C198	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
C132	1-126-959-11	ELECT	0.47uF	20%	50V	C199	1-126-964-11	ELECT	10uF	20%	50V
C133	1-126-959-11	ELECT	0.47uF	20%	50V	C200	1-126-964-11	ELECT	10uF	20%	50V
C136	1-126-964-11	ELECT	10uF	20%	50V	C201	1-126-961-11	ELECT	2.2uF	20%	50V
C137	1-126-964-11	ELECT	10uF	20%	50V	C202	1-126-961-11	ELECT	2.2uF	20%	50V
C139	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C205	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C140	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C206	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C141	1-162-949-11	CERAMIC CHIP	47PF	5%	50V	C207	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C142	1-162-949-11	CERAMIC CHIP	47PF	5%	50V	C208	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C143	1-136-497-11	FILM	0.1uF	5%	50V	C209	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C144	1-136-497-11	FILM	0.1uF	5%	50V	C210	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C145	1-136-497-11	FILM	0.1uF	5%	50V	C211	1-136-153-00	FILM	0.01uF	5%	50V
C146	1-136-497-11	FILM	0.1uF	5%	50V	C212	1-130-479-00	MYLAR	0.0047uF	5%	50V
C147	1-164-362-11	CERAMIC CHIP	470PF	5%	50V	C213	1-136-153-00	FILM	0.01uF	5%	50V
C148	1-164-362-11	CERAMIC CHIP	470PF	5%	50V	C214	1-130-479-00	MYLAR	0.0047uF	5%	50V
C149	1-126-947-11	ELECT	47uF	20%	35V	C215	1-162-915-11	CERAMIC CHIP	10PF	0.5PF	50V (AEP, UK, EE, RU)
C151	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V (GX555/RG475/RG575)	C220	1-162-945-11	CERAMIC CHIP	22PF	5%	50V (AEP, UK, EE, RU)
C152	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V (GX555/RG475/RG575)	C222	1-126-947-11	ELECT	47uF	20%	35V
C153	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V (GX555/RG475/RG575)	C223	1-136-153-00	FILM	0.01uF	5%	50V
C155	1-126-947-11	ELECT	47uF	20%	35V	C224	1-130-479-00	MYLAR	0.0047uF	5%	50V
C156	1-126-933-11	ELECT	100uF	20%	16V	C225	1-130-479-00	MYLAR	0.0047uF	5%	50V
C158	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V	C229	1-126-963-11	ELECT	4.7uF	20%	50V
C159	1-162-974-11	CERAMIC CHIP	0.01uF		50V (AEP, UK, EE, RU)	C253	1-162-949-11	CERAMIC CHIP	47PF	5%	50V
C160	1-126-933-11	ELECT	100uF	20%	16V						
C161	1-162-953-11	CERAMIC CHIP	100PF	5%	50V						
C162	1-162-953-11	CERAMIC CHIP	100PF	5%	50V						

HCD-GX355/GX555/RG270/RG475/RG575

MAIN

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
C254	1-162-949-11	CERAMIC CHIP	47PF 5% 50V	CN201	1-564-705-11	PIN, CONNECTOR (SMALL TYPE) 3P	
C255	1-162-945-11	CERAMIC CHIP	22PF 5% 50V	* CN203	1-564-710-11	PIN, CONNECTOR (SMALL TYPE) 8P	
C256	1-162-945-11	CERAMIC CHIP	22PF 5% 50V	CN301	1-779-291-11	CONNECTOR, FFC (LIF (NON-ZIF)) 23P	
C257	1-126-947-11	ELECT	47uF 20% 35V	CN341	1-784-774-11	CONNECTOR, FFC 13P	
C258	1-126-947-11	ELECT	47uF 20% 35V	CN381	1-568-830-11	CONNECTOR, FFC 11P (EXCEPT AEP, UK, EE)	
C259	1-126-964-11	ELECT	10uF 20% 50V	CN381	1-784-776-11	CONNECTOR, FFC 15P (AEP, UK, EE)	
C260	1-126-964-11	ELECT	10uF 20% 50V	CN391	1-784-774-11	CONNECTOR, FFC 13P	
C263	1-126-947-11	ELECT	47uF 20% 35V	CN991	1-784-780-11	CONNECTOR, FFC 19P	
C264	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	< DIODE >			
C265	1-126-963-11	ELECT	4.7uF 20% 50V	D001	6-500-522-21	DIODE 10EDB40-TB3	
C266	1-126-963-11	ELECT	4.7uF 20% 50V	D002	6-500-522-21	DIODE 10EDB40-TB3	
C271	1-115-467-11	CERAMIC CHIP	0.22uF 10% 10V	D003	6-500-522-21	DIODE 10EDB40-TB3	
C272	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	D004	6-500-522-21	DIODE 10EDB40-TB3	
C273	1-115-467-11	CERAMIC CHIP	0.22uF 10% 10V	D006	8-719-988-61	DIODE 1SS355TE-17	
C274	1-126-964-11	ELECT	10uF 20% 50V	D007	6-500-522-21	DIODE 10EDB40-TB3	
C275	1-164-362-11	CERAMIC CHIP	470PF 5% 50V	D008	6-500-522-21	DIODE 10EDB40-TB3	
C301	1-126-964-11	ELECT	10uF 20% 50V	D011	6-500-522-21	DIODE 10EDB40-TB3	
C302	1-126-964-11	ELECT	10uF 20% 50V	D012	6-500-522-21	DIODE 10EDB40-TB3	
C305	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	D013	6-500-522-21	DIODE 10EDB40-TB3	
C317	1-126-926-11	ELECT	1000uF 20% 10V	D014	6-500-522-21	DIODE 10EDB40-TB3	
C384	1-162-953-11	CERAMIC CHIP	100PF 5% 50V	D021	6-500-522-21	DIODE 10EDB40-TB3	
C391	1-164-156-11	CERAMIC CHIP	0.1uF 25V	D022	6-500-522-21	DIODE 10EDB40-TB3	
C901	1-126-933-11	ELECT	100uF 20% 16V	D023	6-500-522-21	DIODE 10EDB40-TB3	
C902	1-126-964-11	ELECT	10uF 20% 50V	D024	6-500-522-21	DIODE 10EDB40-TB3	
C904	1-164-156-11	CERAMIC CHIP	0.1uF 25V	D031	8-719-988-61	DIODE 1SS355TE-17	
C906	1-126-964-11	ELECT	10uF 20% 50V	D035	8-719-000-08	DIODE MC2838	
C908	1-164-156-11	CERAMIC CHIP	0.1uF 25V	D041	8-719-083-63	DIODE UDZSTE-1713B	
C909	1-164-156-11	CERAMIC CHIP	0.1uF 25V	D121	6-500-848-01	DIODE MC2840-T112-1	
C910	1-164-156-11	CERAMIC CHIP	0.1uF 25V	D122	6-500-848-01	DIODE MC2840-T112-1	
C911	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	D301	6-500-522-21	DIODE 10EDB40-TB3	
C912	1-162-960-11	CERAMIC CHIP	220PF 10% 50V	D302	6-500-522-21	DIODE 10EDB40-TB3	
C914	1-162-919-11	CERAMIC CHIP	22PF 5% 50V	D341	8-719-000-07	DIODE MC2836	
C916	1-126-916-11	ELECT	1000uF 20% 6.3V	D901	8-719-083-60	DIODE UDZSTE-174.7B	
C917	1-164-156-11	CERAMIC CHIP	0.1uF 25V	D902	8-719-000-07	DIODE MC2836	
C918	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	D910	8-719-988-61	DIODE 1SS355TE-17	
C919	1-164-156-11	CERAMIC CHIP	0.1uF 25V	D921	6-500-848-01	DIODE MC2840-T112-1	
C921	1-126-961-11	ELECT	2.2uF 20% 50V	D923	6-500-848-01	DIODE MC2840-T112-1	
C922	1-126-963-11	ELECT	4.7uF 20% 50V	D943	8-719-000-08	DIODE MC2838	
C923	1-164-156-11	CERAMIC CHIP	0.1uF 25V	D947	8-719-988-61	DIODE 1SS355TE-17	
C924	1-164-156-11	CERAMIC CHIP	0.1uF 25V	< IC >			
C925	1-164-156-11	CERAMIC CHIP	0.1uF 25V	IC006	6-702-771-01	IC TA78033LS	
C927	1-162-919-11	CERAMIC CHIP	22PF 5% 50V	IC011	8-759-701-59	IC NJM78M09FA	
C928	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	IC021	8-759-701-59	IC NJM78M09FA	
C970	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	IC101	6-705-852-01	IC BD3401KS2	
< CONNECTOR >				IC251	8-759-909-71	IC BA4558F	
CN031	1-778-982-21	CONNECTOR, BOARD TO BOARD 13P		IC901	6-805-825-01	IC M30302MCP-A05FPU0	
CN041	1-564-506-11	PLUG, CONNECTOR 3P		IC902	8-759-713-61	IC PST3429UL	
CN061	1-564-707-11	PIN, CONNECTOR (SMALL TYPE) 5P		< JUMPER RESISTOR >			
CN065	1-564-707-11	PIN, CONNECTOR (SMALL TYPE) 5P		JR001	1-216-864-11	SHORT CHIP 0	
CN066	1-564-706-11	PIN, CONNECTOR (SMALL TYPE) 4P (E2, E51)		JR002	1-216-864-11	SHORT CHIP 0	
				JR005	1-216-864-11	SHORT CHIP 0	
				JR006	1-216-864-11	SHORT CHIP 0	
				JR009	1-216-864-11	SHORT CHIP 0	
				JR010	1-216-864-11	SHORT CHIP 0	
				JR171	1-216-864-11	SHORT CHIP 0	

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
JR172	1-216-864-11	SHORT CHIP	0			R034	1-216-837-11	METAL CHIP	22K	5%	1/10W
JR174	1-216-864-11	SHORT CHIP	0			R035	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
JR901	1-216-864-11	SHORT CHIP	0			R036	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
		< RESISTOR >				R037	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
△JW030	1-202-972-61	FUSIBLE	1	5%	1/4W F	R042	1-216-833-11	METAL CHIP	10K	5%	1/10W
		< COIL >				R043	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
L201	1-424-849-11	COIL, OSCILLATION (BIAS)				R044	1-216-864-11	SHORT CHIP	0		
		< TRANSISTOR >				R045	1-216-821-11	METAL CHIP	1K	5%	1/10W
Q002	8-729-120-28	TRANSISTOR	2SC1623-L5L6			R046	1-216-821-11	METAL CHIP	1K	5%	1/10W
Q041	6-551-276-01	TRANSISTOR	RT1N431C-TP-1			R047	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
Q042	8-729-037-13	TRANSISTOR	KTA1271Y			R048	1-216-841-11	METAL CHIP	47K	5%	1/10W
Q043	8-729-142-46	TRANSISTOR	2SC2001-LK			R049	1-216-789-11	METAL CHIP	2.2	5%	1/10W
Q044	8-729-142-46	TRANSISTOR	2SC2001-LK			R050	1-216-841-11	METAL CHIP	47K	5%	1/10W
Q045	8-729-120-28	TRANSISTOR	2SC1623-L5L6			R052	1-216-853-11	METAL CHIP	470K	5%	1/10W
Q111	8-729-120-28	TRANSISTOR	2SC1623-L5L6			△R059	1-215-869-11	METAL OXIDE	1K	5%	1W F
Q112	8-729-120-28	TRANSISTOR	2SC1623-L5L6								(RG270: AEP, UK, EE, RU)
Q141	8-729-120-28	TRANSISTOR	2SC1623-L5L6			△R059	1-215-892-11	METAL OXIDE	1K	5%	2W F
Q142	8-729-120-28	TRANSISTOR	2SC1623-L5L6								(GX355/GX555/RG270: E2, E51/RG475/RG575)
Q201	8-729-142-46	TRANSISTOR	2SC2001-LK			△R060	1-215-869-11	METAL OXIDE	1K	5%	1W F
Q203	8-729-600-22	TRANSISTOR	2SA1235-F								(RG270: AEP, UK, EE, RU)
Q205	8-729-120-28	TRANSISTOR	2SC1623-L5L6			△R060	1-215-892-11	METAL OXIDE	1K	5%	2W F
Q206	8-729-120-28	TRANSISTOR	2SC1623-L5L6								(GX355/GX555/RG270: E2, E51/RG475/RG575)
Q207	8-729-120-28	TRANSISTOR	2SC1623-L5L6			R063	1-216-809-11	METAL CHIP	100	5%	1/10W
Q208	8-729-120-28	TRANSISTOR	2SC1623-L5L6			R064	1-216-809-11	METAL CHIP	100	5%	1/10W
Q209	8-729-120-28	TRANSISTOR	2SC1623-L5L6			R068	1-216-797-11	METAL CHIP	10	5%	1/10W
Q210	8-729-120-28	TRANSISTOR	2SC1623-L5L6								(E2, E51)
Q231	6-551-276-01	TRANSISTOR	RT1N431C-TP-1			R069	1-216-837-11	METAL CHIP	22K	5%	1/10W
Q232	8-729-037-13	TRANSISTOR	KTA1271Y								(E2, E51)
Q251	8-729-120-28	TRANSISTOR	2SC1623-L5L6			R070	1-216-833-11	METAL CHIP	10K	5%	1/10W
Q252	8-729-120-28	TRANSISTOR	2SC1623-L5L6			R103	1-216-821-11	METAL CHIP	1K	5%	1/10W
Q261	8-729-027-23	TRANSISTOR	DTA114EKA-T146			R104	1-216-821-11	METAL CHIP	1K	5%	1/10W
Q271	8-729-120-28	TRANSISTOR	2SC1623-L5L6			R106	1-216-821-11	METAL CHIP	1K	5%	1/10W
			(GX555/RG475/RG575)								(E2, E51)
Q274	6-551-276-01	TRANSISTOR	RT1N431C-TP-1			R107	1-216-821-11	METAL CHIP	1K	5%	1/10W
			(GX555/RG475/RG575)			R108	1-216-837-11	METAL CHIP	22K	5%	1/10W
Q341	6-551-276-01	TRANSISTOR	RT1N431C-TP-1			R109	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
Q342	8-729-040-76	TRANSISTOR	KTA1273-Y-AT			R110	1-216-841-11	METAL CHIP	47K	5%	1/10W
Q343	6-551-276-01	TRANSISTOR	RT1N431C-TP-1			R111	1-216-845-11	METAL CHIP	100K	5%	1/10W
Q344	8-729-037-13	TRANSISTOR	KTA1271Y			R112	1-216-817-11	METAL CHIP	470	5%	1/10W
Q345	6-551-276-01	TRANSISTOR	RT1N431C-TP-1			R113	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
Q346	8-729-037-13	TRANSISTOR	KTA1271Y			R114	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
Q901	8-729-120-28	TRANSISTOR	2SC1623-L5L6			R116	1-216-809-11	METAL CHIP	100	5%	1/10W
Q902	8-729-120-28	TRANSISTOR	2SC1623-L5L6			R117	1-216-833-11	METAL CHIP	10K	5%	1/10W
Q903	8-729-037-13	TRANSISTOR	KTA1271Y			R119	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
Q904	8-729-120-28	TRANSISTOR	2SC1623-L5L6			R120	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
Q933	6-551-276-01	TRANSISTOR	RT1N431C-TP-1			R121	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
		< RESISTOR >				R122	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R001	1-216-801-11	METAL CHIP	22	5%	1/10W	R128	1-216-833-11	METAL CHIP	10K	5%	1/10W
R005	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R129	1-216-845-11	METAL CHIP	100K	5%	1/10W
R006	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R130	1-216-864-11	SHORT CHIP	0		
R007	1-216-833-11	METAL CHIP	10K	5%	1/10W	R131	1-216-849-11	METAL CHIP	220K	5%	1/10W
R032	1-216-821-11	METAL CHIP	1K	5%	1/10W	R132	1-216-849-11	METAL CHIP	220K	5%	1/10W
R033	1-216-837-11	METAL CHIP	22K	5%	1/10W	R133	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
						R134	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
						R135	1-216-821-11	METAL CHIP	1K	5%	1/10W
						R136	1-216-821-11	METAL CHIP	1K	5%	1/10W
						R137	1-216-841-11	METAL CHIP	47K	5%	1/10W
						R138	1-216-841-11	METAL CHIP	47K	5%	1/10W
						R139	1-216-837-11	METAL CHIP	22K	5%	1/10W

HCD-GX355/GX555/RG270/RG475/RG575

MAIN

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
R140	1-216-837-11	METAL CHIP	22K	5%	1/10W	R205	1-216-833-11	METAL CHIP	10K	5%	1/10W
R141	1-216-849-11	METAL CHIP	220K	5%	1/10W	R206	1-216-833-11	METAL CHIP	10K	5%	1/10W
						R207	1-216-837-11	METAL CHIP	22K	5%	1/10W
R142	1-216-849-11	METAL CHIP	220K	5%	1/10W						
R143	1-216-841-11	METAL CHIP	47K	5%	1/10W	R208	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R144	1-216-841-11	METAL CHIP	47K	5%	1/10W	R212	1-216-797-11	METAL CHIP	10	5%	1/10W
R145	1-216-841-11	METAL CHIP	47K	5%	1/10W	R232	1-216-833-11	METAL CHIP	10K	5%	1/10W
R146	1-216-857-11	METAL CHIP	1M	5%	1/10W	R233	1-216-833-11	METAL CHIP	10K	5%	1/10W
						R234	1-216-833-11	METAL CHIP	10K	5%	1/10W
R147	1-216-845-11	METAL CHIP	100K	5%	1/10W						
R148	1-216-845-11	METAL CHIP	100K	5%	1/10W	R235	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R149	1-216-841-11	METAL CHIP	47K	5%	1/10W	R236	1-216-833-11	METAL CHIP	10K	5%	1/10W
R150	1-216-841-11	METAL CHIP	47K	5%	1/10W	R237	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R151	1-216-833-11	METAL CHIP	10K	5%	1/10W	R238	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
		(GX555/RG475/RG575)				R239	1-216-821-11	METAL CHIP	1K	5%	1/10W
R152	1-216-833-11	METAL CHIP	10K	5%	1/10W						
		(GX555/RG475/RG575)				R240	1-216-821-11	METAL CHIP	1K	5%	1/10W
R153	1-216-837-11	METAL CHIP	22K	5%	1/10W	R244	1-216-837-11	METAL CHIP	22K	5%	1/10W
		(GX555/RG475/RG575)				R245	1-216-833-11	METAL CHIP	10K	5%	1/10W
R154	1-216-833-11	METAL CHIP	10K	5%	1/10W	R247	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
		(GX555/RG475/RG575)				R248	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R156	1-216-809-11	METAL CHIP	100	5%	1/10W						
R157	1-216-809-11	METAL CHIP	100	5%	1/10W	R250	1-216-833-11	METAL CHIP	10K	5%	1/10W
						R251	1-216-817-11	METAL CHIP	470	5%	1/10W
								(RG270: AEP, UK, EE, RU/RG475/RG575)			
R158	1-216-809-11	METAL CHIP	100	5%	1/10W	R251	1-216-821-11	METAL CHIP	1K	5%	1/10W
R159	1-216-857-11	METAL CHIP	1M	5%	1/10W			(GX355/GX555/RG270: E2, E51)			
R160	1-216-797-11	METAL CHIP	10	5%	1/10W	R252	1-216-817-11	METAL CHIP	470	5%	1/10W
R161	1-216-825-11	METAL CHIP	2.2K	5%	1/10W			(RG270: AEP, UK, EE, RU/RG475/RG575)			
R162	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R252	1-216-821-11	METAL CHIP	1K	5%	1/10W
								(GX355/GX555/RG270: E2, E51)			
R163	1-216-833-11	METAL CHIP	10K	5%	1/10W						
R164	1-216-833-11	METAL CHIP	10K	5%	1/10W	R253	1-216-833-11	METAL CHIP	10K	5%	1/10W
R165	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R254	1-216-833-11	METAL CHIP	10K	5%	1/10W
R166	1-216-829-11	METAL CHIP	4.7K	5%	1/10W			(GX355/GX555/RG270: E2, E51/RG475/RG575)			
R167	1-216-849-11	METAL CHIP	220K	5%	1/10W	R254	1-216-837-11	METAL CHIP	22K	5%	1/10W
								(RG270: AEP, UK, EE, RU)			
R168	1-216-849-11	METAL CHIP	220K	5%	1/10W	R257	1-216-833-11	METAL CHIP	10K	5%	1/10W
R169	1-216-845-11	METAL CHIP	100K	5%	1/10W			(GX355/GX555/RG270: E2, E51/RG475/RG575)			
R170	1-216-845-11	METAL CHIP	100K	5%	1/10W	R257	1-216-837-11	METAL CHIP	22K	5%	1/10W
R171	1-216-817-11	METAL CHIP	470	5%	1/10W			(RG270: AEP, UK, EE, RU)			
R172	1-216-817-11	METAL CHIP	470	5%	1/10W						
						R258	1-216-841-11	METAL CHIP	47K	5%	1/10W
R173	1-216-825-11	METAL CHIP	2.2K	5%	1/10W			(GX355/GX555/RG270: AEP, UK, EE, RU/RG575)			
R174	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R259	1-216-841-11	METAL CHIP	47K	5%	1/10W
R175	1-216-821-11	METAL CHIP	1K	5%	1/10W			(GX355/GX555/RG270: AEP, UK, EE, RU/RG575)			
R176	1-216-821-11	METAL CHIP	1K	5%	1/10W	R261	1-216-833-11	METAL CHIP	10K	5%	1/10W
R177	1-216-821-11	METAL CHIP	1K	5%	1/10W	R262	1-216-833-11	METAL CHIP	10K	5%	1/10W
						R263	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R178	1-216-821-11	METAL CHIP	1K	5%	1/10W						
R179	1-216-853-11	METAL CHIP	470K	5%	1/10W	R264	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R180	1-216-853-11	METAL CHIP	470K	5%	1/10W	R265	1-216-809-11	METAL CHIP	100	5%	1/10W
R181	1-216-845-11	METAL CHIP	100K	5%	1/10W	R267	1-216-841-11	METAL CHIP	47K	5%	1/10W
R182	1-216-845-11	METAL CHIP	100K	5%	1/10W	R268	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
						R274	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
								(GX555/RG475/RG575)			
R183	1-216-849-11	METAL CHIP	220K	5%	1/10W						
R184	1-216-849-11	METAL CHIP	220K	5%	1/10W	R275	1-216-841-11	METAL CHIP	47K	5%	1/10W
R185	1-216-841-11	METAL CHIP	47K	5%	1/10W			(GX555/RG475/RG575)			
R186	1-216-841-11	METAL CHIP	47K	5%	1/10W	R276	1-216-845-11	METAL CHIP	100K	5%	1/10W
R187	1-216-845-11	METAL CHIP	100K	5%	1/10W			(GX555/RG475/RG575)			
						R277	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R188	1-216-845-11	METAL CHIP	100K	5%	1/10W			(GX555/RG475/RG575)			
R189	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R278	1-216-833-11	METAL CHIP	10K	5%	1/10W
R190	1-216-825-11	METAL CHIP	2.2K	5%	1/10W			(GX555/RG475/RG575)			
R191	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R279	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R192	1-216-829-11	METAL CHIP	4.7K	5%	1/10W			(GX555/RG475/RG575)			
R203	1-216-841-11	METAL CHIP	47K	5%	1/10W						
R204	1-216-841-11	METAL CHIP	47K	5%	1/10W						

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
R280	1-216-829-11	METAL CHIP	4.7K	5%	1/10W (GX555/RG475/RG575)	R383	1-216-817-11	METAL CHIP	470	5%	1/10W (AEP, UK, EE, RU)
R283	1-216-833-11	METAL CHIP	10K	5%	1/10W (GX555/RG475/RG575)	R384	1-216-809-11	METAL CHIP	100	5%	1/10W (US, CND, E2, E51)
R301	1-216-821-11	METAL CHIP	1K	5%	1/10W	R384	1-216-817-11	METAL CHIP	470	5%	1/10W (AEP, UK, EE, RU)
R302	1-216-821-11	METAL CHIP	1K	5%	1/10W	R385	1-216-817-11	METAL CHIP	470	5%	1/10W (AEP, UK, EE)
R303	1-216-833-11	METAL CHIP	10K	5%	1/10W						
R304	1-216-833-11	METAL CHIP	10K	5%	1/10W	R386	1-216-817-11	METAL CHIP	470	5%	1/10W (AEP, UK, EE)
R315	1-216-809-11	METAL CHIP	100	5%	1/10W	R387	1-216-817-11	METAL CHIP	470	5%	1/10W (AEP, UK, EE, RU)
R316	1-216-809-11	METAL CHIP	100	5%	1/10W	R387	1-216-864-11	SHORT CHIP	0	(US, CND, E2, E51)	
R317	1-216-809-11	METAL CHIP	100	5%	1/10W	R388	1-216-817-11	METAL CHIP	470	5%	1/10W (AEP, UK, EE, RU)
R318	1-216-809-11	METAL CHIP	100	5%	1/10W	R388	1-216-864-11	SHORT CHIP	0	(US, CND, E2, E51)	
R319	1-216-809-11	METAL CHIP	100	5%	1/10W	R389	1-216-817-11	METAL CHIP	470	5%	1/10W (AEP, UK, EE, RU)
R320	1-216-809-11	METAL CHIP	100	5%	1/10W	R389	1-216-864-11	SHORT CHIP	0	(US, CND, E2, E51)	
R321	1-216-809-11	METAL CHIP	100	5%	1/10W	R390	1-216-809-11	METAL CHIP	100	5%	1/10W (AEP, UK, EE)
R322	1-216-809-11	METAL CHIP	100	5%	1/10W	R391	1-216-809-11	METAL CHIP	100	5%	1/10W (AEP, UK, EE)
R323	1-216-809-11	METAL CHIP	100	5%	1/10W	R901	1-216-845-11	METAL CHIP	100K	5%	1/10W
R324	1-216-809-11	METAL CHIP	100	5%	1/10W	R902	1-216-864-11	SHORT CHIP	0		
R341	1-216-833-11	METAL CHIP	10K	5%	1/10W	R903	1-216-833-11	METAL CHIP	10K	5%	1/10W
R342	1-216-821-11	METAL CHIP	1K	5%	1/10W	R904	1-216-821-11	METAL CHIP	1K	5%	1/10W
R343	1-216-833-11	METAL CHIP	10K	5%	1/10W	R905	1-216-833-11	METAL CHIP	10K	5%	1/10W
R344	1-216-821-11	METAL CHIP	1K	5%	1/10W	R907	1-216-841-11	METAL CHIP	47K	5%	1/10W
R345	1-216-833-11	METAL CHIP	10K	5%	1/10W	R908	1-216-841-11	METAL CHIP	47K	5%	1/10W
R346	1-216-821-11	METAL CHIP	1K	5%	1/10W	R909	1-216-837-11	METAL CHIP	22K	5%	1/10W
R347	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R910	1-216-833-11	METAL CHIP	10K	5%	1/10W
R348	1-216-841-11	METAL CHIP	47K	5%	1/10W	R911	1-216-809-11	METAL CHIP	100	5%	1/10W (AEP, UK, EE)
R349	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R912	1-216-821-11	METAL CHIP	1K	5%	1/10W
R350	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R913	1-216-821-11	METAL CHIP	1K	5%	1/10W
R351	1-216-841-11	METAL CHIP	47K	5%	1/10W	R914	1-216-809-11	METAL CHIP	100	5%	1/10W (AEP, UK, EE)
R352	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R915	1-216-809-11	METAL CHIP	100	5%	1/10W
R353	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R918	1-216-849-11	METAL CHIP	220K	5%	1/10W
R354	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R919	1-216-864-11	SHORT CHIP	0		
R355	1-216-837-11	METAL CHIP	22K	5%	1/10W	R920	1-216-809-11	METAL CHIP	100	5%	1/10W
R356	1-216-837-11	METAL CHIP	22K	5%	1/10W	R921	1-216-857-11	METAL CHIP	1M	5%	1/10W
R357	1-216-821-11	METAL CHIP	1K	5%	1/10W	R922	1-216-849-11	METAL CHIP	220K	5%	1/10W
R358	1-216-821-11	METAL CHIP	1K	5%	1/10W	R923	1-216-809-11	METAL CHIP	100	5%	1/10W
R359	1-216-833-11	METAL CHIP	10K	5%	1/10W	R924	1-216-809-11	METAL CHIP	100	5%	1/10W
R360	1-216-833-11	METAL CHIP	10K	5%	1/10W	R925	1-216-809-11	METAL CHIP	100	5%	1/10W
R361	1-216-837-11	METAL CHIP	22K	5%	1/10W	R926	1-216-809-11	METAL CHIP	100	5%	1/10W
R362	1-216-837-11	METAL CHIP	22K	5%	1/10W	R927	1-216-809-11	METAL CHIP	100	5%	1/10W
R363	1-216-821-11	METAL CHIP	1K	5%	1/10W	R928	1-216-809-11	METAL CHIP	100	5%	1/10W
R364	1-216-821-11	METAL CHIP	1K	5%	1/10W	R929	1-216-809-11	METAL CHIP	100	5%	1/10W
R365	1-216-833-11	METAL CHIP	10K	5%	1/10W	R931	1-216-833-11	METAL CHIP	10K	5%	1/10W
R366	1-216-833-11	METAL CHIP	10K	5%	1/10W	R932	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R367	1-216-837-11	METAL CHIP	22K	5%	1/10W	R933	1-216-833-11	METAL CHIP	10K	5%	1/10W
R368	1-216-837-11	METAL CHIP	22K	5%	1/10W	R935	1-216-833-11	METAL CHIP	10K	5%	1/10W
R369	1-216-837-11	METAL CHIP	22K	5%	1/10W	R936	1-216-837-11	METAL CHIP	22K	5%	1/10W
R370	1-216-837-11	METAL CHIP	22K	5%	1/10W	R937	1-216-845-11	METAL CHIP	100K	5%	1/10W
R381	1-216-809-11	METAL CHIP	100	5%	1/10W (US, CND, E2, E51)	R938	1-216-833-11	METAL CHIP	10K	5%	1/10W
R381	1-216-817-11	METAL CHIP	470	5%	1/10W (AEP, UK, EE, RU)	R939	1-216-809-11	METAL CHIP	100	5%	1/10W
R382	1-216-809-11	METAL CHIP	100	5%	1/10W (US, CND, E2, E51)	R940	1-216-833-11	METAL CHIP	10K	5%	1/10W
R382	1-216-817-11	METAL CHIP	470	5%	1/10W (AEP, UK, EE, RU)						
R383	1-216-809-11	METAL CHIP	100	5%	1/10W (US, CND, E2, E51)						

HCD-GX355/GX555/RG270/RG475/RG575

MAIN

Ref. No.	Part No.	Description			Remark
R941	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R942	1-216-833-11	METAL CHIP	10K	5%	1/10W
R943	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R944	1-216-849-11	METAL CHIP	220K	5%	1/10W
R945	1-216-813-11	METAL CHIP	220	5%	1/10W
R946	1-216-864-11	SHORT CHIP	0		
R947	1-216-849-11	METAL CHIP	220K	5%	1/10W
R948	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R949	1-216-833-11	METAL CHIP	10K	5%	1/10W
R950	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R951	1-216-813-11	METAL CHIP	220	5%	1/10W
R952	1-216-809-11	METAL CHIP	100	5%	1/10W
R953	1-216-833-11	METAL CHIP	10K	5%	1/10W
R954	1-216-809-11	METAL CHIP	100	5%	1/10W
R955	1-216-809-11	METAL CHIP	100	5%	1/10W
R956	1-216-809-11	METAL CHIP	100	5%	1/10W
R957	1-216-809-11	METAL CHIP	100	5%	1/10W
R958	1-216-833-11	METAL CHIP	10K	5%	1/10W
R959	1-216-809-11	METAL CHIP	100	5%	1/10W
R961	1-216-809-11	METAL CHIP	100	5%	1/10W
R963	1-216-809-11	METAL CHIP	100	5%	1/10W
R965	1-216-809-11	METAL CHIP	100	5%	1/10W
R967	1-216-809-11	METAL CHIP	100	5%	1/10W
R968	1-216-809-11	METAL CHIP	100	5%	1/10W
R970	1-216-809-11	METAL CHIP	100	5%	1/10W
R971	1-216-833-11	METAL CHIP	10K	5%	1/10W
				(US, CND, RU)	
R973	1-216-833-11	METAL CHIP	10K	5%	1/10W
				(US, CND, E2, E51)	
R975	1-216-833-11	METAL CHIP	10K	5%	1/10W
R976	1-216-833-11	METAL CHIP	10K	5%	1/10W
				(GX355/RG270/RG575)	
R977	1-216-833-11	METAL CHIP	10K	5%	1/10W
				(GX555/RG475/RG575)	
R979	1-216-809-11	METAL CHIP	100	5%	1/10W
R980	1-216-809-11	METAL CHIP	100	5%	1/10W
R981	1-216-809-11	METAL CHIP	100	5%	1/10W
R982	1-216-809-11	METAL CHIP	100	5%	1/10W
R992	1-216-821-11	METAL CHIP	1K	5%	1/10W
R993	1-216-821-11	METAL CHIP	1K	5%	1/10W
R996	1-216-809-11	METAL CHIP	100	5%	1/10W
R997	1-216-809-11	METAL CHIP	100	5%	1/10W
R998	1-216-809-11	METAL CHIP	100	5%	1/10W
R999	1-216-809-11	METAL CHIP	100	5%	1/10W
R1971	1-216-833-11	METAL CHIP	10K	5%	1/10W
				(AEP, UK, EE, E2, E51)	
R1972	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1973	1-216-833-11	METAL CHIP	10K	5%	1/10W
				(AEP, UK, EE, RU)	
R1974	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1976	1-216-833-11	METAL CHIP	10K	5%	1/10W
				(GX555/RG475)	
R1977	1-216-833-11	METAL CHIP	10K	5%	1/10W
				(GX355/RG270)	
		< VIBRATOR >			
X901	1-760-252-12	VIBRATOR, CRYSTAL (32.768kHz)			
X902	1-795-482-11	VIBRATOR, CERAMIC (16MHz)			

Ref. No.	Part No.	Description	Remark
		MISCELLANEOUS	

113	1-829-003-11	WIRE (FLAT TYPE) (19 CORE)	
116	1-828-973-11	WIRE (FLAT TYPE) (13 CORE)	
118	1-796-485-51	DECK, MECHANICAL (CWM43FF13)	
203	1-775-213-11	WIRE (FLAT TYPE) (23 CORE)	
204	1-828-970-11	WIRE (FLAT TYPE) (13 CORE)	
△ 210	1-827-226-31	CORD, POWER (E2)	
△ 210	1-830-188-11	CORD, POWER (AEP, EE, RU, E51)	
△ 210	1-830-190-11	CORD, POWER (US, CND)	
502	1-776-182-11	WIRE (FLAT TYPE) (5 CORE)	
576	1-827-992-11	WIRE (FLAT TYPE) (16 CORE)	
△ 579	A-4735-357-A	OPTICAL PICK-UP BLOCK (KSM-213D)	
580	1-471-035-21	MAGNET ASSY	
M741	A-1108-965-A	MOTOR ASSY, TABLE	
M751	A-1108-966-A	MOTOR ASSY, LOADING	
S101	1-771-853-11	SWITCH, DETECTION (LIMIT)	
S711	1-477-680-12	ENCODER, ROTARY	
		(DISC TRAY ADDRESS DETECT)	

		ACCESSORIES	

△	1-770-019-61	ADAPTOR, CONVERSION PLUG (UK)	
△	1-569-008-21	ADAPTOR, CONVERSION (E51)	
